

CHAPTER

38

Water and Waste

CHAPTER 38
WATER AND WASTE

Subject/Page	Date	COC	Subject/Page	Date	COC
38-EFFECTIVE PAGES			38-11-00 (cont.)		
1 thru 4	Oct 15/2023		5	Oct 15/2021	
38-CONTENTS			6	Oct 15/2021	
1	Oct 15/2021		7	Oct 15/2021	
2	Oct 15/2021		8	Oct 15/2021	
3	Oct 15/2021		9	Oct 15/2021	
4	Jun 15/2022		10	Oct 15/2021	
38-00-00			11	Oct 15/2021	
1	Oct 15/2021		R 12	Oct 15/2023	
2	Oct 15/2021		13	Oct 15/2021	
3	Oct 15/2021		14	Feb 15/2022	
4	BLANK		15	Oct 15/2021	
38-10-00			16	BLANK	
1	Oct 15/2021		38-13-00		
2	Oct 15/2021		1	Oct 15/2021	
3	Oct 15/2021		2	Oct 15/2021	
4	Oct 15/2021		3	Oct 15/2021	
5	Oct 15/2021		4	Oct 15/2021	
6	Oct 15/2021		5	Oct 15/2021	
7	Oct 15/2021		6	Oct 15/2021	
8	BLANK		7	Oct 15/2021	
38-11-00			8	BLANK	
1	Oct 15/2021		38-14-00		
2	Feb 15/2022		1	Oct 15/2021	
3	Feb 15/2022		2	Oct 15/2021	
4	Oct 15/2021				

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

38-EFFECTIVE PAGES

CHAPTER 38
WATER AND WASTE

Subject/Page	Date	COC	Subject/Page	Date	COC
38-14-00 (cont.)			38-31-00 (cont.)		
3	Oct 15/2021		9	Oct 15/2021	
4	Oct 15/2021		10	Oct 15/2021	
5	Oct 15/2021		11	Oct 15/2021	
6	Oct 15/2021		12	BLANK	
7	Oct 15/2021		38-32-00		
8	Oct 15/2021		1	Oct 15/2021	
9	Oct 15/2021		2	Oct 15/2021	
10	Oct 15/2021		3	Oct 15/2021	
11	Oct 15/2021		4	Oct 15/2021	
12	BLANK		5	Oct 15/2021	
38-30-00			6	Oct 15/2021	
1	Oct 15/2021		7	Oct 15/2021	
2	Oct 15/2021		8	Oct 15/2021	
3	Oct 15/2021		9	Oct 15/2021	
4	BLANK		10	Oct 15/2021	
38-31-00			11	Oct 15/2021	
1	Oct 15/2021		12	Oct 15/2021	
2	Oct 15/2021		13	Oct 15/2021	
3	Oct 15/2021		14	Oct 15/2021	
4	Oct 15/2021		15	Oct 15/2021	
5	Oct 15/2021		16	Oct 15/2021	
6	Oct 15/2021		17	Oct 15/2021	
7	Oct 15/2021		18	Oct 15/2021	
8	Oct 15/2021				

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

38-EFFECTIVE PAGES

**CHAPTER 38
WATER AND WASTE**

Subject/Page	Date	COC	Subject/Page	Date	COC
38-32-00 (cont.)			38-32-00 (cont.)		
19	Oct 15/2021		43	Oct 15/2021	
20	Oct 15/2021		44	Oct 15/2021	
21	Oct 15/2021		45	Oct 15/2021	
22	Oct 15/2021		46	BLANK	
23	Oct 15/2021		38-33-00		
24	Oct 15/2021		1	Oct 15/2021	
25	Oct 15/2021		2	Oct 15/2021	
26	Oct 15/2021		3	Oct 15/2021	
27	Oct 15/2021		4	Oct 15/2021	
28	Oct 15/2021		5	Oct 15/2021	
29	Oct 15/2021		6	Oct 15/2021	
30	Oct 15/2021		7	Oct 15/2021	
31	Oct 15/2021		8	Oct 15/2021	
32	Oct 15/2021		9	Oct 15/2021	
33	Oct 15/2021		10	Oct 15/2021	
34	Oct 15/2021		11	Oct 15/2021	
35	Oct 15/2021		12	Oct 15/2021	
36	Oct 15/2021		13	Oct 15/2021	
37	Oct 15/2021		14	Oct 15/2021	
38	Oct 15/2021		15	Oct 15/2021	
39	Oct 15/2021		16	Oct 15/2021	
40	Oct 15/2021		17	Oct 15/2021	
41	Oct 15/2021		18	Oct 15/2021	
42	Oct 15/2021		19	Oct 15/2021	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

38-EFFECTIVE PAGES

CHAPTER 38
WATER AND WASTE

Subject/Page	Date	COC	Subject/Page	Date	COC
38-33-00 (cont.)			38-42-00 (cont.)		
20	Oct 15/2021		17	Jun 15/2022	
21	Oct 15/2021		R 18	Oct 15/2023	
22	Oct 15/2021		19	Jun 15/2022	
23	Oct 15/2021		20	BLANK	
24	Oct 15/2021				
25	Oct 15/2021				
26	BLANK				
38-42-00					
1	Oct 15/2021				
2	Oct 15/2021				
3	Oct 15/2021				
4	Oct 15/2021				
5	Oct 15/2021				
6	Oct 15/2021				
7	Oct 15/2021				
8	Oct 15/2021				
9	Oct 15/2021				
10	Jun 15/2022				
11	Oct 15/2021				
12	Jun 15/2022				
13	Jun 15/2022				
14	Oct 15/2021				
15	Oct 15/2021				
16	Jun 15/2022				

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

38-EFFECTIVE PAGES

CHAPTER 38
WATER AND WASTE

CH-SC-SU	SUBJECT	PAGE	EFFECT
38-00-00	WATER/WASTE - INTRODUCTION	2	SIA ALL
38-10-00	WATER/WASTE - POTABLE WATER - INTRODUCTION	2	SIA ALL
38-10-00	WATER/WASTE - POTABLE WATER - FUNCTIONAL DESCRIPTION	5	SIA ALL
38-11-00	WATER/WASTE - PASSENGER WATER SYSTEM - WATER SERVICE PANEL	2	SIA ALL
38-11-00	WATER/WASTE - PASSENGER WATER SYSTEM - FILL/OVERFLOW VALVE AND CONTROL CABLE	4	SIA ALL
38-11-00	WATER/WASTE - PASSENGER WATER SYSTEM - WATER TANK DRAIN VALVE AND CONTROL CABLE	6	SIA ALL
38-11-00	WATER/WASTE - PASSENGER WATER SYSTEM - WATER TANK	8	SIA ALL
38-11-00	WATER/WASTE - PASSENGER WATER SYSTEM - LAVATORY WATER SUPPLY SHUTOFF VALVE	10	SIA ALL
38-11-00	WATER/WASTE - PASSENGER WATER SYSTEM - FORWARD LAVATORY DRAIN VALVE	12	SIA ALL
38-11-00	WATER/WASTE - PASSENGER WATER SYSTEM - LAVATORY FAUCET	14	SIA ALL
38-13-00	WATER/WASTE - WATER HEATING - INTRODUCTION	2	SIA ALL
38-13-00	WATER/WASTE - WATER HEATING - WATER HEATER	4	SIA ALL
38-13-00	WATER/WASTE - WATER HEATING - FUNCTIONAL DESCRIPTION	6	SIA ALL
38-14-00	WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - INTRODUCTION	2	SIA ALL
38-14-00	WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - WATER QUANTITY TRANSMITTER	4	SIA ALL
38-14-00	WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - WATER QUANTITY INDICATOR	6	SIA ALL

38-CONTENTS

CHAPTER 38
WATER AND WASTE

<u>CH-SC-SU</u>	<u>SUBJECT</u>	<u>PAGE</u>	<u>EFFECT</u>
38-14-00	WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - FUNCTIONAL DESCRIPTION	10	SIA ALL
38-30-00	WATER/WASTE - WASTE DISPOSAL - INTRODUCTION	2	SIA ALL
38-31-00	WATER/WASTE - GRAY WATER SYSTEM - INTRODUCTION	2	SIA ALL
38-31-00	WATER/WASTE - GRAY WATER SYSTEM - WASTE WATER SYSTEM	4	SIA ALL
38-31-00	WATER/WASTE - GRAY WATER SYSTEM - DRAIN MAST	6	SIA ALL
38-31-00	WATER/WASTE - GRAY WATER SYSTEM - DOOR SILL DRAIN SYSTEM	8	SIA ALL
38-31-00	WATER/WASTE - GRAY WATER SYSTEM - DOOR SILL DRAINS	10	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - INTRODUCTION	2	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - COMPONENT LOCATIONS - LAVATORY	4	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - FLUSH SWITCH	6	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - TOILET ASSEMBLY	8	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - FLUSH CYCLE	10	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - COMPONENT LOCATIONS - CARGO COMPARTMENT	12	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK	14	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - LIQUID SEPARATOR	16	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER AND FILTER	18	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER BAROMETRIC SWITCH	20	SIA ALL

38-CONTENTS

CHAPTER 38
WATER AND WASTE

CH-SC-SU	SUBJECT	PAGE	EFFECT
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER - FUNCTIONAL DESCRIPTION	22	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM CHECK VALVE	24	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - WASTE DRAIN BALL VALVE & LINKAGE ASSEMBLY	26	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - WASTE SERVICE PANEL	28	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - WASTE DRAIN VALVE ASSEMBLY	30	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE FITTING ASSEMBLY	32	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE FILTER	34	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE NOZZLE	36	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - DRAIN LINE BLOCKAGE REMOVAL FITTING	38	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM WASTE LINE CLEAN-OUT FITTING	40	SIA ALL
38-32-00	WATER/WASTE - VACUUM WASTE SYSTEM - FUNCTIONAL DESCRIPTION	43	SIA ALL
38-33-00	WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - INTRODUCTION	2	SIA ALL
38-33-00	WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - POINT LEVEL SENSOR	6	SIA ALL
38-33-00	WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - CONTINUOUS LEVEL SENSOR	8	SIA ALL

38-CONTENTS

CHAPTER 38
WATER AND WASTE

CH-SC-SU	SUBJECT	PAGE	EFFECT
38-33-00	WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - LOGIC CONTROL MODULE	10	SIA ALL
38-33-00	WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - WASTE QUANTITY INDICATOR	14	SIA ALL
38-33-00	WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - SERVICE PANEL WASTE QUANTITY INDICATOR	20	SIA ALL
38-33-00	WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - SENSOR FOULED LIGHT	22	SIA ALL
38-33-00	WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - FUNCTIONAL DESCRIPTION	24	SIA ALL
38-42-00	WATER/WASTE - WATER TANK PRESSURIZATION - INTRODUCTION	2	SIA ALL
38-42-00	WATER/WASTE - WATER TANK PRESSURIZATION - COMPONENT LOCATION	4	SIA ALL
38-42-00	WATER/WASTE - WATER TANK PRESSURIZATION - PNEUMATIC EQUIPMENT	7	SIA ALL
38-42-00	WATER/WASTE - WATER TANK PRESSURIZATION - AIR COMPRESSOR/INLET AIR FILTER	10	SIA ALL
38-42-00	WATER/WASTE - WATER TANK PRESSURIZATION - WATER PRESSURE CUT-OUT SWITCH	12	SIA ALL
38-42-00	WATER/WASTE - WATER TANK PRESSURIZATION - COMPRESSOR CUT-OUT SWITCH	14	SIA ALL
38-42-00	WATER/WASTE - WATER TANK PRESSURIZATION - AIR COMPRESSOR - FUNCTIONAL DESCRIPTION	16	SIA ALL
38-42-00	WATER/WASTE - WATER TANK PRESSURIZATION - FUNCTIONAL DESCRIPTION	18	SIA ALL

38-CONTENTS



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-00-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



WATER/WASTE - INTRODUCTION

Purpose

The water and waste system supplies potable water to the lavatories and galleys and removes sink and toilet waste. The water and waste system also removes rain water from the door sill areas.

General Description

The water and waste system has these subsystems:

- Potable water
- Air supply
- Waste disposal.

The potable water system supplies water to the lavatories and galleys.

The air supply system pressurizes the water tank.

The waste disposal system removes waste from the lavatories, galleys, and door sill drains.

Abbreviations and Acronyms

- AC - alternating current
- C - Celsius
- CLS - continuous level sensor
- cont - control
- DC - direct current
- E - empty
- F - Fahrenheit
- F - filter
- F - full
- FCU - flush control unit
- fwd - forward
- H - heater
- ind - indication
- lav - lavatory

- LCM - logic control module
- LED - light emitting diode
- PLS - point level sensor
- psig - pounds per square inch, gauge
- qty - quantity
- ref - reference
- S - switch
- T - transmitter
- TYP - typical


38-00-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - INTRODUCTION

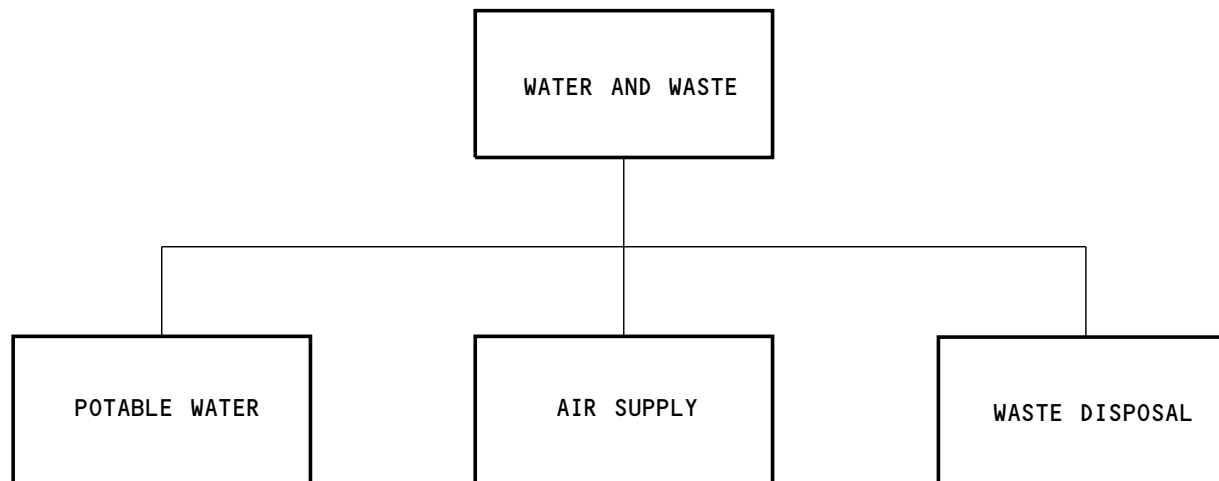

M87339 S0004631154_V1

WATER/WASTE - INTRODUCTION

38-00-00



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-10-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - POTABLE WATER - INTRODUCTION****Purpose**

The potable water system supplies water to the lavatories and galleys.

- S - switch
- T - transmitter
- TYP - typical

General Description

The potable water system has these subsystems:

- Passenger water
- Water heating
- Water quantity indication.

The passenger water system supplies water to the lavatories and galleys.

The water heating system heats the water supplied to the lavatory hot water faucets.

The water quantity indication system measures and displays the quantity of water in the potable water system.

Abbreviations and Acronyms

- AC - alternating current
- C - Celsius
- DC - direct current
- E - empty
- F - Fahrenheit
- F - full
- fwd - forward
- H - heater
- ind - indication
- lav - lavatory
- LED - light emitting diode
- psig - pounds per square inch, gauge
- QTY - quantity
- REF - reference


38-10-00**SIA ALL EFFECTIVITY**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



WATER/WASTE - POTABLE WATER - INTRODUCTION

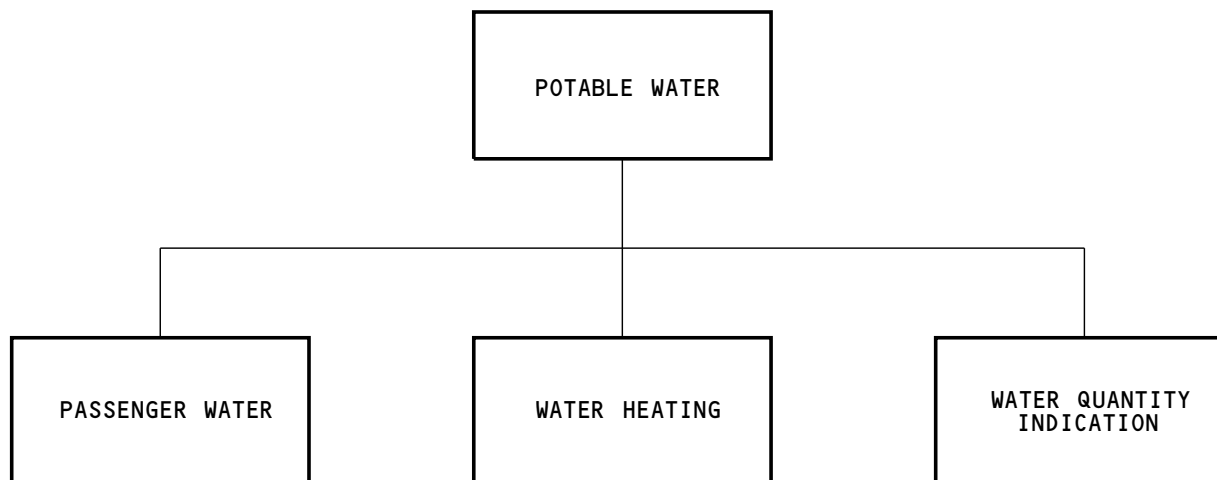

M87340 S0004631158_V1

WATER/WASTE - POTABLE WATER - INTRODUCTION

38-10-00



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-10-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - POTABLE WATER - FUNCTIONAL DESCRIPTION

Functional Description

The potable water system has one tank that holds potable water.

You fill and drain the water tank at the water service panel.

To fill the water tank, open the fill/overflow valve and add water through the potable water fill fitting until the water flows from the potable water drain port.

The water tank supplies water to these locations:

- Galley faucets
- Lavatory faucets
- Lavatory toilets.

Each lavatory has a water supply shutoff valve. The water supply shutoff valve lets you isolate the water supply to the sink or to the toilet. The water supply shutoff valve also lets you isolate the sink and the toilet at the same time.

The forward lavatory has a drain valve. The forward lavatory drain valve drains water from the forward water supply lines.

A water heater in each lavatory increases the temperature of the water supplied to the hot water faucet.

The water tank level sensor sends the water quantity data to a water quantity transmitter. The water quantity transmitter sends the data to a water quantity indicator at the attendant panel. The water quantity indicator shows the level of water in the tank.

To drain the potable water system, you open these valves:

- Water tank drain valve
- Forward lavatory drain valve (forward lavatory only)
- Lavatory water supply shutoff valves (one in each lavatory).

When you drain the potable water system, the water drains overboard through the forward and aft potable water drain ports.

Training Information Point

When you drain the potable water system, you must drain water from these two areas:

- Water service panel
- Forward lavatory.

The water service panel lets you drain the water tank and aft supply lines. The forward lavatory has a drain valve that lets you drain the forward water supply lines.

When you drain the potable water system, you must turn the water supply shutoff valves in each lavatory to the SUPPLY ON position. If you do not turn the water supply shutoff valve to the SUPPLY ON position, water will not drain from the toilet or lavatory faucets.



DRAIN, OR USE THE POTABLE WATER SYSTEM A MINIMUM OF ONE TIME EACH THREE DAYS. IF YOU DO NOT DRAIN, OR USE THE WATER SYSTEM FREQUENTLY, BACTERIA CAN GROW IN THE WATER. IF YOU DRINK WATER WITH BACTERIA IN IT, ILLNESS CAN OCCUR.



DRAIN THE WATER SYSTEM. IF THE WATERLINES HAVE WATER IN THEM, THEY CAN FREEZE IN COLD WEATHER. THIS CAN CAUSE DAMAGE TO THE WATERLINES.

You must fully drain the potable water system before you add a disinfectant or when you park the airplane in cold weather.

38-10-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details


WATER/WASTE - POTABLE WATER - FUNCTIONAL DESCRIPTION

**WARNING**

SEAL THE CARGO COMPARTMENT WITH THE LINING. OBEY THE INSTRUCTIONS IN THE SPECIFIED PROCEDURE WHEN YOU INSTALL THE LINING. IF YOU INSTALL THE LINING INCORRECTLY, THE SMOKE CAN GET INTO THE PASSENGER COMPARTMENT DURING A FIRE.

You must remove the cargo compartment lining to get access to some of the potable water system components. Make sure you correctly replace the lining when you are done.

WATER/WASTE - POTABLE WATER - FUNCTIONAL DESCRIPTION

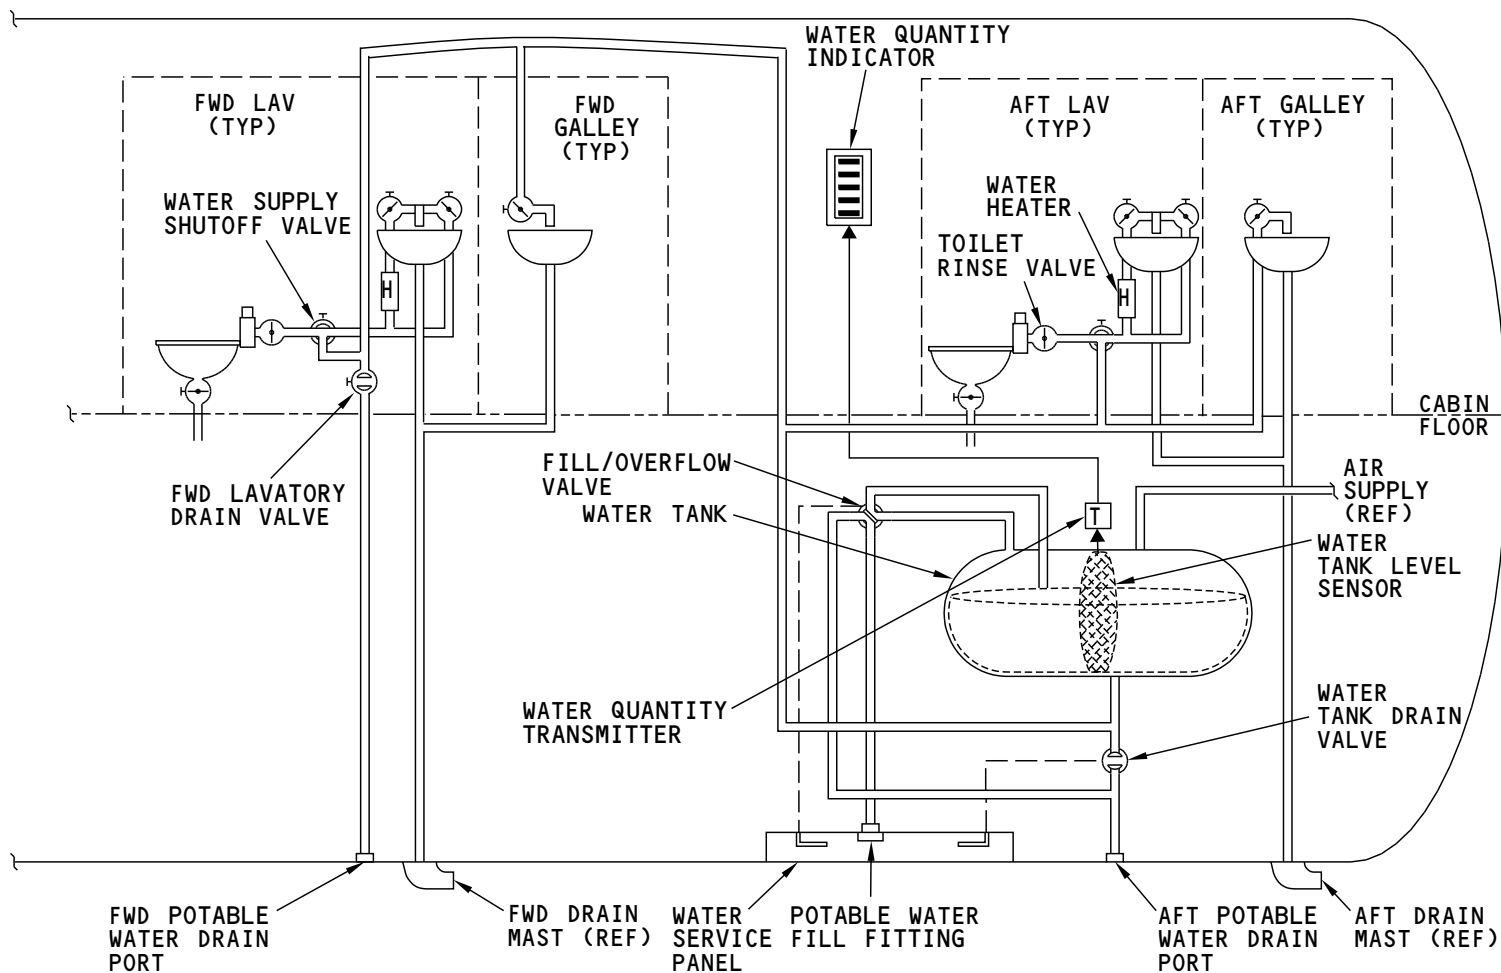

M87341 S0004631160_V1

WATER/WASTE - POTABLE WATER - FUNCTIONAL DESCRIPTION

38-10-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-11-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - PASSENGER WATER SYSTEM - WATER SERVICE PANEL****Purpose**

The water service panel lets you fill the potable water system. The water service panel also lets you drain the water tank and part of the potable water system.

Location

The water service panel is at the aft section of the fuselage, bottom right side. There are two snap-latches to open the water service panel door.

Access to the inside of the water service panel is from the aft cargo compartment. The water service panel is under the floor on the aft right side of the cargo compartment.

Physical Description

The water service panel has these components:

- Fill/overflow valve handle
- Water tank drain valve handle
- Compressor cut-out switch
- Potable water fill fitting.

Functional Description

The water service hose connects to the potable water fill fitting. The fill/overflow valve handle lets you open the fill/overflow valve. The fill/overflow valve lets water fill the water tank. The fill/overflow valve also lets air flow overboard from the tank during the fill process. When the tank is at its maximum capacity, water flows overboard through the overflow drain line and potable water drain port.

To drain the tank, open the water tank drain valve. The open water tank drain valve lets water flow out of the water tank and the aft distribution lines.

The compressor cut-out switch stops operation of the air compressor when the water service panel door is open. The compressor cut-out switch contains the water pressure proximity sensor (S945) and actuator that turns on the air compressor when the door is closed.

Interference brackets on the water service panel door prevent the door from closing if a valve handle is in the wrong position for flight.


38-11-00

EFFECTIVITY	
SIA ALL	

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - PASSENGER WATER SYSTEM - WATER SERVICE PANEL

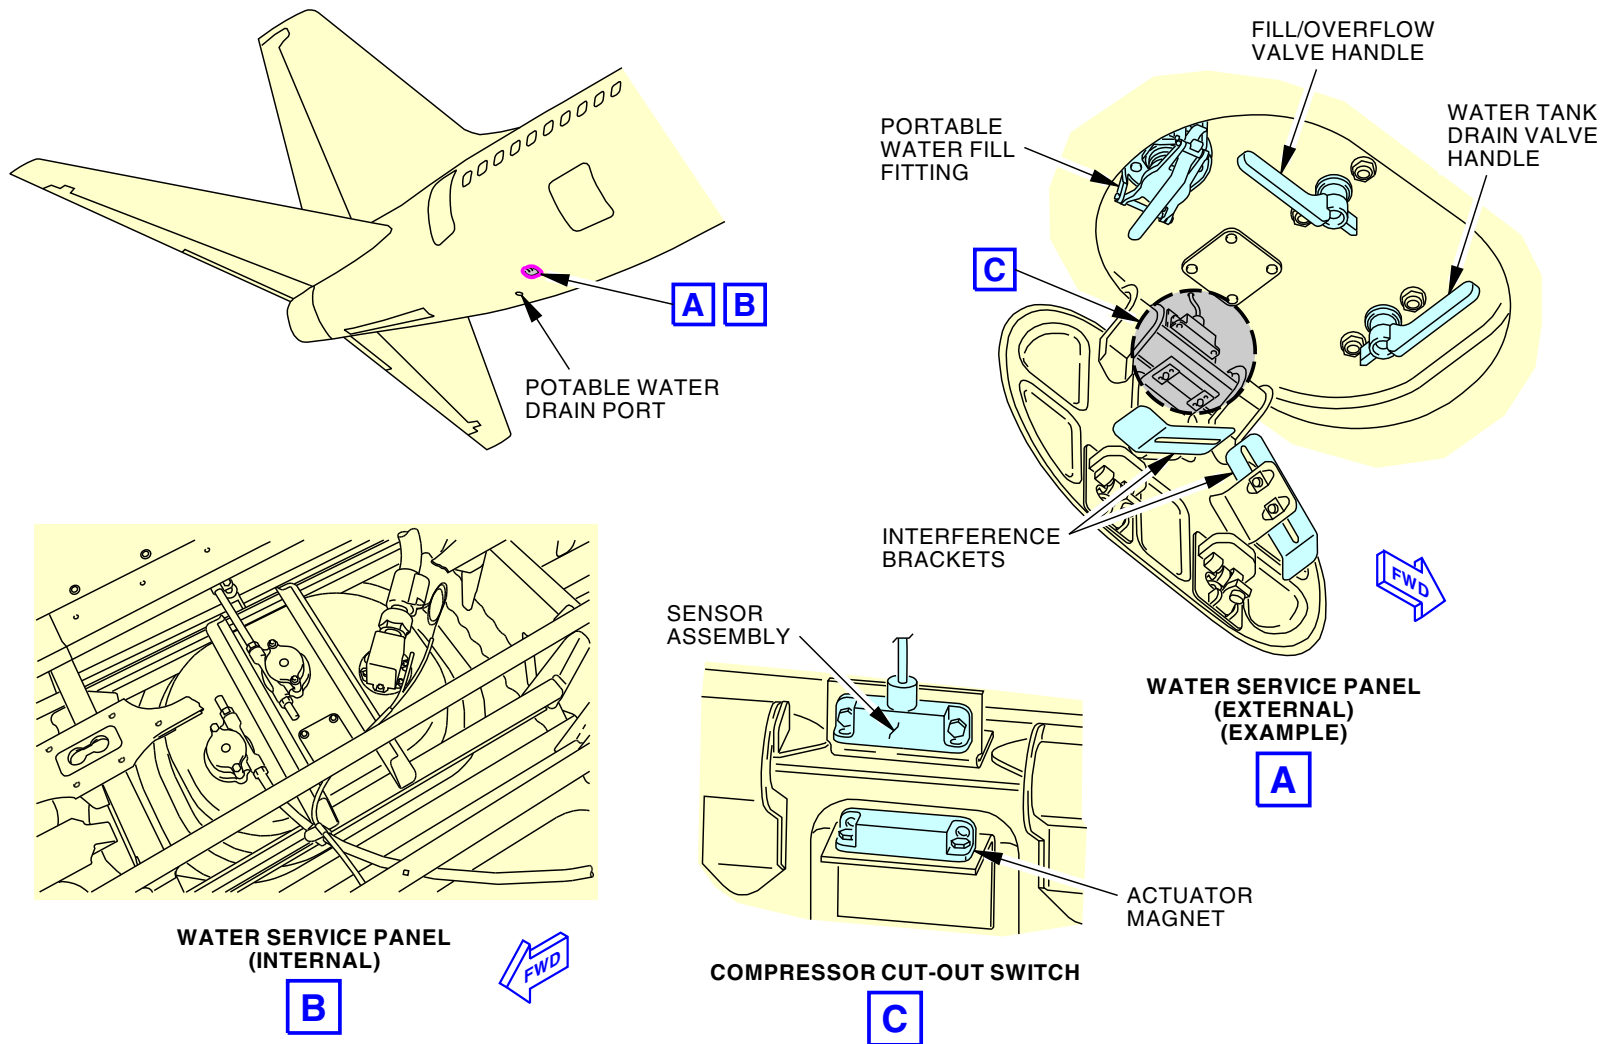

M87368 S0004631172_V3

WATER/WASTE - PASSENGER WATER SYSTEM - WATER SERVICE PANEL

**WATER/WASTE - PASSENGER WATER SYSTEM - FILL/OVERFLOW VALVE AND CONTROL CABLE****Purpose**

The fill/overflow valve lets you fill the water tank. The control cable lets you open and close the fill/overflow valve from the service panel.

Location

The fill/overflow valve is on the right side of the aft cargo compartment. The valve is on the ceiling on the right side of the water tank, aft of the aft cargo compartment bulkhead liner.

The control cable is on the right side of the aft cargo compartment between the water service panel and the fill/overflow valve.

Physical Description

The fill/overflow valve is a four-port rotary valve. The valve operates by manual input and has open and closed positions. The control cable is a rotary-in rotary-out cable.

The control cable attaches the fill/overflow valve handle on the water service panel to the fill/overflow valve.

Functional Description

The fill/overflow valve has these functions:

- Lets water flow into the water tank from the potable water fill fitting
- Lets air out of the water tank to vent overboard as the tank fills with water
- Lets water flow overboard when water volume reaches the standpipe
- Depressurizes the water tank for system service or maintenance.

The control cable has a rotary actuator input at the water service panel. The control cable transmits movement to the fill/overflow valve at a rotary actuator on the valve.

When you put the fill/overflow valve in the open position, the potable water fill line connects to the water tank fill line and the water tank overflow line connects to the potable water drain line.

When you put the fill/overflow valve in the closed position, the potable water fill line connects to the potable water drain line and the water tank fill line connects to the water tank overflow line.

38-11-00


EFFECTIVITY

SIA ALL

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - PASSENGER WATER SYSTEM - FILL/OVERFLOW VALVE AND CONTROL CABLE

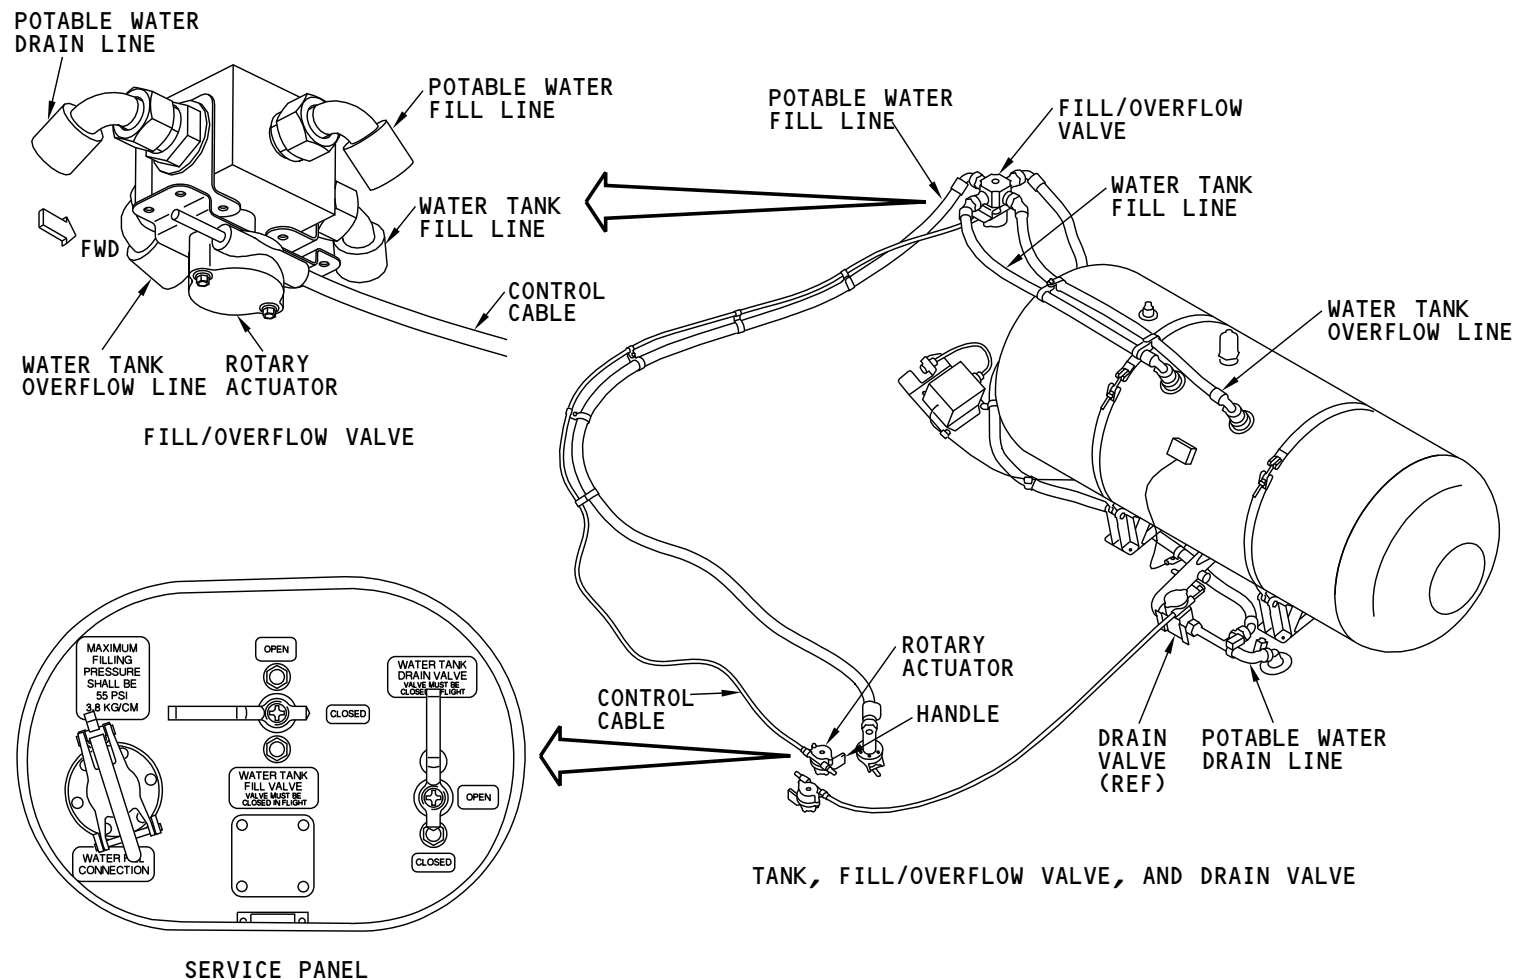

M87353 S0004631177_V1

WATER/WASTE - PASSENGER WATER SYSTEM - FILL/OVERFLOW VALVE AND CONTROL CABLE

38-11-00-002

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-11-00

**WATER/WASTE - PASSENGER WATER SYSTEM - WATER TANK DRAIN VALVE AND CONTROL CABLE****Purpose**

The water tank drain valve lets water drain overboard from the water tank and the aft water distribution lines.

The control cable lets you open and close the water tank drain valve from the water service panel.

Location

The water tank drain valve is behind the aft bulkhead of the aft cargo compartment. The valve is forward and below the water tank.

The control cable is below the cargo floor and is between the water service panel and the water tank drain valve.

Physical Description

The water tank drain valve is a two-port, single-ball, dual-seal valve. The valve operates by manual input and has open and closed positions. The control cable is a rotary-in rotary-out cable.

The control cable attaches the water tank drain valve handle on the water service panel to the water tank drain valve.

Functional Description

The control cable has a rotary actuator input at the water service panel. The control cable transmits movement to the water tank drain valve at a rotary actuator on the valve.

Training Information Point

You must drain the water system at two locations to remove all the water in the passenger water system. To fully drain the water system, use the forward lavatory drain valve and the water tank drain valve.


38-11-00

EFFECTIVITY	
SIA ALL	

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - PASSENGER WATER SYSTEM - WATER TANK DRAIN VALVE AND CONTROL CABLE

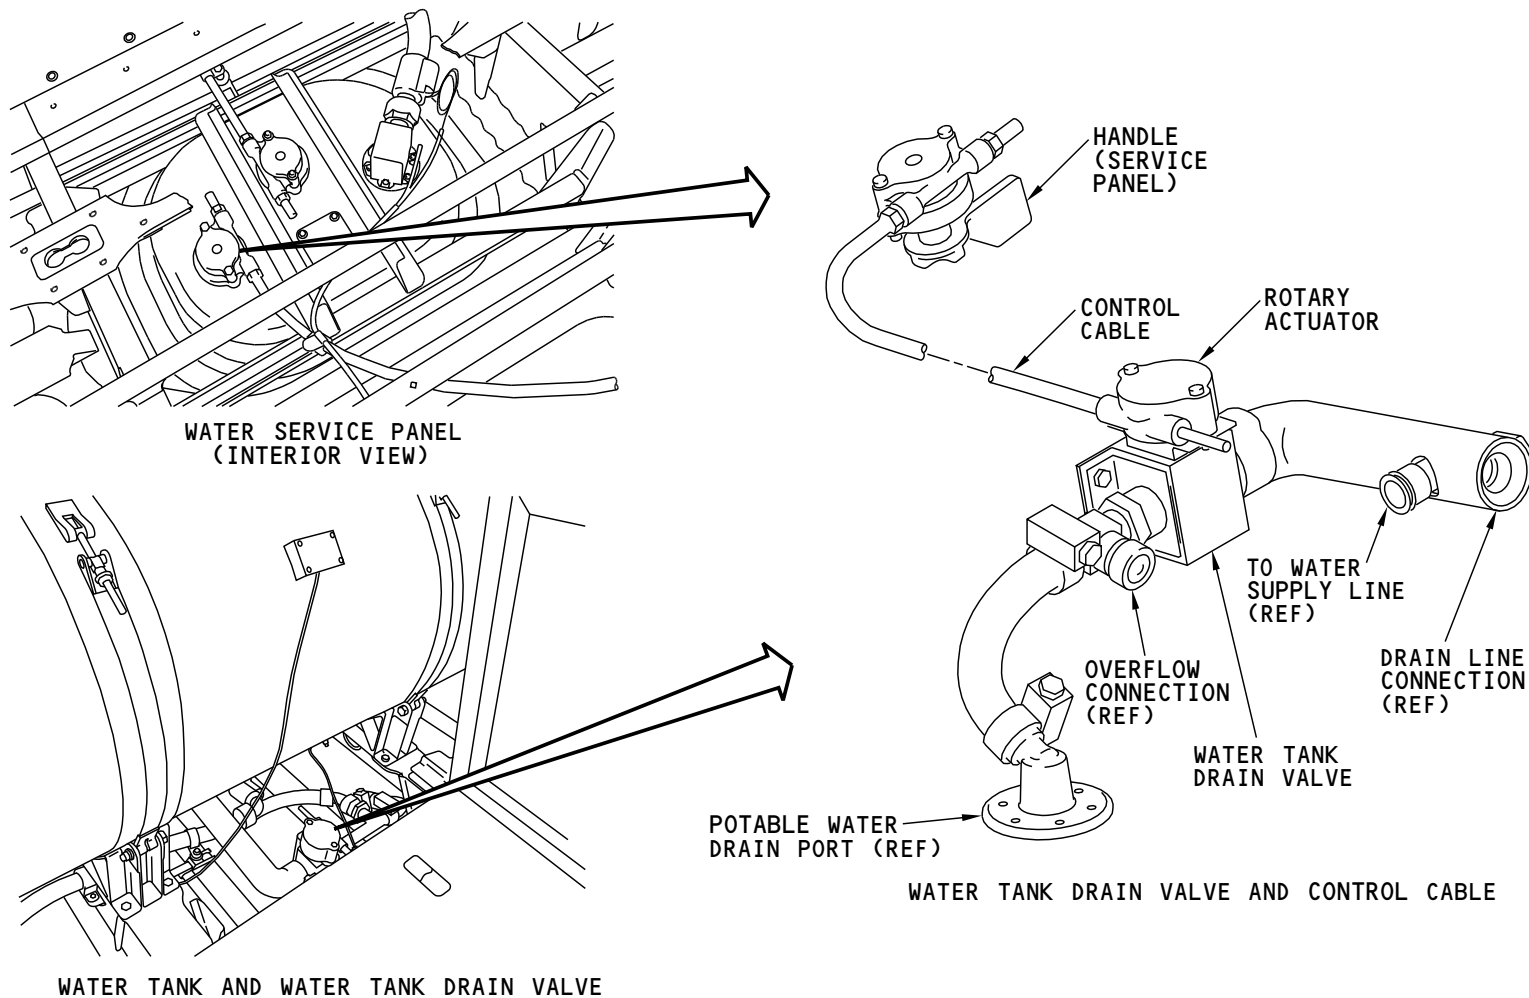

M87360 S0004631180_V1

WATER/WASTE - PASSENGER WATER SYSTEM - WATER TANK DRAIN VALVE AND CONTROL CABLE

38-11-00-005

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-11-00



WATER/WASTE - PASSENGER WATER SYSTEM - WATER TANK

Purpose

The water tank holds potable water.

Location

The water tank is aft of the aft cargo compartment. You must remove the aft bulkhead cargo lining to get access to the tank.

Physical Description

The water tank is a composite structure. The inner element is a molded thermoplastic lining.

The water tank capacity is 62.1 gallons (235 liters). A standpipe decreases the maximum capacity to 60 gallons (227 liters).

The water tank has these parts:

- Access cover (2)
- Water tank pressurization fitting
- Pressure switch
- Water overflow fitting (standpipe)
- Water fill fitting
- Water level sensor
- Drain fitting
- Bonding stud.

The water level sensor is a copper mesh capacitance sensor. The sensor is bonded to the outside of the lining. The sensor is a permanent part of the tank.

Training Information Point


The 62.1 gallon tank can have these sizes of standpipes:

- 40 gallon (151 liter)
- 50 gallon (189 liter)
- 60 gallon (227 liter).


The standpipes are interchangeable for different route requirements. When you install a different standpipe, you must also change the water quantity transmitter adapter cable. If you do not use the correct transmitter adapter cable, the water quantity indicator will not show the correct water level.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - PASSENGER WATER SYSTEM - WATER TANK

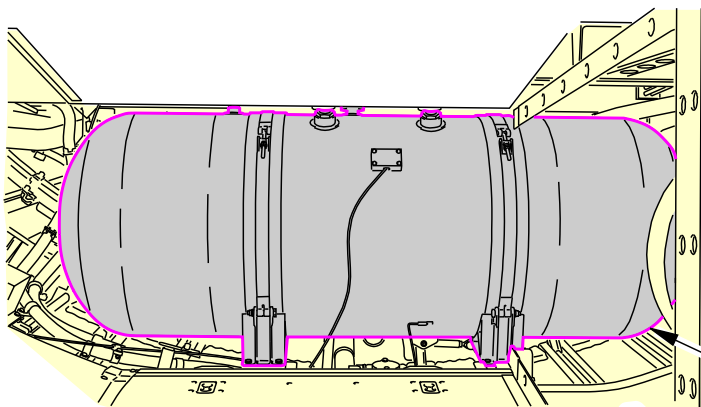

WATER TANK INSTALLATION
(AFT CARGO COMPARTMENT - LINING REMOVED)

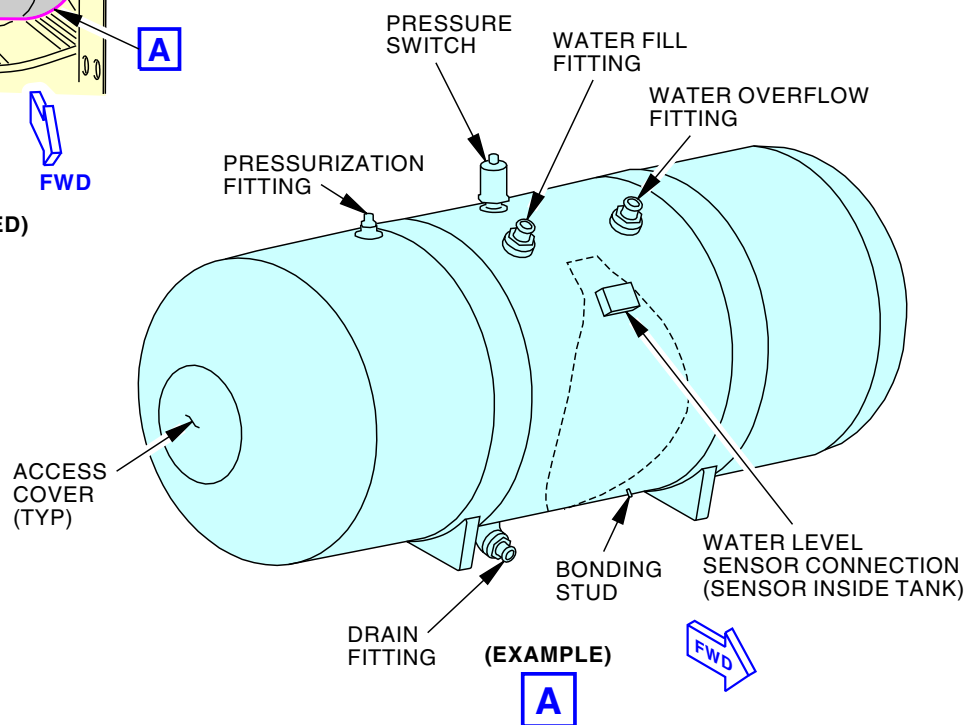

M87350 S0004631184_V2

WATER/WASTE - PASSENGER WATER SYSTEM - WATER TANK

38-11-00

38-11-00-001

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - PASSENGER WATER SYSTEM - LAVATORY WATER SUPPLY SHUTOFF VALVE****Purpose**

The lavatory water supply shutoff valve lets you isolate the flow of water to the lavatory components.

Location

Each lavatory has a lavatory water supply shutoff valve. You open the sink cabinet door to get access to the valve. The valve is in the lower area of the cabinet.

Physical Description

The lavatory water supply shutoff valve is a four-way valve. The valve has a valve body and a control handle (yellow with a red indicator point). These four positions show on the valve body:

- OFF
- TOILET ONLY
- SUPPLY ON
- FAUCET ONLY.

The valve has one line in and two lines out.

Functional Description

The valve handle lets you turn the valve to one of four positions.

When you turn the valve to the OFF position, the valve shuts off water to all of the lavatory components.

In the TOILET ONLY position, water goes to the toilet only.

In the SUPPLY ON position, water goes to the faucet and toilet.

In the FAUCET ONLY position, water goes to the faucet only.

Training Information Point

Before you work on the lavatory components, turn the lavatory water supply shutoff valve to the OFF position. When you turn the valve to the OFF position, water will not flow through any open lines.

You must turn the lavatory water supply shutoff valve to the SUPPLY ON position when you drain the lavatory supply lines. If you do not turn the valve to the SUPPLY ON position, then the water will not drain from the faucet or toilet supply lines.


38-11-00

EFFECTIVITY	
SIA ALL	

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - PASSENGER WATER SYSTEM - LAVATORY WATER SUPPLY SHUTOFF VALVE

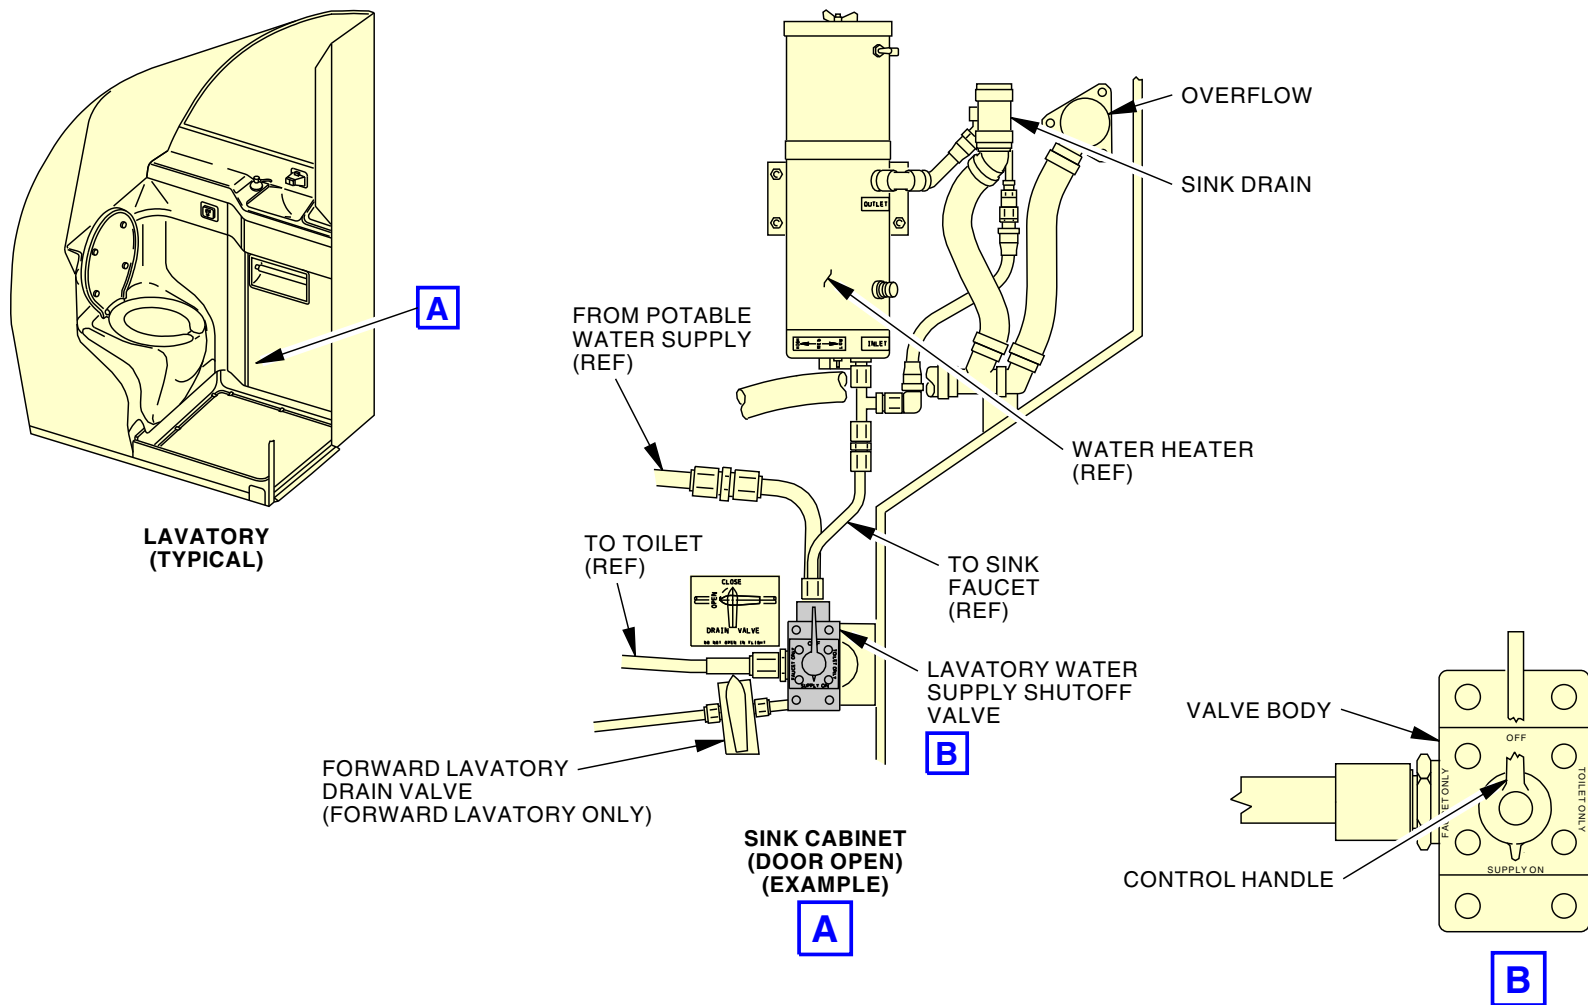

M87365 S0004631186_V1

WATER/WASTE - PASSENGER WATER SYSTEM - LAVATORY WATER SUPPLY SHUTOFF VALVE

SIA ALL	EFFECTIVITY
	D633A101-SIA

**WATER/WASTE - PASSENGER WATER SYSTEM - FORWARD LAVATORY DRAIN VALVE****Purpose**

The forward lavatory drain valve lets you drain the water from the forward lavatory supply lines.

Location

The forward lavatory drain valve is only in lavatory A (the most forward lavatory). You remove the sink cabinet panel to get access to the valve. The valve is in the lower area of the cabinet.

Physical Description

The forward lavatory drain valve operates manually. The valve has a valve body and a red or gray handle.

Functional Description

The handle lets you put the valve in the OPEN or CLOSE position.

In the OPEN position, the forward lavatory drain valve lets the water drain from all the forward lavatory and galley supply lines. The water drains through the forward potable water drain port.

In the CLOSE position, the water from the supply lines flows to the lavatory and galley components. Water does not flow overboard.


A placard shows the valve in the OPEN and CLOSE positions.

Training Information Point

You must put the forward lavatory drain valve in the CLOSE position before you operate the water system. If you do not put the valve in the CLOSE position, water will drain from the forward lavatory during operation.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - PASSENGER WATER SYSTEM - FORWARD LAVATORY DRAIN VALVE

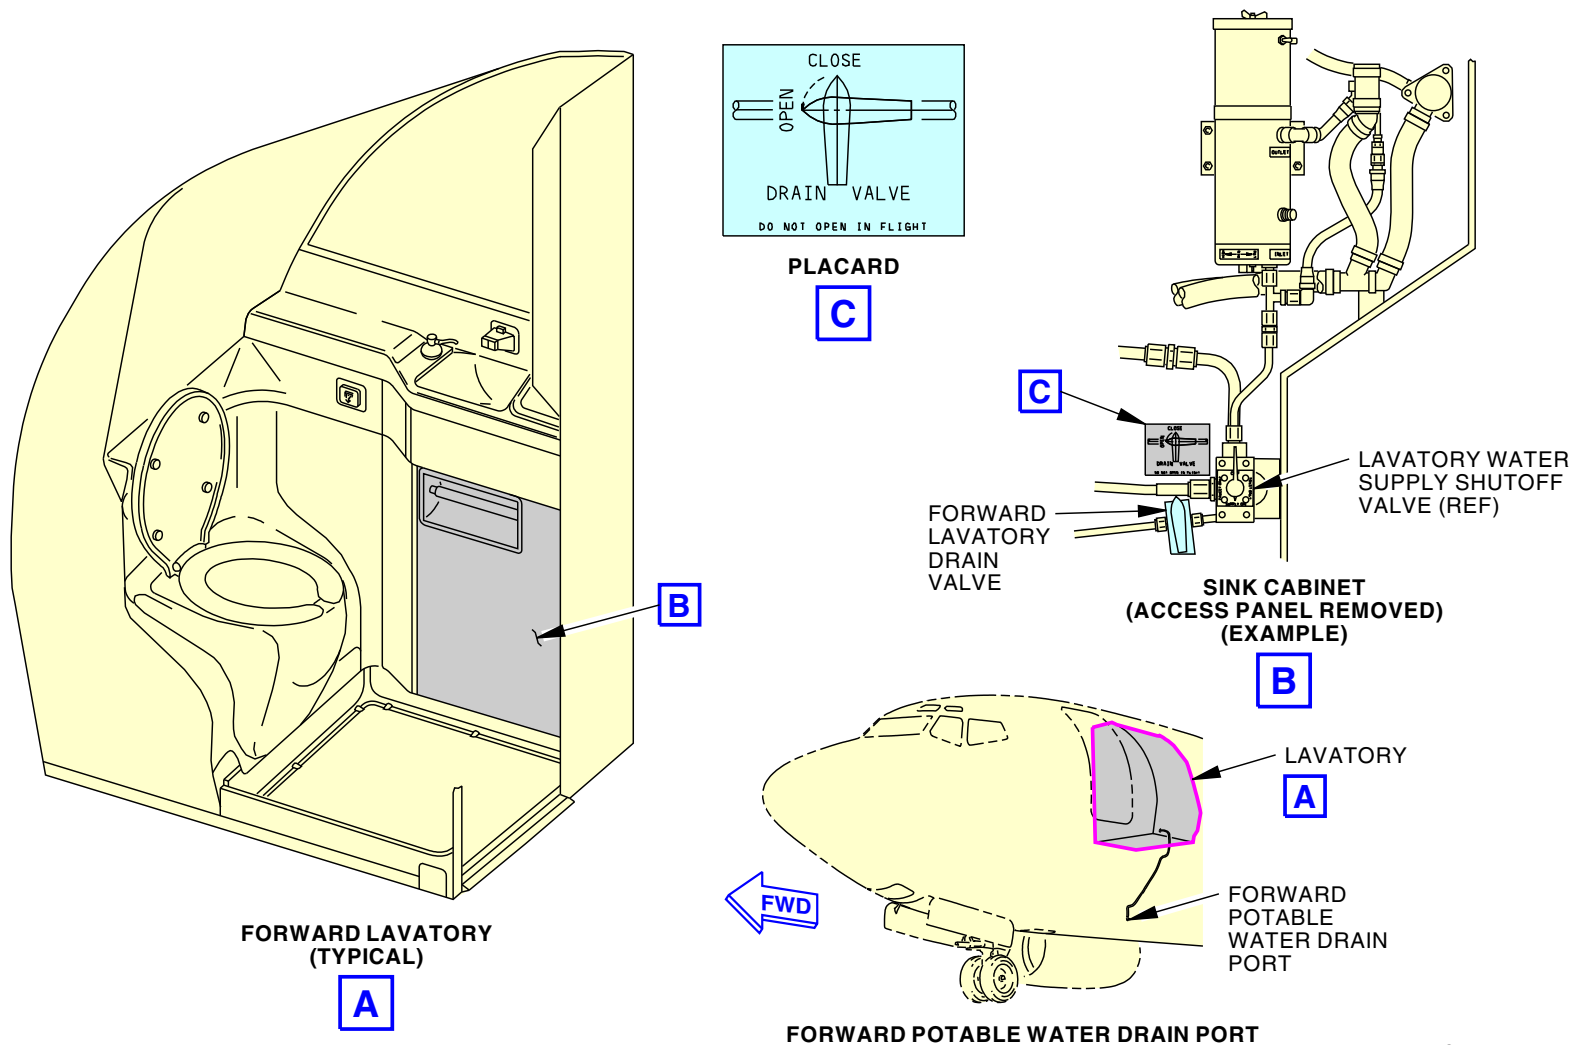

M87362 S0004631190_V1

WATER/WASTE - PASSENGER WATER SYSTEM - FORWARD LAVATORY DRAIN VALVE

38-11-00

WATER/WASTE - PASSENGER WATER SYSTEM - LAVATORY FAUCET**Purpose**

The lavatory faucet controls the hot and cold water supply to the lavatory sink.

Location

There is a faucet in each lavatory. The faucet is on the sink backsplash.

Physical Description

These are the parts on the outside of the faucet:

- Knob
- Setscrew
- Decorative cover
- Drain rod
- Aerator.

The setscrew attaches the knob to the decorative cover of the faucet.

The hydraulic timer lets you adjust the water flow from 5 seconds to 9 seconds. Turn the hydraulic timer to adjust timing using an Allen-head wrench. Clockwise for slower timing, and counterclockwise for faster timing.

Functional Description

The knob operates the cartridge valve and the hydraulic timer. The hydraulic timer lets water flow through the valve for a specified time. Turn faucet knob for desired temperature.

The faucets are self-venting. You do not have to open the faucets to drain the potable water system.


38-11-00

SIA ALL EFFECTIVITY


D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - PASSENGER WATER SYSTEM - LAVATORY FAUCET

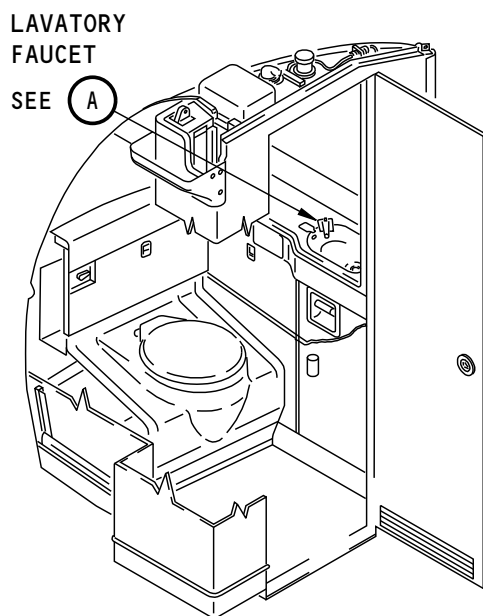

**LAVATORY
(EXAMPLE)**

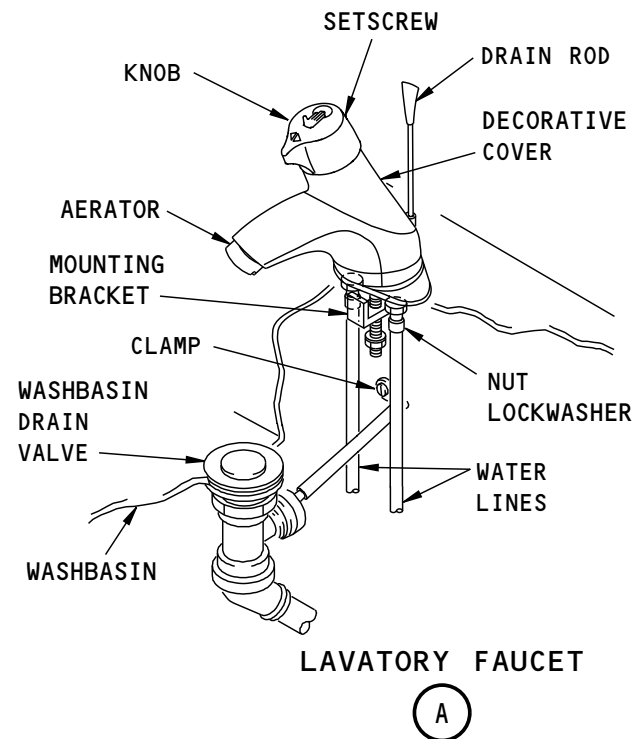

1308962 S0000227146_V1

WATER/WASTE - PASSENGER WATER SYSTEM - LAVATORY FAUCET

38-11-00-004

SIA ALL

EFFECTIVITY

38-11-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-13-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



WATER/WASTE - WATER HEATING - INTRODUCTION


Purpose

The water heating system supplies hot water to the lavatory hot water faucet.

Abbreviations and Acronyms

- AC - alternating current
- C - Celsius
- F - Fahrenheit
- psig - pounds per square inch, gauge
- REF - reference
- TYP - typical
- v - volts

WATER/WASTE - WATER HEATING - INTRODUCTION

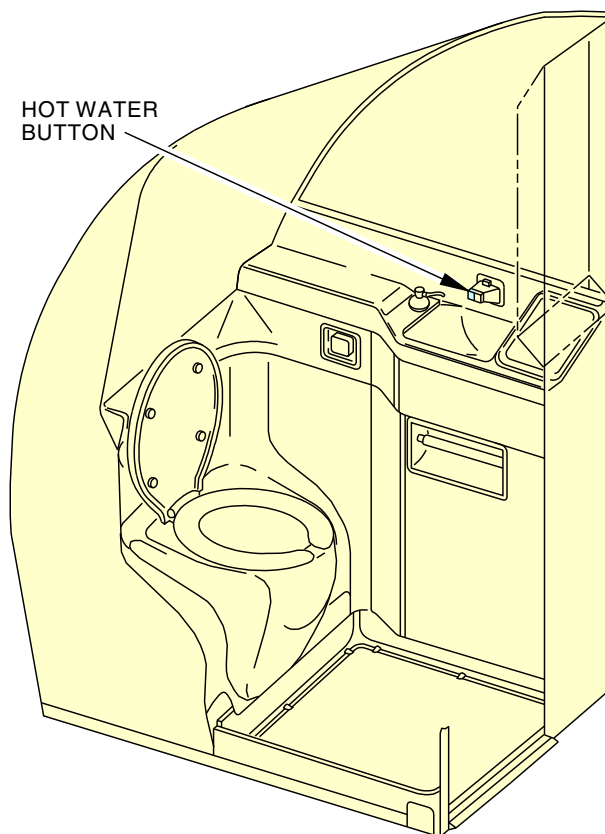

**LAVATORY
(EXAMPLE)**

M87376 S0004631202_V1

WATER/WASTE - WATER HEATING - INTRODUCTION

38-13-00

38-13-00-003

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - WATER HEATING - WATER HEATER****Purpose**

The water heater increases the temperature of water supplied to the lavatory hot water faucet.

Location

There is a water heater in each lavatory. You open the sink cabinet door to get access to the water heater.

Physical Description

The water heater has these parts:

- Power switch
- Temperature selector switch
- Power indicator light
- Cover
- Overheat switch
- Pressure relief valve.

The temperature selector switch sets the water temperature to one of these three temperatures:

- LOW (105F/40C)
- MEDIUM (115F/46C)
- HIGH (125F/52C).

The power indicator light shows that power is available and that the overheat switch is closed (no overheat).

The overheat switch opens when the water temperature is more than 170F (76C).

The pressure relief valve opens if pressure inside the water heater is more than 140 psig.


38-13-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - WATER HEATING - WATER HEATER

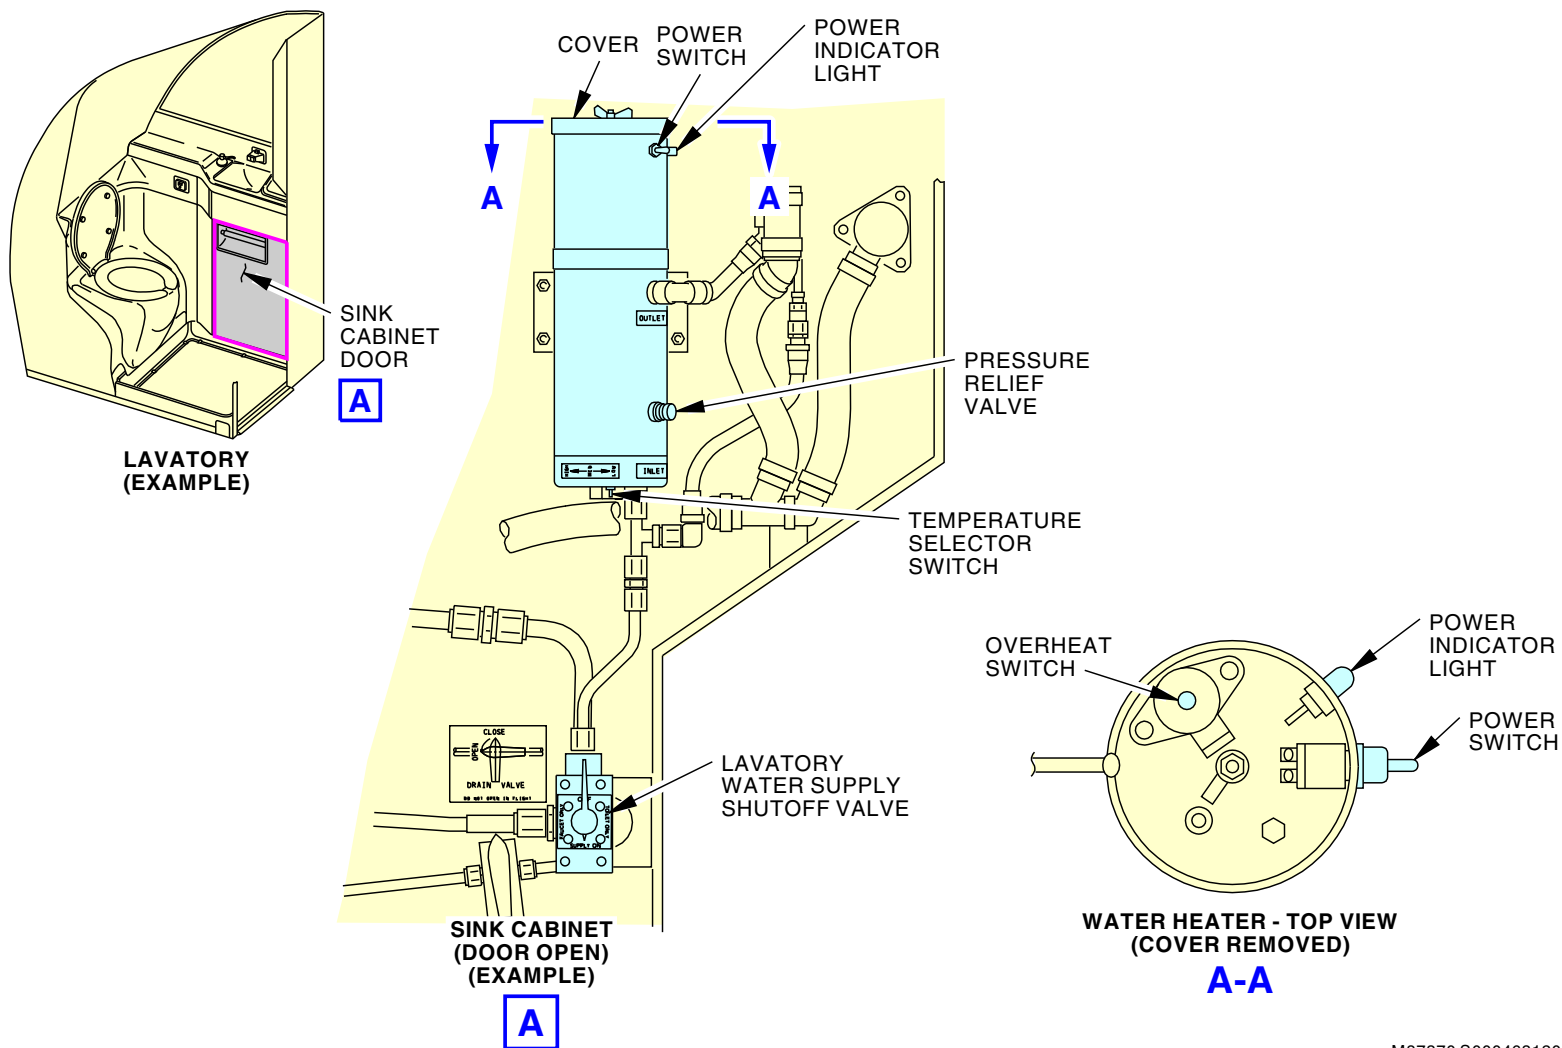

M87370 S0004631205_V1

WATER/WASTE - WATER HEATING - WATER HEATER

38-13-00

**WATER/WASTE - WATER HEATING - FUNCTIONAL DESCRIPTION****Functional Description**

When the power switch is in the ON position, 115v AC power goes to the control electronics.

The temperature selector switch sets the temperature of the water heater. The temperature selector switch has three positions:

- LOW (105F/40C)
- MEDIUM (115F/46C)
- HIGH (125F/52C).

The sense probe (thermistor) gives data on the temperature of the water in the water heater.

If the water is too cold, the control electronics connects power to the heater elements. If the water is at the correct temperature, the control electronics disconnects power from the heater elements.

The overheat switch is a fail-safe device that is a back up to the control electronics. The overheat switch opens the power circuit if the water temperature is more than 170F (76C). If the overheat switch opens, you must manually reset the overheat switch.

Training Information Point

If the power switch is ON and the power indicator light is off, the water heater may have been too hot and opened the overheat switch. You must remove the heater cover to reset the overheat switch.

The rubber cover on the overheat switch isolates electrical power. Do not use a sharp object to reset the overheat switch.

Open the circuit breaker for the water heater when you drain the potable water system.


38-13-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - WATER HEATING - FUNCTIONAL DESCRIPTION

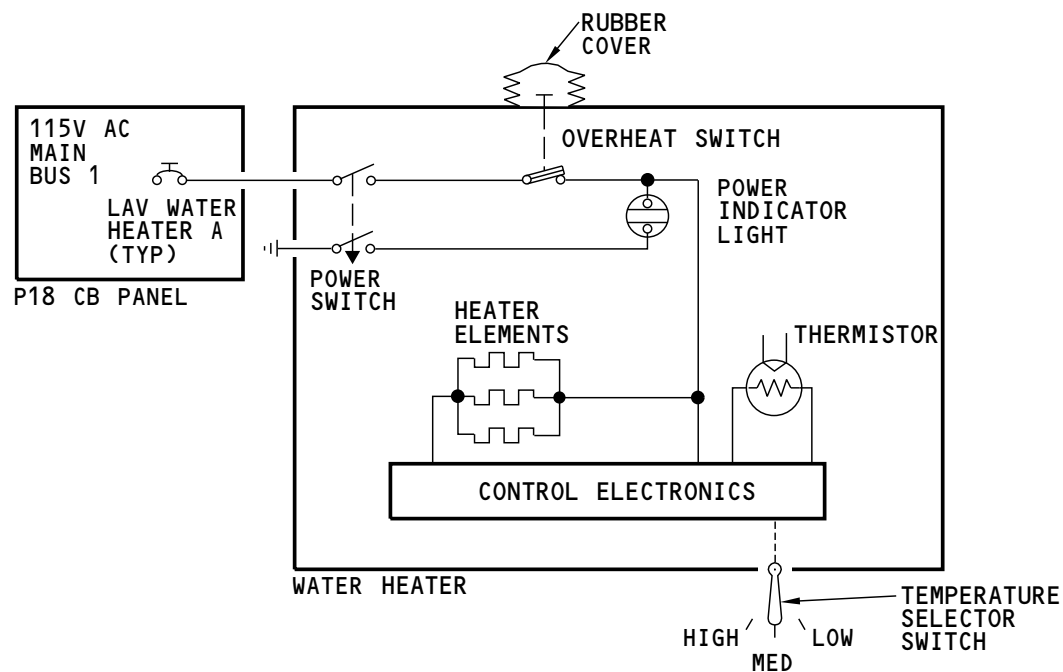

M87373 S0004631209_V1

WATER/WASTE - WATER HEATING - FUNCTIONAL DESCRIPTION

38-13-00-002

SIA ALL

EFFECTIVITY

38-13-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-14-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - INTRODUCTION****Purpose**

The water quantity indication system measures and shows the quantity of water in the water tank.

General Description

These are the water quantity indication system components:

- Water level sensor
- Water quantity transmitter
- Water quantity indicator.

The water level sensor is a copper mesh capacitance-type sensor that is a part of the water tank. The water level sensor is permanently bonded between the inner lining and the composite structure of the water tank.

The water quantity transmitter uses the measurement signal from the sensor to calculate the water level.

The water level shows at the attendant control panel (ACP) on the water quantity indicator from the ENVIRONMENT menu.

Abbreviations and Acronyms




- ACP - attendant control panel
- dc - direct current
- E - empty
- F - full
- LED - light emitting diode
- REF - reference
- T - transmitter

38-14-00

SIA ALL	EFFECTIVITY

D633A101-SIA

WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - INTRODUCTION

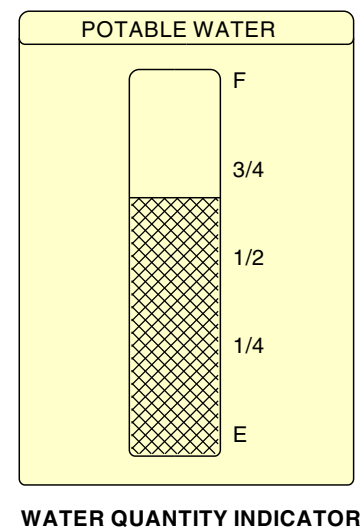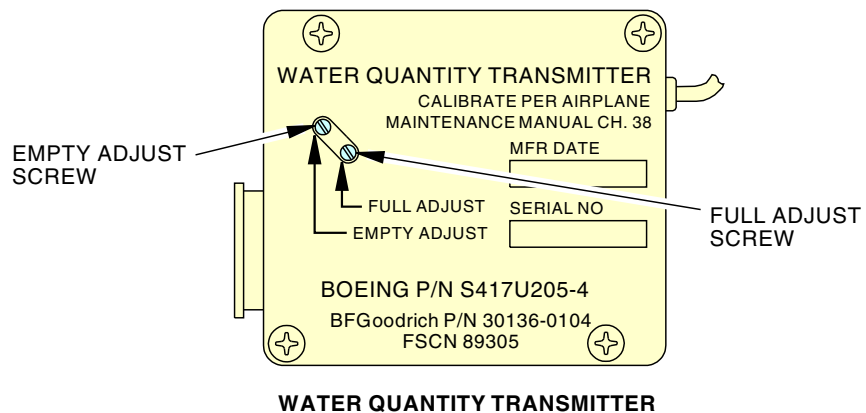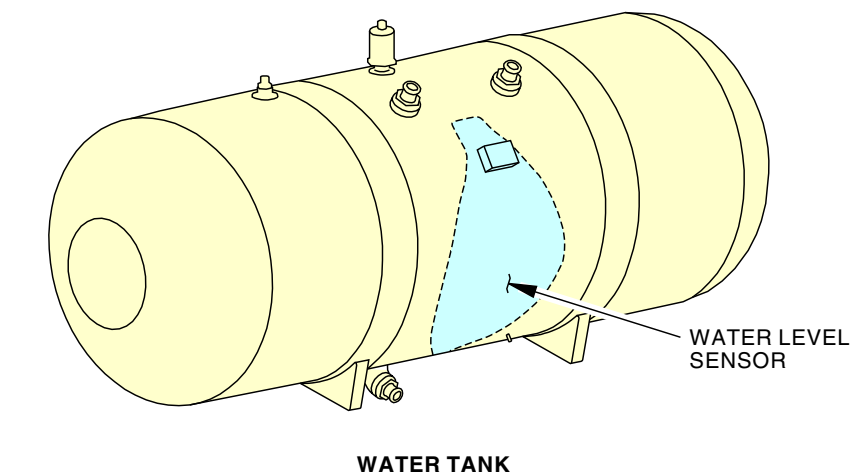

2092283 S0000442115_V3

WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - INTRODUCTION

38-14-00-001

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-14-00

**WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - WATER QUANTITY TRANSMITTER****Purpose**

The water quantity transmitter sends water level data to the water quantity indicator.

Location

The water quantity transmitter is behind the aft cargo lining in the aft cargo compartment. The water quantity transmitter is outboard and below the water tank.

Physical Description

The water quantity transmitter has electrical connections from the water tank level sensor to the water quantity indicator.

An adapter cable connects the transmitter to the wire bundle for the water quantity indicator.

Functional Description

The water quantity transmitter receives 28v dc from bus 1. The water quantity transmitter reads the capacitance of the water level sensor in the tank and supplies a 0 to -10v dc output to the water quantity indicator.

Training Information Point

There are two adjustment screws in the water quantity transmitter. One adjustment screw changes the output voltage when the water tank is empty. The other adjustment screw changes the output voltage when the water tank is full.

There are different adapter cables for each water tank/standpipe configuration. If you change the water tank or standpipe, you must also change the adapter cable. If you do not change the adapter cable, the water tank quantity will not be correct.


38-14-00

EFFECTIVITY	
SIA ALL	



D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details


WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - WATER QUANTITY TRANSMITTER

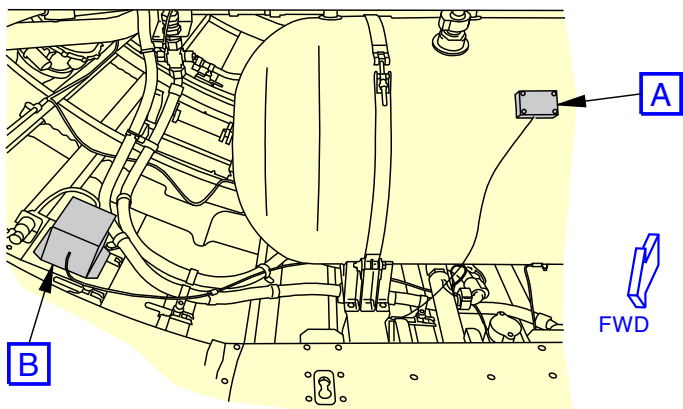

**WATER TANK INSTALLATION
(AFT CARGO COMPARTMENT, CARGO LINING REMOVED)**

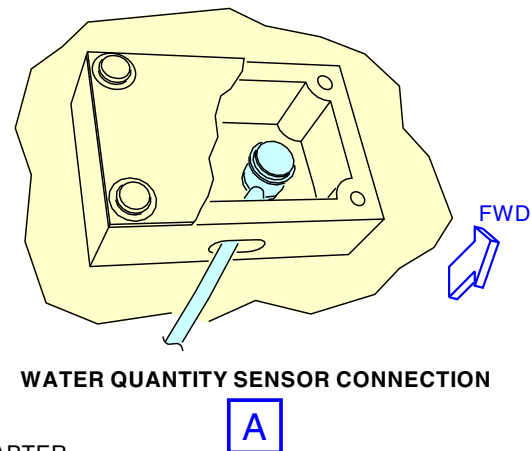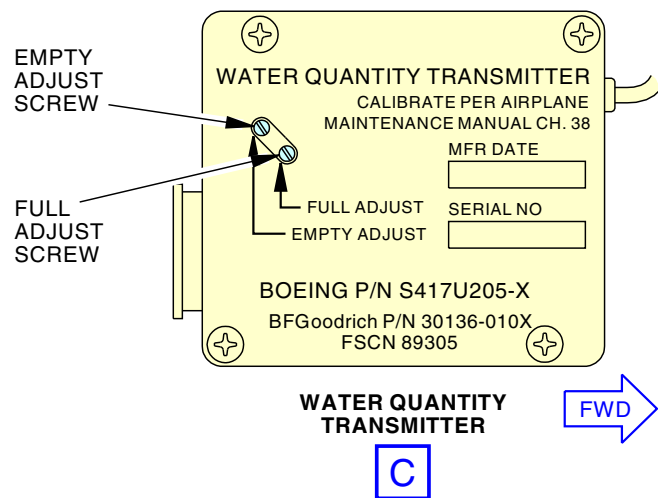

WATER QUANTITY SENSOR CONNECTION

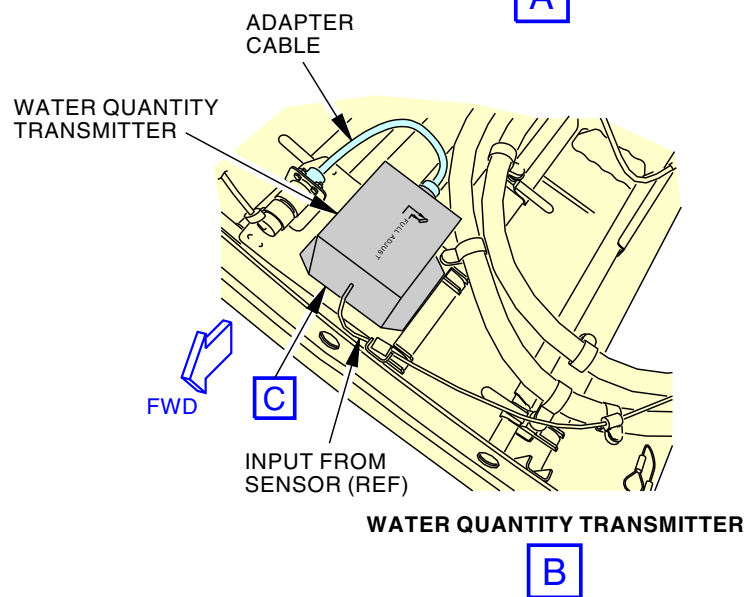

WATER QUANTITY TRANSMITTER

M87390 S0004631227_V2

WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - WATER QUANTITY TRANSMITTER

**WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - WATER QUANTITY INDICATOR****Purpose**

The water quantity indicator shows the level of water in the water tank.

Location

The potable water quantity indicator is viewed on the aft ACP from the ENVIRONMENT menu.

NOTE: The ACP is in the forward or aft attendant stations.

Physical Description

The water quantity indicator is a bar style segment display. The segments are from E (empty) to F (full), in increments of 1/16 of a tank.

Functional Description

The water quantity transmitter sends a voltage that is in proportion to the level of water in the water tank. The ACP software logic causes a specified number of indicator segments to come on. The number of segments shows the level of water in the tank.


E (empty) to 1/4 full displays in red.

1/4 to 1/2 full displays amber.


1/2 to F (full) displays green.

SIA ALL	EFFECTIVITY

WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - WATER QUANTITY INDICATOR

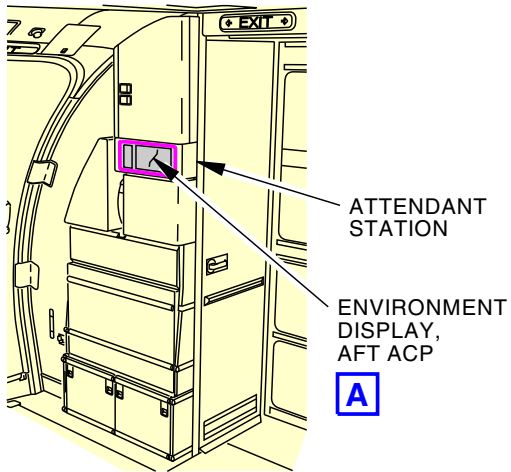

ATTENDANT STATION
(EXAMPLE)

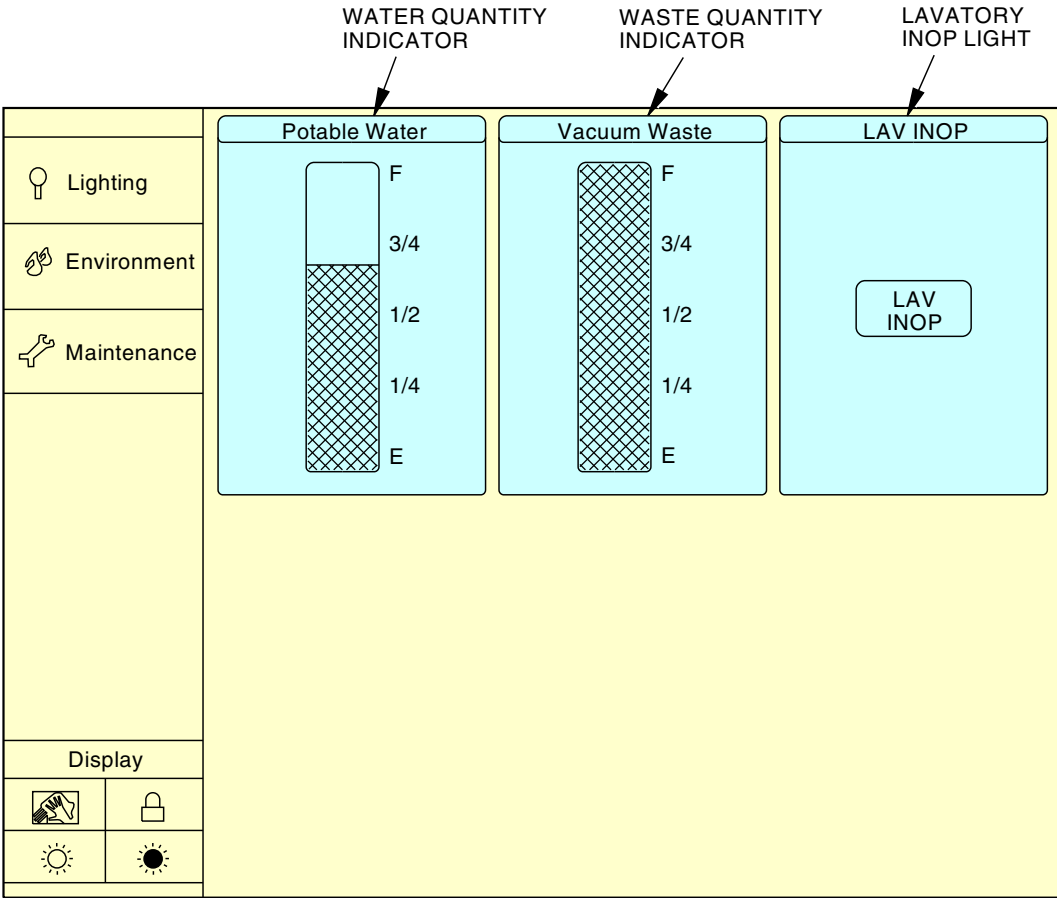


ENVIRONMENT DISPLAY, AFT ACP
(V4 SOFTWARE VERSION)

A


2091894 S0000441911_V4

WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - WATER QUANTITY INDICATOR

WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - WATER QUANTITY INDICATOR

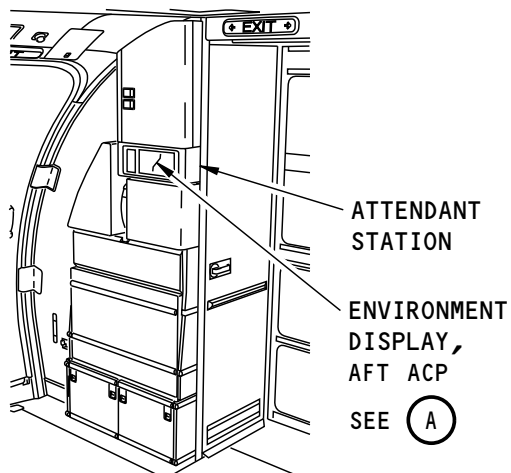

ATTENDANT STATION
(EXAMPLE)

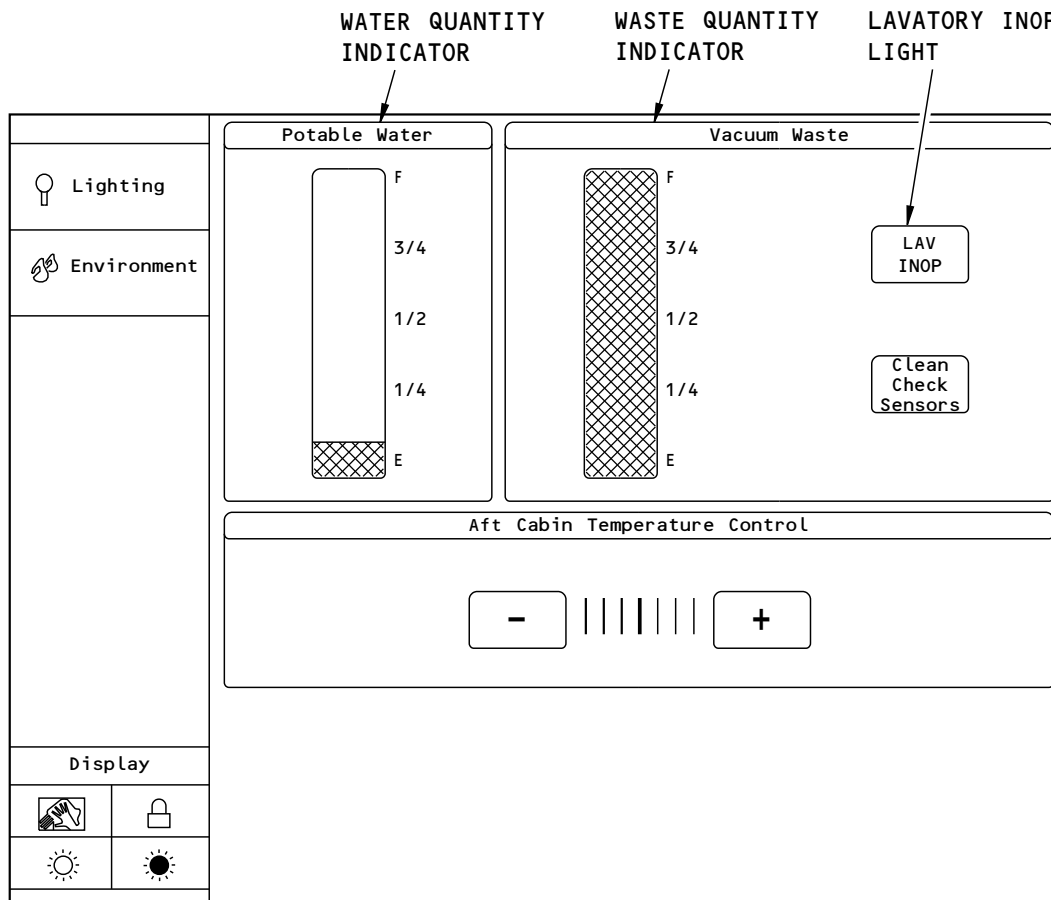

ENVIRONMENT DISPLAY, AFT ACP
(V5 SOFTWARE VERSION)

A

2304933 S0000523363_V1

WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - WATER QUANTITY INDICATOR

38-14-00



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-14-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - FUNCTIONAL DESCRIPTION****Functional Description**

The capacitance of the water tank level sensor changes when the water level in the water tank changes.

The water quantity transmitter senses the capacitance of the water tank level sensor and changes the capacitance input to a 0 to -10v dc output voltage. The output voltage of the water quantity transmitter is in proportion to the quantity of water in the water tank.


The ACP interprets the output voltage of the water quantity transmitter. The 0 to -10v dc input voltage is changed to a digital signal and used to operate a bar style segment display. The display shows as continuous water quantity indicator when selected from the ENVIRONMENT menu. The water quantity indicator shows water quantity as a percentage of full, with 1/16th tank intervals.

Training Information Point

NOTE: If the water tank is not correctly grounded, intermittent operation of the water quantity indicator can occur.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - FUNCTIONAL DESCRIPTION

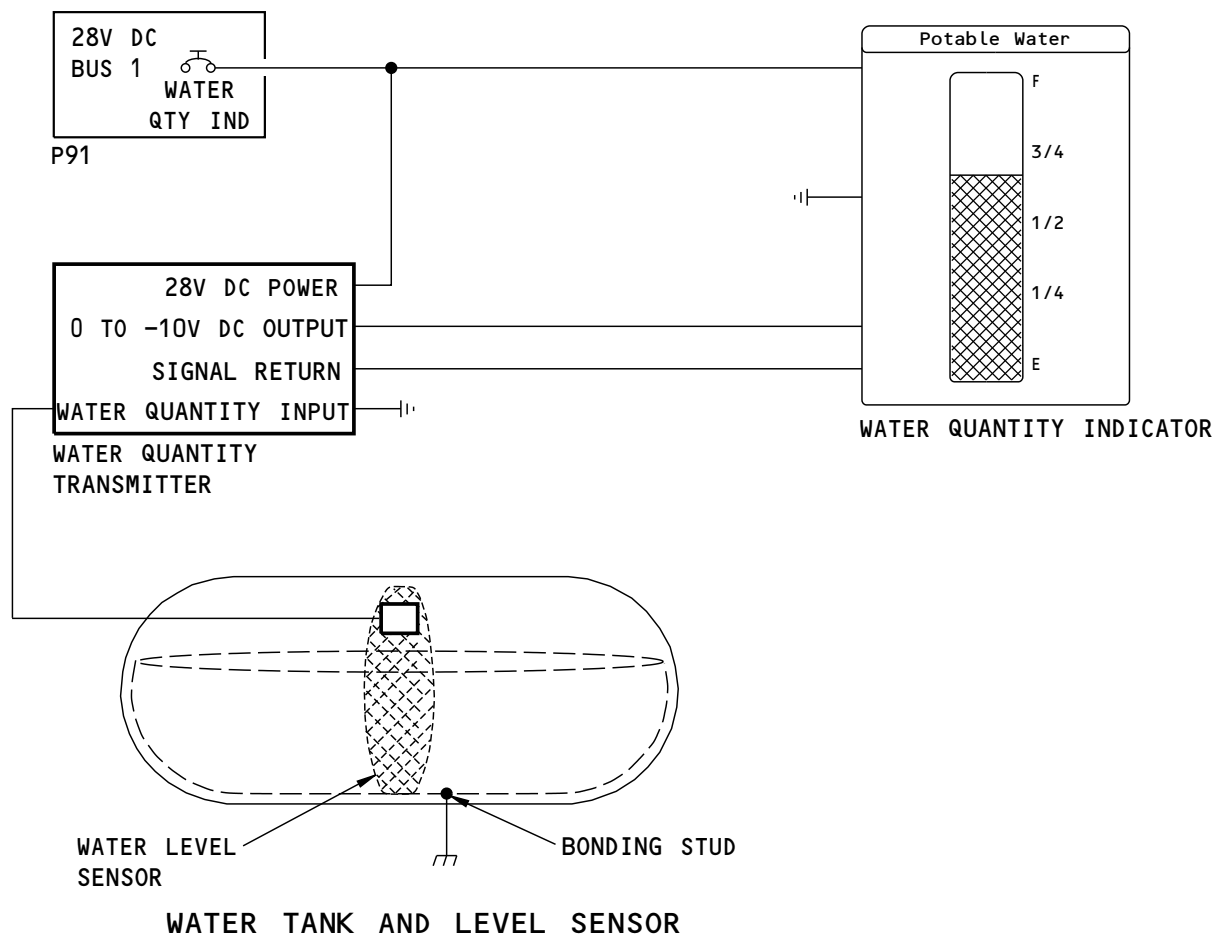

WATER/WASTE - WATER QUANTITY INDICATION SYSTEM - FUNCTIONAL DESCRIPTION

2091912 S0000441942_V2

38-14-00-004

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-14-00



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-30-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



WATER/WASTE - WASTE DISPOSAL - INTRODUCTION

Purpose

The waste disposal system removes water from the lavatory and galley sinks, human waste from the lavatory toilets, and rain water from the door sills.

General Description

The waste disposal system has these subsystems:

- Gray water
- Vacuum waste
- Waste tank quantity indication.

Gray Water System

The gray water comes from the lavatory and galley sinks, and from door sill drains at each entry and galley service door.

The gray water from the sinks drains overboard through drain masts.

The gray water from the door sills drains overboard through drain fittings.

Vacuum Waste System

The vacuum waste system removes human waste from the toilets. The waste material is held in a waste tank until servicing.

Waste Tank Quantity Indication System

The waste tank quantity indication system measures and shows the level of waste in the waste tank.

Abbreviations and Acronyms

- AC - alternating current
- A/C - air conditioning
- BIT - built in test
- C - Celsius
- DC - direct current

- F - Fahrenheit
- FCU - flush control unit
- FWD - forward
- GND - ground
- LCM - logic control module
- mm - millimeter
- PSID - pounds per square inch differential
- REF - reference
- SEC - section
- SYS - system
- TYP - typical
- v - volts

38-30-00


EFFECTIVITY	
SIA ALL	

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



WATER/WASTE - WASTE DISPOSAL - INTRODUCTION

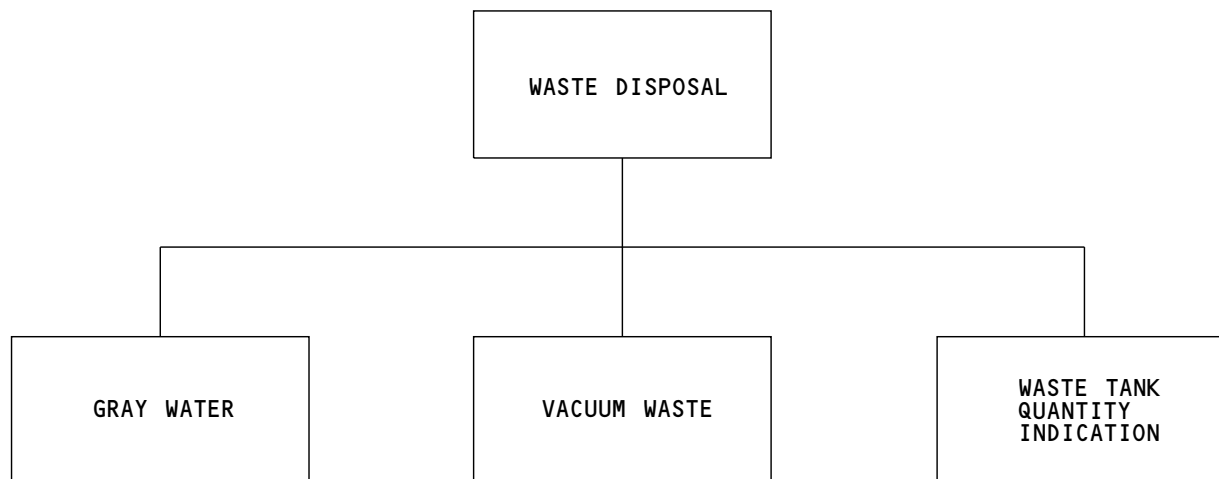

M87396 S0004631239_V1

WATER/WASTE - WASTE DISPOSAL - INTRODUCTION

38-30-00

EFFECTIVITY	
SIA ALL	D633A101-SIA



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-31-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - GRAY WATER SYSTEM - INTRODUCTION****Purpose**

The gray water system has these functions:

- Drains water and other liquids from the lavatory and galley sinks
- Gives exhaust ventilation from the lavatories and galleys
- Drains rain water from the entry/service door sill areas.

- TYP - typical
- v - volts

General Description

The gray water system has these two subsystems:

- Waste water system
- Door sill drain system.

Waste Drain System

The waste water system collects the waste water from the lavatory and galley sinks and drains the waste water overboard through heated drain masts. The waste water system also gives exhaust ventilation from the lavatories and galleys.

Door Sill Drain System

The door sill drain system collects rain water from the entry/service door sill areas and drains the water overboard through drain fittings.

Abbreviations and Acronyms

- A/C - air conditioning
- dc - direct current
- FWD - forward
- GND - ground
- PSID - pounds per square inch differential
- REF - reference
- SEC - section
- SYS - system


38-31-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - GRAY WATER SYSTEM - INTRODUCTION

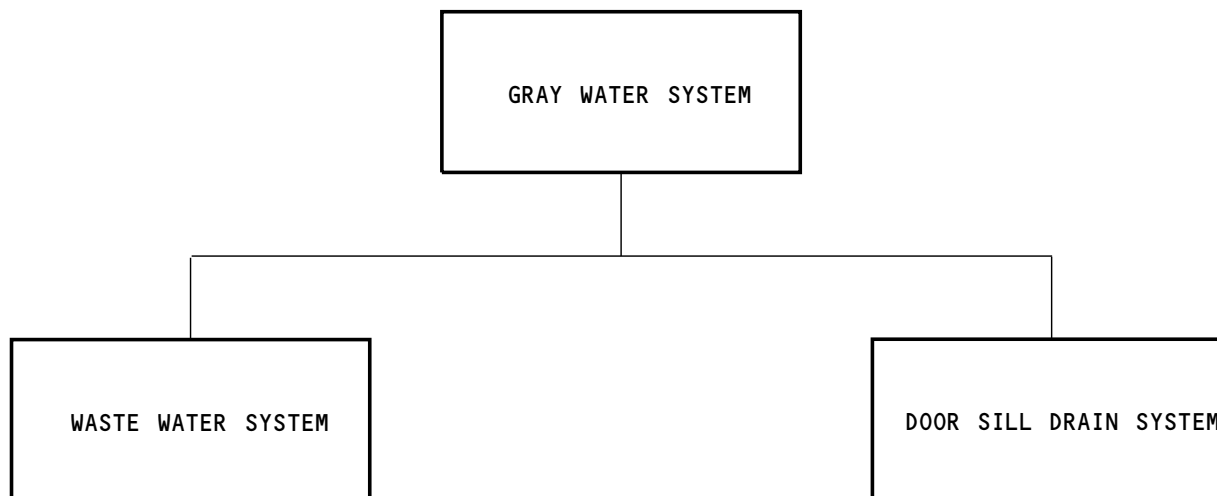

M87400 S0004631243_V1

WATER/WASTE - GRAY WATER SYSTEM - INTRODUCTION

38-31-00

**WATER/WASTE - GRAY WATER SYSTEM - WASTE WATER SYSTEM****Purpose**

The waste water system collects the waste water from the lavatory and galley sinks and drains the waste water overboard through heated drain masts.

The system also gives exhaust ventilation for the lavatories and galleys.

General Description

The waste water system has these components:


- Lavatory and galley sink drains
- Lavatory and galley sink drain vents
- Drain hoses and lines
- Drain masts.

The waste water drains overboard through the drain masts when the airplane is on the ground and when the airplane is in the air.

Electrical heaters in the drain masts prevent the drain masts from freezing.

SIA ALL	EFFECTIVITY
	D633A101-SIA

WATER/WASTE - GRAY WATER SYSTEM - WASTE WATER SYSTEM

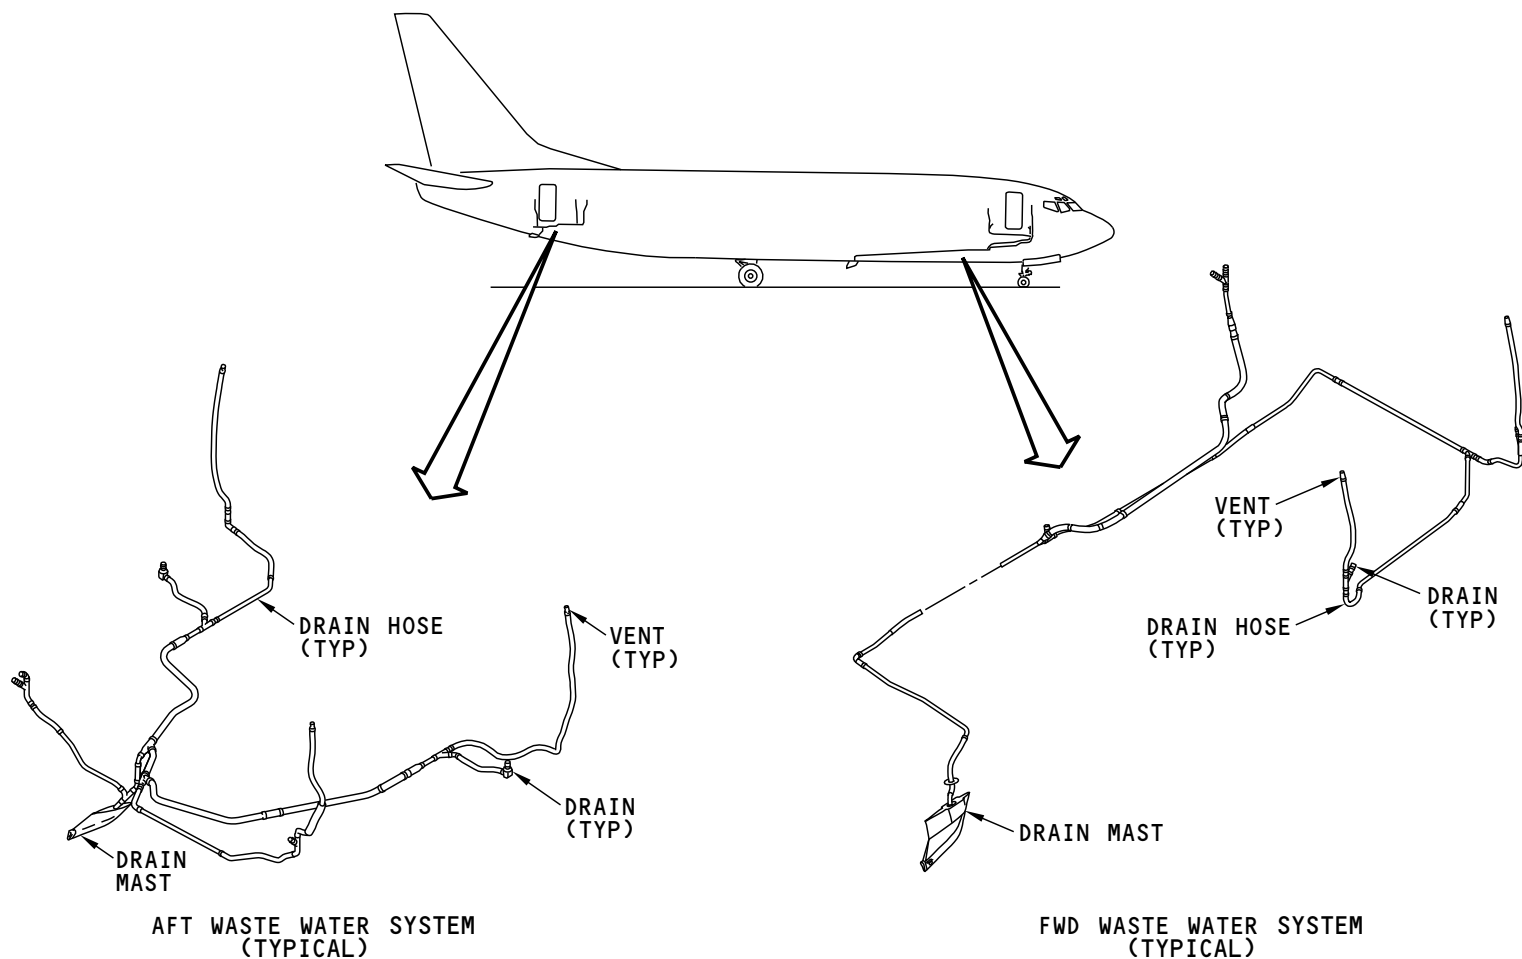

M87404 S0004631248_V1

WATER/WASTE - GRAY WATER SYSTEM - WASTE WATER SYSTEM

38-31-00-005

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-31-00

WATER/WASTE - GRAY WATER SYSTEM - DRAIN MAST**Purpose**

The drain masts let waste water from the lavatory and galley sinks flow overboard.

The drain masts have internal heaters that keep the waste water from freezing.

Location

There are two drain masts on the lower fuselage.

The forward drain mast is on the bottom of the fuselage, forward of the right air conditioning compartment.

The aft drain mast is on the bottom of the fuselage, aft of the aft cargo compartment.

Physical Description

The drain mast is an aerodynamic fairing that attaches to the fuselage.

Each drain mast has an internal 250 watt heater.

See the Water and Toilet Drain Anti-Icing System section for information on the drain mast heaters (SECTION 30-71).

Training Information Point

The heater on the forward drain mast connects to the airplane wiring through an electrical connector.

The heater on the aft drain mast connects to the airplane wiring through wire splices. When you replace the aft drain mast, you must make a splice in the wires.

**CAUTION**

MAKE SURE THAT YOU HOLD THE DRAIN MAST IN ITS POSITION. IF THE DRAIN MAST FALLS, DAMAGE CAN OCCUR.



38-31-00

SIA ALL	EFFECTIVITY

D633A101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - GRAY WATER SYSTEM - DRAIN MAST

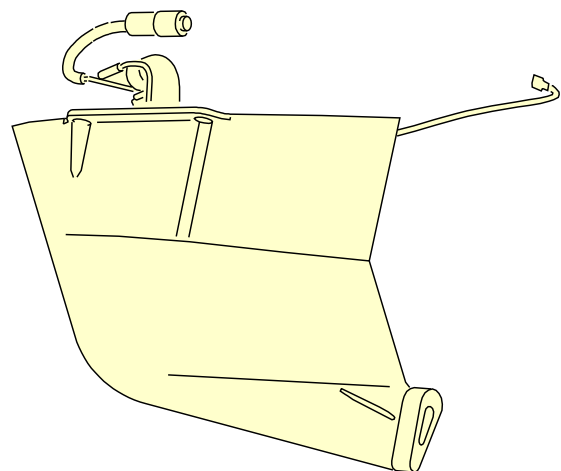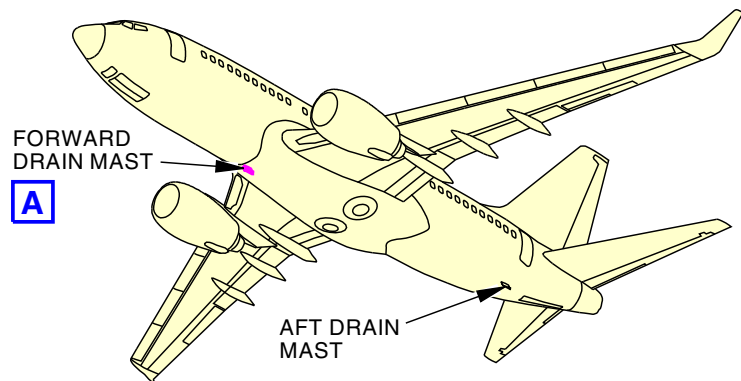

**DRAIN MAST
(TYPICAL)**

B

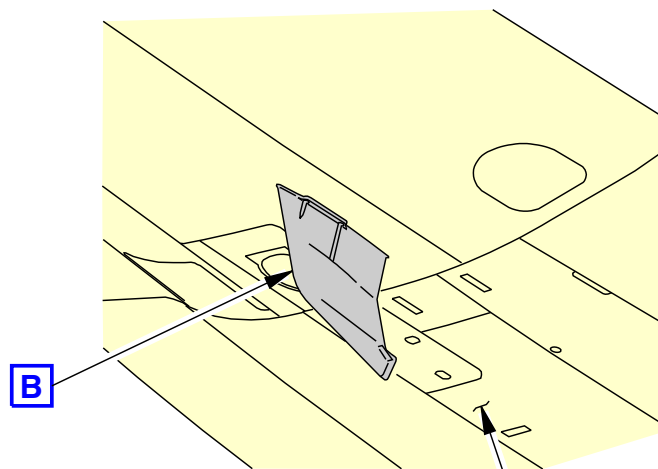

RIGHT A/C
COMPARTMENT
DOOR

**DRAIN MAST INSTALLATION
(TYPICAL)**

A

M87398 S0004631264_V2

WATER/WASTE - GRAY WATER SYSTEM - DRAIN MAST

38-31-00

**WATER/WASTE - GRAY WATER SYSTEM - DOOR SILL DRAIN SYSTEM****Purpose**

The door sill drain system removes rain water from the door sill areas.

Physical Description

The door sill drain system has these components:


- Door sills
- Door sill drains
- Drain hose
- Drain Float Valves
- Drain fittings.

When the airplane is on the ground, the sill drain float valves are open and the water drains overboard through a door sill drain fitting on the bottom of the airplane.

When the airplane is in the air, differential pressure closes the sill drain float valves, and any remaining water is held in the system.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - GRAY WATER SYSTEM - DOOR SILL DRAIN SYSTEM

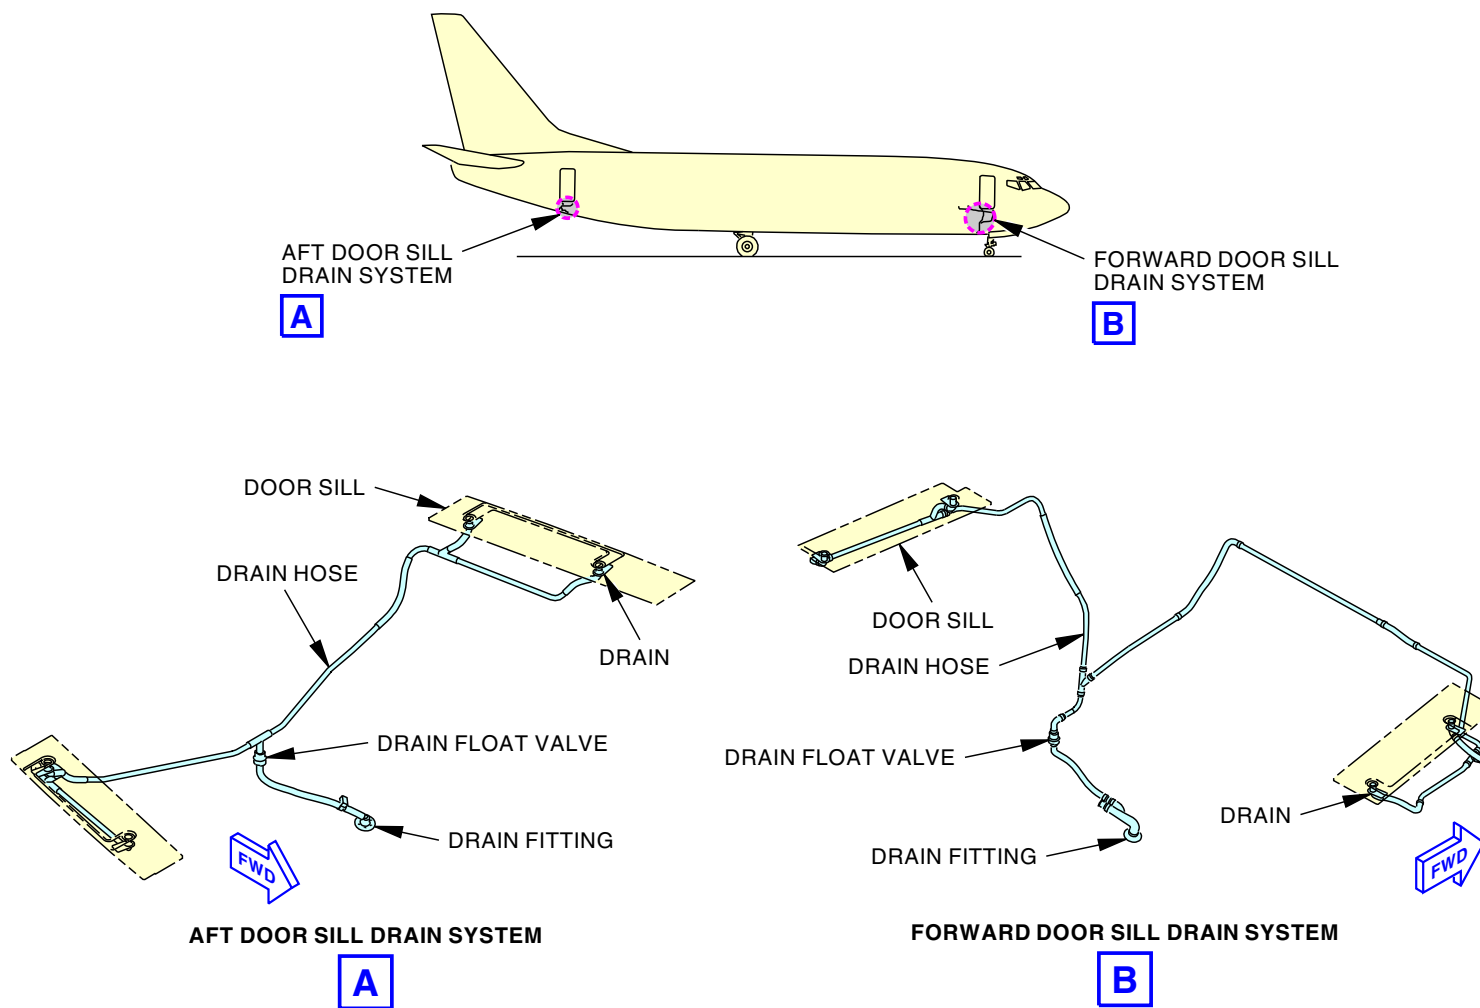

N40952 S0000103572_V2

WATER/WASTE - GRAY WATER SYSTEM - DOOR SILL DRAINS

38-31-00

38-31-00-006

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - GRAY WATER SYSTEM - DOOR SILL DRAINS****Purpose**

The door sill drains remove rain water from the door sill areas.

Location


There are two door sill drains at each entry and galley service door.

Physical Description

The door sills send rain water to the door sill overboard drains when the airplane is on the ground. During flight, differential pressure closes a check valve in the system to prevent the overboard drainage of water and the escape of air.

SIA ALL	EFFECTIVITY
	D633A101-SIA

WATER/WASTE - GRAY WATER SYSTEM - DOOR SILL DRAINS

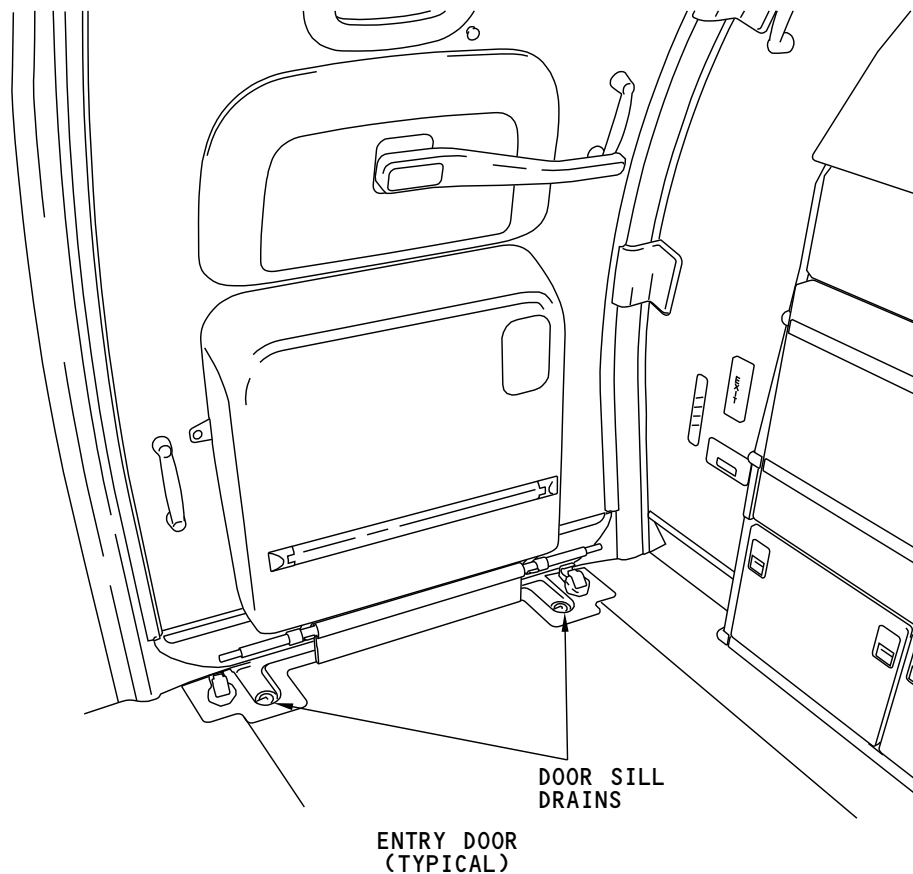

M87409 S0004631271_V1

WATER/WASTE - GRAY WATER SYSTEM - DOOR SILL DRAINS

38-31-00-007

SIA ALL

EFFECTIVITY

38-31-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-32-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - VACUUM WASTE SYSTEM - INTRODUCTION****Purpose**

The vacuum waste system removes human waste material from the toilets and holds it in the waste tank.

General Description

The vacuum toilet collects human waste. A flush cycle puts the waste material into the vacuum waste tubing.

Cabin pressure pushes the material to the vacuum waste tank. There are two sources that cause low pressure (vacuum) in the tank:

- The vacuum blower
- Cabin-to-ambient pressure differential.

The waste is kept in the waste tank until servicing. Servicing is done at the waste service panel.

The vacuum waste system has these components:

- Toilet assembly
- Waste tank
- Liquid separator
- Waste tank rinse nozzle
- Waste tank rinse filter
- Waste tank rinse fitting assembly
- Waste drain valve assembly
- Waste drain ball valve
- Drain line blockage removal fitting
- Vacuum check valve
- Vacuum blower
- Vacuum blower barometric switch.

- C - Celsius
- DC - direct current
- F - Fahrenheit
- FCU - flush control unit
- FWD - forward
- LCM - logic control module
- REF - reference
- TYP - typical
- v - volts

Abbreviations and Acronyms

- AC - alternating current


38-32-00

EFFECTIVITY	
SIA ALL	


D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - VACUUM WASTE SYSTEM - INTRODUCTION

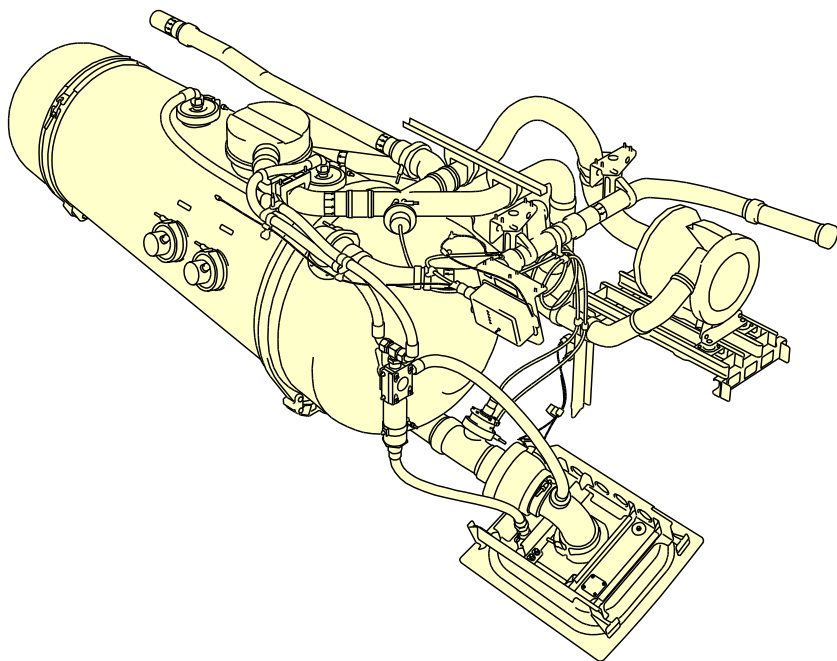

**VACUUM WASTE SYSTEM
(EXAMPLE)**

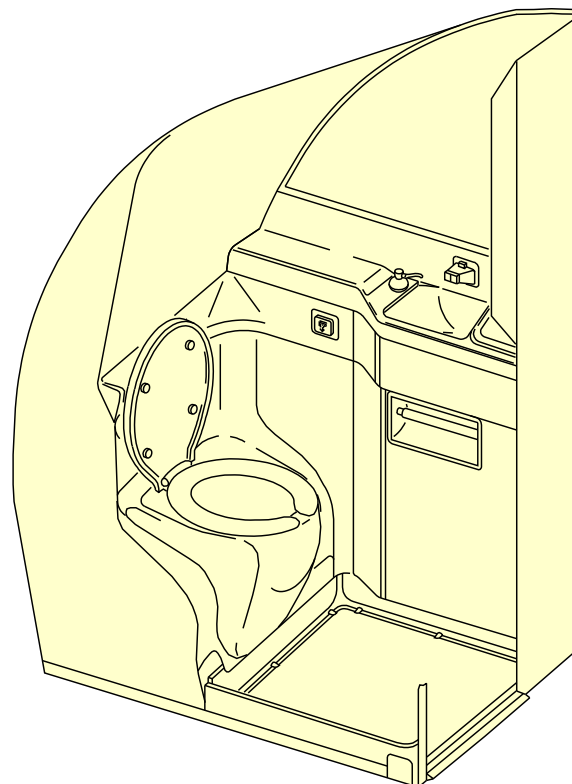

**TOILET ASSEMBLY
(EXAMPLE)**

M87413 S0004631282_V2

WATER/WASTE - VACUUM WASTE SYSTEM - INTRODUCTION

38-32-00

38-32-00-001

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - VACUUM WASTE SYSTEM - COMPONENT LOCATIONS - LAVATORY****Component locations**

There is a toilet assembly and a flush switch in each lavatory.

Training Information Point

To get access to the flush switch, you must first remove the flush switch cover. You then remove the collar, if necessary.


The toilet assembly is behind the toilet shroud. You must remove the toilet shroud first to get access to the toilet assembly for a repair, removal and installation.

The toilet shroud has a seat and a cover.

There is a cutout for the toilet manual shutoff valve handle on the lower part of the shroud.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - VACUUM WASTE SYSTEM - COMPONENT LOCATIONS - LAVATORY

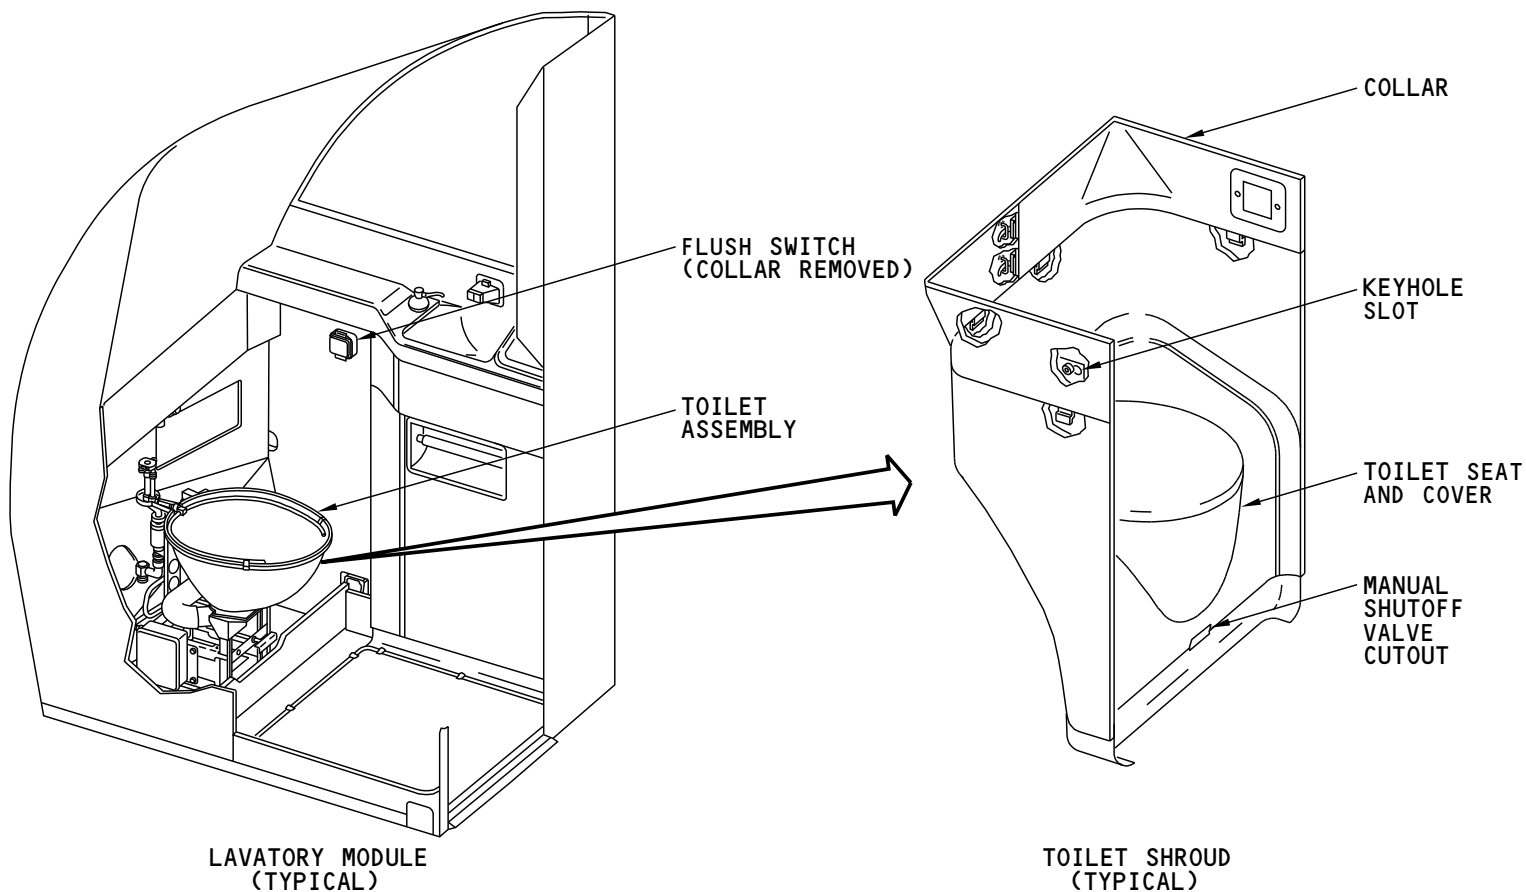

M87417 S0004631286_V1

WATER/WASTE - VACUUM WASTE SYSTEM - COMPONENT LOCATIONS - LAVATORY

38-32-00-003

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-32-00



WATER/WASTE - VACUUM WASTE SYSTEM - FLUSH SWITCH

Purpose

The flush switch starts the flush cycle for the vacuum waste system.

Location

Each lavatory has a flush switch adjacent to the toilet assembly. You must remove the flush switch cover and the collar to get access to the switch.

Physical Description


The flush switch is a momentarily closed switch.

Functional Description

The flush switch controls the vacuum waste system flush cycle. The flush switch sends a signal to the flush control unit on the toilet assembly.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - VACUUM WASTE SYSTEM - FLUSH SWITCH

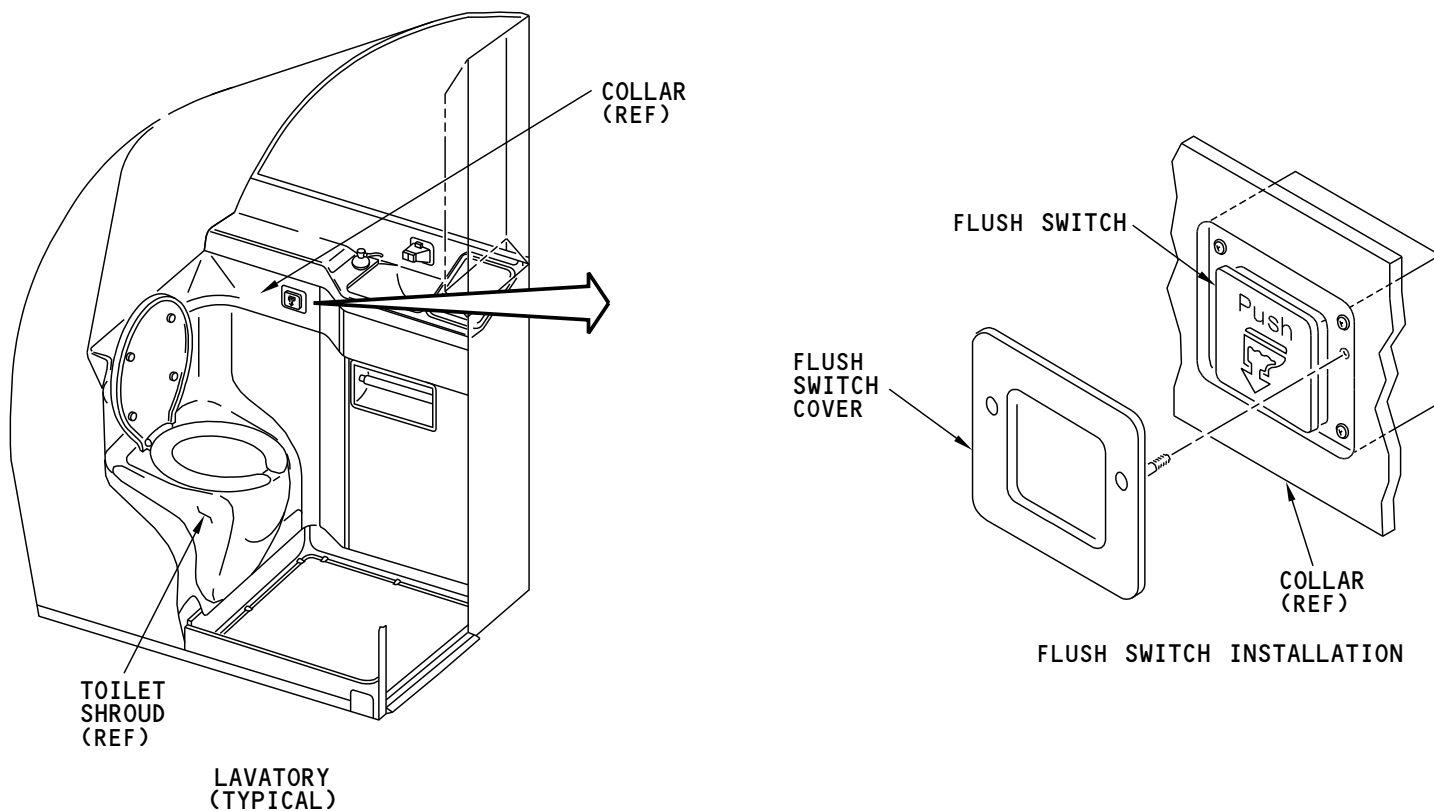

M87427 S0004631288_V1

WATER/WASTE - VACUUM WASTE SYSTEM - FLUSH SWITCH

38-32-00-008

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-32-00

**WATER/WASTE - VACUUM WASTE SYSTEM - TOILET ASSEMBLY****Purpose**

The toilet assembly collects human waste material. The toilet assembly operates the vacuum waste system to send the waste to the waste tank.

Location

There is a toilet assembly in each lavatory.

Physical Description

The toilet assembly has these parts:

- Toilet bowl
- Rinse ring
- Pedestal
- Rinse valve
- Anti-siphon valve
- Flush valve
- Manual shutoff valve
- Manual shutoff handle
- Flush control unit (FCU).

The toilet bowl and the pedestal are stainless steel. The internal surface of the toilet bowl has a layer of non-stick material on it to keep the toilet bowl clean of toilet waste.

The rinse ring is a stainless steel tube. The rinse ring attaches to the inside, upper rim of the toilet bowl and connects to the rinse valve through the anti-siphon valve.

The rinse valve gives water for toilet flush. The rinse valve is a flow through, solenoid operated, poppet valve with an internal filter. The rinse valve opens and self drains when the potable water system is not pressurized.

The anti-siphon valve prevents backflow of water from the toilet bowl into the potable water system.

The flush valve keeps the flow path between the toilet bowl and the waste line closed. The valve opens to let waste material move from the toilet bowl to the waste lines and to the waste tank. The flush valve is an electrically actuated, reversible, rotating disk valve. The motor has built-in thermal overload protection.

The manual shutoff handle closes the manual shutoff valve.

Functional Description

The flush cycle starts when a flush signal is received from the flush switch. Each flush cycle has the following steps:

- Rinse valve opens to rinse the toilet bowl
- Rinse valve closes
- Flush valve opens to drain the toilet contents.
- Flush valve closes.

When the rinse valve is open, 8 fl-oz (237 ml) of water flushes the toilet bowl.

Training Information Point


If the flush valve fails in the open position, cabin pressure goes through the open valve. You can use the manual shutoff handle to close the manual shutoff valve. Pull the manual shutoff handle to close the manual shutoff valve. Push the manual shutoff handle to open the manual shutoff valve.

The FCU has a maintenance switch. Use the maintenance switch to keep the flush valve open during maintenance operations. Push the maintenance switch one time to open the flush valve. Push the maintenance switch again and hold it in for two seconds to operate the vacuum blower. The vacuum blower operates for ten seconds and then stops. Push the toilet flush switch to close the flush valve and return the toilet to normal operation.

The toilet bowl has a layer of non-stick material. Do not let toilet bowl cleaner fluid stay in the toilet bowl for a long period of time. The toilet bowl cleaner fluid can damage the surface of the toilet bowl.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - VACUUM WASTE SYSTEM - TOILET ASSEMBLY

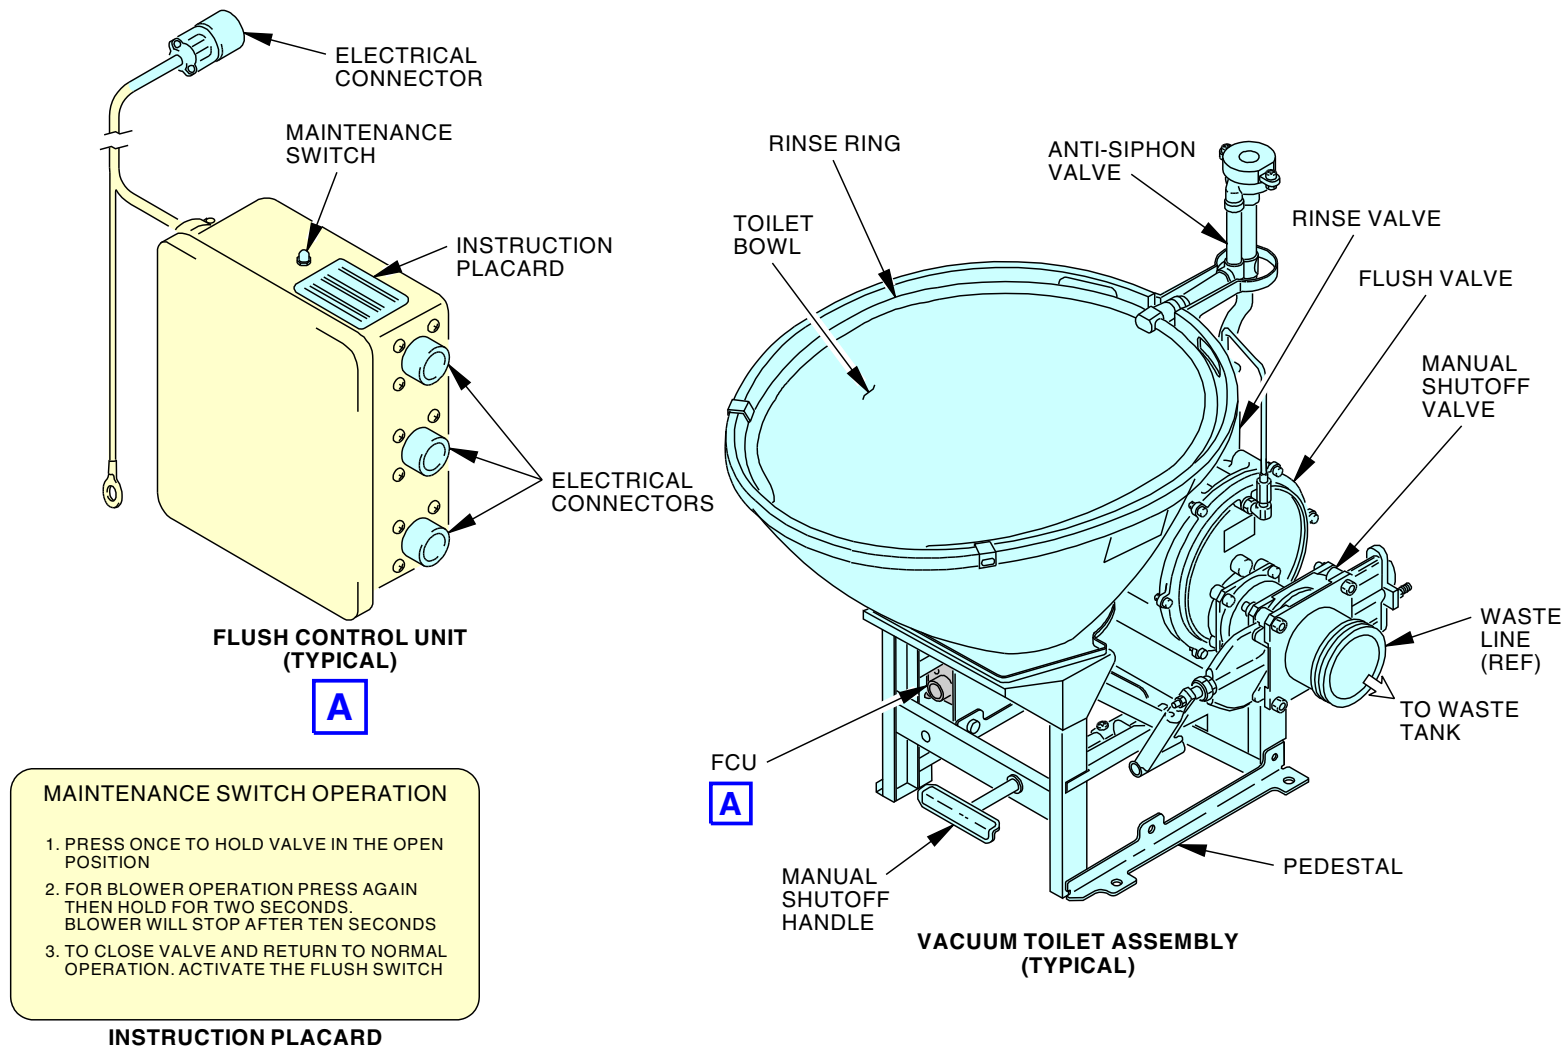

M87422 S0004631290_V2

WATER/WASTE - VACUUM WASTE SYSTEM - TOILET ASSEMBLY

38-32-00

38-32-00-005

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - VACUUM WASTE SYSTEM - FLUSH CYCLE**Lavatory Flush Cycle Operation**

The flush control unit (FCU) must receive an enable signal from the logic control module (LCM) to operate the toilet assembly components. The LCM sends an enable signal to the FCU when the waste tank is not full.

If the FCU is enabled, the flush cycle will start with the operation of the flush switch.

The flush control unit (FCU) controls the operation of these components during the flush cycle:

- Vacuum blower
- Rinse valve
- Flush valve.

When you push the flush switch, the FCU immediately starts a duty cycle inhibit. The duty cycle inhibit prevents another input from the flush switch for the next 15 seconds.

The FCU also sends a signal to operate the vacuum blower. The vacuum blower will operate if the airplane is below 16,000 feet and the waste drain ball valve is closed. The FCU sends the vacuum blower signal for 15 seconds.

One second after the flush cycle starts, the FCU opens the rinse valve. The rinse valve is open for 0.7 seconds. During this time, eight ounces of potable water goes into the toilet bowl. The FCU then closes the rinse valve.

Two seconds after the flush cycle starts, the FCU opens the flush valve. The flush valve is open for four seconds to drain the toilet waste. The FCU then closes the flush valve.

The vacuum blower continues to operate for nine seconds. The vacuum blower then stops.


The FCU is then ready for another flush cycle.

38-32-00**SIA ALL** **EFFECTIVITY**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - VACUUM WASTE SYSTEM - FLUSH CYCLE

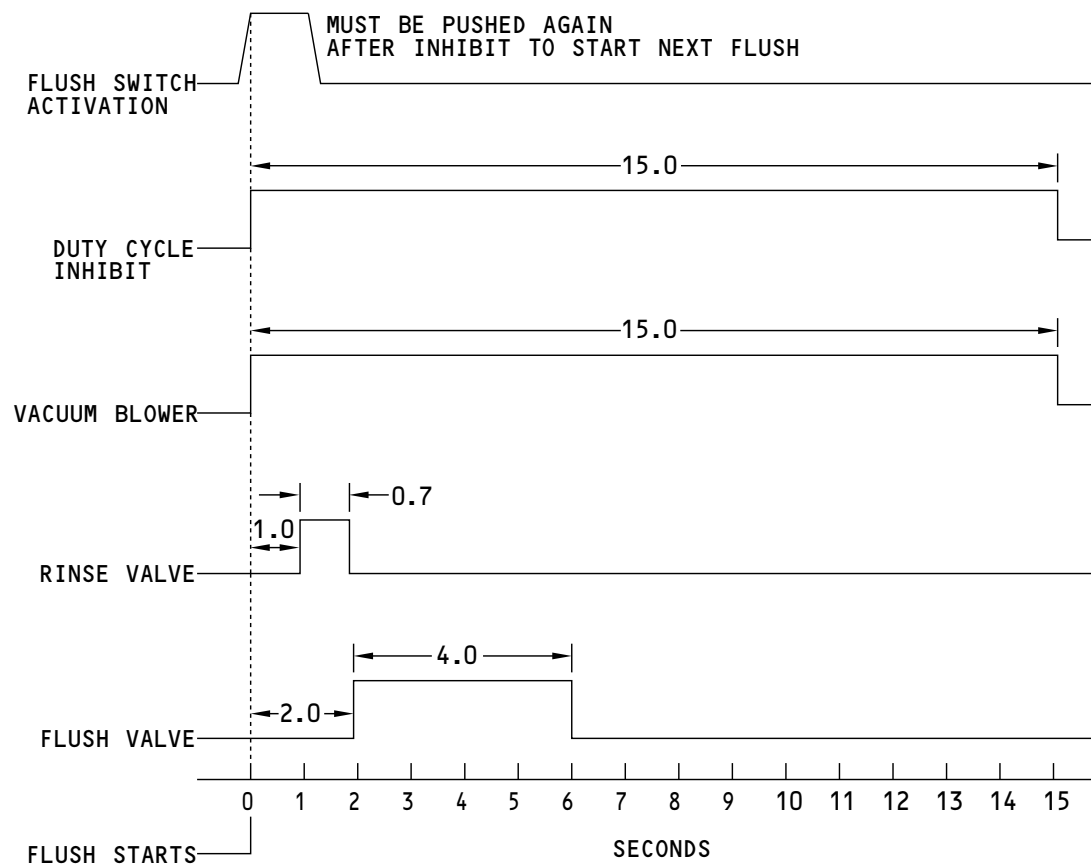

M87428 S0004631293_V1

WATER/WASTE - VACUUM WASTE SYSTEM - FLUSH CYCLE

38-32-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - VACUUM WASTE SYSTEM - COMPONENT LOCATIONS - CARGO COMPARTMENT

Location

These components are in the aft cargo compartment, left side, behind the cargo lining:

- Waste tank
- Liquid separator
- Vacuum blower
- Vacuum check valve
- Waste drain ball valve and linkage assembly
- Waste drain valve assembly
- Waste tank rinse fitting assembly
- Waste tank rinse nozzles
- Waste tank rinse filter
- Drain line blockage removal fitting.

The liquid separator is on top of the waste tank.

The vacuum blower and vacuum check valve are forward of the waste tank. The vacuum blower and vacuum check valve are behind the sidewall panels in the aft cargo compartment.

The waste drain ball valve is below, outboard, and forward of the waste tank.

The waste drain valve assembly and the waste drain rinse fitting assembly are on the waste service panel. You can access the waste drain valve assembly and the waste drain rinse fitting assembly from below the floor.

The waste tank rinse nozzles are on the top of the waste tank.

The waste tank rinse filter is along the inboard side of the waste tank.

The drain line blockage removal fitting is on the waste drain tube, forward of the waste tank.

Training Information Point

Before you work on the waste system, make sure that the waste system servicing task is complete. Wear protective clothing.




WARNING

SEAL THE CARGO COMPARTMENT WITH THE LINERS. IF YOU INSTALL THE LINERS INCORRECTLY, THE FIRE WILL NOT HAVE CONTAINMENT AND THE EXTINGUISHING AGENT OR SMOKE CAN GO INTO THE PASSENGER COMPARTMENT DURING A FIRE. IF YOU DO NOT OBEY THE INSTRUCTIONS IN THE SPECIFIED PROCEDURE, INJURY TO PERSONNEL AND DAMAGE TO EQUIPMENT CAN OCCUR.

SIA ALL	EFFECTIVITY

WATER/WASTE - VACUUM WASTE SYSTEM - COMPONENT LOCATIONS - CARGO COMPARTMENT

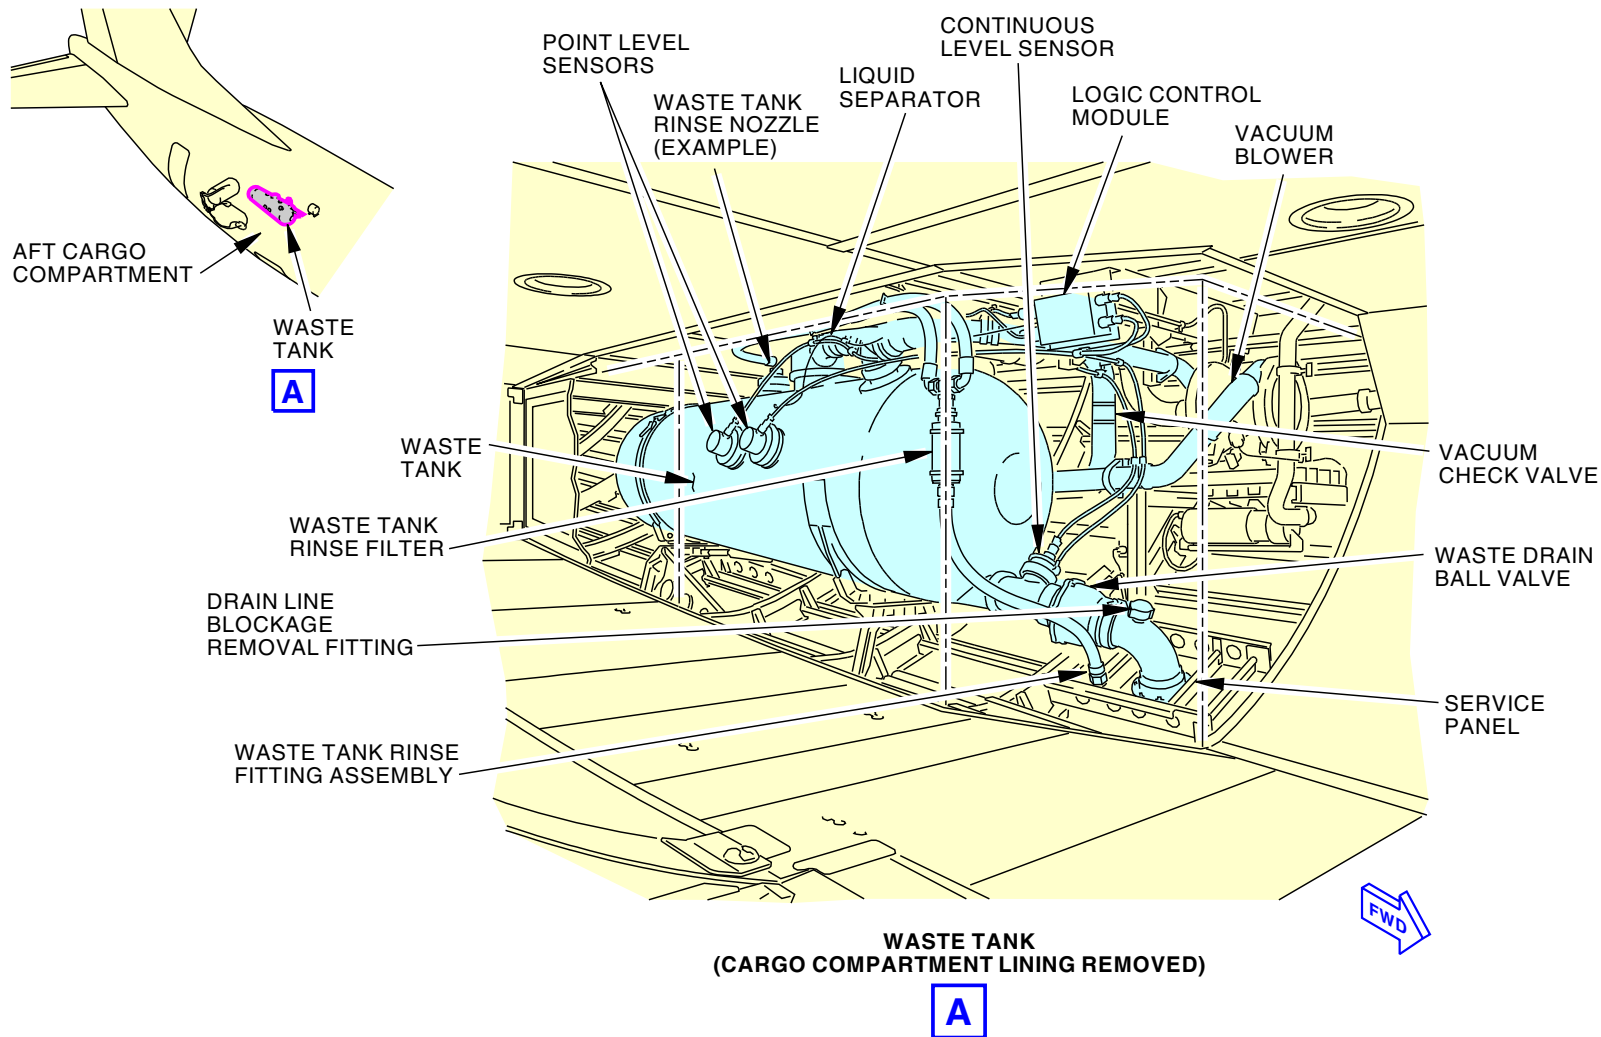

2243411 S0000500668_V2

WATER/WASTE - VACUUM WASTE SYSTEM - COMPONENT LOCATIONS - CARGO COMPARTMENT

38-32-00-002

SIA ALL

EFFECTIVITY

38-32-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK****Purpose**

The waste tank holds waste material from the lavatory toilets.

Location

The waste tank is in the aft cargo compartment on the left side of the airplane. You must remove the cargo lining to get access to the waste tank.

Physical Description

The waste tank is a graphite fiber reinforced plastic container. The tank wall is graphite filaments wound over a stainless steel liner. The center section of the tank wall includes a honeycomb core.

The waste tank usable capacity is 60 gallons (227 liters).

The waste tank has fittings for these components:

- Waste tank rinse nozzle (2)
- Liquid separator
- Waste line inlet (2)
- Drain line
- Point level sensor (2).

An access cover at each end of the tank lets you examine or clean the inside of the tank.


A band strap at the aft end of the tank and a tank mount on the forward end of the tank holds the waste tank to the airplane structure.

38-32-00**SIA ALL EFFECTIVITY**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK

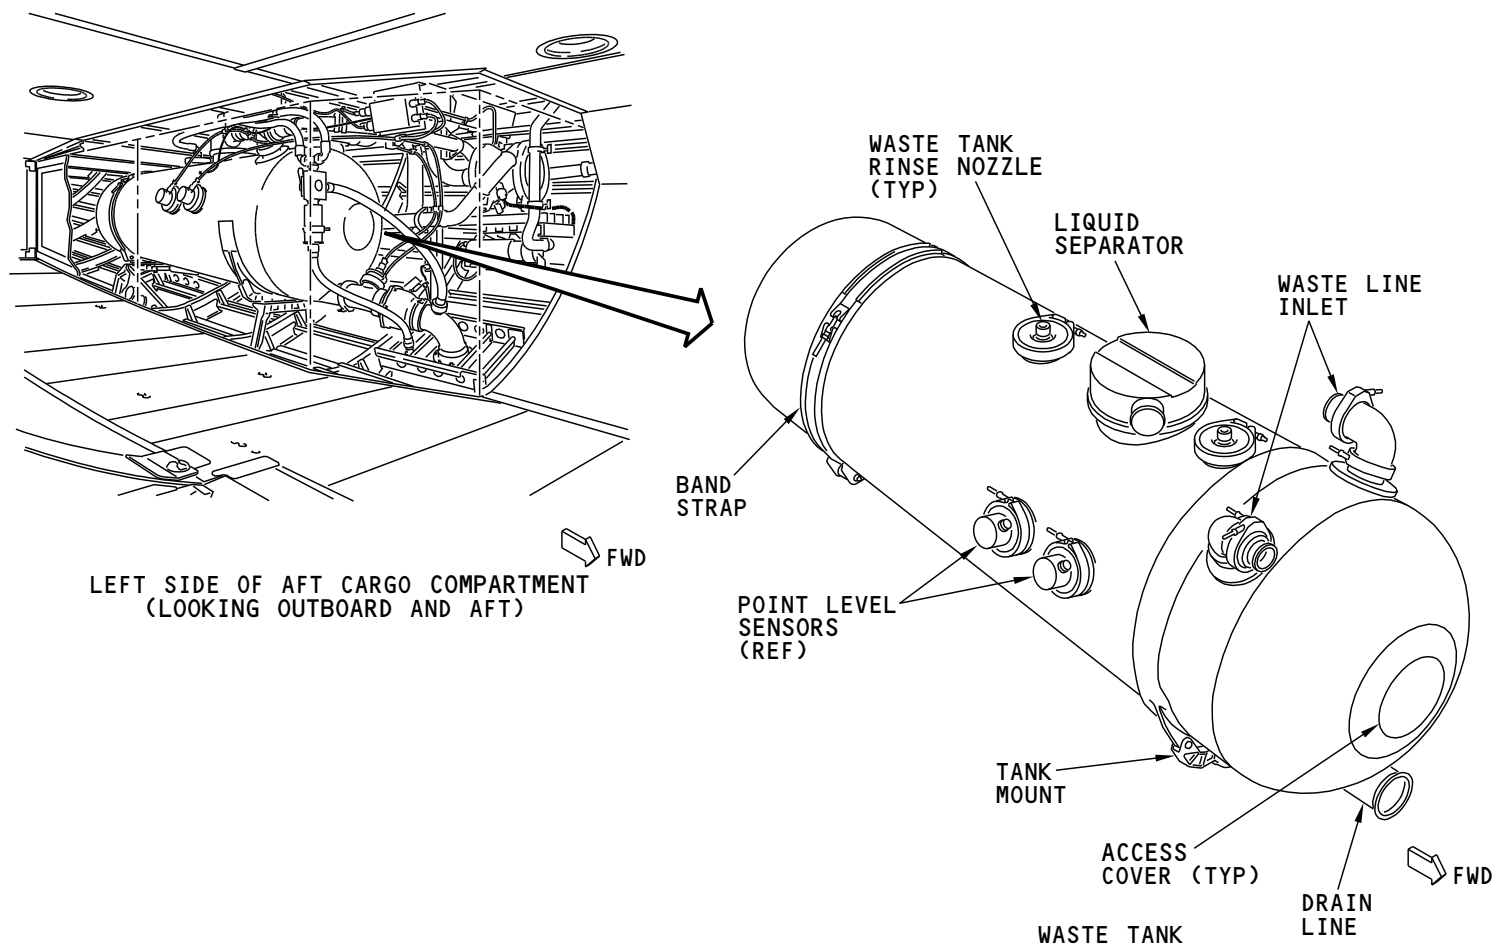

M87433 S0004631297_V1

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK

38-32-00-012

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-32-00

**WATER/WASTE - VACUUM WASTE SYSTEM - LIQUID SEPARATOR****Purpose**

The liquid separator removes moisture and waste particles from the waste tank air.

Location

The liquid separator is at the top of the waste tank.

Physical Description

The liquid separator has these parts:

- Separator cap
- V-band coupling
- Upper separator assembly
- Lower separator assembly
- O-ring.

The v-band coupling attaches the liquid separator to the top of the waste tank.

Functional Description

The vacuum blower pulls air out of the waste tank to an overboard port. The air goes through the liquid separator. Filters in the liquid separator remove the moisture and waste particles before the air goes through the port in the separator cap.

Training Information Point

Before you work on the liquid separator, isolate the waste tank electrical components. Do the waste tank servicing. Do not add the chemical precharge.

Use a general purpose cleaner detergent to clean the liquid separator.

Use food grade processing grease on the O-ring when you install the liquid separator.


38-32-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - VACUUM WASTE SYSTEM - LIQUID SEPARATOR

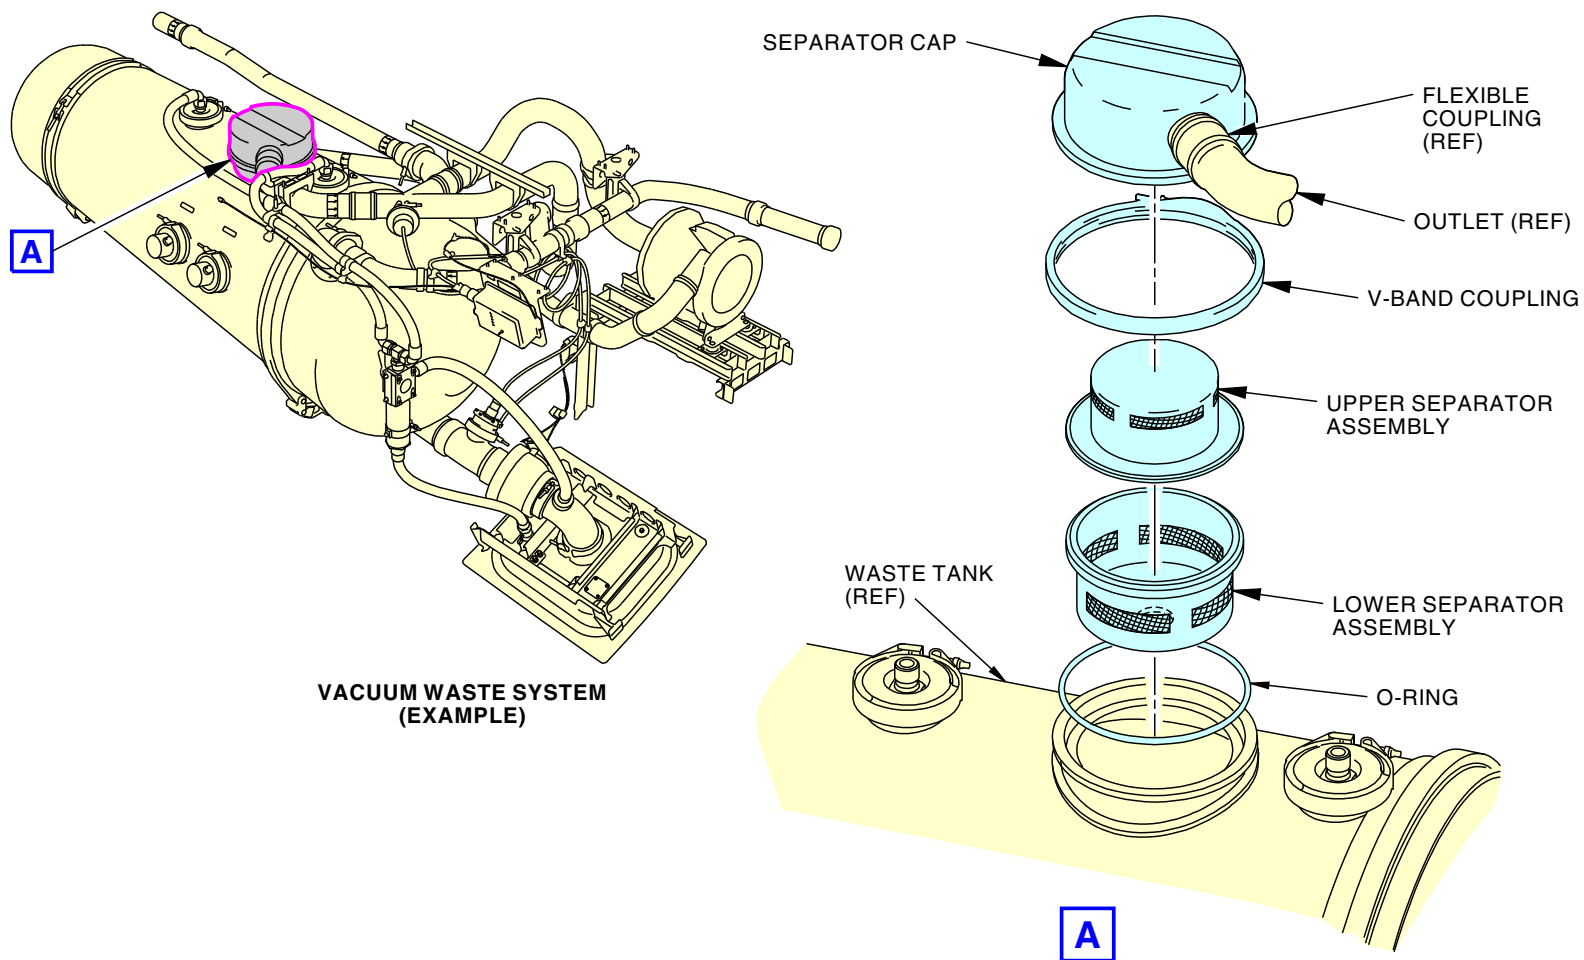

M87424 S0004631299_V2

WATER/WASTE - VACUUM WASTE SYSTEM - LIQUID SEPARATOR

38-32-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER AND FILTER****Purpose**

The vacuum blower removes air from the waste tank.

Location**SIA ALL; AIRPLANES WITH VACUUM BLOWERS WITHOUT AN AIR FILTER**

The vacuum blower is in the aft cargo compartment on the left side. The vacuum blower is on a shelf forward of the waste tank.

SIA ALL**Physical Description**

The vacuum blower is a three phase, high-speed, motor operated fan.

The vacuum blower has these features:

- Intake port
- Exhaust port
- Electrical connection.

Functional Description

The vacuum blower removes the air from the waste tank and blows it out of the airplane. Removal of the air from the waste tank causes the pressure in the waste tank to decrease. When a flush valve opens, higher pressure cabin air pushes lavatory toilet waste to the waste tank.

Three thermal switches give overheat protection. The switches are wired in series and operate at 270F (132C). If a switch operates, it stops motor operation. The switches reset when the temperature decreases to less than their set point.

Operation


The vacuum blower operates when you push the flush switch and the airplane is below 16,000 feet.

Training Information Point

The vacuum blower has two flexible coupling hoses that attach with clamps. Four fasteners on shock mounts and a jumper cable attach the blower to the shelf.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER AND FILTER

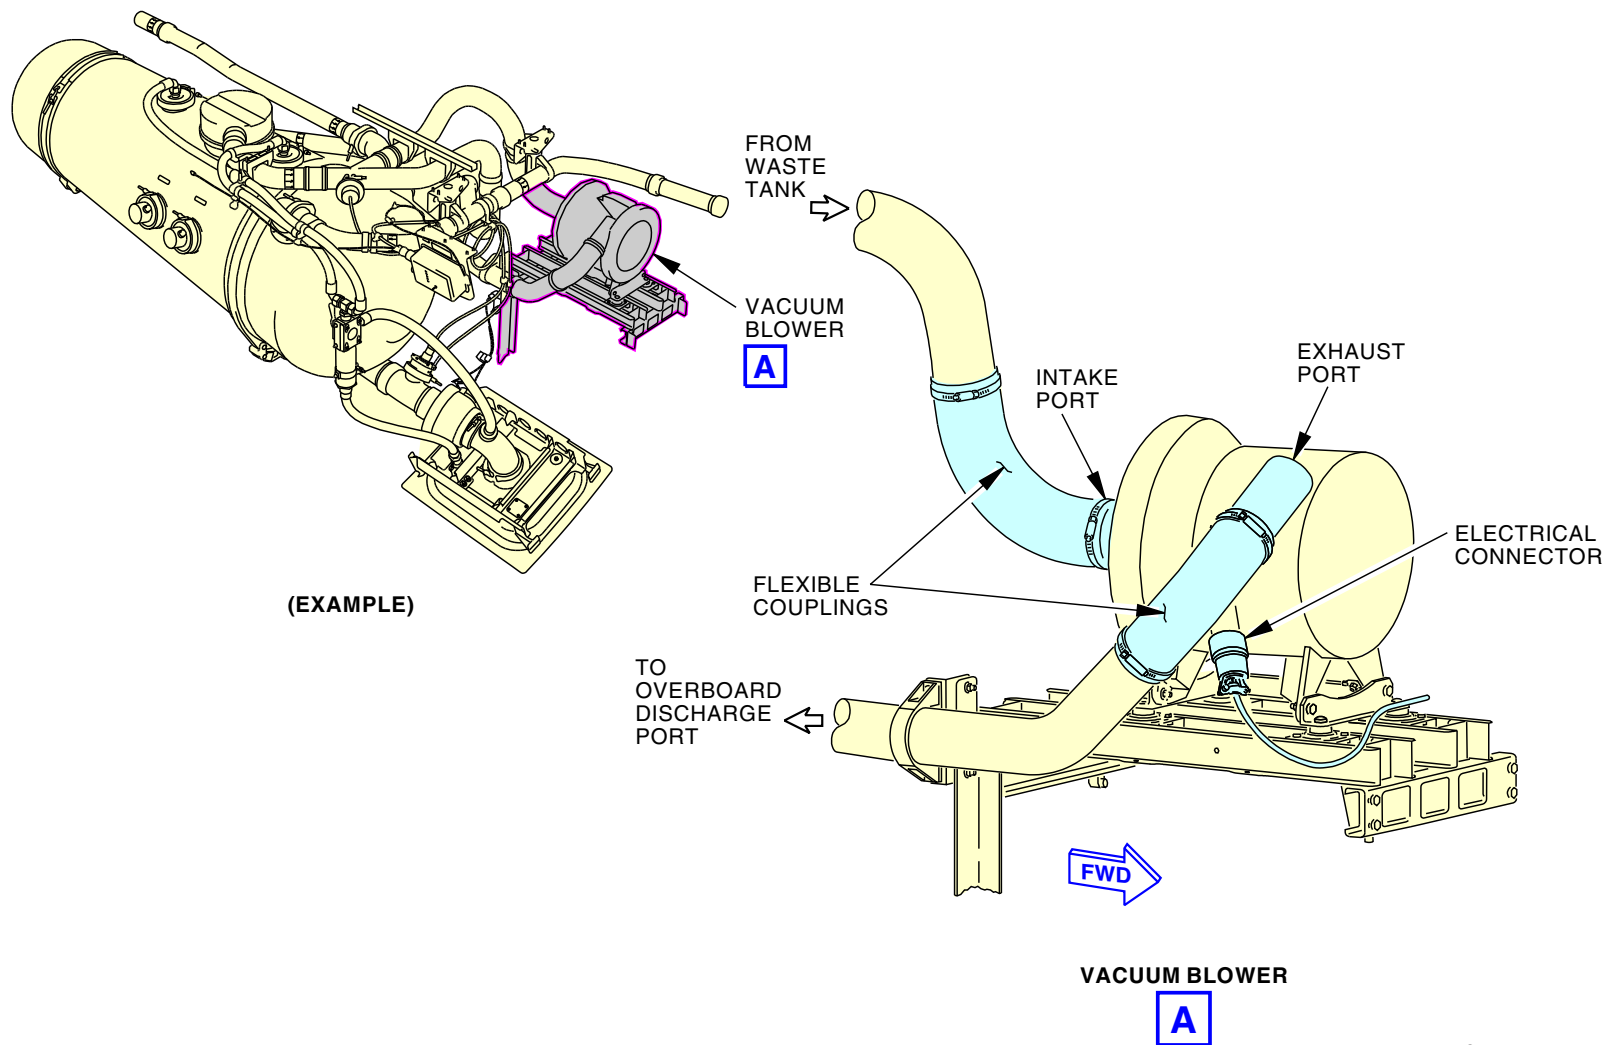

D86139 S0000166848_V1

WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER

38-32-00

**WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER BAROMETRIC SWITCH****Purpose**

The vacuum blower barometric switch opens when the altitude is above 16,000 feet. The open switch does not let the vacuum blower come on.

Location

The vacuum blower barometric switch is in the jackscrew compartment. You get access to it through the section 48 access and blowout door.

The barometric switch attaches to structure on the left side of the fuselage.

Physical Description

The barometric switch has an aneroid capsule and an electrical connector.

Functional Description

The capsule senses the ambient air pressure. As the pressure outside decreases, the capsule expands. When the capsule expands to a specific size, it opens an internal switch.

Interfaces


The vacuum blower barometric switch is part of the control circuit for vacuum blower operation.

38-32-00

EFFECTIVITY	
SIA ALL	

D633A101-SIA

WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER BAROMETRIC SWITCH

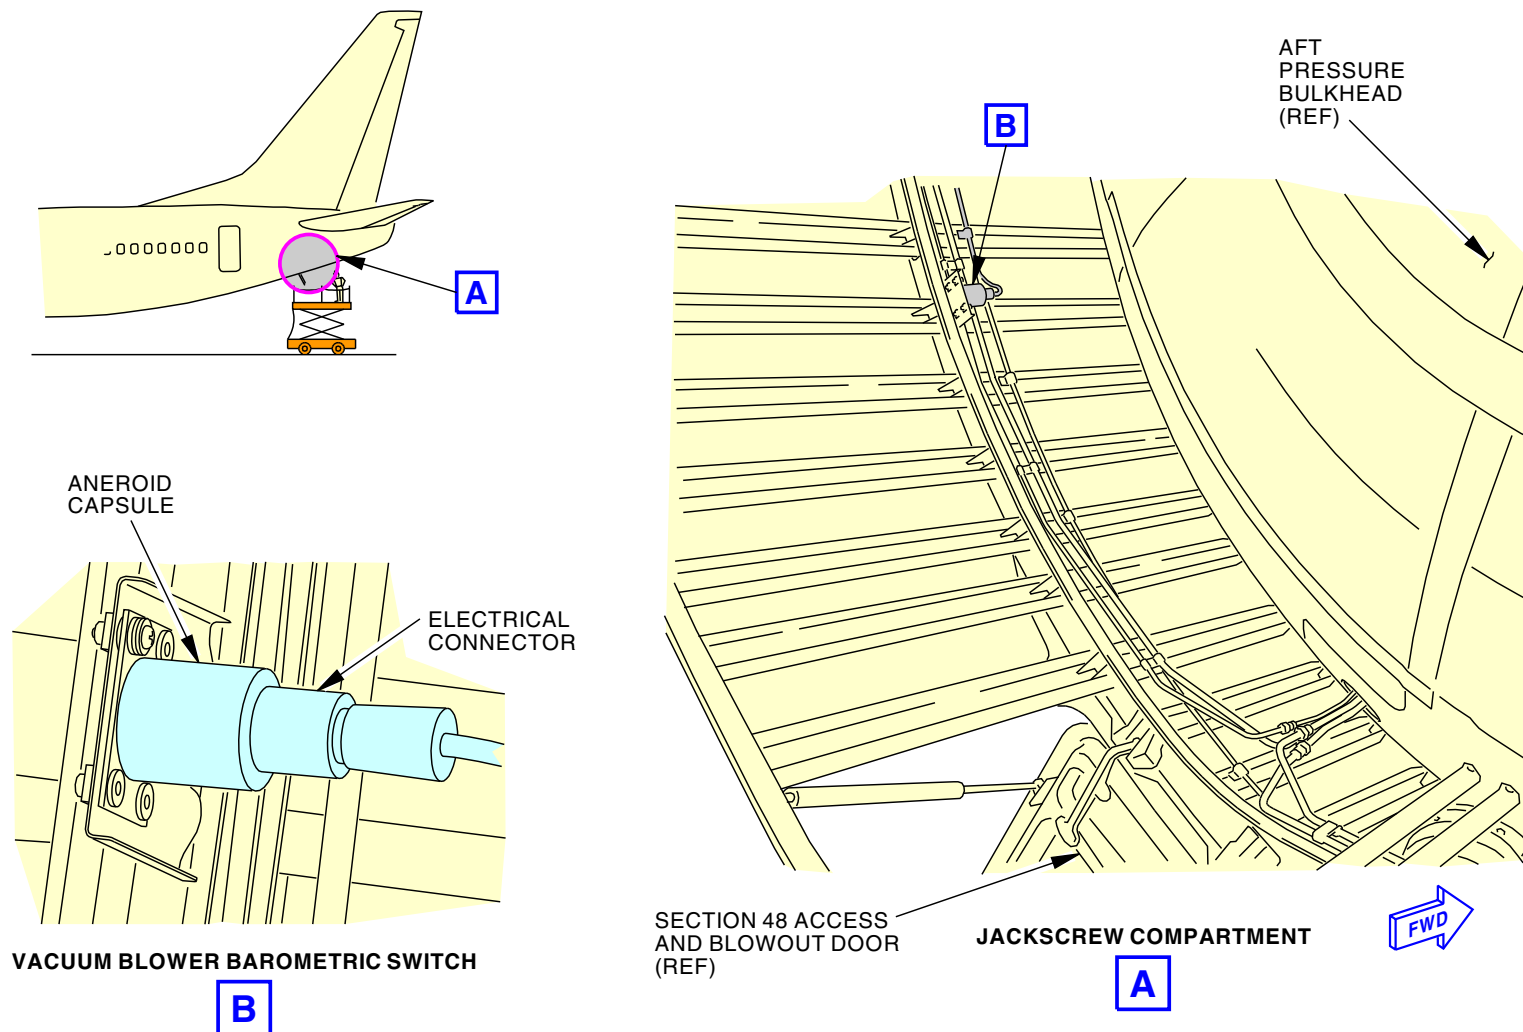

M87446 S0004631305_V1

WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER BAROMETRIC SWITCH

38-32-00

38-32-00-017

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER - FUNCTIONAL DESCRIPTION****Power**

Transfer bus 1 supplies 115v AC three-phase power for vacuum blower operation.

The control power is 28v DC from bus 1.

Functional Description

The vacuum blower operates when the airplane is below 16,000 feet altitude and these conditions are true:

- Waste drain ball valve is closed
- Waste tank is not full
- Lavatory flush switch operates.

The barometric pressure switch senses ambient pressure. When the airplane is below 16,000 feet, the barometric pressure switch is closed.

The waste drain ball valve proximity switch is closed when the waste drain ball valve is closed.


If the tank is not full, the logic control module (LCM) sends an enable signal to each flush control unit (FCU). Each lavatory flush switch sends a signal to the FCU. The operational logic in each FCU completes the circuit for the vacuum blower to operate.

The barometric pressure switch stops operation of the vacuum blower when the airplane is above 16,000 feet.

Three thermal switches in the vacuum blower stop the motor operation if the temperature in the vacuum blower is more than 270F (132C). The thermal switches reset when the vacuum blower temperature decreases to less than 270F (132C).

EFFECTIVITY	
SIA ALL	

WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER - FUNCTIONAL DESCRIPTION

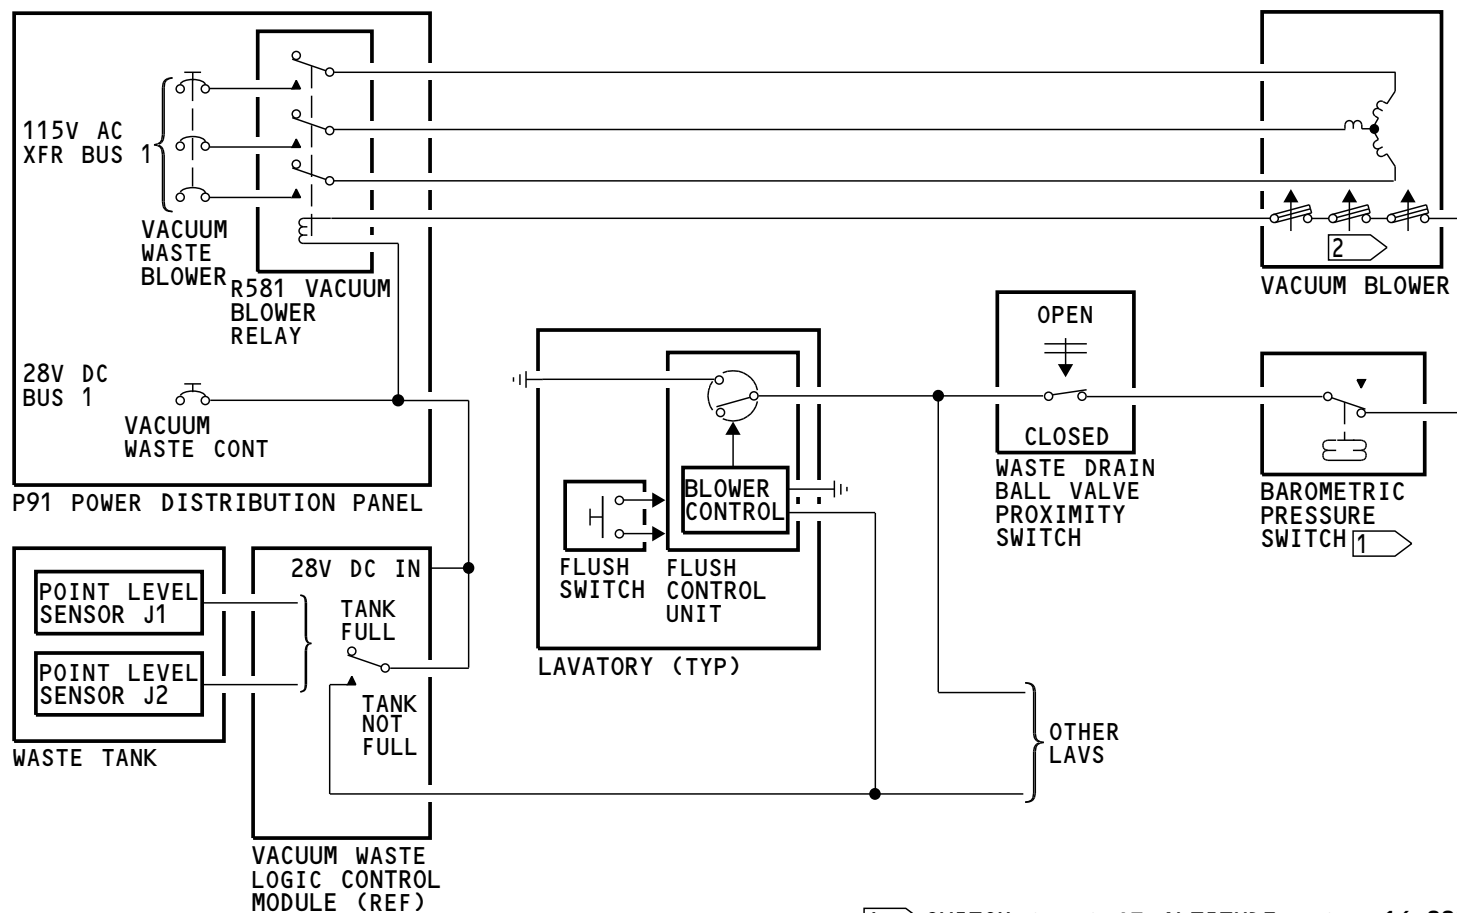

1 SWITCH OPENS AT ALTITUDE ABOVE 16,000 FEET

2 THERMAL SWITCHES OPEN AT 270F (132C)

M87452 S0004631307_V1

WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM BLOWER - FUNCTIONAL DESCRIPTION

38-32-00-019

SIA ALL

EFFECTIVITY

38-32-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Page 23
Oct 15/2021



WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM CHECK VALVE

Purpose

The vacuum check valve prevents the pull of air from the waste tank vent port by the vacuum blower.

Location

The vacuum check valve is in the aft cargo compartment on the left side.
The vacuum check valve is in the exhaust duct, upstream of the waste tank vent port.

Physical Description


The vacuum check valve is a flapper type valve. A flow direction arrow shows the correct installation orientation.

Functional Description


The vacuum check valve is spring-loaded to the closed position. The vacuum check valve opens when there is sufficient differential pressure between the waste tank and the waste tank vent port.

SIA ALL	EFFECTIVITY
---------	-------------

WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM CHECK VALVE

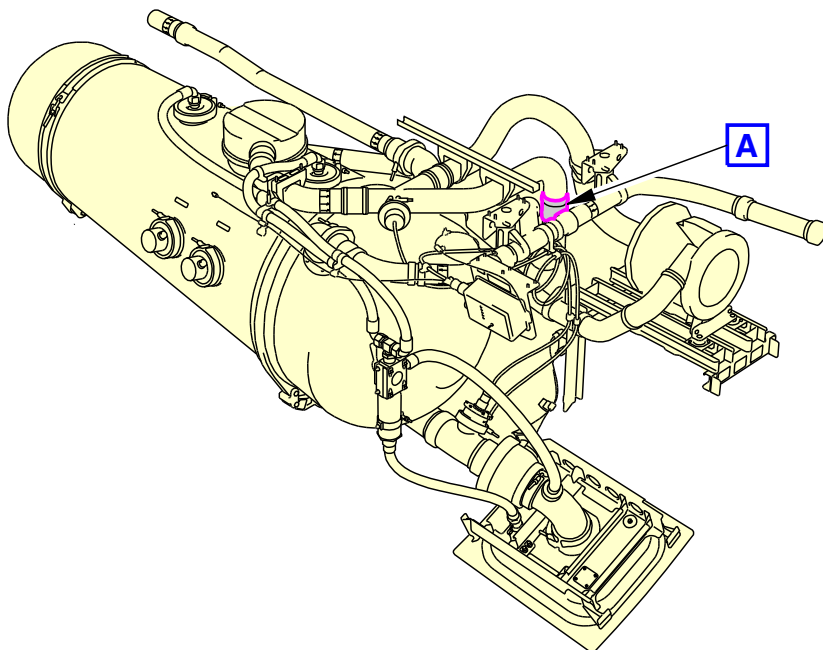

**VACUUM WASTE SYSTEM
(EXAMPLE)**

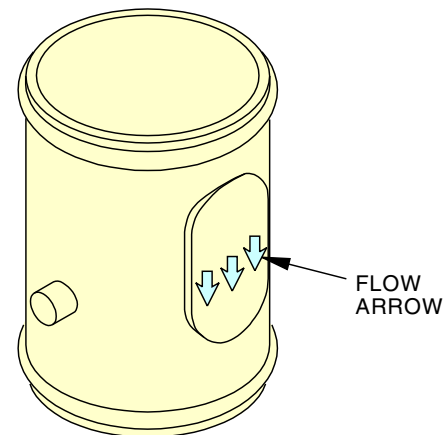

VACUUM CHECK VALVE

A

M87432 S0004631310_V2

WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM CHECK VALVE

38-32-00

38-32-00-011

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - VACUUM WASTE SYSTEM - WASTE DRAIN BALL VALVE & LINKAGE ASSEMBLY****Purpose**

The waste drain ball valve and linkage assembly control the flow of waste out of the waste tank.

Location

The waste drain ball valve and linkage assembly are in the aft cargo compartment on the left side. The waste drain ball valve is in the drain line, between the waste tank and the waste service panel. The linkage assembly is adjacent to the waste drain ball valve, between the valve and the waste service panel.

Physical Description

The waste drain ball valve is a manually-operated two-position ball valve. It has these parts:

- Ball valve
- Actuator lever
- Proximity switch.

There is an electrical connection at the proximity switch.

The linkage assembly has these parts:

- Control rod
- Uniball assembly
- Handle (not shown).

Functional Description

You pull the handle at the waste service panel to open the waste drain ball valve. The handle transmits the movement through the control rod to the actuator lever. The actuator lever moves the waste drain ball valve.

The proximity switch stops the operation of the vacuum blower when the waste drain ball valve is not closed.

Training Information Point

The waste drain ball valve connects to the drain lines with v-band clamps and gask-o-seal gaskets.

You must remove the waste drain heater blanket before you work on the waste drain ball valve.


38-32-00

EFFECTIVITY	
SIA ALL	

D633A101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE DRAIN BALL VALVE & LINKAGE ASSEMBLY

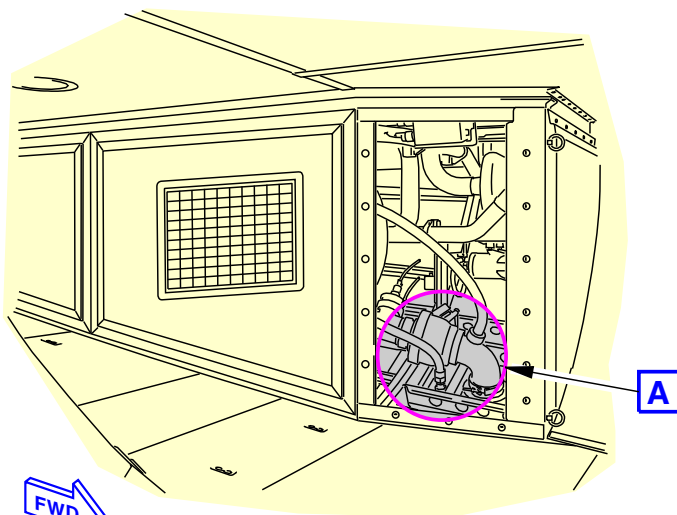

**AFT CARGO COMPARTMENT LEFT SIDE
(VIEW IN THE OUTBOARD DIRECTION)
(EXAMPLE)**

DRAIN ELBOW

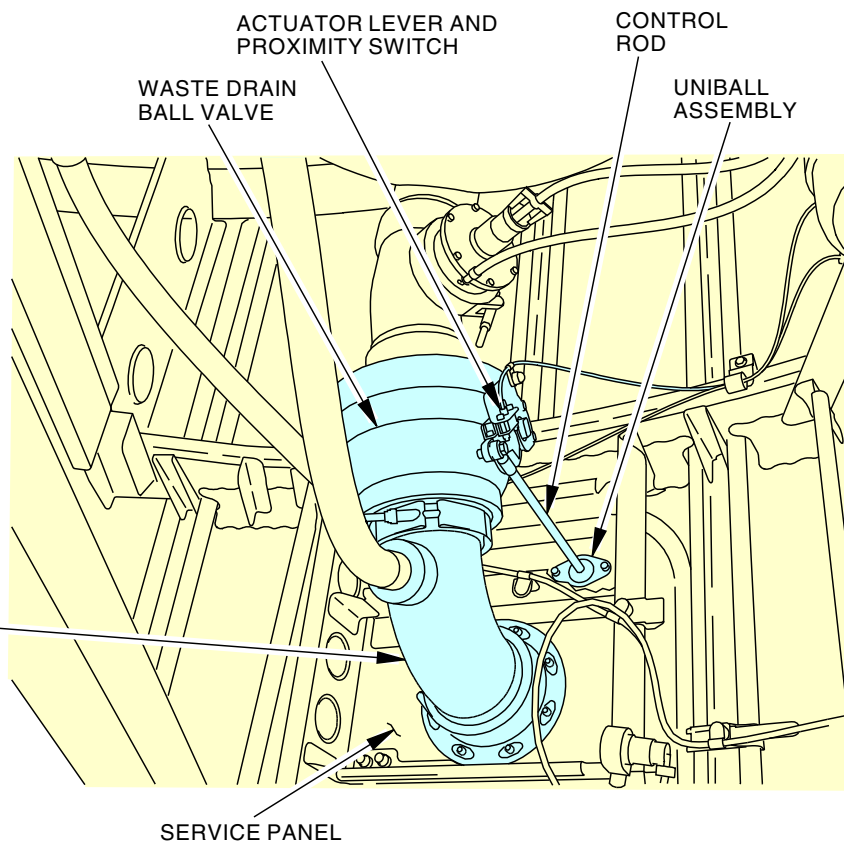

**WASTE DRAIN BALL VALVE AND LINKAGE ASSEMBLY
(HEATER BLANKET IS NOT SHOWN)
(EXAMPLE)**

M87426 S0004631313_V3

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE DRAIN BALL VALVE & LINKAGE ASSEMBLY

38-32-00

**WATER/WASTE - VACUUM WASTE SYSTEM - WASTE SERVICE PANEL****Purpose**

The waste service panel lets you drain the vacuum waste system. The waste service panel also lets you rinse the waste tank.

Location

The waste service panel is in the aft, lower-left area of the fuselage.

Physical Description

These are the components in the waste service panel:

- Waste drain valve assembly
- Waste drain ball valve control handle
- Waste quantity indicator
- Sensor fouled light
- Waste tank rinse fitting assembly.

Two snap-latches hold the waste service panel closed.

You can get access to the waste service panel components from the aft cargo compartment. The service panel components are forward and below the waste tank.

Functional Description

The waste drain valve assembly connects to the waste drain elbow. The waste tank rinse fitting assembly connects to the rinse hose. The control handle lets you open the waste drain ball valve.

To drain the waste tank, you open the waste drain ball valve.


The proximity switch on the waste drain ball valve stops operation of the vacuum blower when the waste drain ball valve is open.

The waste quantity indicator shows the quantity of waste in the waste tank.

The sensor fouled light is on when the point level sensors are fouled (dirty).

EFFECTIVITY	
SIA ALL	

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE SERVICE PANEL

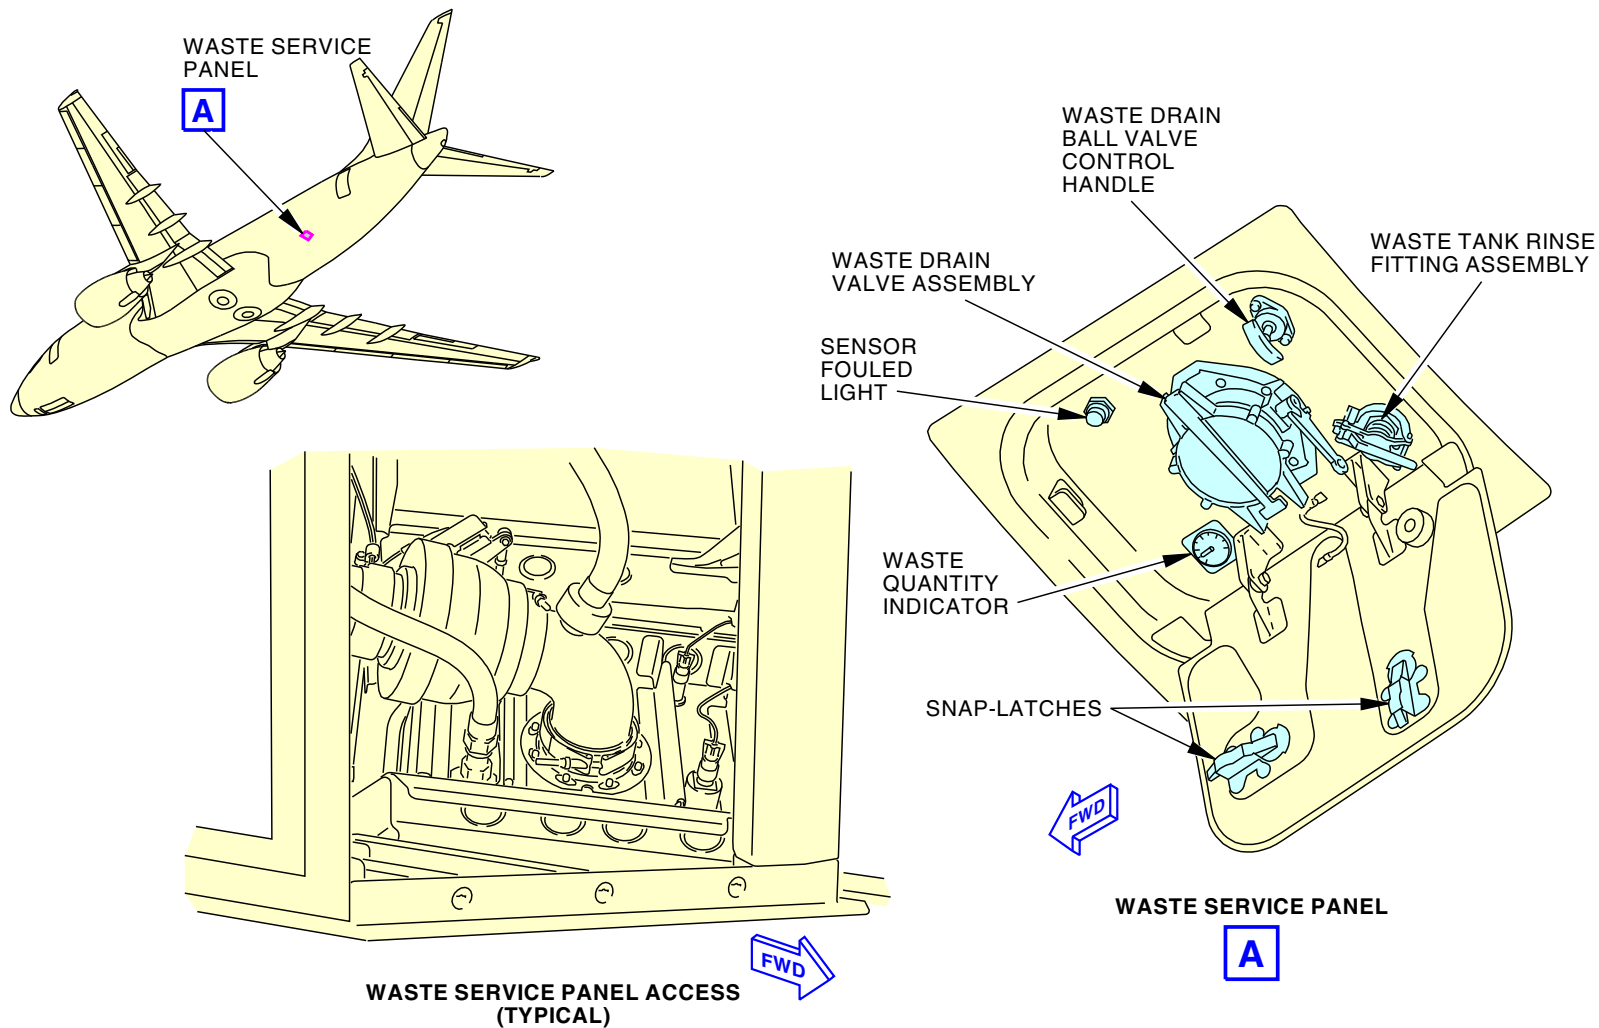

M87421 S0004631318_V2

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE SERVICE PANEL

38-32-00

**WATER/WASTE - VACUUM WASTE SYSTEM - WASTE DRAIN VALVE ASSEMBLY****Purpose**

The waste drain valve assembly lets you drain the vacuum waste system.

Location

The waste drain valve assembly is part of the waste service panel at the aft left side of the airplane.

Physical Description

The waste drain valve assembly has these parts:


- Quick-disconnect fitting (not shown)
- Push-to-open lever
- Flapper valve (not shown)
- Drain cap
- Cap handle.

Functional Description

You open the drain cap and attach the waste drain hose to the quick-disconnect fitting. The push-to-open lever opens the flapper valve and lets waste drain from the vacuum waste system.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE DRAIN VALVE ASSEMBLY

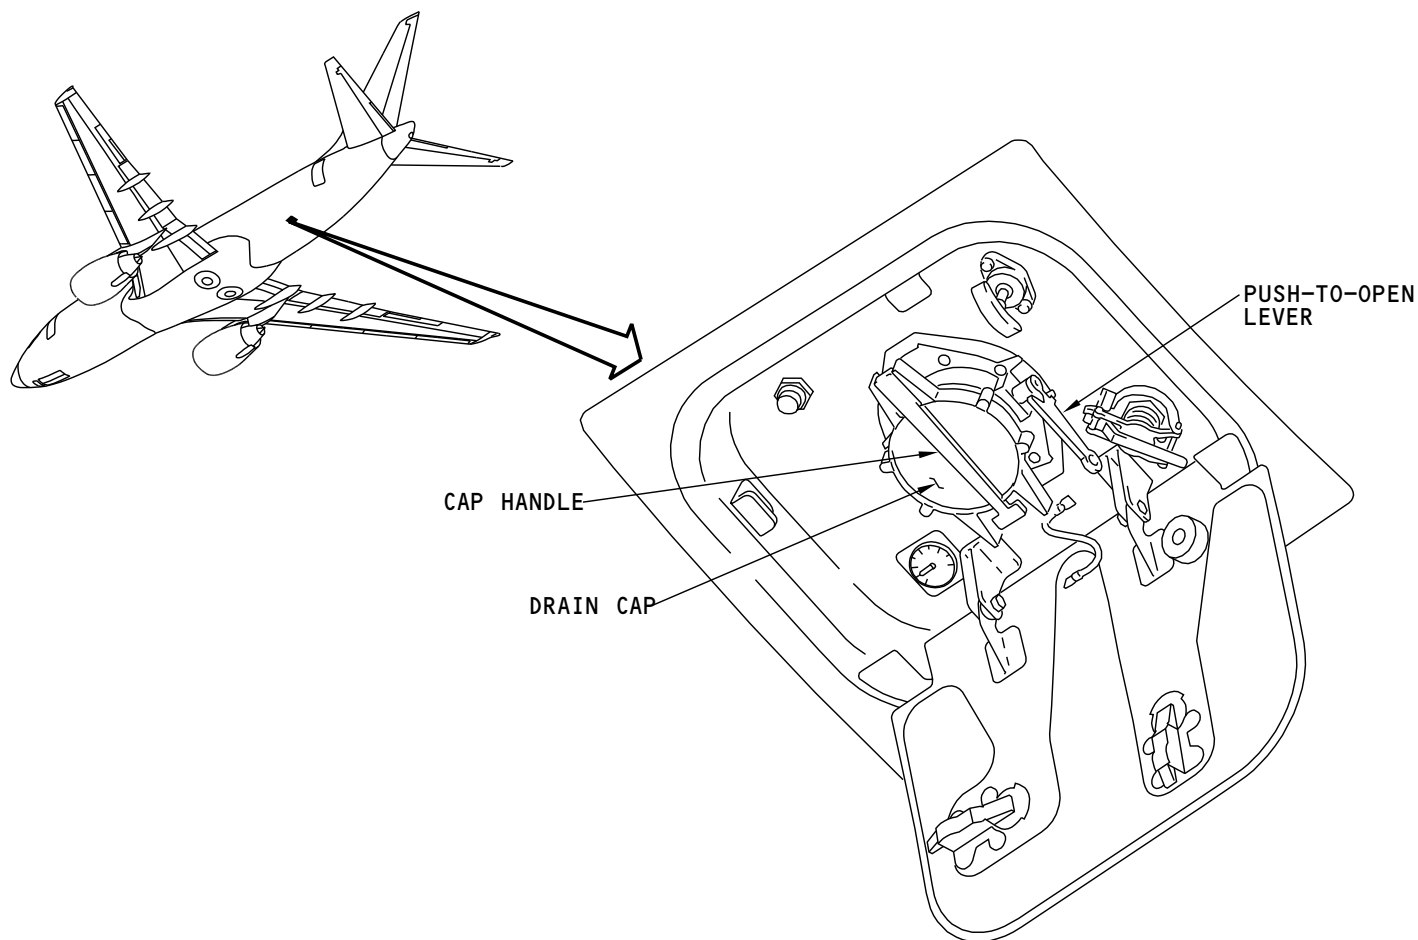

M87437 S0004631323_V1

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE DRAIN VALVE ASSEMBLY

38-32-00-013

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-32-00

**WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE FITTING ASSEMBLY****Purpose**

The waste tank rinse fitting assembly is the connection for the rinse water hose.

Location

The waste tank rinse fitting assembly is in the waste service panel at the aft fuselage lower left side.

Physical Description

The waste tank rinse fitting assembly has these parts:


- Waste tank rinse line connection
- Rinse fitting ring
- Quick-disconnect fitting
- Cap
- Lever.

Functional Description

You open the cap and attach the rinse water hose to the quick-disconnect fitting. Rinse water can then be supplied to flush the point level sensors and waste tank.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE FITTING ASSEMBLY

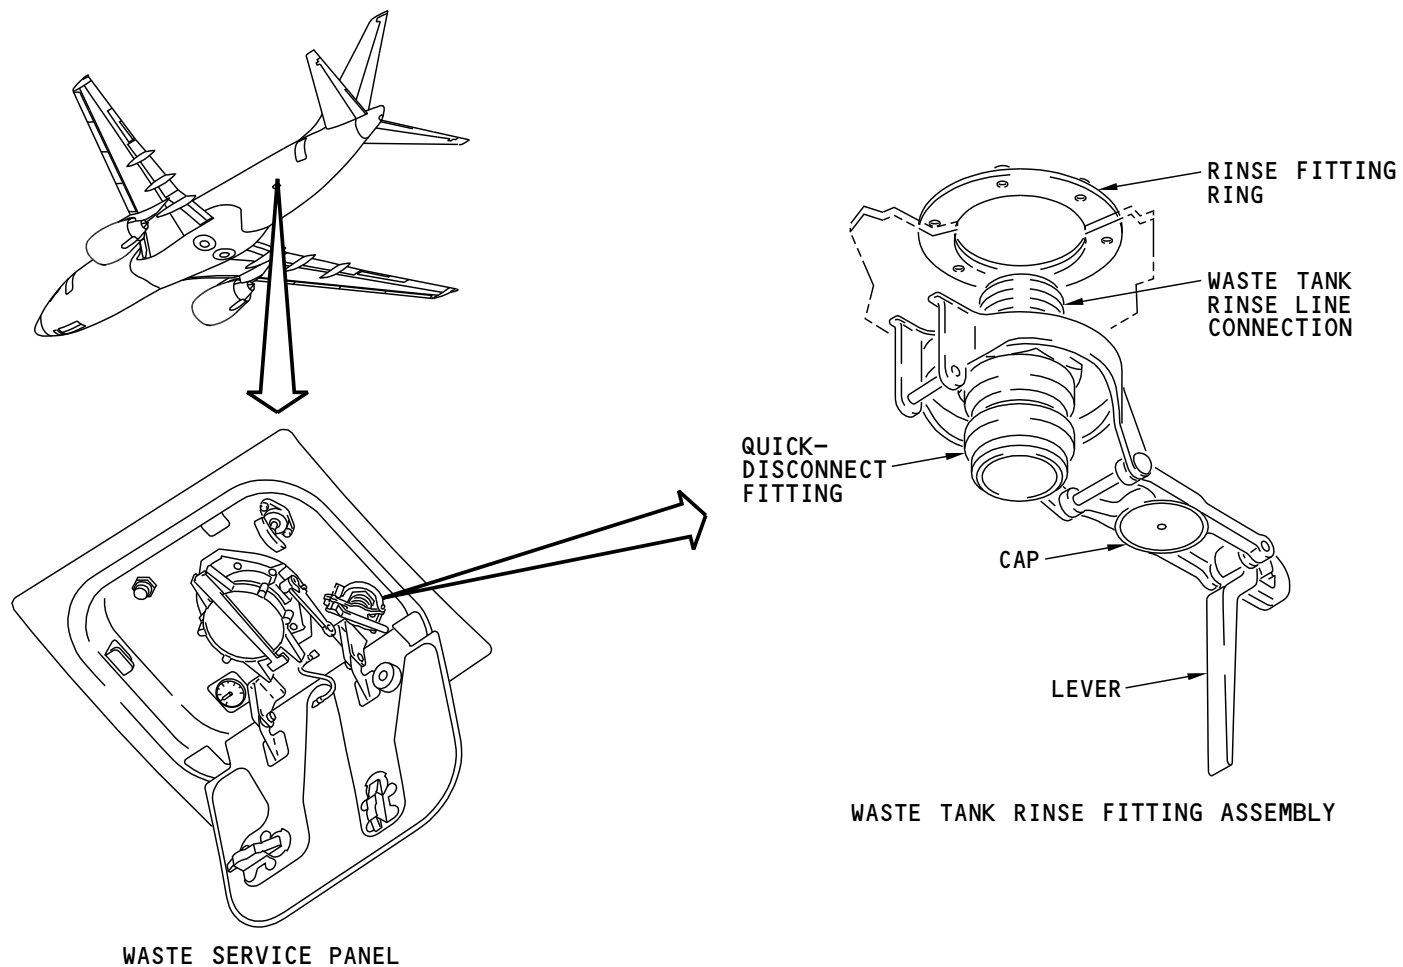

M87440 S0004631328_V1

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE FITTING ASSEMBLY

38-32-00

38-32-00-014

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE FILTER****Purpose**

The waste tank rinse filter removes contamination from the rinse water.

Location

The waste tank rinse filter is in the aft cargo compartment. You remove the waste tank access panel to get access to the waste tank rinse filter. The waste tank rinse filter is at the forward end of the waste tank.

Physical Description


A filter element in the waste tank rinse filter removes contamination from the rinse water. If the contamination is not removed, the contamination could clog the waste tank rinse nozzles.

Training Information Point


You can remove and clean the rinse filter element when it becomes dirty.

SIA ALL	EFFECTIVITY
D633A101-SIA	

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE FILTER

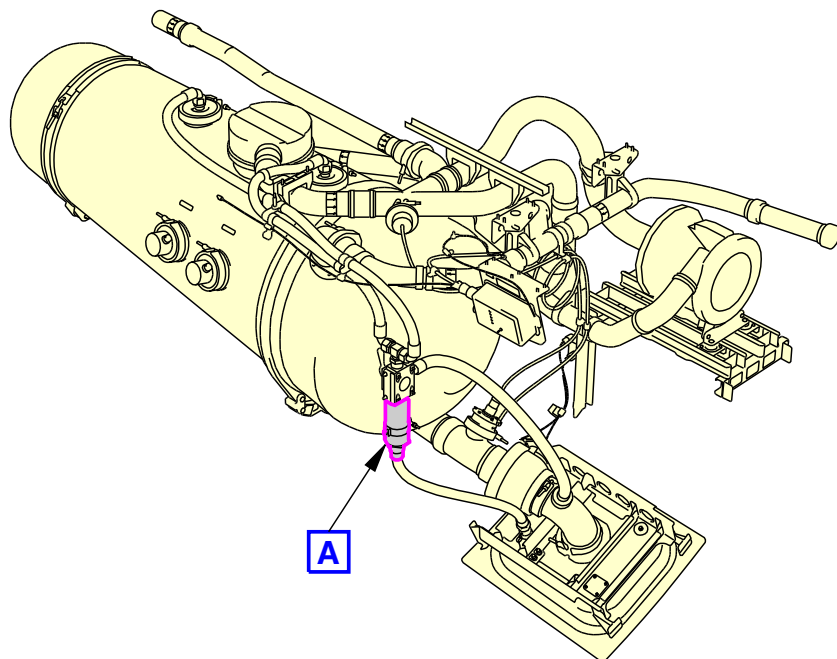

**VACUUM WASTE SYSTEM
(EXAMPLE)**

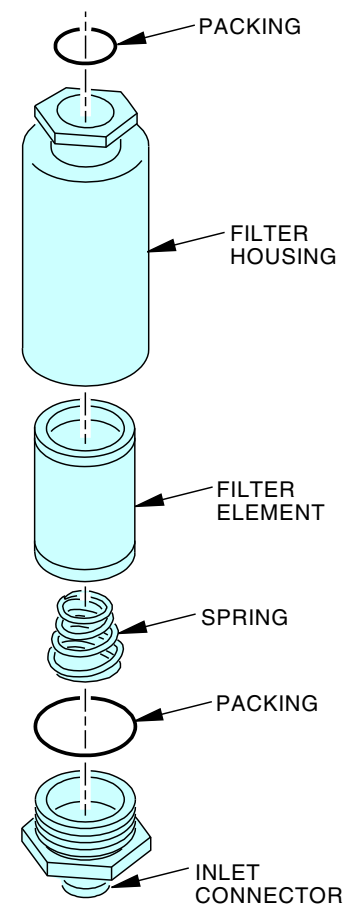

A

M87444 S0004631330_V2

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE FILTER

38-32-00-016

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-32-00



WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE NOZZLE

Purpose

The waste tank rinse nozzles spray rinse water at the point level sensors and at the waste tank interior surface.

Location

The waste tank rinse nozzles attach to fittings at the top of the waste tank.

Physical Description

The waste tank rinse nozzle is a rotating sphere with small holes.


Functional Description

The rinse water supplied to the waste tank rinse nozzles is pressurized by the waste service vehicle.

The pressurized rinse water goes through the rinse nozzle fitting and exits through small diameter holes on the rinse nozzle. The force of the rinse water leaving the small diameter holes causes the rinse nozzle to rotate. The rotating rinse nozzle sprays the rinse water around the inside of the waste tank. The rinse water spray flushes the point level sensors and waste tank.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE NOZZLE

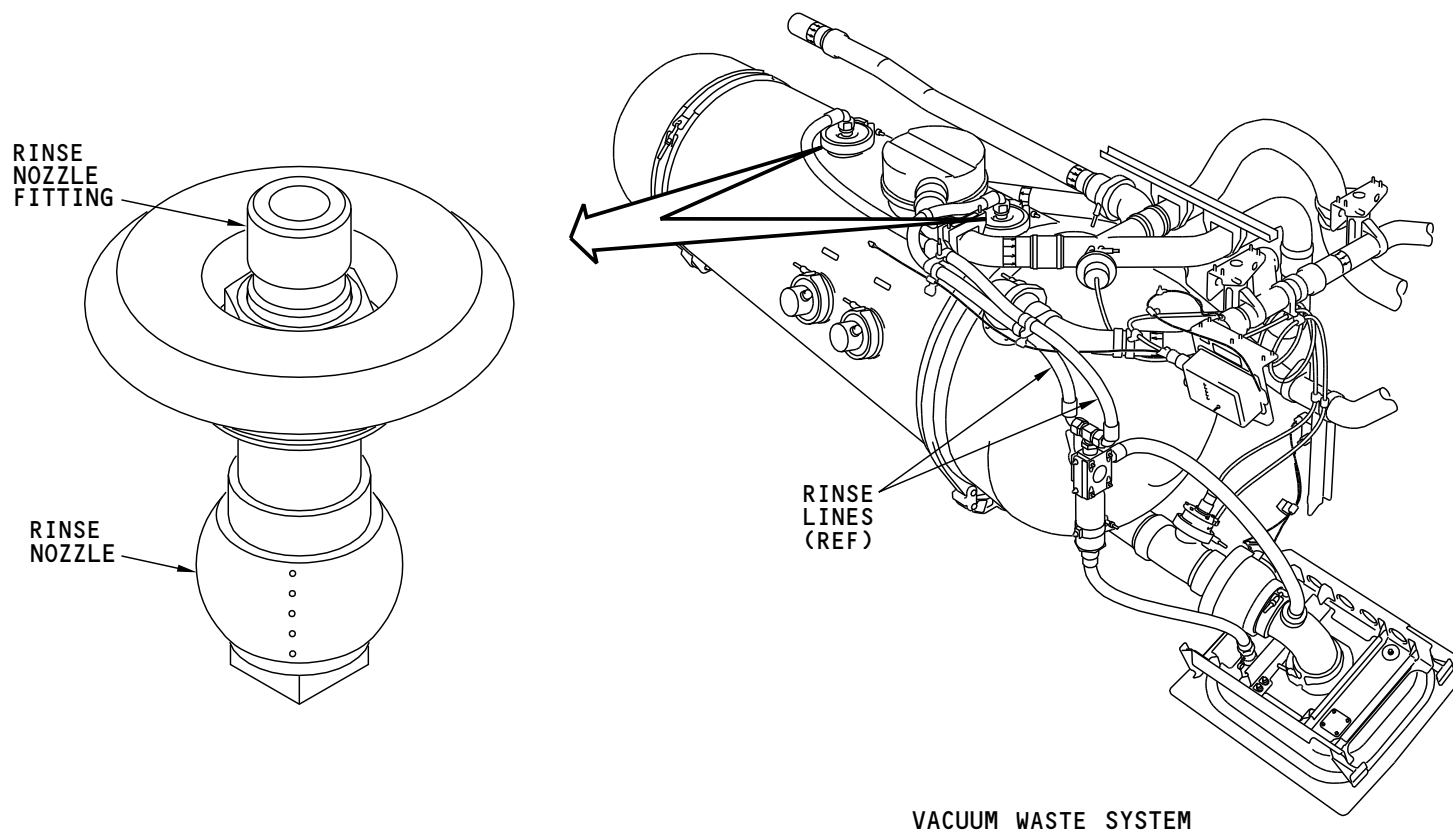

M87442 S0004631333_V1

WATER/WASTE - VACUUM WASTE SYSTEM - WASTE TANK RINSE NOZZLE

38-32-00-015

SIA ALL	EFFECTIVITY

38-32-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - VACUUM WASTE SYSTEM - DRAIN LINE BLOCKAGE REMOVAL FITTING****Purpose**

The drain line blockage removal fitting supplies a tool connection to let air pressure clean a blocked waste tank drain line.

Location

The drain line blockage removal fitting is in the aft cargo compartment. You must remove the waste tank access panel to get access to the drain line blockage removal fitting. The drain line blockage removal fitting is on the waste drain tube elbow between the waste drain valve and the waste drain ball valve.

Physical Description

The drain line blockage removal fitting is a single, threaded port. The fitting port connects with the blockage removal tool. The fitting port is closed with a threaded cap when not in use.

Operation

Air pressure is put into the waste drain elbow tube through the port with the blockage removal tool. The pressure moves the blockage into the tank where it can be removed manually or by servicing.

Functional Description

An external air source supplies air to the blockage removal tool which provides the pressure to clear the blockage.

Training Information Point


The blockage procedure may be performed several times until the blockage is removed.

38-32-00


EFFECTIVITY	
SIA ALL	

D633A101-SIA

WATER/WASTE - VACUUM WASTE SYSTEM - DRAIN LINE BLOCKAGE REMOVAL FITTING

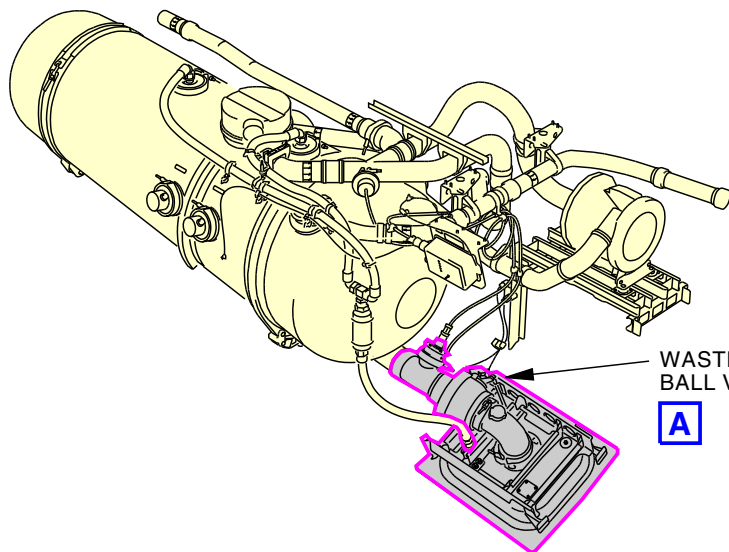

VACUUM WASTE SYSTEM

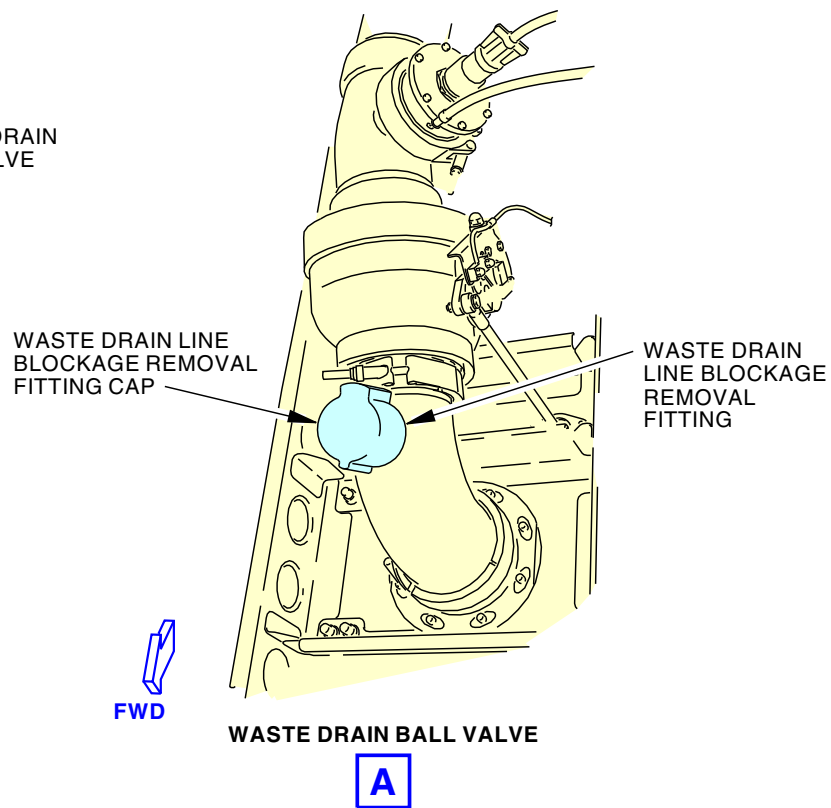

2243726 S0000500809_V2

WATER/WASTE - VACUUM WASTE SYSTEM - DRAIN LINE BLOCKAGE REMOVAL FITTING

38-32-00

38-32-00-022

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM WASTE LINE CLEAN-OUT FITTING**Purpose**

The vacuum waste line clean-out fitting lets you clean a blockage between the forward cargo compartment and the waste tank.

Location

The vacuum waste line clean-out fitting is in the forward cargo compartment. Remove the cargo compartment ceiling lining to get access to the vacuum waste line clean-out fitting.

Functional Description

When the vacuum waste line clean-out fitting is removed, you can put a plumbers snake or a kinetic air-ram equipment in the vacuum waste line to remove the blockage.

Training Information Point


MAKE SURE YOU ATTACH A DO-NOT-OPERATE TAG TO THE TOILET FLUSH HANDLES FOR ALL TOILETS IN THE SYSTEM. IF YOU FLUSH THE TOILETS UPSTREAM OF THE BLOCKAGE, THIS CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

38-32-00**SIA ALL** EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM WASTE LINE CLEAN-OUT FITTING

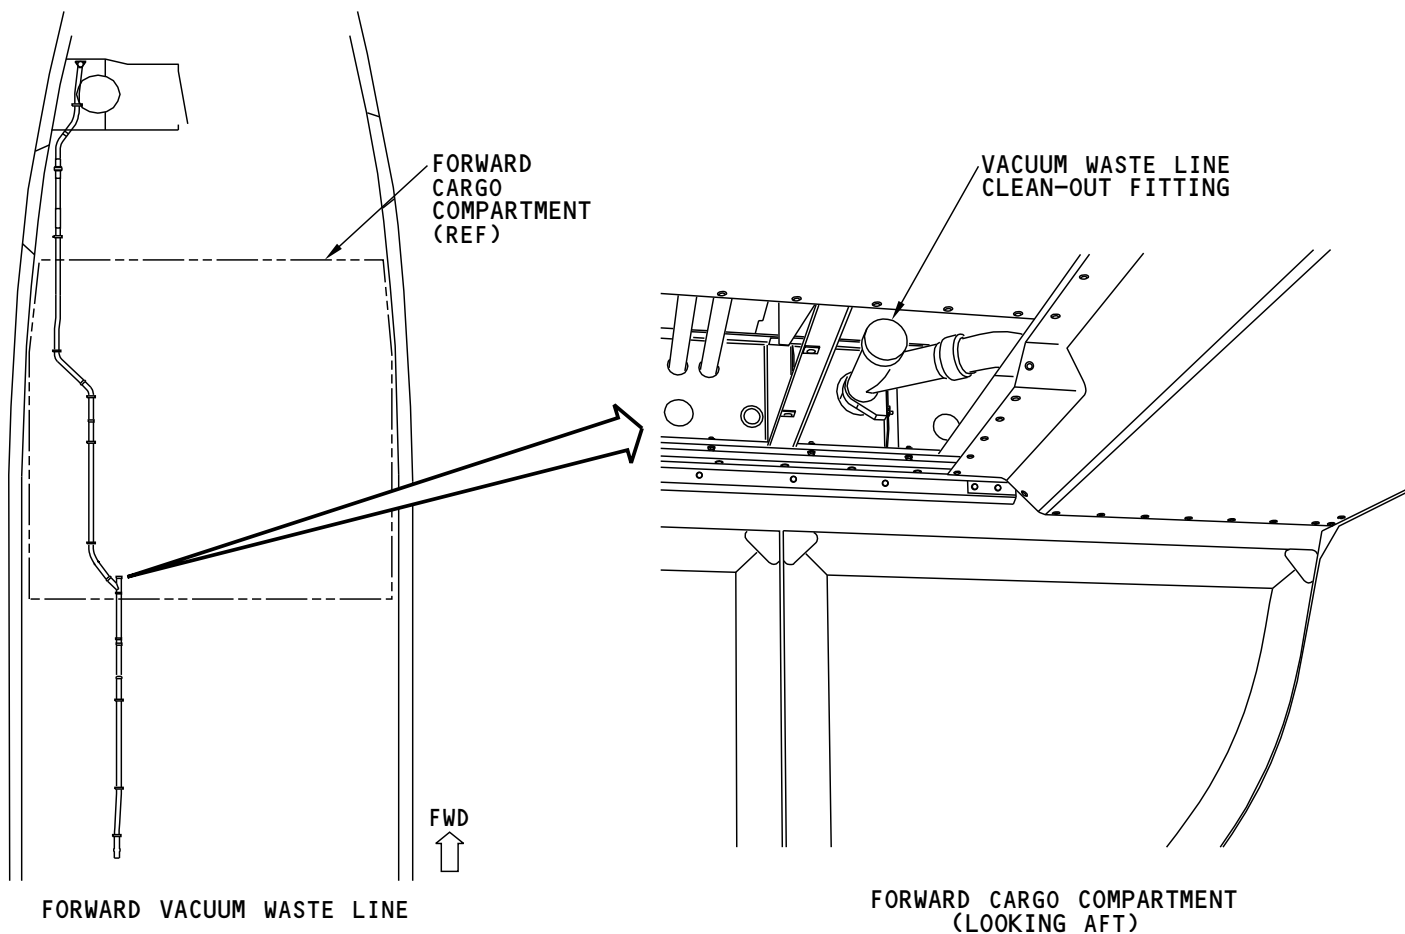

M87455 S0004631339_V1

WATER/WASTE - VACUUM WASTE SYSTEM - VACUUM WASTE LINE CLEAN-OUT FITTING

38-32-00-021

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-32-00



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-32-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - VACUUM WASTE SYSTEM - FUNCTIONAL DESCRIPTION

Vacuum Toilet Assemblies

Operation of the flush switch sends a signal to the flush control unit (FCU). The FCU opens the rinse valve to supply potable water to flush the toilet bowl. After 0.7 seconds, the FCU closes the rinse valve. Each rinse cycle uses eight ounces of potable water. The FCU then opens the flush valve for four seconds to let the toilet waste drain out of the toilet. The flush valve then closes.

The anti-siphon valve prevents the vacuum waste system from siphoning water to the potable water system.

The manual shutoff handle closes the manual shutoff valve.

Waste Tank Assembly

The waste tank collects the waste from the lavatory toilets.

Differential pressure causes the toilet bowl contents to flow from the toilet to the waste tank. The vacuum blower or cabin differential pressure supplies the differential pressure for the waste tank.

The vacuum check valve prevents the pull of ambient air in from the waste tank vent port by the vacuum blower.

Waste System Servicing

You service the waste tank from the waste service panel.

Attach the waste drain hose to the waste drain valve and open the waste drain ball valve.

When the tank is empty, attach the rinse hose to the waste tank rinse fitting. Then pressurize the rinse water supply. Rinse water flows through the waste tank rinse filter and two rinse nozzles.

The waste tank rinse nozzles spray water on the inside of the tank to clean the point level sensors and waste tank.

Add chemical precharge after the waste tank is fully drained and flushed.

The waste drain ball valve proximity switch stops the operation of the vacuum blower when the waste drain ball valve is open.

You use the drain line blockage removal fitting to remove a blockage in the waste tank drain line. An air pressure tool can be connected to the fitting on the drain line elbow and used to push the blockage out of the drain line.

Interfaces

The FCU must receive an enable signal from the logic control module (LCM) to operate the toilet components. The LCM disables the FCU if the waste tank is full. The LCM monitors the two point level sensors to find if the waste tank is full.

If the FCU is enabled, a flush cycle starts with the operation of the flush switch.

The flush switch sends a signal to the FCU. The FCU then sends a signal to operate the vacuum blower for 15 seconds. The signal goes through the waste drain ball valve proximity switch and the vacuum blower barometric switch. The waste drain ball valve proximity switch and vacuum blower barometric switch must be closed for the vacuum blower to operate.

The waste drain ball valve proximity switch is closed when the waste drain ball valve is closed.

The barometric switch is closed when the airplane is below 16,000 feet.

Training Information Point

The waste tank must be flushed at each servicing interval. If the waste tank is not serviced correctly, unwanted waste material can collect on the point level sensors. The waste material on the point level sensors can cause a tank full signal and stop operation of the lavatory toilets.

You should flush crushed ice down the toilets at regular intervals. The crushed ice will help to prevent unwanted material from collecting in the vacuum waste lines.

38-32-00

EFFECTIVITY	
SIA ALL	

D633A101-SIA


WATER/WASTE - VACUUM WASTE SYSTEM - FUNCTIONAL DESCRIPTION

**CAUTION**

MAKE SURE YOU USE ONLY CRUSHED ICE TO HELP CLEAN THE WASTE SYSTEM. DO NOT USE ICE CUBES. ICE CUBES CAN CAUSE DAMAGE TO THE WASTE SYSTEM AND COMPONENTS.

There is a clean-out fitting in the forward vacuum waste line. You can use the clean-out fitting to clean a blockage between the waste tank and the forward lavatory.

WATER/WASTE - VACUUM WASTE SYSTEM - FUNCTIONAL DESCRIPTION

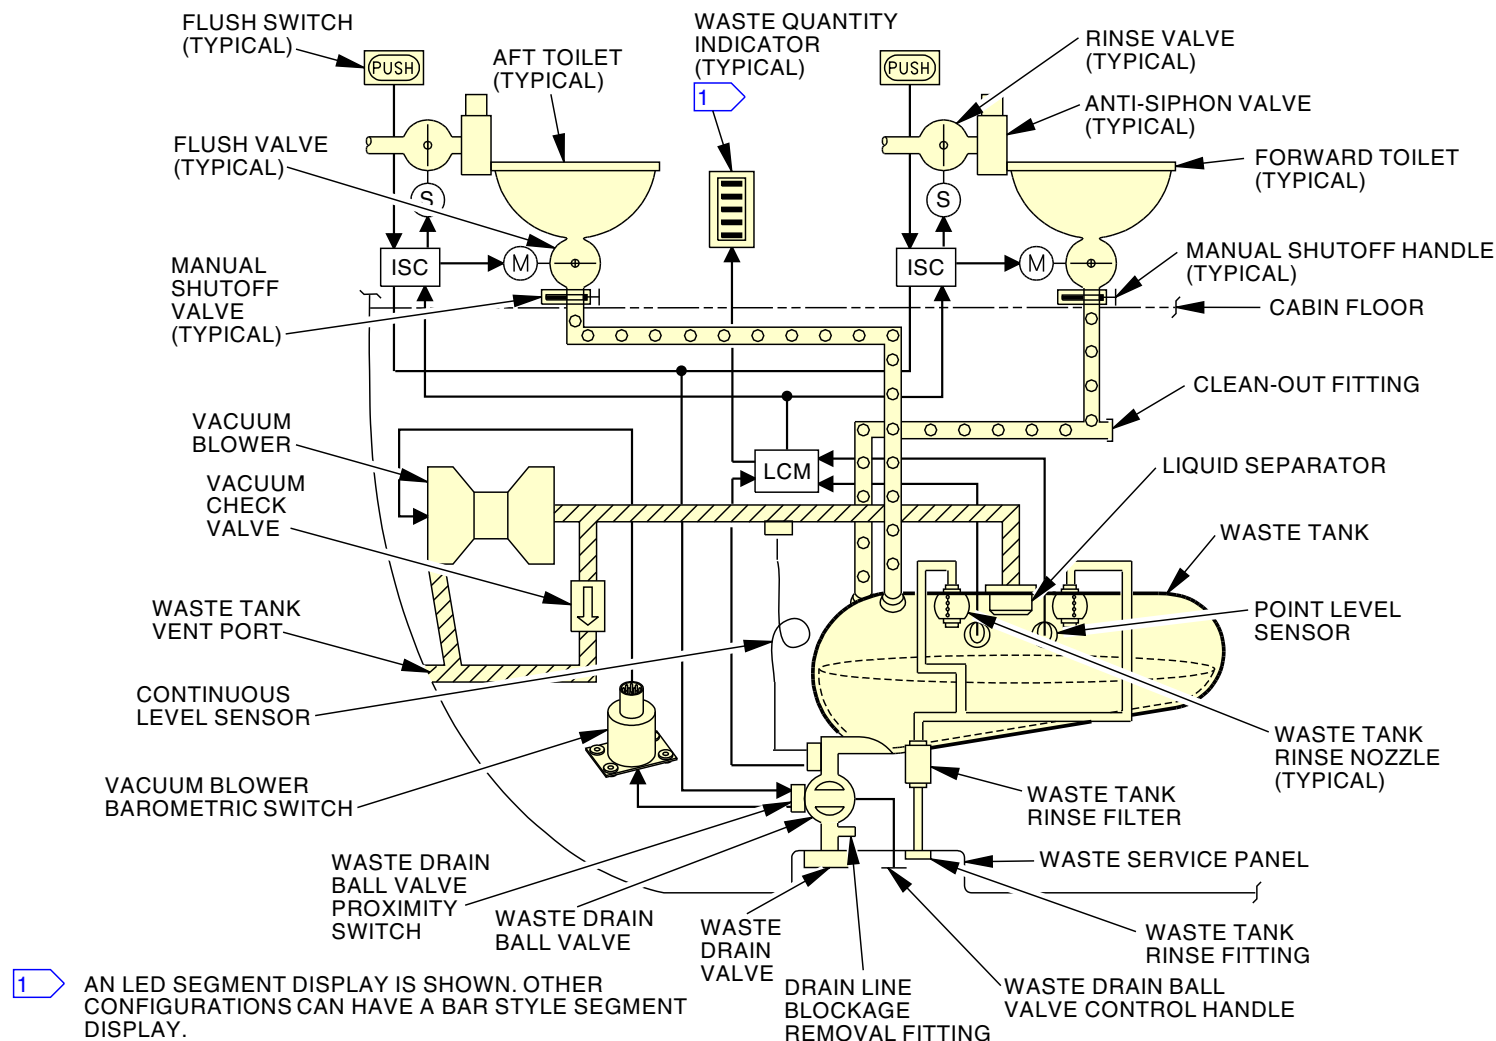

2243578 S0000500745_V4

WATER/WASTE - VACUUM WASTE SYSTEM - FUNCTIONAL DESCRIPTION

38-32-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-33-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - INTRODUCTION****Purpose**

The waste tank quantity indication system measures and shows the quantity of waste in the waste tank.

- mm - millimeter
- REF - reference
- TYP - typical
- v - volts

General

These components are in the waste tank quantity indication system:

- Waste tank point level sensor (2)
- Waste tank continuous level sensor
- Logic control module (LCM)
- Waste quantity gage
- Sensor fouled light
- Waste quantity indicator.

The waste tank quantity indication system does these functions:

- Monitors and shows the level of waste in the waste tank
- Stops operation of the toilets when the waste tank is full
- Gives indication when the lavatories stop operation for waste tank full condition
- Gives indication when the sensors are dirty
- BIT.

Abbreviations and Acronyms

- AC - alternating current
- BIT - built in test
- C - Celsius
- DC - direct current
- F - Fahrenheit
- FCU - flush control unit
- FWD - forward
- LCM - logic control module

38-33-00

EFFECTIVITY	
SIA ALL	


D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - INTRODUCTION



WASTE SERVICE PANEL

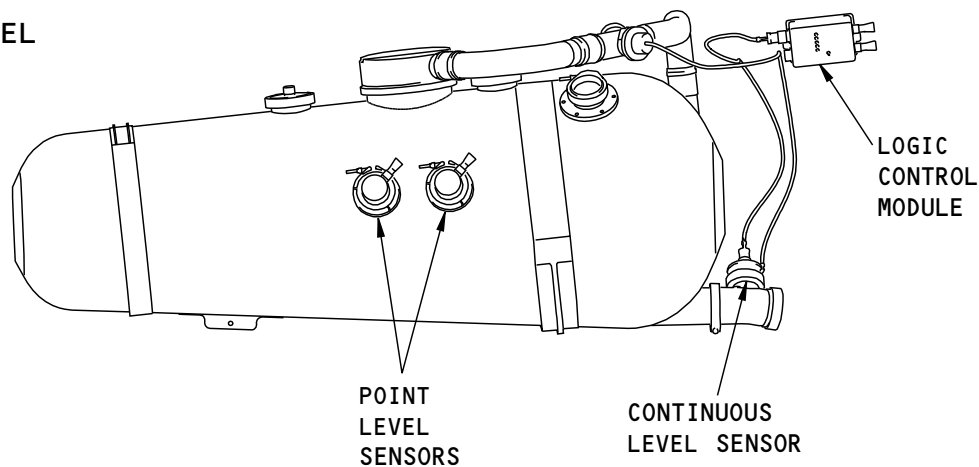

WASTE TANK INSTALLATION

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - INTRODUCTION

2305881 S0000523524_V1



38-33-00-001

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-33-00

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - INTRODUCTION

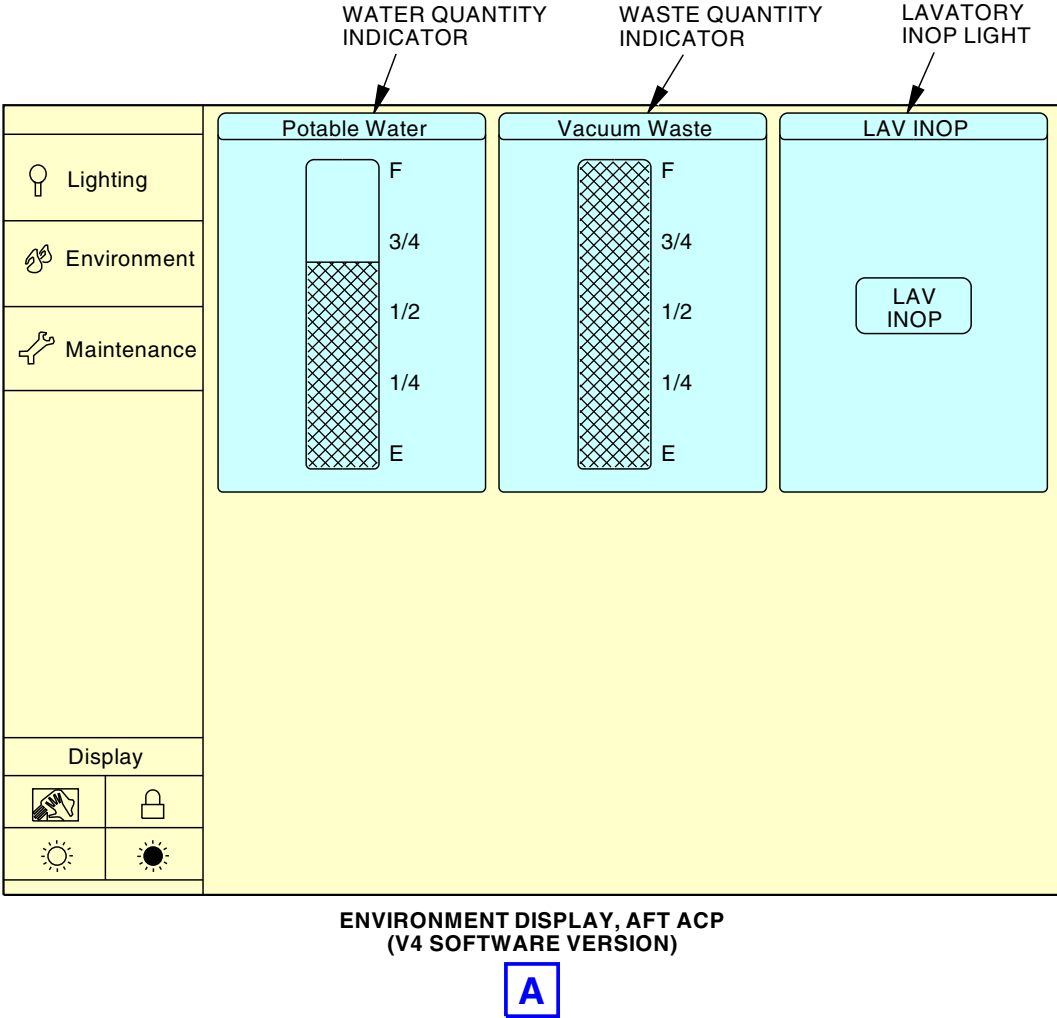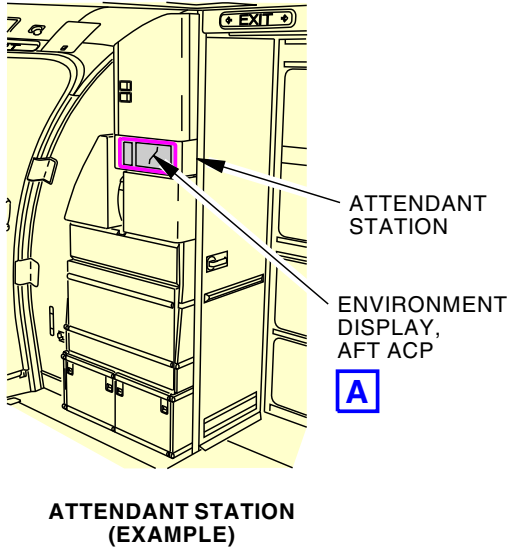

ENVIRONMENT DISPLAY, AFT ACP
(V4 SOFTWARE VERSION)

2091894 S0000441911_V4

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - INTRODUCTION

38-33-00-001



EFFECTIVITY
SIA ALL

38-33-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - INTRODUCTION

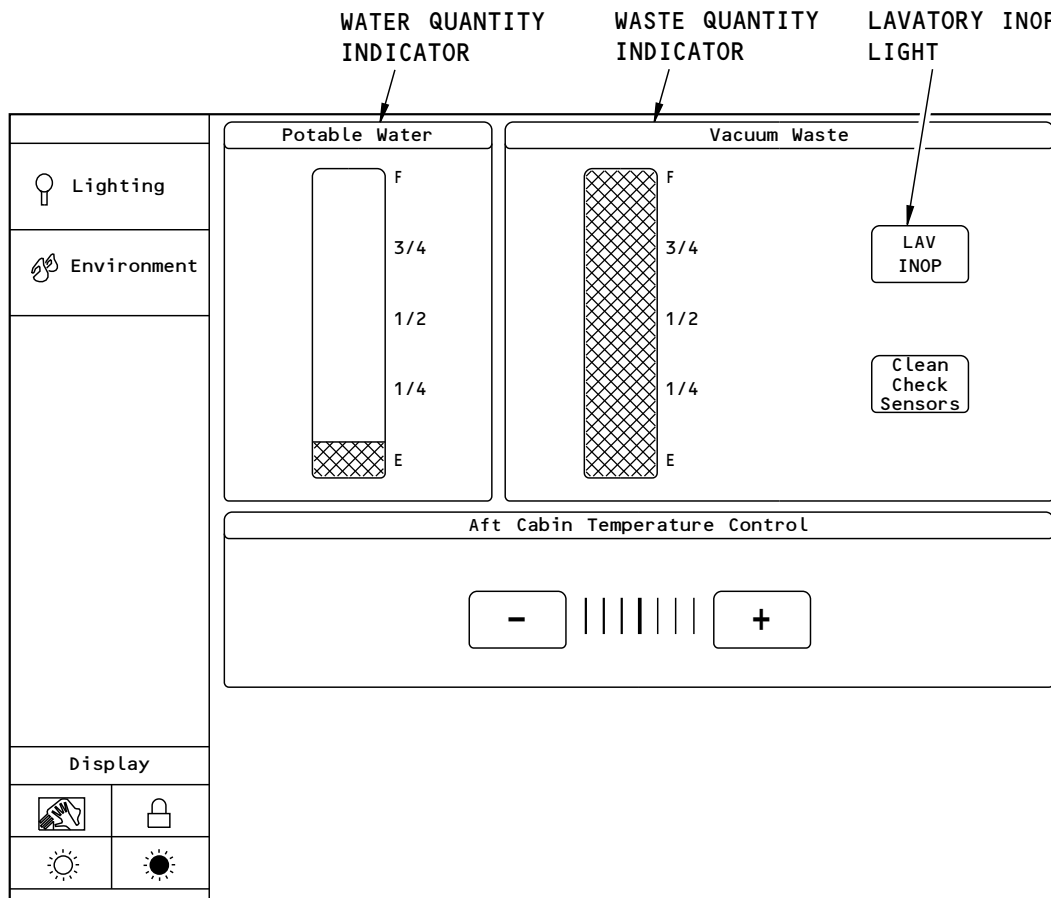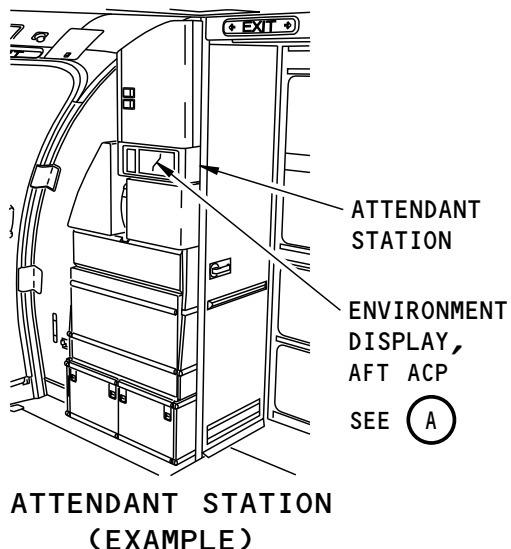

ENVIRONMENT DISPLAY, AFT ACP
(V5 SOFTWARE VERSION)

(A)

2304933 S0000523363_V1

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - INTRODUCTION

38-33-00

**WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - POINT LEVEL SENSOR****Purpose**

The point level sensor gives a signal to the logic control module (LCM) when the waste tank is full.

Location

There are two point level sensors in the aft cargo compartment. You remove the waste tank access panel to get access to the point level sensors. The point level sensors are on the center inboard side of the waste tank.

Physical Description

The point level sensor is a capacitance type sensor. It has a sensor face and an electrical connector.

Functional Description

The LCM supplies 15v dc power to the point level sensors. The point level sensors supply these signals to the LCM:

- Tank not full (0v dc)
- Tank full (15v dc)
- Sensor fouled (1.83 Hz)
- BIT test results.

When the waste tank level is below a point level sensor, the point level sensor sends a tank not full signal to the LCM.

When the waste tank level covers 50 percent of the face of a point level sensor, the point level sensor sends a tank full signal to the LCM.

The point level sensors can tell the difference between the build-up of waste material on a point level sensor and a full tank. A point-level sensor sends a sensor fouled signal to the LCM when the build-up is more than 1/8-inch (3.2 mm). If the build-up becomes more than 3/8-inch (9.5 mm), the point level sensor sends a tank full signal to the LCM.

When a system BIT input signal is received from the LCM, the point level sensor starts BIT. If the point level sensor passes the BIT tests, a 0.0v dc signal goes to the LCM. If the point level sensor fails the BIT tests, a 1.83 Hz signal goes to the LCM.

Training Information Point

The point level sensors sense changes in the level of the waste tank by changes in capacitance. The waste tank must be grounded to the airplane structure for the point level sensors to accurately sense the waste tank level changes.

When a point level sensor is fouled, a sensor fouled signal goes to the LCM. The sensor fouled signal causes these indications:

- Related SENSOR J1 or SENSOR J2 light on the LCM flashes
- Sensor fouled light on the waste service panel comes on
- CLEAN/CHECK SENSOR light on the attendant control panel (ACP) comes on.

The sensor fouled signal continues until one of these conditions occur:

- Waste material on the sensor is greater than 3/8 inch
- Waste material is no longer on the point level sensor surface
- Level of waste in the tank covers the sensor(s).


If the SENSOR J1 or SENSOR J2 light continues to flash after a rinse, it may be necessary to remove the sensor to clean it.

**CAUTION**

BE VERY CAREFUL WITH THE FACE OF THE POINT LEVEL SENSOR. IF THERE ARE SCRATCHES OR OTHER DAMAGE, THE POINT LEVEL SENSOR WILL NOT OPERATE.

Use a soft bristle brush and soap to clean the face of the point level sensor.

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - POINT LEVEL SENSOR

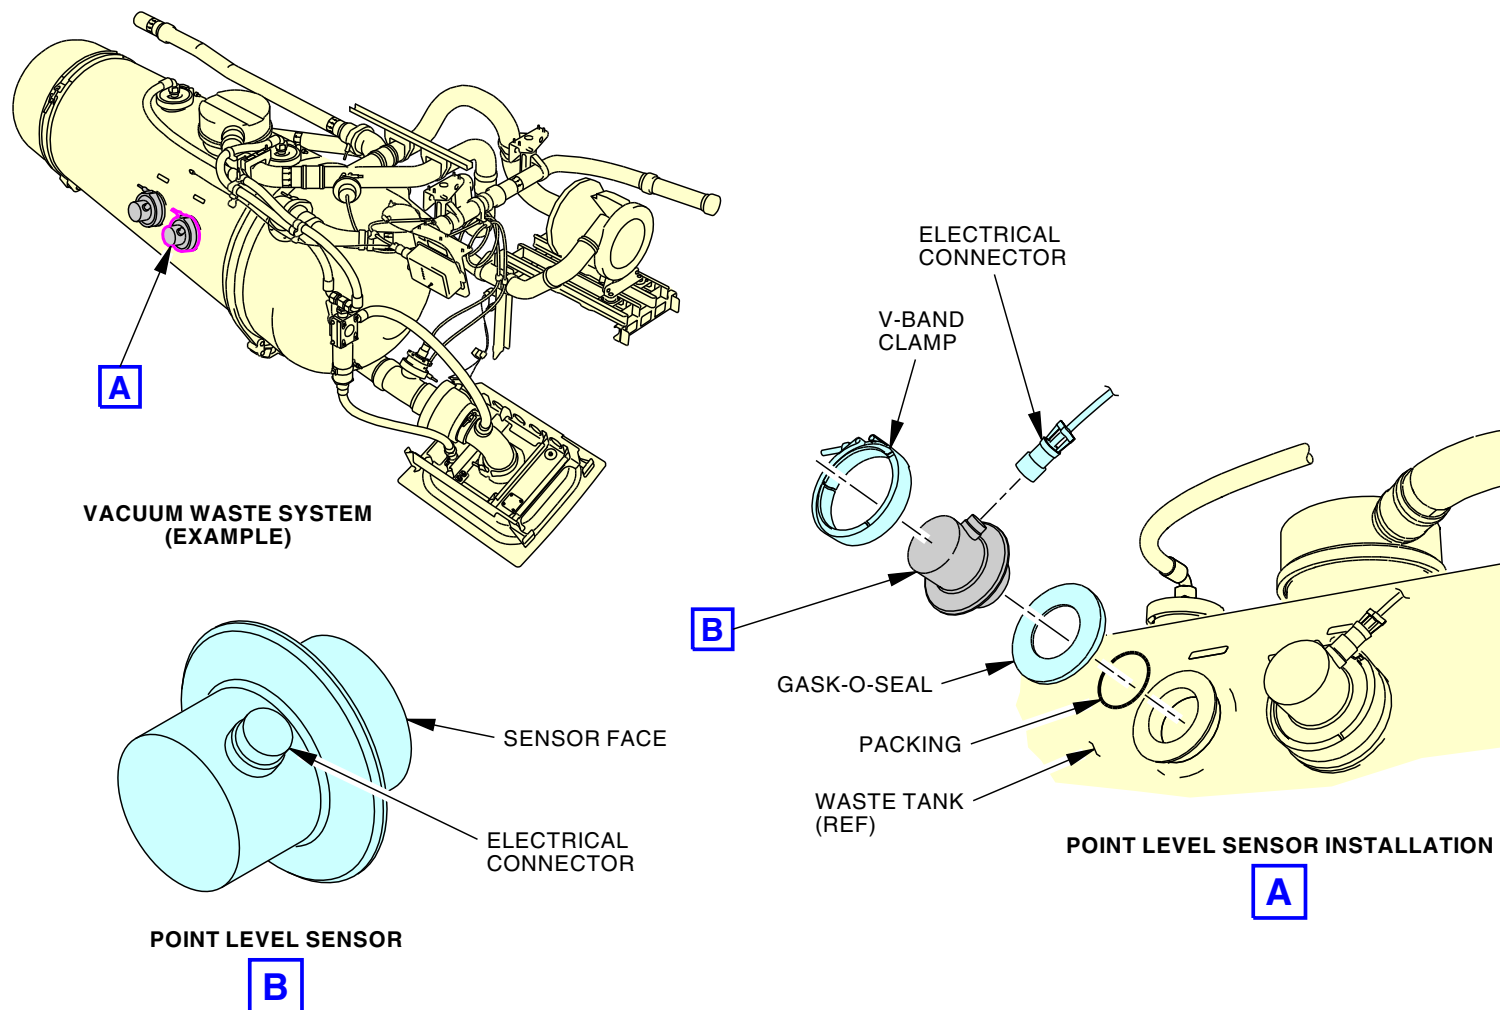

M87461 S0004631353_V1

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - POINT LEVEL SENSOR

38-33-00-002

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-33-00

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - CONTINUOUS LEVEL SENSOR

Purpose

The continuous level sensor measures the level of waste material in the waste tank.

Location

The continuous level sensor is in the aft cargo compartment. You get access to the continuous level sensor through the waste tank access panel on the left side of the cargo compartment.

The sensor module connects to the drain line at the forward lower end of the waste tank. The remote diaphragm connects to the vacuum line at the forward upper end of the waste tank.

Physical Description

The continuous level sensor is a capacitance-type pressure sensor. The sensor has these parts:

- Remote diaphragm
- Sensor module
- Capillary tube.

The capillary tube connects the remote diaphragm to the sensor module. The sensor module connects to the logic control module (LCM).

Functional Description

The sensor module measures the liquid (head) pressure at the bottom of the waste tank. The remote diaphragm measures the pressure of the air in the waste tank. The pressure transmits through the oil-filled capillary tube to the sensor module. The sensor module finds the difference between the air pressure in the waste tank and the liquid pressure in the drain line. The sensor uses the difference to calculate the level of waste in the waste tank. The output signal goes to the LCM.

Training Information Point




CAUTION

DO NOT BEND THE CAPILLARY TUBE OF THE CONTINUOUS LEVEL SENSOR TO LESS THAN A 3-INCH RADIUS. SHARP BENDS CAN CAUSE DAMAGE TO THE CAPILLARY TUBE.

SIA ALL	EFFECTIVITY

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - CONTINUOUS LEVEL SENSOR

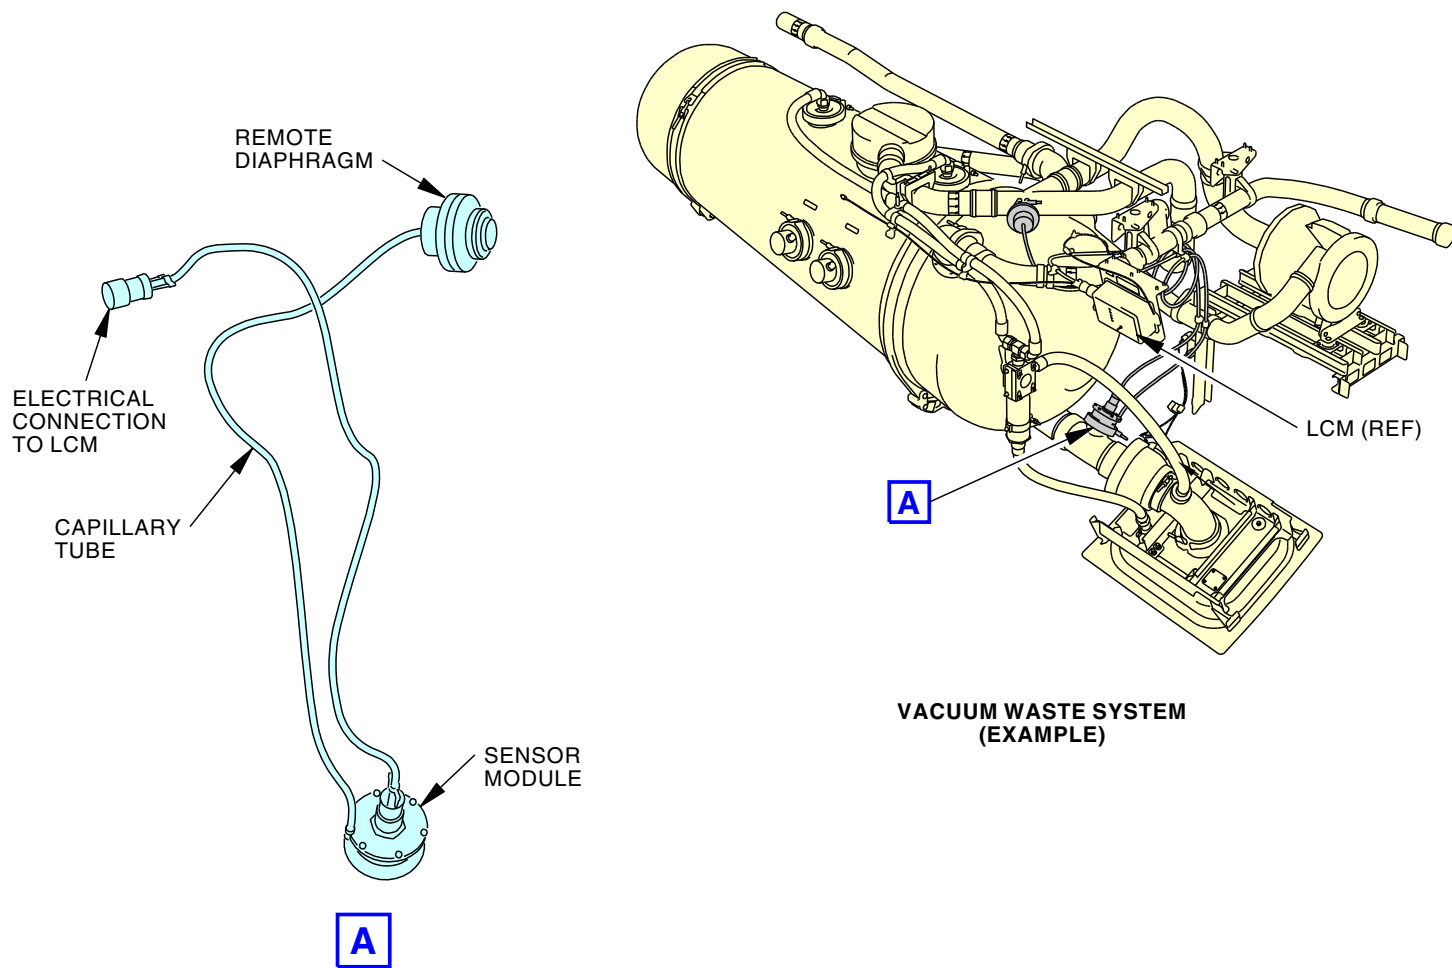

M87463 S0004631356_V2

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - CONTINUOUS LEVEL SENSOR

38-33-00-003

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-33-00

**WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - LOGIC CONTROL MODULE****Purpose**

The logic control module (LCM) measures the level of waste in the waste tank. The LCM stops the operation of the vacuum waste system when the waste tank is full.

Location

The LCM is in the aft cargo compartment. You get access to the LCM through the waste tank access panel on the left side of the cargo compartment.

The LCM is above and forward of the waste tank.

Physical Description

The LCM has these features:

- Electrical connectors (4)
- Test switch
- Indicator lights (5).

Two of the electrical connectors are for the point level sensors. One electrical connector is for the continuous level sensor. One electrical connector is for the power and signal connections to the airplane.

The test switch is a three-position (center off) momentary switch. In the UP position (TEST SENSORS), the LCM starts a power-up sequence which includes a full system BIT test. In the DOWN position (TEST LAMPS), a test of the LEDs occurs. If the test switch is held down for more than 10 seconds and the point level sensors are disconnected, an auto zero adjustment of the continuous level sensor will occur.

The five indicator lights are LEDs. These are the labels for the LEDs:

- SENSOR J1
- SENSOR J2
- SENSOR J3
- TANK FULL
- POWER ON.

The SENSOR J1 and SENSOR J2 LEDs show the status of the two point level sensors. The SENSOR J3 LED shows the status of the continuous level sensor. The TANK FULL LED shows the status of the waste tank and the LCM. The POWER ON LED shows that system power is on.

The POWER ON LED is green. The other LEDs are red.

Functional Description

The LCM gets data from the two point level sensors and the continuous level sensor. The LCM uses the data from the continuous level sensor to calculate the level of the waste in the waste tank.

The LCM sends a waste tank level signal to the waste tank quantity indicator and the waste tank quantity gage. The waste tank quantity indicator is on the attendant panel and the service panel waste tank quantity indicator is on the waste service panel.

A tank full signal from the continuous level sensor does not affect toilet operation.

The two point level sensors are level switches. When the level of the waste in the waste tank covers 50 percent of the face of a point level sensor, the point level sensor sends a tank full signal to the LCM. When both point level sensors send a tank full signal to the LCM, the LCM stops the operation of the toilets.

The LCM uses a delay of 20 seconds on the point level sensor data before it stops the operation of the toilets. This delay makes sure that there is a stable tank full signal and prevents the effects of momentary tank full signals due to airplane maneuvers or turbulence.

In normal circumstances, both point level sensors must send the tank full signal to the LCM for the LCM to stop toilet operation. However, when one point level sensor has an error, the LCM uses a tank full signal from the other point level sensor to stop toilet operation. If both point level sensors have an error, the LCM will stop toilet operation.

Lamp Test

You do a lamp test when you put the test switch in the TEST LAMPS position.

38-33-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - LOGIC CONTROL MODULE**

During the lamp test, the four software-controlled LEDs on the LCM come on. The green POWER ON LED will be on when system power is on.

System BIT

When system power comes on, the LCM does a power-up BIT test. The power-up BIT test makes sure that these components operate correctly:

- Point level sensors
- Continuous level sensor
- LCM.

During the power-up BIT test, the LEDs flash momentarily and then come on for three seconds. If all components pass the BIT test, all LEDs go off. If a component did not pass the BIT test, the related LED flashes at a two Hz rate. The results of the BIT test for the LCM are reported by the TANK FULL LED.

To do the power-up BIT test, put the LCM test switch in the TEST SENSORS position.

After the LCM completes the power-up BIT test, it then starts a continuous monitor cycle. This monitor cycle occurs every five milliseconds. The monitor cycle makes sure that the point level sensors and LCM are functional. The continuous level sensor does not do a test during the monitoring cycle.

If the continuous level sensor fails after the power-up BIT test is complete, the failure will not be sensed. An erroneous signal from the continuous level sensor will not affect toilet operation. You can detect errors in the continuous level sensor when you do the power-up BIT test.

LED Status

The four red LEDs show system status. System status updates every 250 milliseconds.

These are the conditions necessary for LED status:

LED	STATUS		
	OFF	ON	FLASHING*[1]
SENSOR J1	Tank not full.	Tank full or sensor disconnected.	Sensor fouled or sensor failed BIT.
SENSOR J2	Tank not full.	Tank full or sensor disconnected.	Sensor fouled or sensor failed BIT.
SENSOR J3	Tank not full.	Tank is above full.	Sensor failed BIT.
TANK FULL	Tank not full, FCU powered.	Tank full, FCU power off.	Two Hz flash: LCM failed BIT. Eight Hz flash: fatal error.

*[1] Flashing rate is two Hz unless otherwise noted.

Auto Zero Adjustment

You must do the auto zero adjustment when one of these conditions occur:

- When you move or replace the continuous level sensor
- When you move or replace the waste tank.

You use the LCM to do the auto zero adjustment. The auto zero adjustment calibrates the LCM for variations between the remote diaphragm and sensor module on the continuous level sensor.

To do the auto zero adjustment, you must make sure that the waste tank is fully drained. You must disconnect the point level sensors. Then you put the test switch in the TEST LAMPS position for more than 10 seconds.

These lights will go off for three seconds to show that the test is complete:

- SENSOR J1
- SENSOR J2
- SENSOR J3
- TANK FULL.

The POWER ON light will stay on.

38-33-00

EFFECTIVITY

SIA ALL

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details




WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - LOGIC CONTROL MODULE

Training Information Point


NOTE: Make sure that you drain the waste tank fully before you do the auto zero adjustment procedure. If you do not drain the waste tank fully, an error in the waste quantity indication can occur.

NOTE: The two point level sensor connectors are identical. Make sure that you connect the point level sensor connectors to the correct receptacle on the LCM.


WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - LOGIC CONTROL MODULE

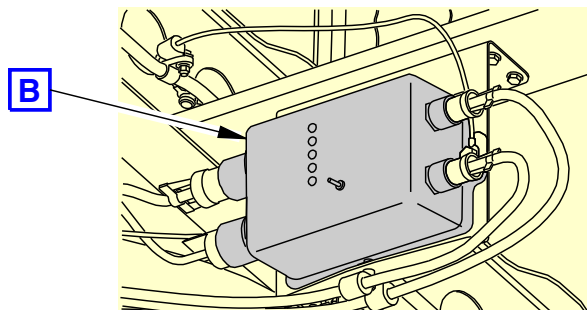

A

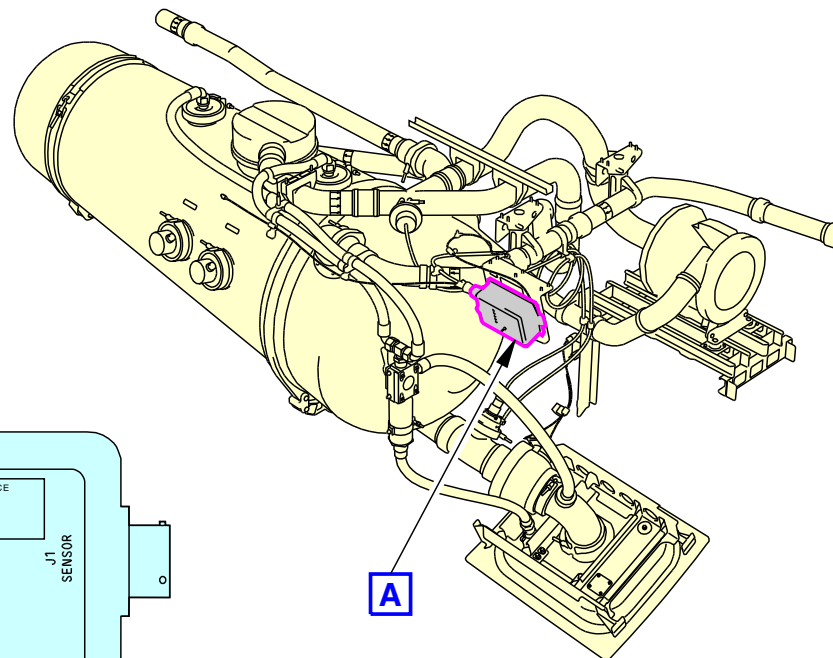

VACUUM WASTE SYSTEM (EXAMPLE)

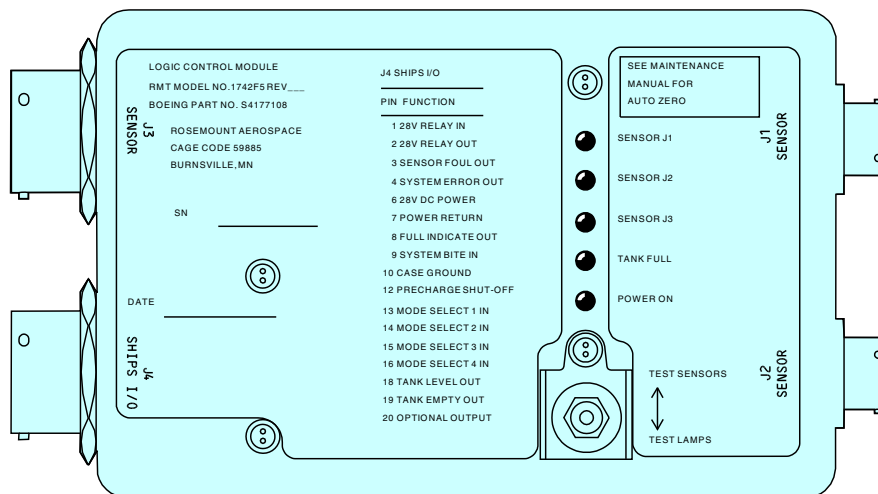

B

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - LOGIC CONTROL MODULE

M87465 S0004631359_V2

38-33-00

EFFECTIVITY	
SIA ALL	

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - WASTE QUANTITY INDICATOR****Purpose**

The waste quantity indicator shows the level of waste in the waste tank.

Location

The waste quantity indicator is viewed at the aft attendant control panel (ACP) from the ENVIRONMENT menu.

NOTE: The attendant control panel (ACP) is in the forward or aft attendant stations.

Physical Description

The waste quantity indicator is displayed from the ENVIRONMENT menu on the attendant control panel. The ENVIRONMENT menu has these features:

- Waste quantity indicator
- LAV INOP indicator

The MAINTENANCE menu has these features:

- LAV INOP indicator
- LAV INOP test switch
- Clean/Check Sensors indicator.

Operation

The waste quantity indicator shows the waste quantity with a bar style segment display. The segment display shows the waste quantity from E (empty) to F (full) in 1/8-tank increments.

The CLEAN/CHECK SENSOR light comes on when the waste tank level is three inches (7.6 cm) or more below the tank full level and one of these conditions occur:

- A point level sensor is fouled (dirty)
- A point level sensor failed the system BIT test
- There is a sensor disagreement.

A sensor disagreement occurs when one point level sensor sends a tank full signal and the other point level sensor sends a tank not full or sensor fouled signal.

The LAV INOP light comes on when both point level sensors send a tank full signal.

You can do the system BIT test when you push the LAV INOP Test switch. If all components pass the system BIT test, the waste quantity indicator shows a full tank and the CLEAN/CHECK SENSOR light is off.

Training Information Point

The CLEAN/CHECK SENSOR light shows problems with the point level sensors. When the waste tank level is three inches (7.6 cm) or less from the waste tank full level, the CLEAN/CHECK SENSOR light is disabled and can not come on. The CLEAN/CHECK SENSOR light is disabled to prevent nuisance indications when splashes from turbulence or airplane maneuvers could cause the light to come on. The signal to disable the CLEAN/CHECK SENSOR light comes from the continuous level sensor, through the logic control module.


38-33-00

SIA ALL EFFECTIVITY


D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - WASTE QUANTITY INDICATOR

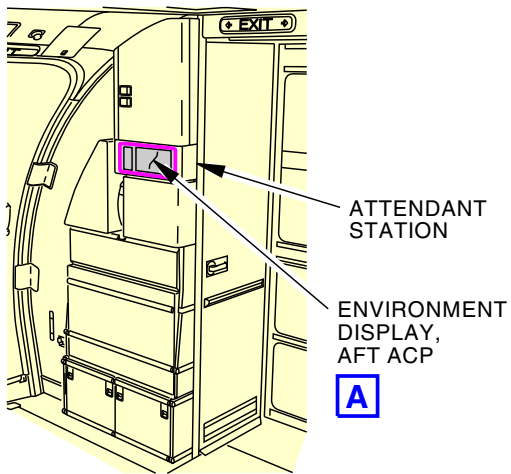



ATTENDANT STATION
(EXAMPLE)

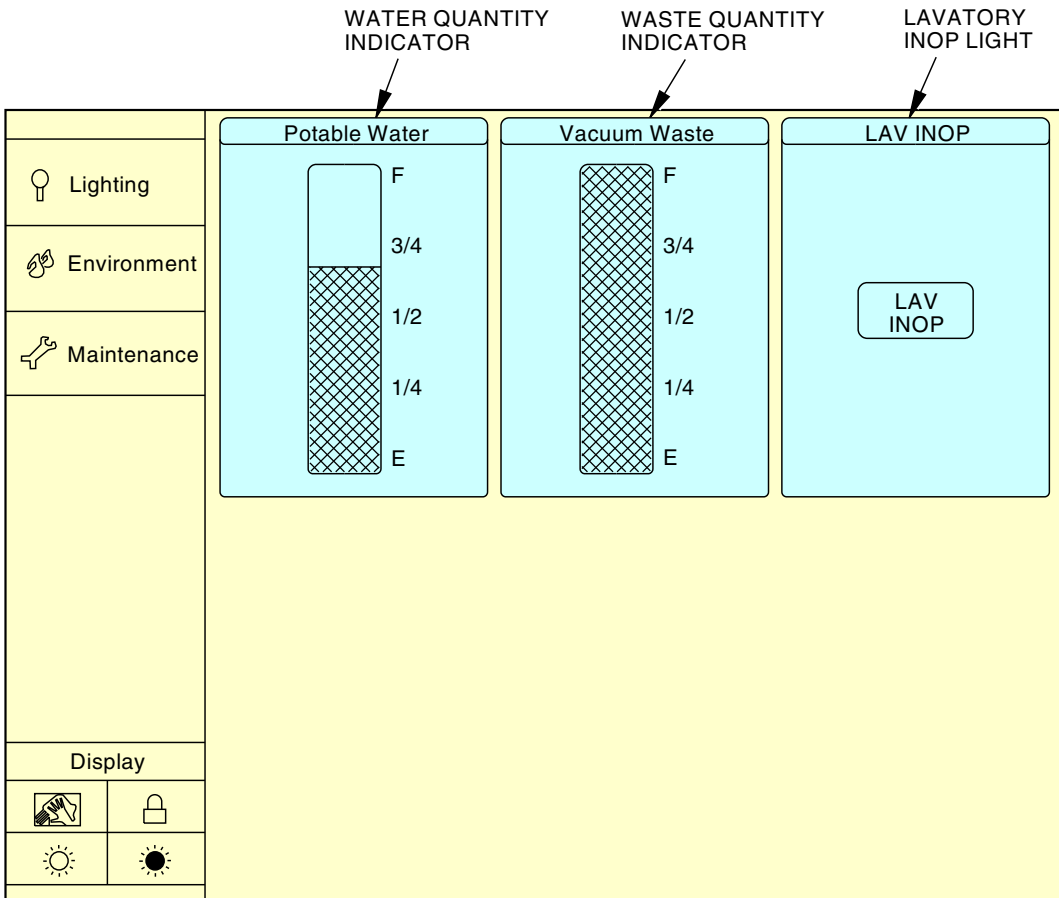

2091894 S0000441911_V4

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - WASTE QUANTITY INDICATOR

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - WASTE QUANTITY INDICATOR

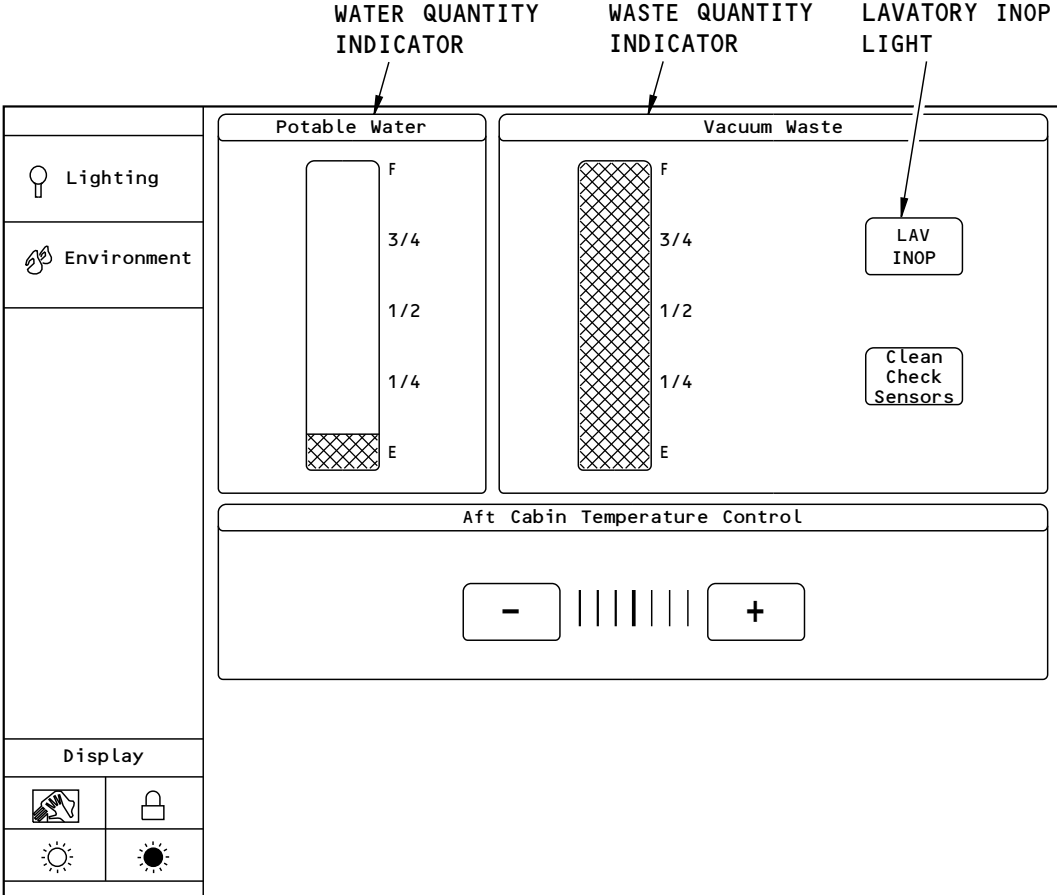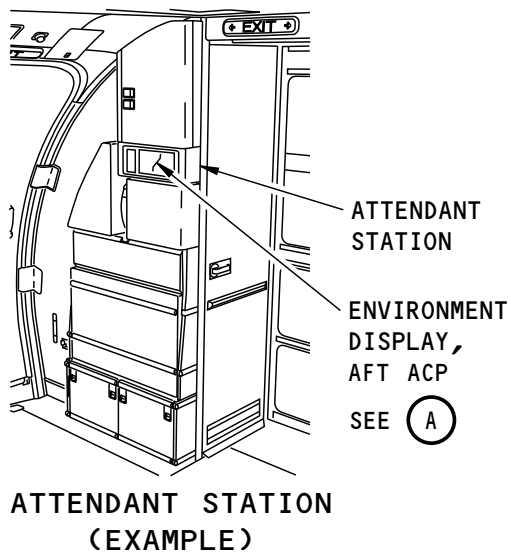

ENVIRONMENT DISPLAY, AFT ACP
(V5 SOFTWARE VERSION)

(A)

2304933 S0000523363_V1

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - WASTE QUANTITY INDICATOR

38-33-00-005



SIA ALL	EFFECTIVITY

38-33-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - WASTE QUANTITY INDICATOR

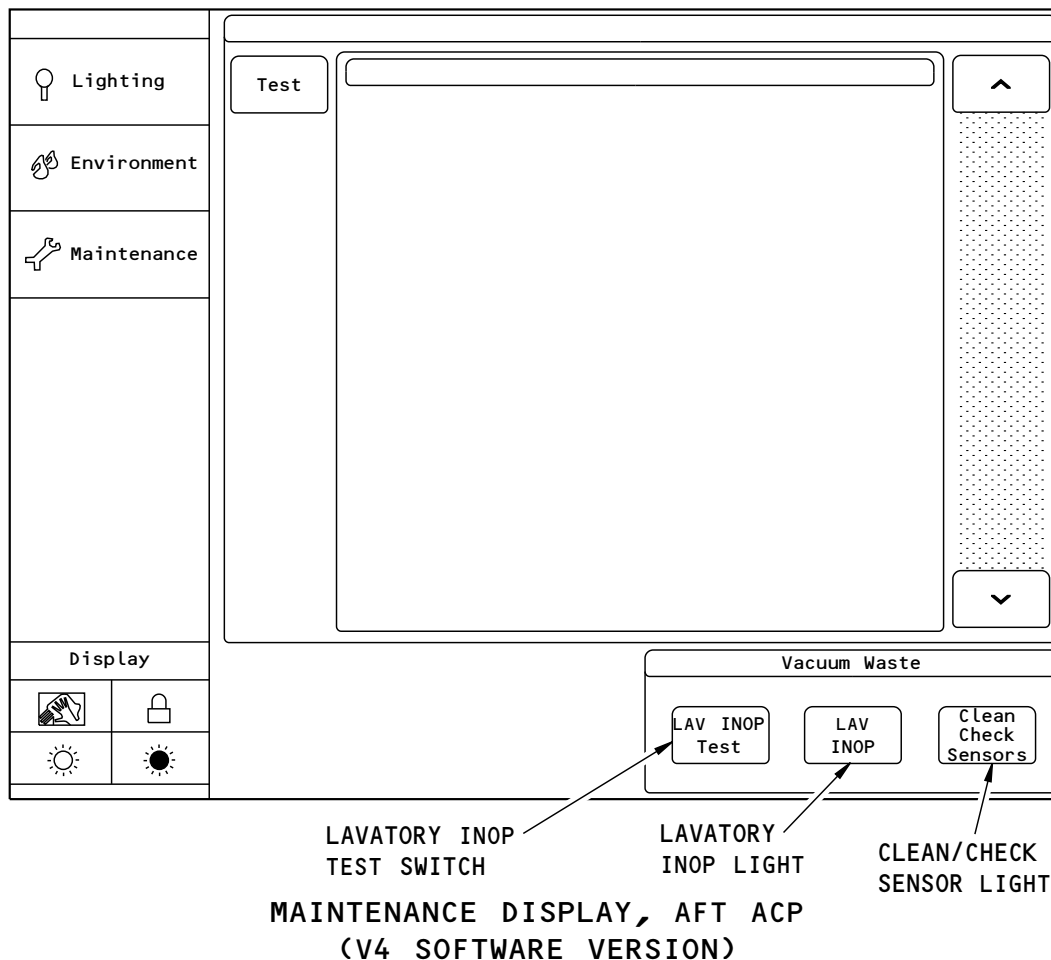
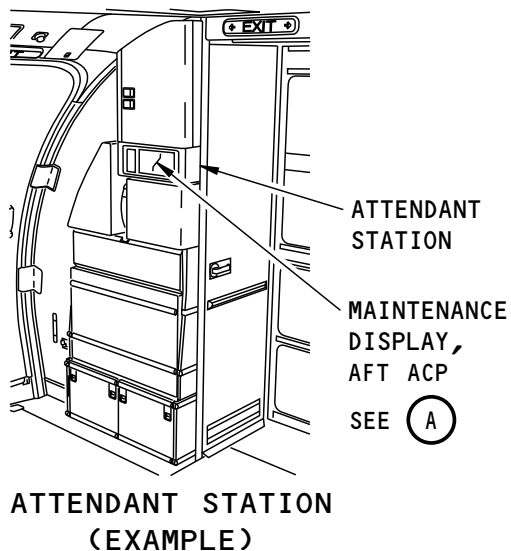


(A)

2091928 S0000441957_V3

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - WASTE QUANTITY INDICATOR

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - WASTE QUANTITY INDICATOR

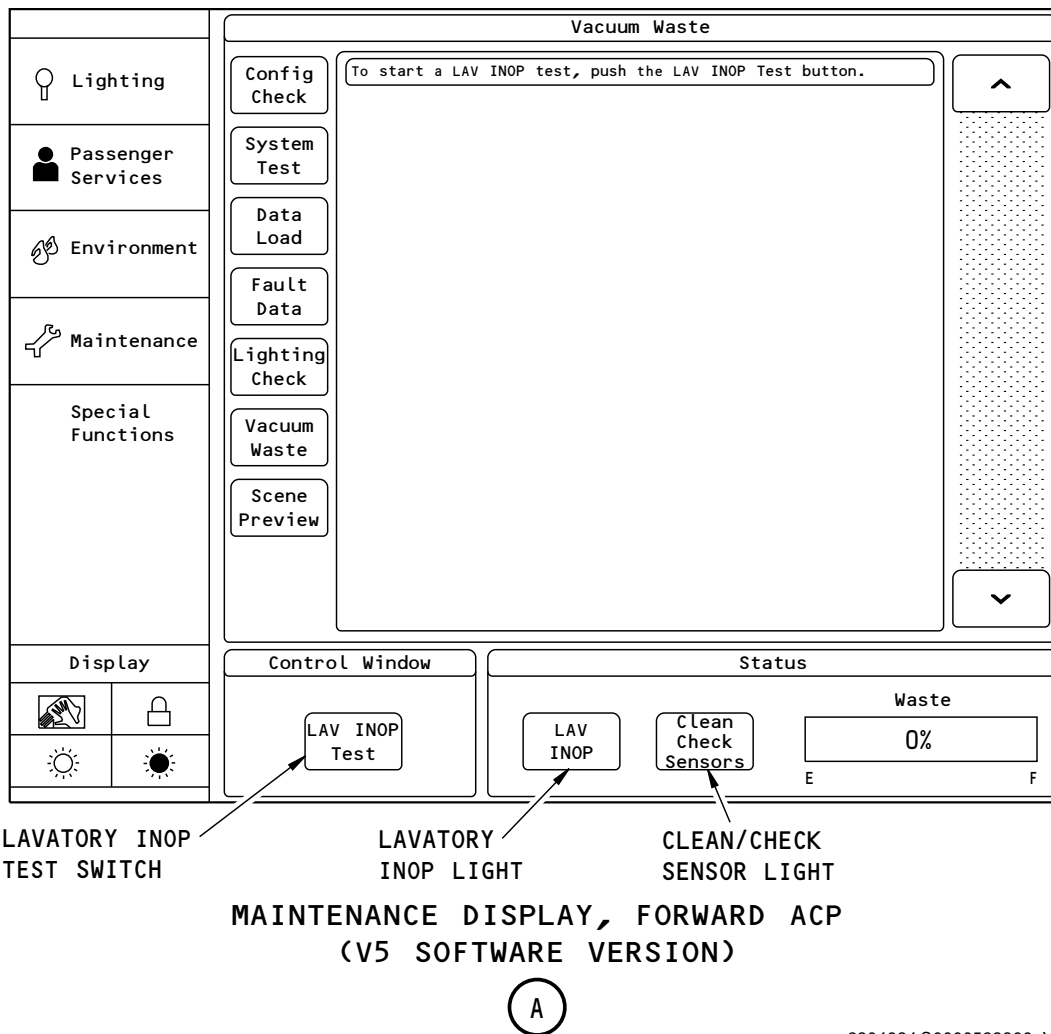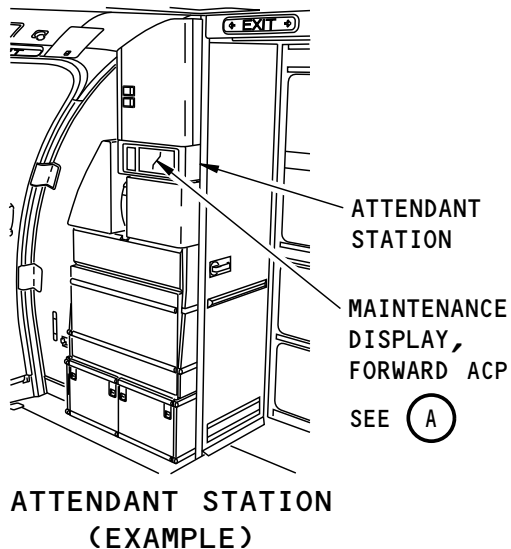

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - WASTE QUANTITY INDICATOR



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-33-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - SERVICE PANEL WASTE QUANTITY INDICATOR****Purpose**

The service panel waste quantity indicator shows the level of waste in the waste tank.

Location

The waste service panel is at the aft section of the fuselage, at the bottom left side.

Physical Description

This indicator is an analog dial indicator. The graduations are equally spaced in increments of 1/8 of a tank from E (empty) to F (full). The graduations are labeled at 1/4 tank increments.

The pointer movement is linear with inputs from 0v DC to 10v DC.

Functional Description



The logic control module sends a voltage that is in proportion to the level of water in the waste tank.

The logic control module voltage output will be 0v DC when the waste tank is empty. For an input voltage of 0v DC, the waste quantity indicator shows E (empty)


The logic control module voltage output will be 10v DC when the tank is full. For an input voltage of 10v DC, the waste quantity indicator shows F (full).

EFFECTIVITY	
SIA ALL	

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - SERVICE PANEL WASTE QUANTITY INDICATOR

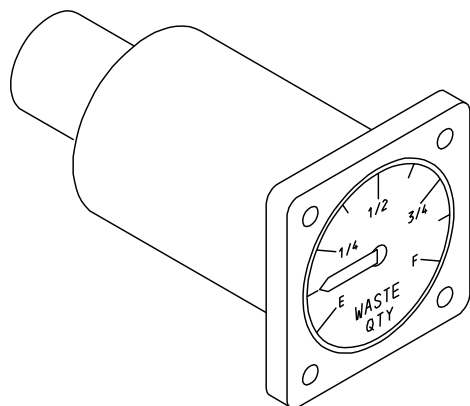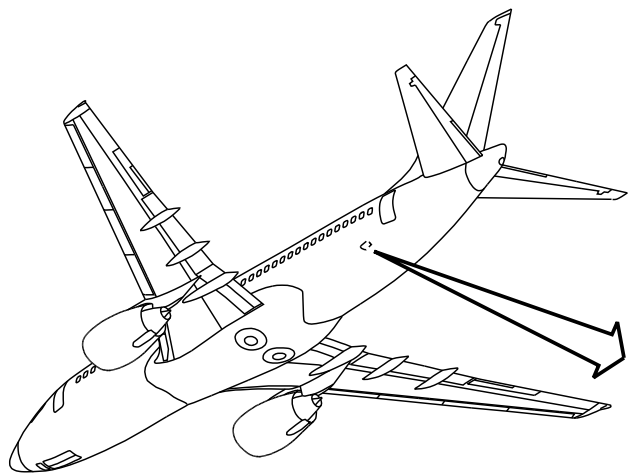

SERVICE PANEL WASTE QUANTITY INDICATOR

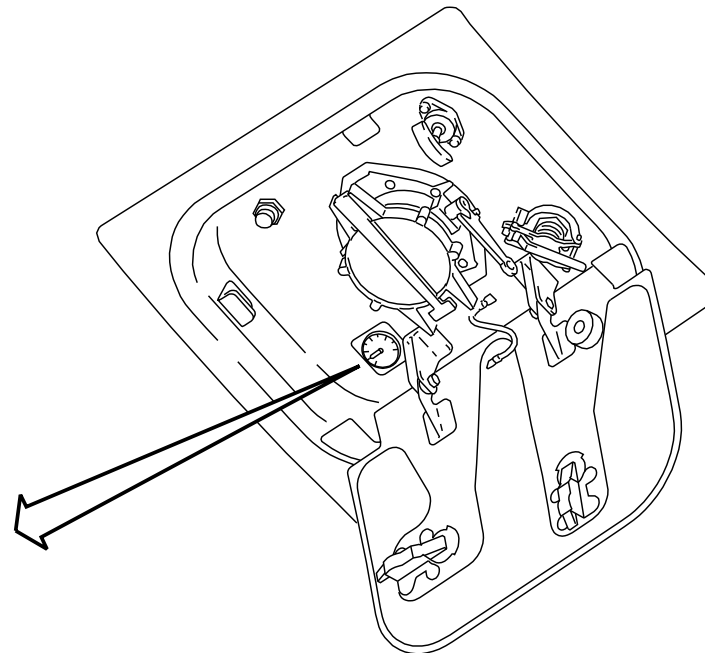

WASTE SERVICE PANEL

M87473 S0004631366_V1

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - SERVICE PANEL WASTE QUANTITY INDICATOR



WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - SENSOR FOULED LIGHT

Purpose


The sensor fouled light shows that a point level sensor is fouled (dirty).

Location


The sensor fouled light is on the waste service panel. The waste service panel is at the aft section of the fuselage, at the bottom left side.

SIA ALL	EFFECTIVITY
D633A101-SIA	

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - SENSOR FOULED LIGHT

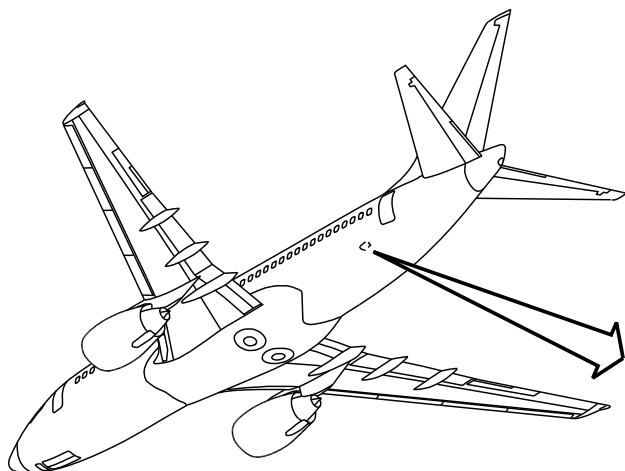

SENSOR
FOULED
LIGHT

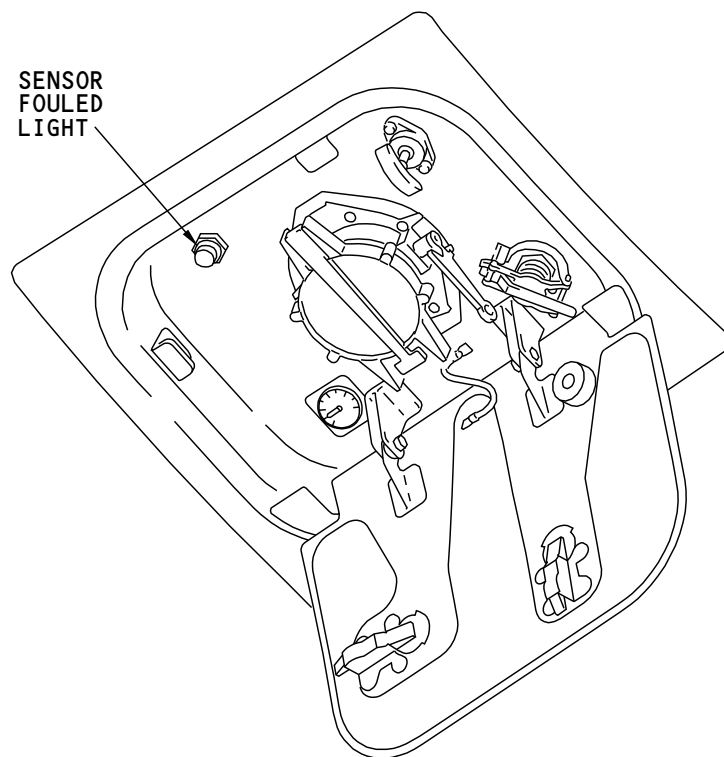

WASTE SERVICE PANEL

M87476 S0004631369_V1

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - SENSOR FOULED LIGHT

38-33-00-009

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-33-00



WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - FUNCTIONAL DESCRIPTION

Power

The 28v dc ground service bus supplies power to the waste tank quantity indication system.

Displays

The continuous level sensor sends waste level data to the logic control module (LCM). The LCM sends a waste level signal to the attendant control panel (ACP) display logic. The display logic controls which bar segment displays. The waste quantity indicator shows the waste level in 1/8 tank intervals.

The waste level signal also goes to the service panel waste quantity indicator. This indicator shows the waste level in 1/8 tank intervals.

When both point level sensors send a full tank signal to the LCM, the LCM does these steps:

- Stops operation of the toilets
- Sends a full tank signal to the waste system module.

The full tank signal causes the LAV INOP indicator to come on.

The SENSOR FOULED light comes on when a point level sensor is fouled. You can test the SENSOR FOULED light by pushing on the light.

The CLEAN/CHECK SENSOR light comes on when the waste tank level is three inches (7.6 cm) or more below the tank full level and one of these conditions occur:

- A point level sensor is fouled (dirty)
- A point level sensor has failed the power-up BIT test or the continuous monitoring test
- There is a sensor disagreement.

A sensor disagreement occurs when one point level sensor sends a tank full signal and the other point level sensor sends a tank not full or sensor fouled signal.

System BIT

When system power comes on, the LCM does a power-up BIT test. The power-up BIT test makes sure that these components operate correctly:

- Point level sensors
- Continuous level sensor
- LCM.


You can do the power-up BIT test at anytime when you do one of these steps:

- Push the LAV INOP test switch on the MAINTENANCE display.
- Put the test switch on the LCM in the TEST SENSORS position.

After the LCM completes the power-up BIT test, it starts a continuous monitor cycle. This monitor cycle makes sure that the point level sensors and the LCM are functional. The continuous level sensor does not do a test during the monitor cycle.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - FUNCTIONAL DESCRIPTION

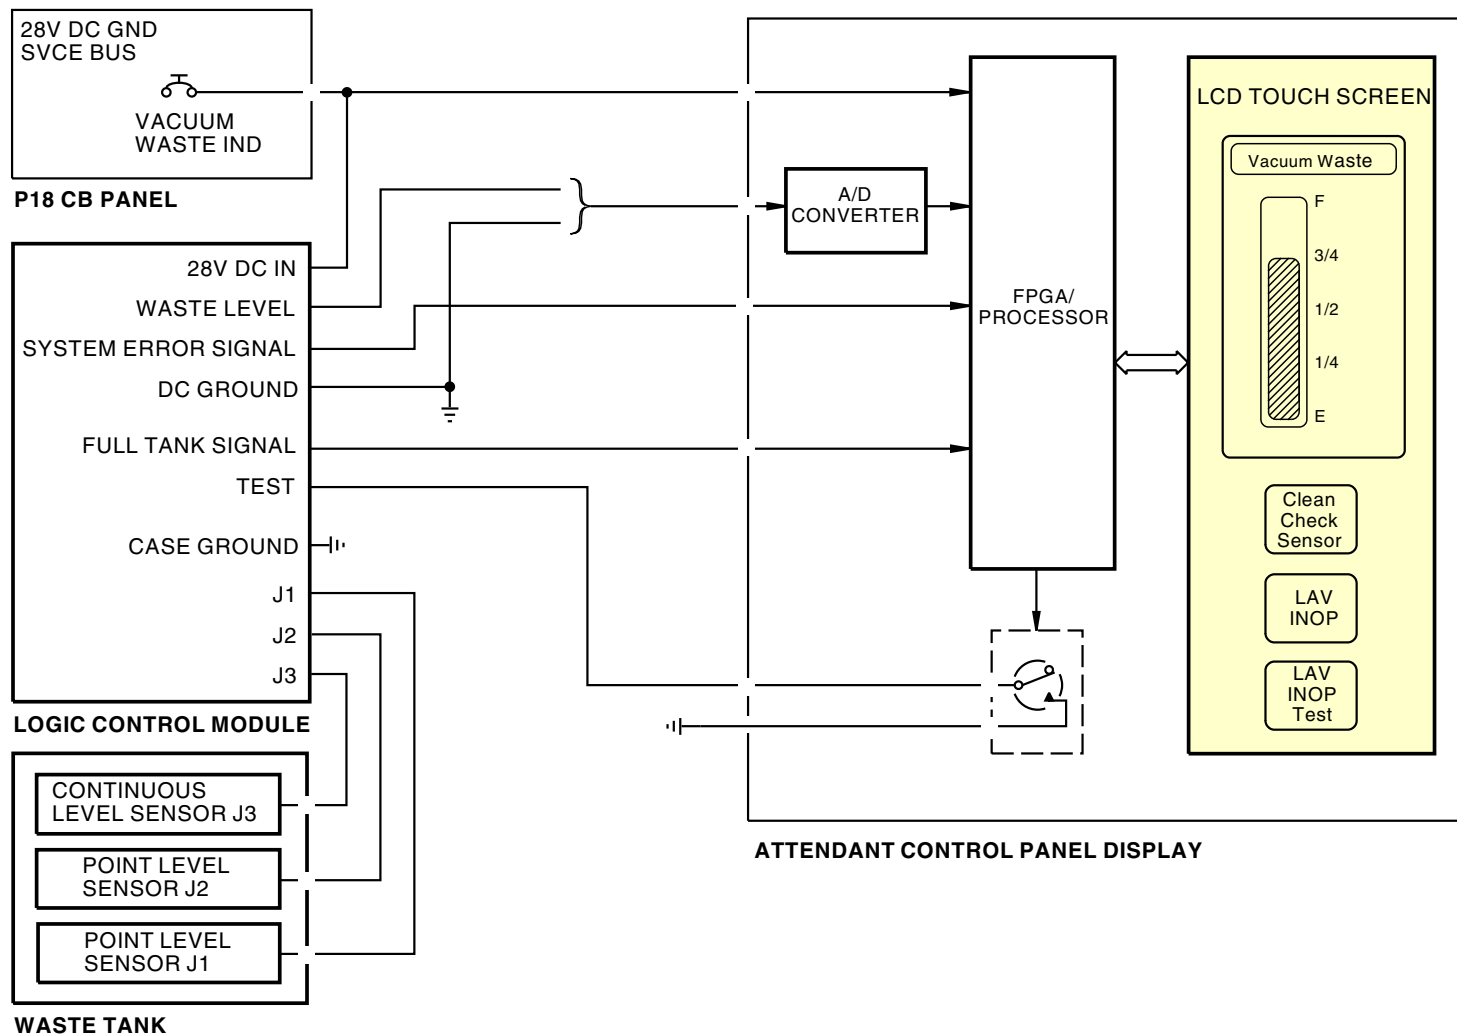

2106959 S0000449888_V3

WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - FUNCTIONAL DESCRIPTION

38-33-00-006

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-33-00



WATER/WASTE - WASTE TANK QUANTITY INDICATION SYSTEM - FUNCTIONAL DESCRIPTION

THIS PAGE IS INTENTIONALLY LEFT BLANK

38-42-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



WATER/WASTE - WATER TANK PRESSURIZATION - INTRODUCTION

Purpose

The water tank pressurization system pressurizes the potable water tank.

General Description

Pressure for the water tank comes from the pneumatic system or the air compressor.

The water tank pressurization system has these functions:


- Controls the air pressure that goes into the water tank
- Selects the source of the pressurized air
- Prevents contamination from unwanted material in the air.

Abbreviations and Acronyms

- AC - alternating current
- fwd - forward
- psig - pounds per square inch gage
- ref - reference
- S - switch
- typ - typical
- V - volts



WATER/WASTE - WATER TANK PRESSURIZATION - INTRODUCTION

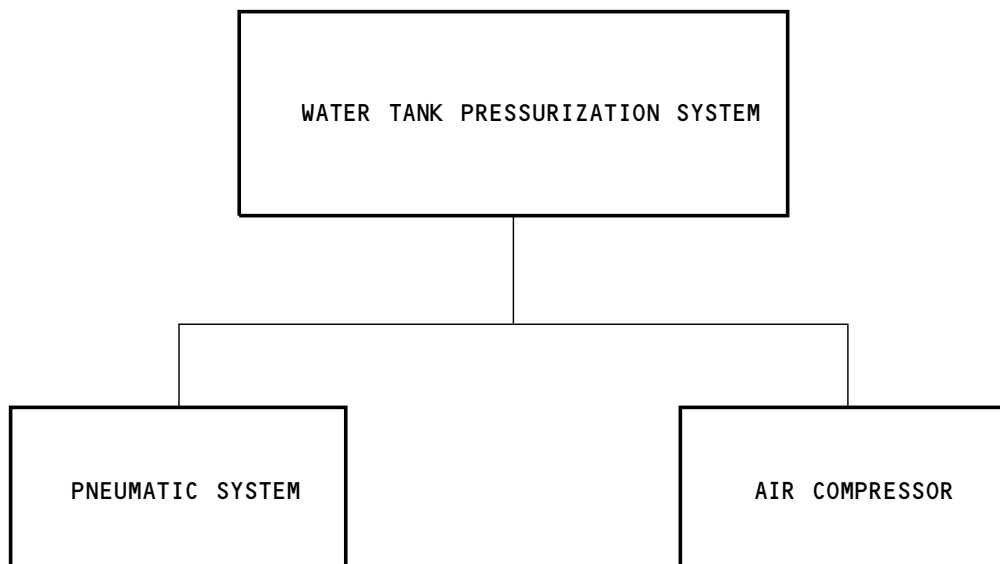

M87478 S0004631379_V1

WATER/WASTE - WATER TANK PRESSURIZATION - INTRODUCTION

38-42-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - WATER TANK PRESSURIZATION - COMPONENT LOCATION****General**


The water tank pressurization components are in the aft cargo compartment.

The air compressor is forward of the waste tank on a shelf below the vacuum blower.

The pneumatic equipment components are on the ceiling forward of the aft cargo compartment bulkhead liner.

The water tank components are aft of the aft cargo compartment bulkhead liner.

WATER/WASTE - WATER TANK PRESSURIZATION - COMPONENT LOCATION

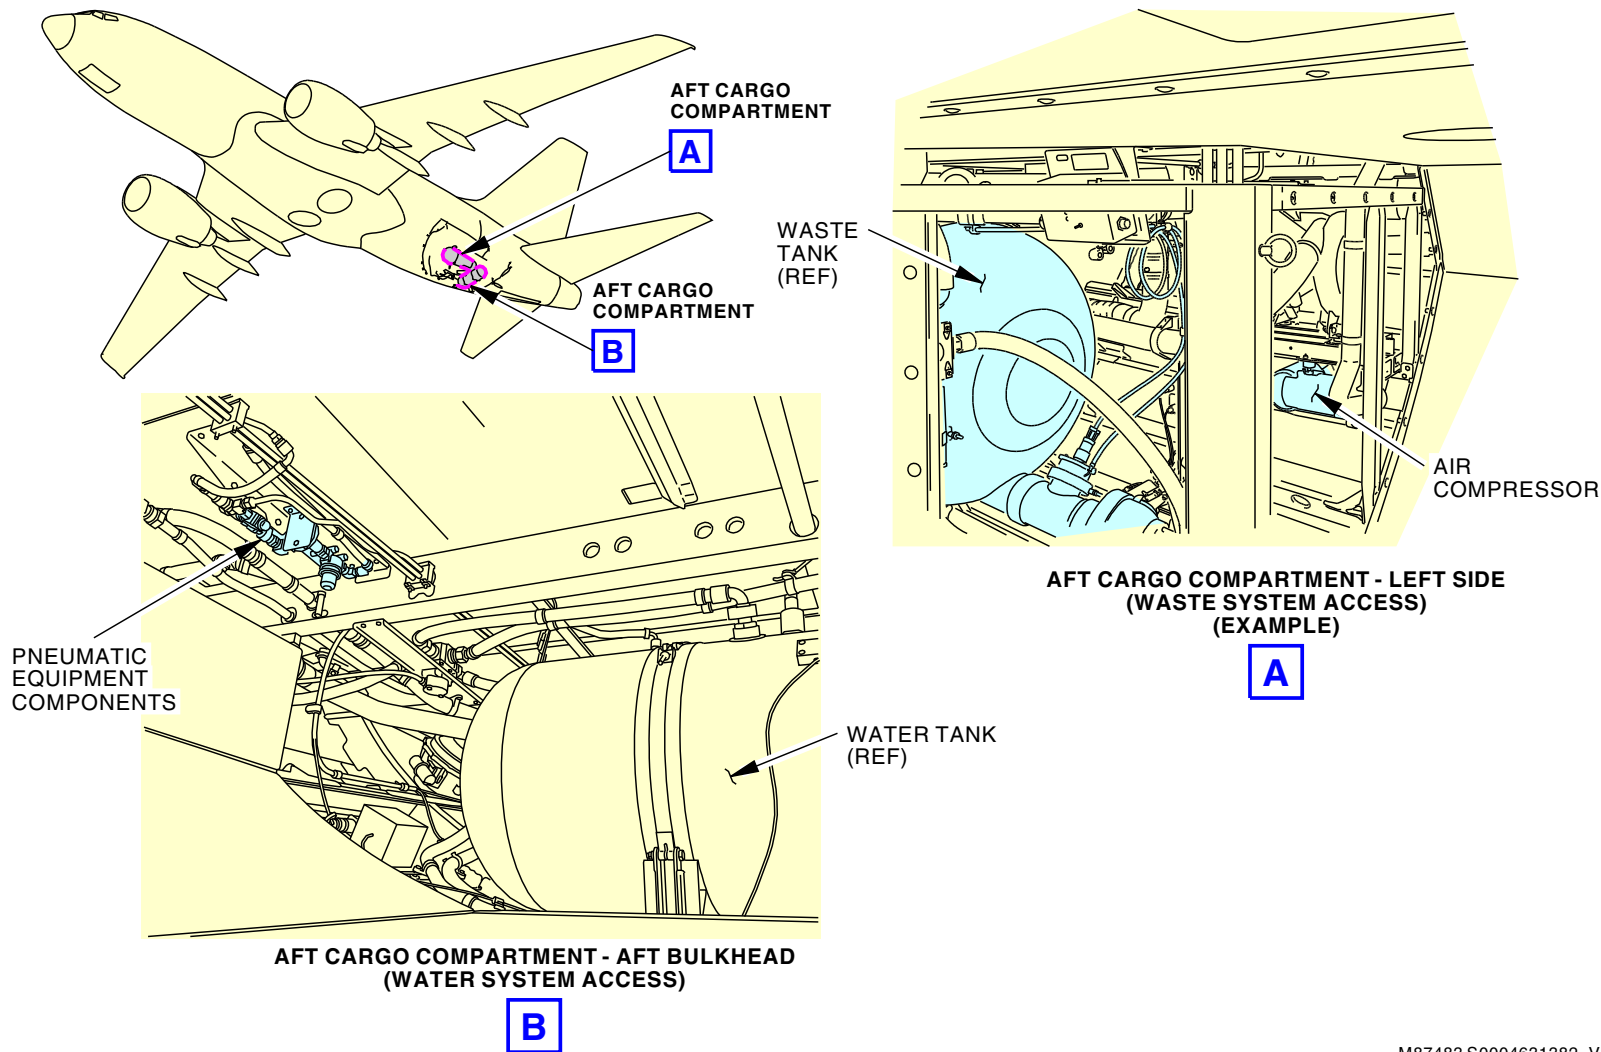

M87483 S0004631382_V2

WATER/WASTE - WATER TANK PRESSURIZATION - COMPONENT LOCATION

38-42-00



THIS PAGE IS INTENTIONALLY LEFT BLANK

38-42-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WATER/WASTE - WATER TANK PRESSURIZATION - PNEUMATIC EQUIPMENT****Location**

The pneumatic equipment is in the aft cargo compartment and in the potable water system pneumatic line. In the aft cargo compartment you remove the cargo compartment ceiling lining to get access to the pneumatic equipment.

Physical Description

The pneumatic equipment installation has these components:

- In-line air filter
- Pressure regulator
- Check valves (2)
- Pressure relief valve
- Restrictor assembly (not shown).

In-Line Air Filter

The in-line air filter removes contamination from the pneumatic system supply line.

The in-line air filter has these features:

- Inlet fitting
- Head
- Packing
- Air filter element
- Bowl
- Outlet fitting.

The filter element is a 10-20 micron paper filter element.

Two fasteners attach the in-line filter to the ceiling structure.

Pressure Regulator

The pressure regulator controls the air pressure that goes into the water tank from the pneumatic system.

The pressure regulator has a circular disk-shape body and two threaded fittings. One fitting is for the line from the pneumatic system. The other fitting is for the line that goes to the water tank.

The pressure regulator keeps the air pressure from the pneumatic system to a limit of 35 psig.

Check Valves

The check valves prevent the loss of air pressure in the water tank and do not let water into the water tank pressurization system.

There are two check valves. There is a check valve in the air compressor supply line and a check valve in the pneumatic supply line.

The check valve has these features:

- Tube fittings
- Wrench flats
- Flow direction arrow.

Pressure Relief Valve

The pressure relief valve prevents an over-pressure condition in the water tank pressure lines.

The pressure relief valve has these features:

- Wrench flats
- Tube fitting
- Pressure relief actuator.

The tube fitting connects to the same manifold as the two pressurization sources.

If pressure in the pneumatic supply line increases to 60 psig, the pressure relief valve opens. The valve resets at 55 psig.

EFFECTIVITY	
SIA ALL	




WATER/WASTE - WATER TANK PRESSURIZATION - PNEUMATIC EQUIPMENT

Restrictor Assembly

The restrictor limits the flow rate of air from the pneumatic system. The flow rate is limited so it does not exceed the maximum flow rate of the pressure relief valve. The restrictor forms part of the over-pressurization protection from the water tanks.

SIA ALL	EFFECTIVITY
	D633A101-SIA

WATER/WASTE - WATER TANK PRESSURIZATION - PNEUMATIC EQUIPMENT

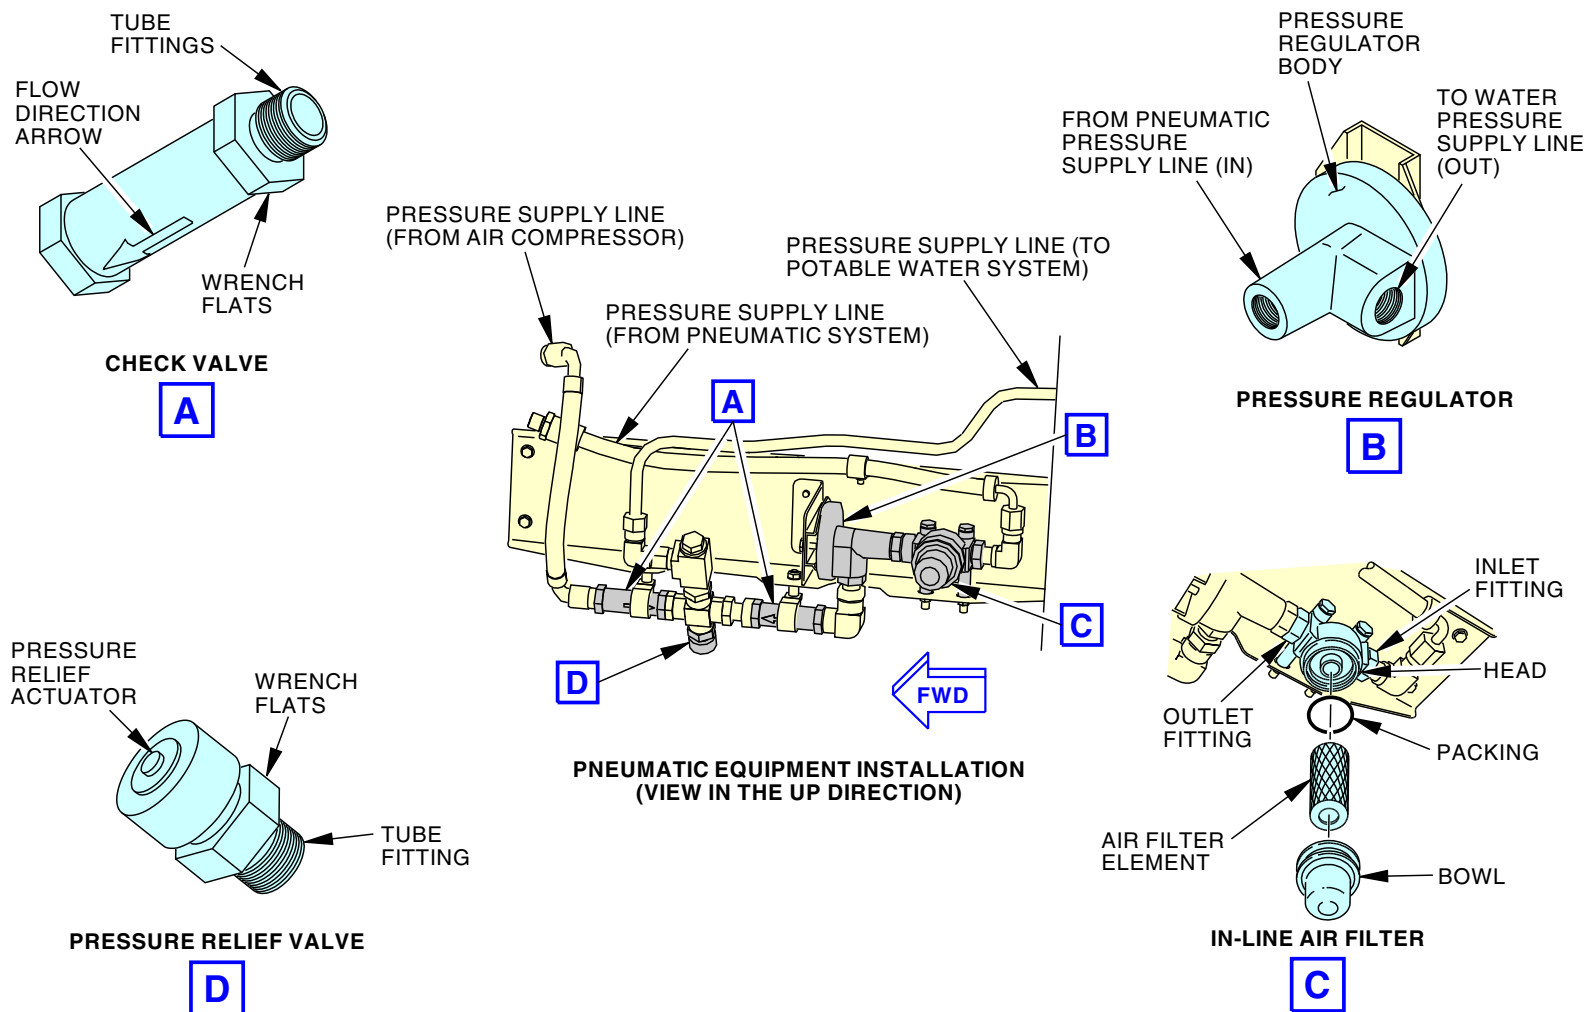

M87488 S0004631384_V1

WATER/WASTE - WATER TANK PRESSURIZATION - PNEUMATIC EQUIPMENT

38-42-00-012

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-42-00

**WATER/WASTE - WATER TANK PRESSURIZATION - AIR COMPRESSOR/INLET AIR FILTER****Purpose**

The air compressor pressurizes the water tank when the pneumatic system is not on.

The inlet air filter removes particles of unwanted material from the air that goes into the water tank.

Location

The air compressor is on the left side of the aft cargo compartment. You remove the forward waste tank access panel to get access to the air compressor. The air compressor attaches to the lower side of the vacuum blower support shelf.

Physical Description

The air compressor has these parts:

- Inlet air filter
- Electrical connector (not shown)
- Inlet
- Outlet
- Pressure relief valve.

The inlet air filter has these parts:

- Noise baffle
- Filter assembly
- Perforated disk
- Snap ring
- O-ring (2)
- Housing.

Functional Description

The three-phase AC motor operates the air compressor to pressurize the water tank. The motor starts when the water pressure cut-out switch senses that tank pressure is less than 30 psig. The motor stops when tank pressure is 40 psig. The air compressor pulls air through the inlet air filter from the cargo ceiling area.

The inlet air filter element is a 40 micron, layered disk filter. The filter housing attaches to the inlet side of the air compressor.


The pressure relief valve prevents the air compressor from over pressurization. The pressure relief valve opens at 90 psig.

Training Information Point


You can replace the inlet air filter element.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - WATER TANK PRESSURIZATION - AIR COMPRESSOR/INLET AIR FILTER

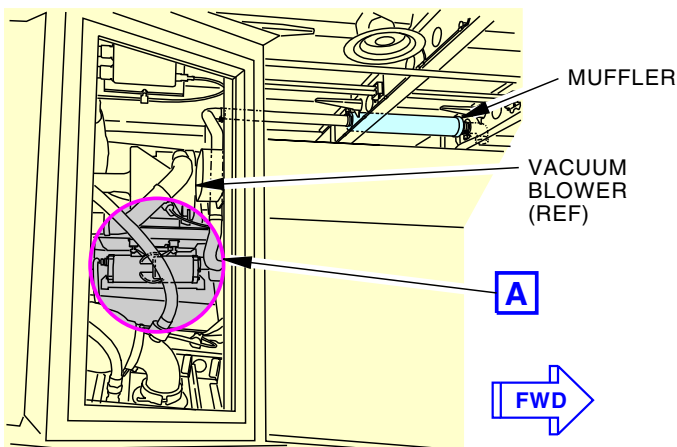


**AFT CARGO COMPARTMENT - LEFT SIDE
(FORWARD WASTE TANK ACCESS PANEL REMOVED)
(EXAMPLE)**

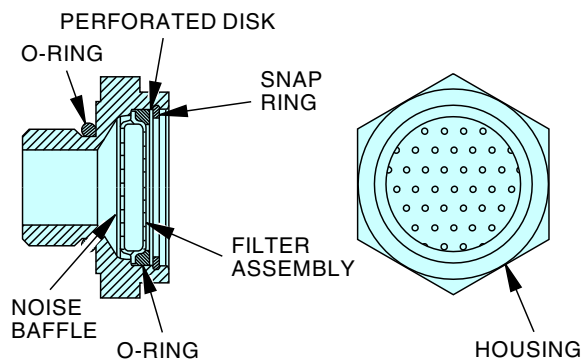

INLET AIR FILTER

B

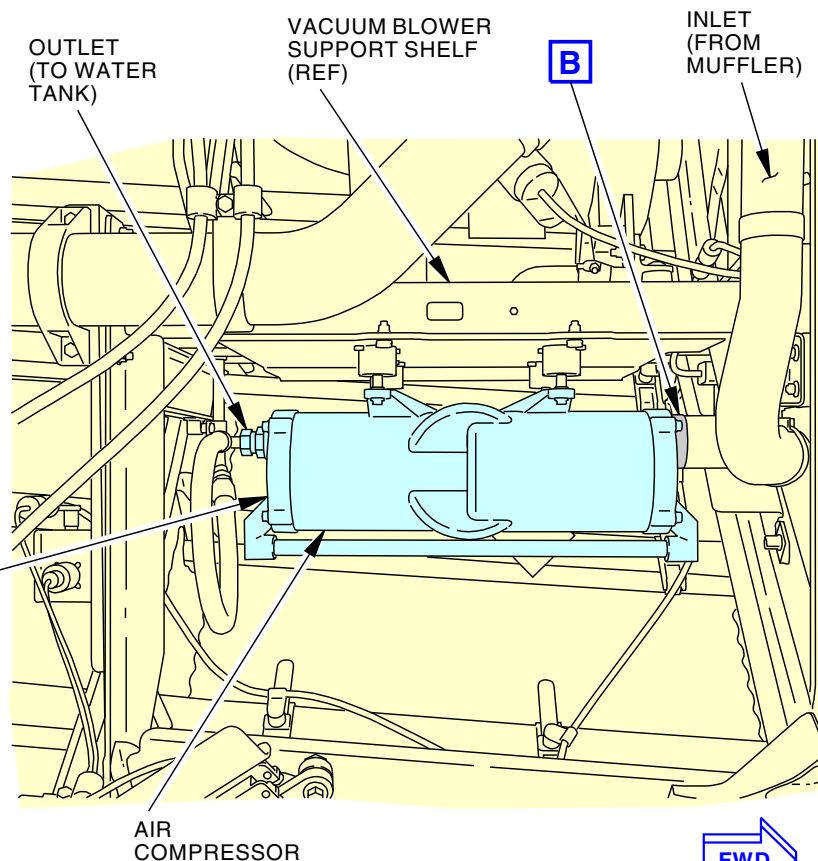

AIR COMPRESSOR INSTALLATION

A

M87479 S0004631386_V2

WATER/WASTE - WATER TANK PRESSURIZATION - AIR COMPRESSOR/INLET AIR FILTER

**WATER/WASTE - WATER TANK PRESSURIZATION - WATER PRESSURE CUT-OUT SWITCH****Purpose**

The water pressure cut-out switch controls the operation of the air compressor.

Location

The water pressure cut-out switch is in the aft cargo compartment behind the aft bulkhead. You must remove the water tank access panel to get access to it.

The water pressure cut-out switch attaches to the top of the water tank.

Physical Description

The water pressure cut-out switch has these features:



- Electrical connector
- Tube fitting
- Wrench flats.

Functional Description

The switch starts the air compressor when the pressure in the water tank is 30 psig or less. The switch stops the air compressor when the pressure in the water tank is 40 psig.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - WATER TANK PRESSURIZATION - WATER PRESSURE CUT-OUT SWITCH

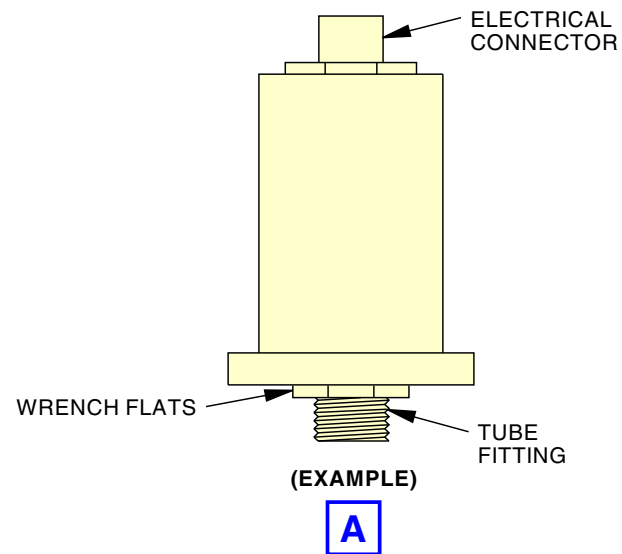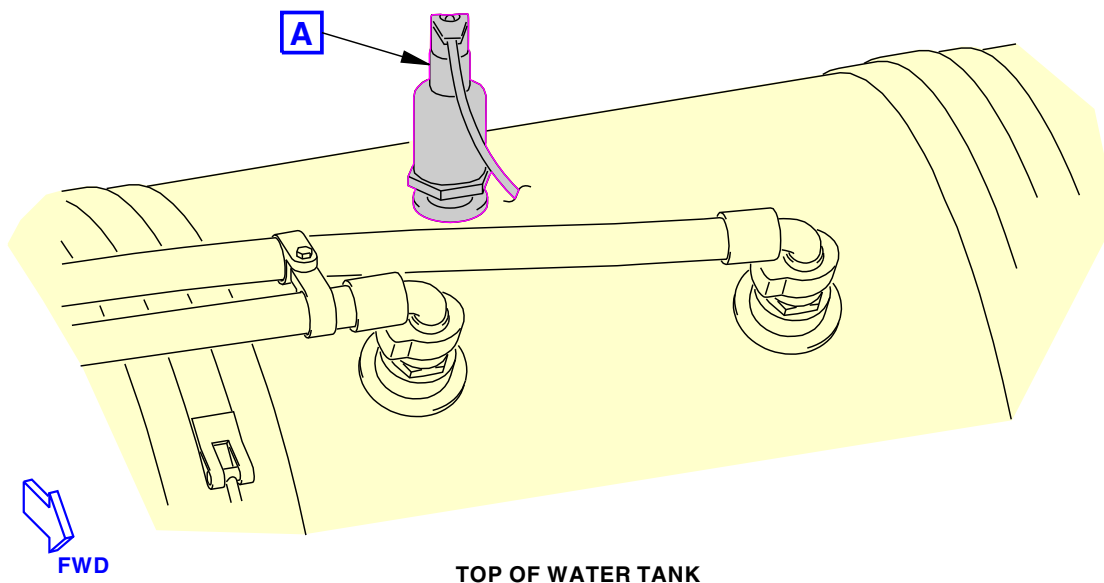

M87480 S0004631388_V3

WATER/WASTE - WATER TANK PRESSURIZATION - WATER PRESSURE CUT-OUT SWITCH

38-42-00-004

SIA ALL	EFFECTIVITY
	D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-42-00

**WATER/WASTE - WATER TANK PRESSURIZATION - COMPRESSOR CUT-OUT SWITCH****Purpose**

The compressor cut-out switch stops the operation of the air compressor when the water service panel door is open.

Location

The compressor cut-out switch is on the water service panel at the aft section of the fuselage, bottom right side.

Description


The compressor cut-out switch has these components:

- Sensor assembly
- Actuator magnet.

The compressor cut-out switch opens when the water service panel door is open.

EFFECTIVITY	
SIA ALL	

WATER/WASTE - WATER TANK PRESSURIZATION - COMPRESSOR CUT-OUT SWITCH

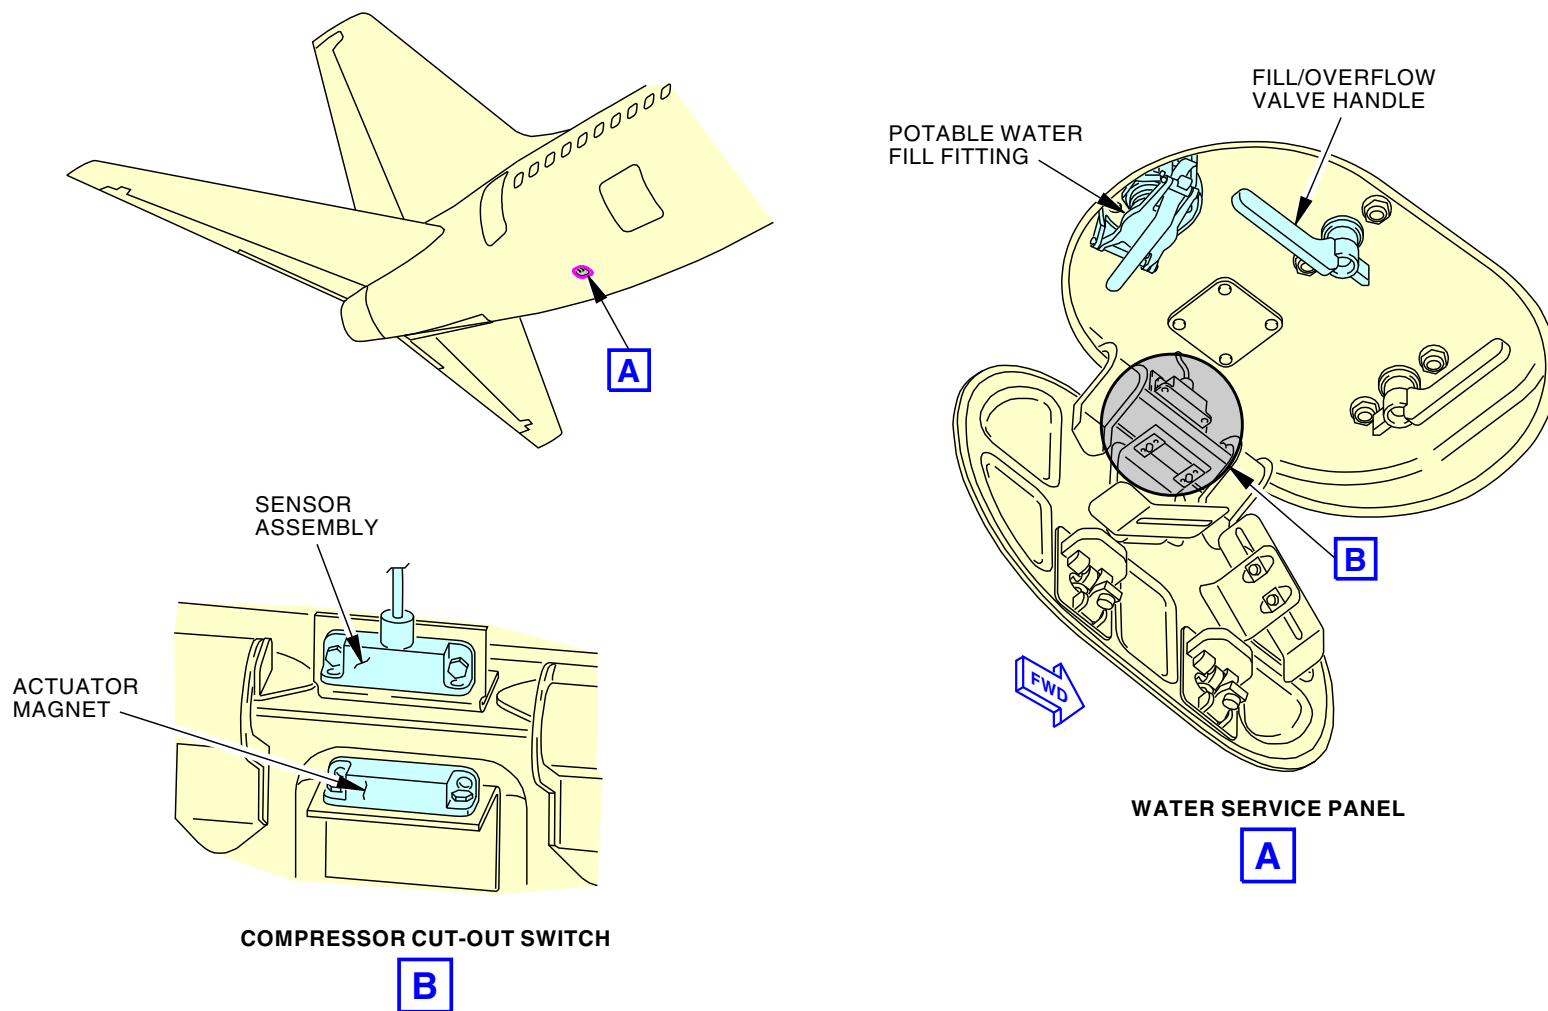

M87486 S0004631390_V2

WATER/WASTE - WATER TANK PRESSURIZATION - COMPRESSOR CUT-OUT SWITCH

38-42-00

SIA ALL	EFFECTIVITY
	D633A101-SIA

**WATER/WASTE - WATER TANK PRESSURIZATION - AIR COMPRESSOR - FUNCTIONAL DESCRIPTION****Functional Description**

The air compressor operates with 115v AC, three-phase power.


The compressor control relay energizes when these conditions are true:

- Water service door is closed (compressor cut-out switch is closed)
- Water tank pressure is less than 30 psig (water pressure cut-out switch is closed)
- 115v AC main bus 1 is on.

The air compressor operates when the compressor control relay energizes.

SIA ALL	EFFECTIVITY
	D633A101-SIA

WATER/WASTE - WATER TANK PRESSURIZATION - AIR COMPRESSOR - FUNCTIONAL DESCRIPTION

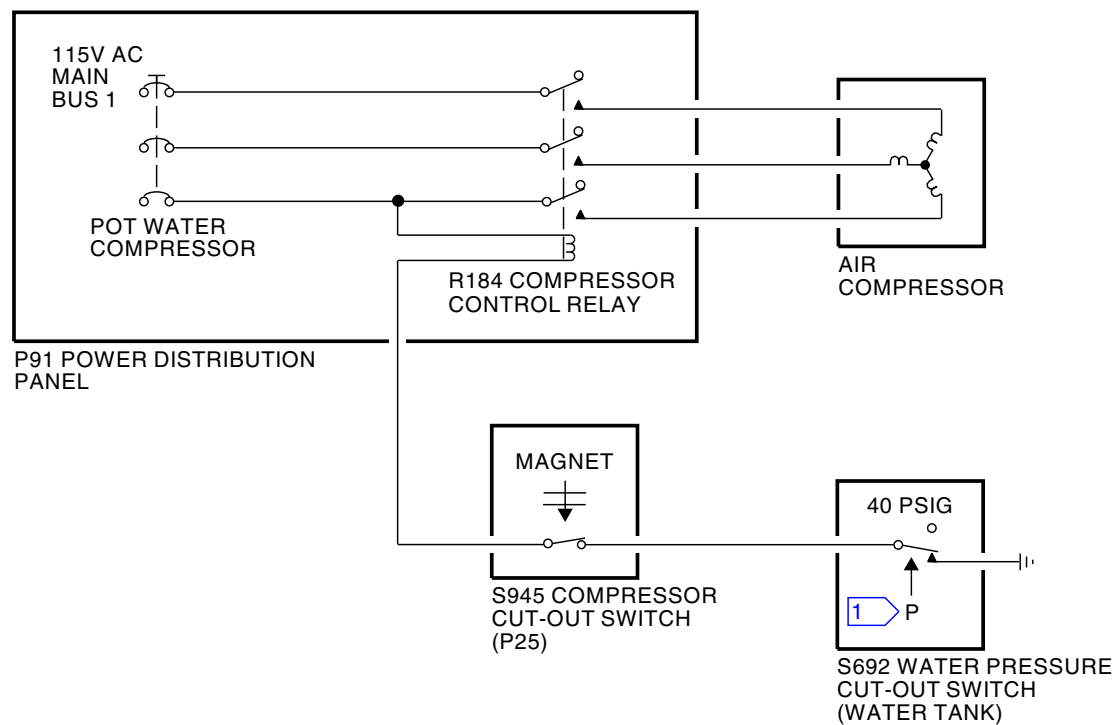

1 THE SWITCH CLOSSES WHEN THE PRESSURE IS 30 PSIG OR LESS AND OPENS WHEN THE PRESSURE IS 40 PSIG OR MORE.

M87484 S0004631393_V2

WATER/WASTE - WATER TANK PRESSURIZATION - AIR COMPRESSOR - FUNCTIONAL DESCRIPTION

38-42-00

Page 17
Jun 15/2022

38-42-00-009

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WATER/WASTE - WATER TANK PRESSURIZATION - FUNCTIONAL DESCRIPTION

General

The water tank pressurization system uses pressurized air from the pneumatic system or the air compressor to pressurize the water tank.

Pneumatic System

The pneumatic system supplies pressurized air to the water tank when the pneumatic system is on.

The pneumatic system supply line gets air from a tap on the pneumatic manifold forward of the APU check valve.

An in-line air filter cleans the air in the pneumatic system supply line.

A pressure regulator controls the pneumatic system supply line pressure to a maximum of 35 psig (2.5 kg/cm²).

Air Compressor

The air compressor supplies pressurized air to the water tank when the pneumatic system is off and these conditions are true:

- Pressure in the water tank is less than 30 psig (2.1 kg/cm²) (water pressure cut-out switch is closed)
- Water service panel door is closed (compressor cut-out switch is closed)
- 115v AC main bus 1 is on.

The air compressor gets air from a muffler above the ceiling of the cargo compartment. An air filter at the inlet of the air compressor cleans the air in the air compressor supply line.

The water pressure cut-out switch opens and stops the operation of the air compressor when the air pressure in the water tank increases to 40 psig (2.8 kg/cm²). When the pressure decreases to 30 psig (2.1 kg/cm²), the water pressure cut-out switch closes and the air compressor starts.

Training Information Point



WARNING

SEAL THE CARGO COMPARTMENT WITH THE LINING. OBEY THE INSTRUCTIONS IN THE SPECIFIED PROCEDURE WHEN YOU INSTALL THE LINING. IF YOU INSTALL THE LINING INCORRECTLY, THE SMOKE CAN GET INTO THE PASSENGER COMPARTMENT DURING A FIRE.

To get access to the water tank pressurization system components, you remove the cargo compartment lining. When you are done, you must replace and seal the cargo compartment lining.




WARNING

MAKE SURE THAT THERE IS NO PRESSURE IN THE PNEUMATIC PRESSURE LINES BEFORE YOU DISCONNECT THEM. THE STRONG PRESSURE/TEMPERATURE AIR IN THE LINES CAN CAUSE INJURY TO PERSONNEL.

Before you remove water tank pressurization system components, you must release the pressure from the system. You can open the fill/overflow valve to release the pressure from the pneumatic pressure lines. To open the fill/overflow valve, use the valve handle at the water service panel.

To stop operation of the air compressor, open the water service panel.

WATER/WASTE - WATER TANK PRESSURIZATION - FUNCTIONAL DESCRIPTION

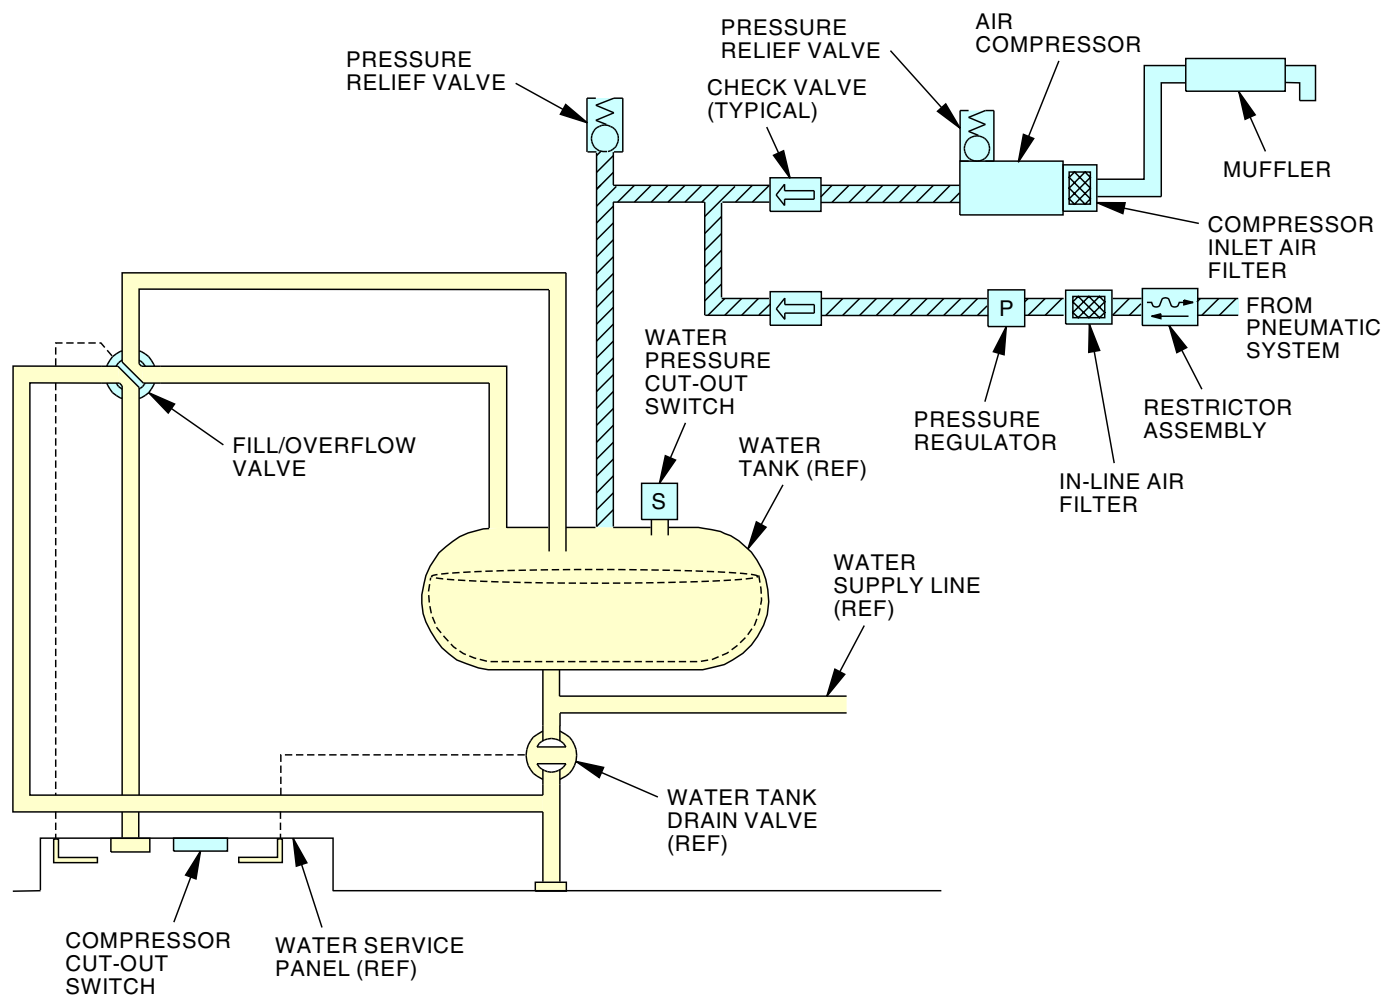

M87485 S0004631395_V3

WATER/WASTE - WATER TANK PRESSURIZATION - FUNCTIONAL DESCRIPTION

38-42-00-010

SIA ALL

EFFECTIVITY

38-42-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

