

CHAPTER

57

Wings

CHAPTER 57
WINGS

Subject/Page	Date	COC	Subject/Page	Date	COC
57-EFFECTIVE PAGES					
1	Sep 05/2018				
2	BLANK				
57-CONTENTS					
1	May 05/2015				
2	BLANK				
57-00-00					
1	May 05/2015				
2	May 05/2015				
3	Sep 05/2015				
4	May 05/2015				
5	Sep 05/2015				
6	BLANK				

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

57-EFFECTIVE PAGES

D633W101-ARO

ECCN 9E991 BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



CHAPTER 57
WINGS

<u>CH-SC-SU</u>	<u>SUBJECT</u>	<u>PAGE</u>	<u>EFFECT</u>
57-00-00	WINGS - TOP	2	ARO ALL
57-00-00	WINGS - BOTTOM	4	ARO ALL

57-CONTENTS

D633W101-ARO



THIS PAGE IS INTENTIONALLY LEFT BLANK

57-00-00

D633W101-ARO

ECCN 9E991 BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details




WINGS - TOP

General

The wing has an aluminum structure and is covered by aluminum skin panels. These components attach to the wing structure:

- Engine pylon
- Flight control surfaces
- Wing tip.

ARO ALL	EFFECTIVITY
	D633W101-ARO

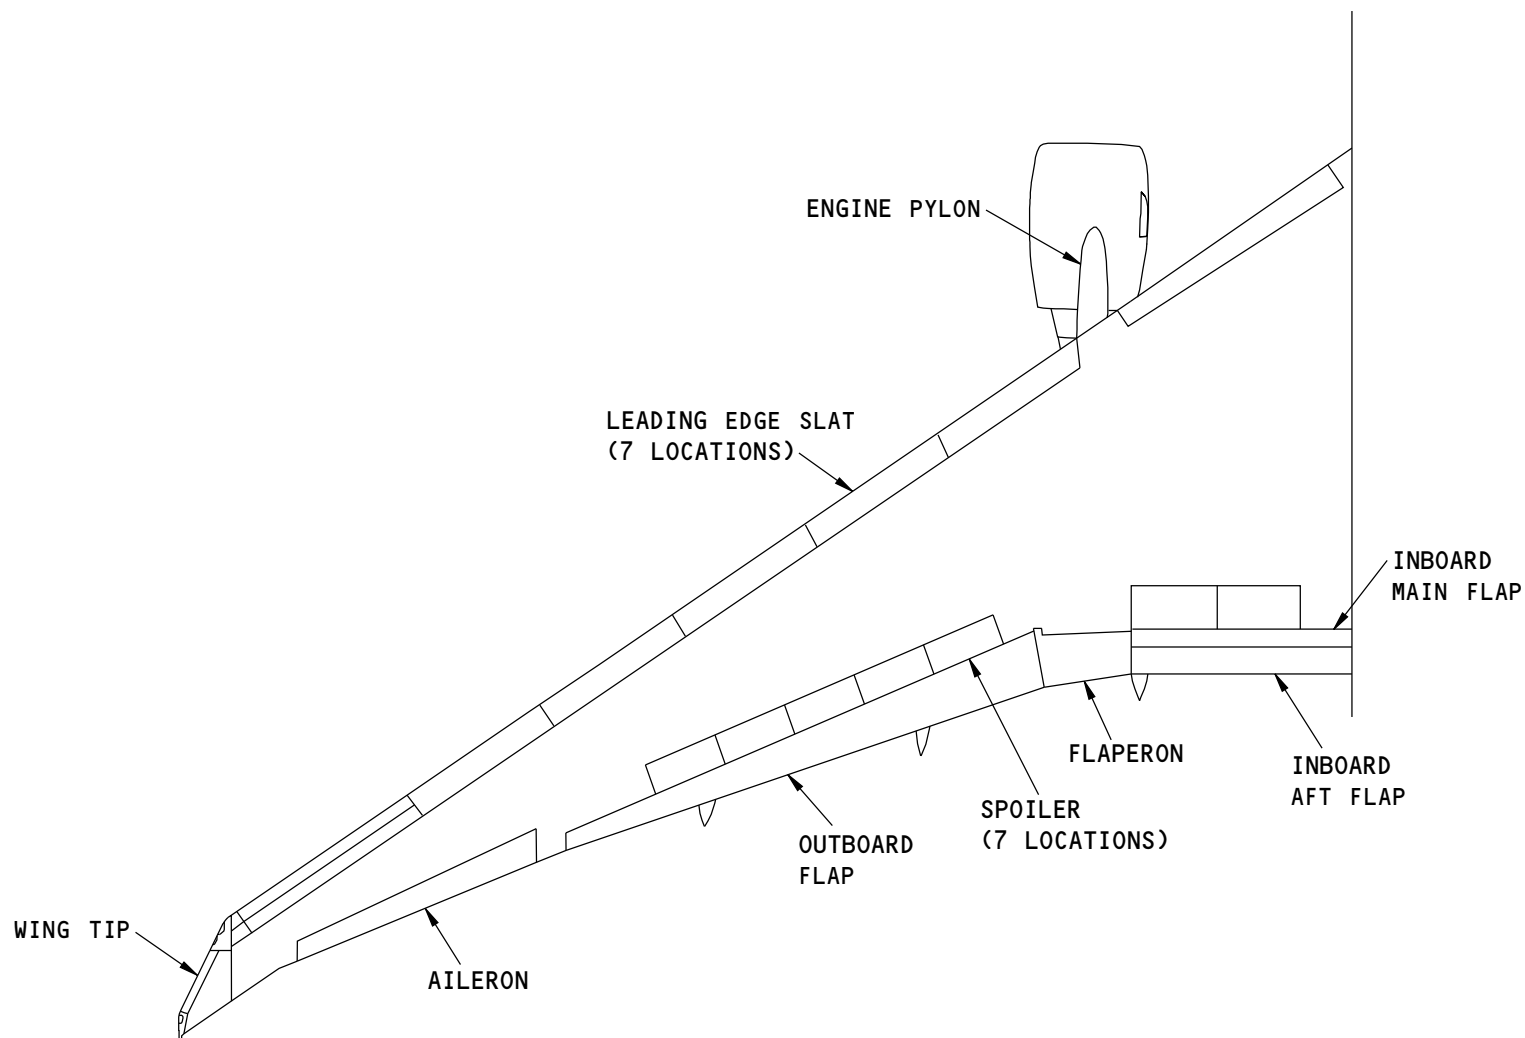

WINGS - TOP

N78135 S0000110929_V2

57-00-00

57-00-00-001

ARO ALL	EFFECTIVITY
	D633W101-ARO

**WINGS - BOTTOM****General**

The wing has an aluminum structure and is covered by aluminum skin panels.

These components attach to the wing structure:

- Engine pylon
- Landing gear strut (not shown)
- Flight control surfaces
- Fairings.


The fairings cover the flap drive units and the wing tip.

Doors

There are 68 fuel tank and wing access doors on the bottom of the wing. See the fuel storage section for more information on these doors (SECTION 28-10)

The wing landing gear door is on the bottom of the wing. See the main landing gear and doors section for more information on this door (SECTION 32-10)

ARO ALL	EFFECTIVITY
	D633W101-ARO

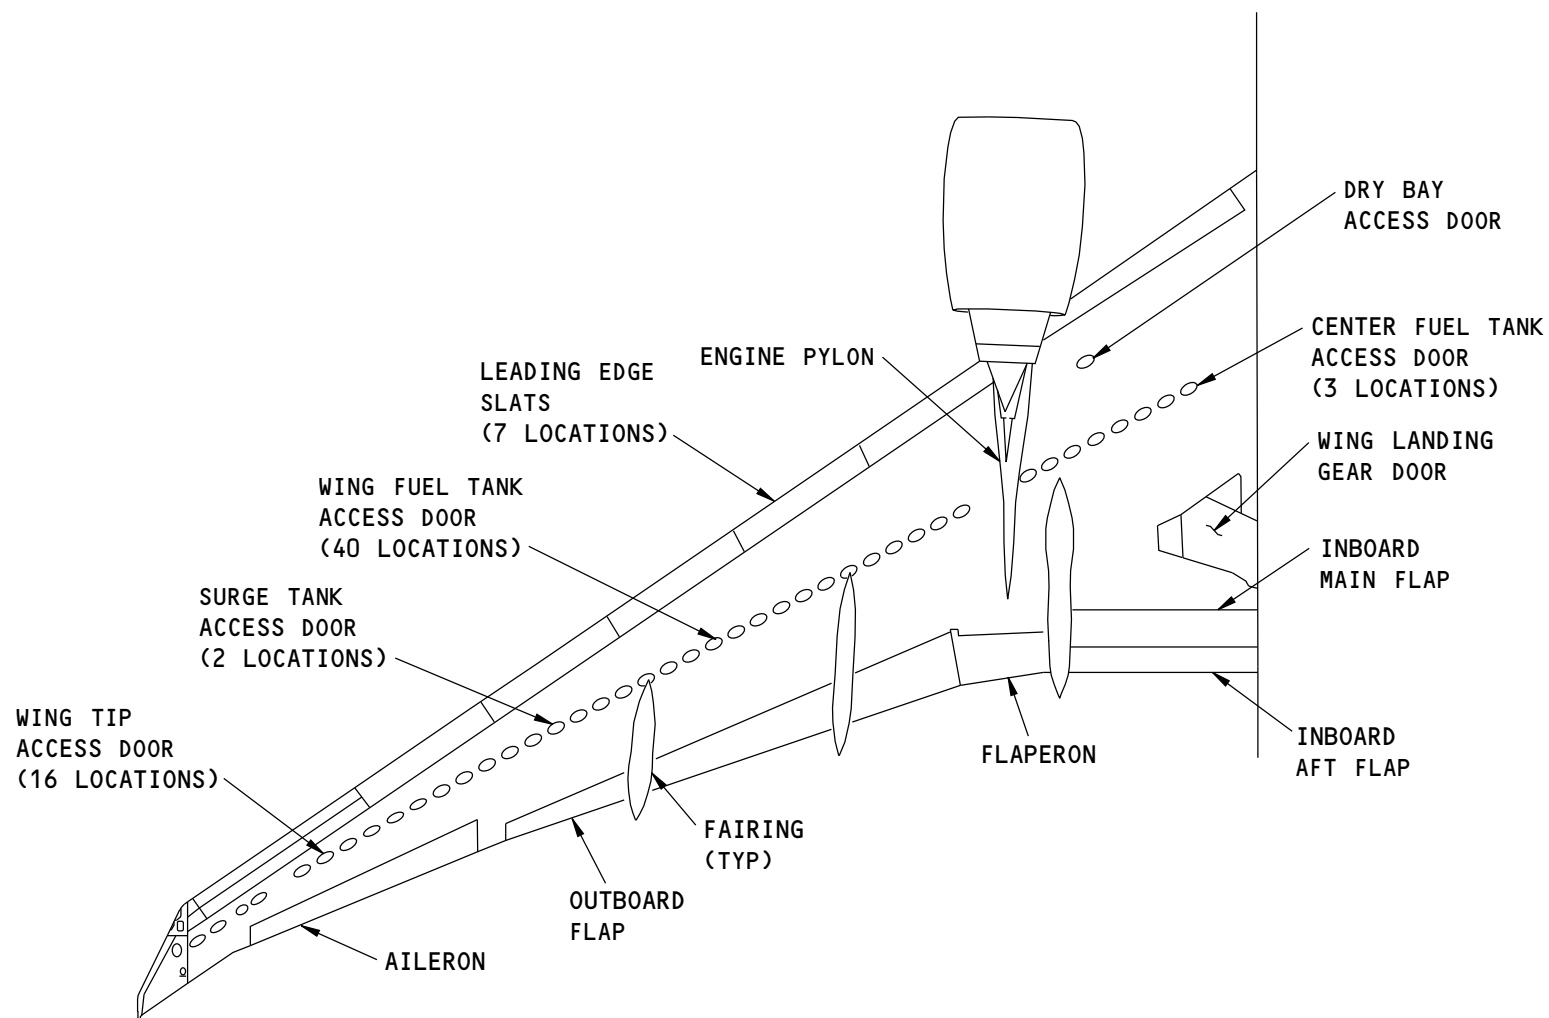

WINGS - BOTTOM

N78357 S0000110957_V2

57-00-00

ARO ALL EFFECTIVITY

D633W101-ARO

ECCN 9E991 BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

