

CHAPTER

06

**DIMENSIONS AND
AREAS**



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

CHAPTER 06
DIMENSIONS AND AREAS

Subject/Page	Date	COC	Subject/Page	Date	COC	Subject/Page	Date	COC
06-EFFECTIVE PAGES			06-30-00			06-41-00 (cont)		
1 thru 2	Sep 15/2023		201	Sep 15/2021		212	May 15/2022	
06-CONTENTS			202	Sep 15/2021		213	May 15/2022	
1	Sep 15/2021		203	Sep 15/2021		214	Sep 15/2021	
2	Sep 15/2021		204	Sep 15/2021		215	Sep 15/2021	
3	Sep 15/2021		205	Sep 15/2021		216	Sep 15/2021	
4	BLANK		206	Sep 15/2021		217	May 15/2022	
06-10-00			207	Sep 15/2021		218	BLANK	
R 201	Sep 15/2023		208	Sep 15/2021		06-42-00		
O 202	Sep 15/2023		209	Sep 15/2021		201	Jan 15/2023	
O 203	Sep 15/2023		210	Sep 15/2021		202	Sep 15/2021	
204	Sep 15/2021		211	Sep 15/2021		203	Sep 15/2021	
R 205	Sep 15/2023		212	Sep 15/2021		204	Sep 15/2021	
206	BLANK		213	Sep 15/2021		205	Sep 15/2021	
06-21-00			214	Sep 15/2021		206	Sep 15/2021	
201	May 15/2022		215	Sep 15/2021		207	Sep 15/2021	
202	Sep 15/2021		216	Sep 15/2021		208	Sep 15/2021	
203	Sep 15/2021		217	Sep 15/2021		209	Sep 15/2021	
204	May 15/2022		218	Sep 15/2021		210	Sep 15/2021	
205	May 15/2022		219	Sep 15/2021		211	Sep 15/2021	
206	May 15/2022		220	Sep 15/2021		R 212	Sep 15/2023	
207	Sep 15/2021		221	Sep 15/2021		213	Sep 15/2021	
208	May 15/2022		222	Sep 15/2021		214	May 15/2023	
209	Sep 15/2021		223	Sep 15/2021		06-43-00		
210	May 15/2022		224	May 15/2022		201	Sep 15/2021	
06-22-00			06-41-00			202	Sep 15/2021	
201	Sep 15/2021		201	Sep 15/2021		203	Sep 15/2021	
202	Sep 15/2021		202	Jan 15/2023		204	Sep 15/2021	
06-23-00			203	Jan 15/2023		R 205	Sep 15/2023	
201	Sep 15/2021		204	May 15/2022		206	Sep 15/2021	
202	Sep 15/2021		205	Sep 15/2021		207	Sep 15/2021	
06-24-00			206	Sep 15/2021		208	BLANK	
201	Sep 15/2021		207	Sep 15/2021		06-44-00		
202	Sep 15/2021		208	May 15/2022		201	Sep 15/2021	
06-25-00			209	Sep 15/2021		202	Sep 15/2021	
201	Sep 15/2021		210	Sep 15/2021		203	Sep 15/2021	
202	Sep 15/2021		211	Sep 15/2021		204	Sep 15/2021	
						205	Sep 15/2021	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

06-EFFECTIVE PAGES



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

CHAPTER 06
DIMENSIONS AND AREAS

Subject/Page	Date	COC	Subject/Page	Date	COC	Subject/Page	Date	COC
06-44-00 (cont)								
206	Sep 15/2021							
207	Sep 15/2021							
208	Sep 15/2021							
209	Sep 15/2021							
210	Sep 15/2021							
211	Sep 15/2021							
212	Sep 15/2021							
213	Sep 15/2021							
214	Sep 15/2021							
215	Sep 15/2021							
216	Sep 15/2021							
217	Sep 15/2021							
218	Sep 15/2021							
219	Sep 15/2021							
220	Sep 15/2021							
221	Sep 15/2021							
222	Sep 15/2021							
223	Sep 15/2021							
224	Sep 15/2021							
225	Sep 15/2021							
226	Sep 15/2021							
227	Sep 15/2021							
228	Sep 15/2021							
229	Sep 15/2021							
230	Sep 15/2021							
06-46-00								
R 201	Sep 15/2023							
202	Sep 15/2021							
203	Sep 15/2021							
204	Sep 15/2021							
205	Sep 15/2021							
206	Sep 15/2021							
207	Sep 15/2021							
208	Sep 15/2021							

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

06-EFFECTIVE PAGES



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

CHAPTER 06
DIMENSIONS AND AREAS

<u>SUBJECT</u>	<u>CHAPTER SECTION SUBJECT</u>	<u>CONF</u>	<u>PAGE</u>	<u>EFFECT</u>
<u>PRINCIPAL DIMENSIONS AND AREAS - MAINTENANCE PRACTICES</u>	06-10-00		201	SIA ALL
Principal Dimensions and Areas TASK 06-10-00-800-801			201	SIA ALL
<u>FUSELAGE STATION DIAGRAM - MAINTENANCE PRACTICES</u>	06-21-00		201	SIA ALL
Fuselage Station Diagram, Section 41 TASK 06-21-00-800-801			201	SIA ALL
Fuselage Station Diagrams, Sections 43, 44, and 46 TASK 06-21-00-800-802			203	SIA ALL
Fuselage Station Diagram, Section 47 TASK 06-21-00-800-803			207	SIA ALL
Fuselage Station Diagram, Section 48 TASK 06-21-00-800-804			209	SIA ALL
<u>VERTICAL FIN AND RUDDER STATION DIAGRAM - MAINTENANCE PRACTICES</u>	06-22-00		201	SIA ALL
Vertical Fin and Rudder Station Diagram TASK 06-22-00-800-801			201	SIA ALL
<u>HORIZONTAL STABILIZER AND ELEVATOR STATION DIAGRAM - MAINTENANCE PRACTICES</u>	06-23-00		201	SIA ALL
Horizontal Stabilizer and Elevator Station Diagram TASK 06-23-00-800-801			201	SIA ALL
<u>WING STATION DIAGRAM - MAINTENANCE PRACTICES</u>	06-24-00		201	SIA ALL
Wing Station Diagram TASK 06-24-00-800-801			201	SIA ALL
<u>ENGINE AND NACELLE STATION DIAGRAM - MAINTENANCE PRACTICES</u>	06-25-00		201	SIA ALL
Engine and Nacelle Station Diagram TASK 06-25-00-800-801			201	SIA ALL
<u>ZONE DIAGRAMS - MAINTENANCE PRACTICES</u>	06-30-00		201	SIA ALL
Major Zones TASK 06-30-00-800-801			201	SIA ALL

06-CONTENTS



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

CHAPTER 06
DIMENSIONS AND AREAS

CHAPTER SECTION		PAGE	EFFECT
SUBJECT	SUBJECT		
Major Zone 100 - Lower Half of the Fuselage TASK 06-30-00-800-802		204	SIA ALL
Major Zone 200 - Upper Half of the Fuselage TASK 06-30-00-800-803		207	SIA ALL
Major Zone 300 - Empennage and Body Section 48 TASK 06-30-00-800-804		209	SIA ALL
Major Zone 400 - Power Plants and Nacelle Struts TASK 06-30-00-800-805		213	SIA ALL
Major Zone 500 - Left Wing TASK 06-30-00-800-806		216	SIA ALL
Major Zone 600 - Right Wing TASK 06-30-00-800-807		217	SIA ALL
Major Zone 700 - Landing Gear and Landing Gear Doors TASK 06-30-00-800-808		220	SIA ALL
Major Zone 800 - Passenger and Cargo Compartment Doors TASK 06-30-00-800-809		223	SIA ALL
FUSELAGE (MAJOR ZONES 100 AND 200) ACCESS	06-41-00	201	SIA ALL
<u>DOORS AND PANELS - MAINTENANCE</u>			
<u>PRACTICES</u>			
Finding an Access Door or Panel on the Lower Half of the Fuselage TASK 06-41-00-800-801		201	SIA ALL
Finding an Access Door or Panel on the Upper Half of the Fuselage TASK 06-41-00-800-802		204	SIA ALL
Fuselage Major Zones 100, 200 and 800 - Sections 43 and 44 TASK 06-41-00-800-803		211	SIA ALL
Fuselage Major Zones 100, 200 and 800 - Section 47 TASK 06-41-00-800-804		214	SIA ALL

06-CONTENTS



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

CHAPTER 06
DIMENSIONS AND AREAS

<u>SUBJECT</u>	<u>CHAPTER SECTION SUBJECT</u>	<u>CONF</u>	<u>PAGE</u>	<u>EFFECT</u>
Fuselage Major Zones 100, 200 and 800 - Section 46 TASK 06-41-00-800-805			216	SIA ALL
<u>EMPENNAGE (MAJOR ZONE 300) ACCESS DOORS AND PANELS - MAINTENANCE PRACTICES</u>	06-42-00		201	SIA ALL
Finding an Access Door or Panel in the Empennage TASK 06-42-00-800-801			201	SIA ALL
<u>ENGINE AND NACELLE STRUT (MAJOR ZONE 400) ACCESS DOORS AND PANELS - MAINTENANCE PRACTICES</u>	06-43-00		201	SIA ALL
Engine and Nacelle Strut Access Doors and Panels TASK 06-43-00-800-801			201	SIA ALL
<u>WINGS (MAJOR ZONES 500 AND 600) ACCESS DOORS AND PANELS - MAINTENANCE PRACTICES</u>	06-44-00		201	SIA ALL
Finding an Access Door or Panel on the Wings TASK 06-44-00-800-801			201	SIA ALL
<u>PASSENGER AND CARGO COMPARTMENT DOORS (MAJOR ZONE 800) ACCESS DOORS AND PANELS - MAINTENANCE PRACTICES</u>	06-46-00		201	SIA ALL
Passenger and Cargo Compartment Access Doors and Panels TASK 06-46-00-800-801			201	SIA ALL

06-CONTENTS



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

PRINCIPAL DIMENSIONS AND AREAS - MAINTENANCE PRACTICES

1. General

- A. This procedure has these tasks:
- (1) Principal dimensions and areas

TASK 06-10-00-800-801

2. Principal Dimensions and Areas

A. **General**

- (1) This task contains dimensional data for the 737 MAX airplane.

NOTE: For additional dimensional data, refer to the applicable Structural Repair Manual and the 737 MAX Maintenance Facility and Equipment Planning Document.

- (2) Some dimensions may change with the center of gravity location and the airplane loads. Dimensions provided in this task are nominal values.

B. **Location Zones**

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage
300	Empennage
400	Powerplant and Nacelle Struts
500	Left Wing
600	Right Wing

C. **Dimensions**

SUBTASK 06-10-00-220-001

- (1) 737-8 Airplane (Figure 201):

- (a) Height (to top of vertical stabilizer) - 40.35 ft (12.30 m).

NOTE: Reference only. Consult Airport/Facilities Planning Guide for minimum/maximum height values.

- (b) Length (nose to aft tip of horizontal stabilizer) - 129.50 ft (39.47 m).
 - (c) Width (winglet tip to winglet tip) - 117.83 ft (35.91 m).

SUBTASK 06-10-00-220-002

- (2) Engines:

- (a) Engine to Ground Distance

- 1) Minimum - 17 in. (0.43 m).
 - 2) Maximum - 21.4 in. (0.54 m).

- (b) Fuselage to engine distance (centerline of fuselage to centerline of engine) - 15.92 ft (4.85 m).

SUBTASK 06-10-00-220-003

- (3) Fuselage:

- (a) Ground to top of fuselage:

- 1) Minimum - 16.7 ft (5.09 m).
 - 2) Maximum - 18.08 ft (5.51 m).

- (b) Height (station 540 cross section):

EFFECTIVITY
SIA ALL

06-10-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Page 201
Sep 15/2023



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

- 1) Above body reference plane WL 208.1 (top of floor beam) - 8.2 ft (2.50 m).
- 2) Below body reference plane WL 208.1 (top of floor beam) - 4.97 ft (1.51 m).
- (c) Height to centerline of windows above body reference plane WL 208.1 (top of floor beam) - 3.17 ft (0.97 m).
- (d) Length (nose to tail end of body) - 128.33 ft (39.11 m).
- (e) Width - 12.33 ft (3.76 m).

SUBTASK 06-10-00-220-004

- (4) Landing Gear:
 - (a) Track - 18.75 ft (5.72 m).
 - (b) Nose landing gear offset - 13.42 ft (4.09 m).
 - (c) Wheelbase - 51.17 ft (15.60 m).

SUBTASK 06-10-00-220-005

- (5) Horizontal Stabilizer:
 - (a) Aspect ratio - 6.16.
 - (b) Span (projected) - 46.62 ft (14.21 m).
 - (c) Tip chord - 2.55 ft (0.78 m).
 - (d) Dihedral (stabilizer reference plane in relation to the body reference plane) - 7 degrees.
 - (e) Taper ratio - 0.203.
 - (f) Sweep (25 percent chord line) - 30 degrees.

SUBTASK 06-10-00-220-006

- (6) Vertical Stabilizer:
 - (a) Aspect ratio - 1.94.
 - (b) Height - 23.50 ft (7.16 m).
 - (c) Root chord - 19.05 ft (5.81 m).
 - (d) Taper ratio - 0.271.
 - (e) Sweep - 35 degrees.

SUBTASK 06-10-00-220-007

- (7) Wing:
 - (a) Aspect ratio - 9.45.
 - (b) Span
 - 1) 117.33 ft (35.76 m) (Unloaded)
 - 2) 117.75 ft (35.89 m) (Loaded)
 - (c) Root chord (at body centerline):
 - 1) Basic chord - 25.83 ft (7.87 m).
 - 2) Trapezoidal chord - 18.75 ft (5.72 m).
 - (d) Mean aerodynamic chord (basic wing only) - 13 ft (3.96 m).
 - (e) Tip chord - 4.1 ft (1.25 m).
 - (f) Dihedral (wing reference plane in relation to the body reference plane) - 6.00 degrees.
 - (g) Taper ratio:
 - 1) Tip chord/trapezoidal root chord - 0.219.

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-10-00

Page 202
Sep 15/2023



**737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL**

(h) Sweep (25 percent chord line) - 25.03 degrees.

SUBTASK 06-10-00-220-008

(8) Winglet:

(a) Height above ground (lower winglet blade tip):

- 1) Minimum - 9.26 ft (2.82 m).
- 2) Maximum - 10.27 ft (3.13 m).

(b) Height above ground (upper winglet blade tip):

- 1) Minimum - 18.35 ft (5.59 m).
- 2) Maximum - 19.90 ft (6.07 m).

D. Areas:

SUBTASK 06-10-00-220-009

(1) Horizontal stabilizer area - 352.8 ft² (32.78 m²).

SUBTASK 06-10-00-220-010

(2) Vertical stabilizer area -- 284.6 ft² (26.44 m²).

SUBTASK 06-10-00-220-011

(3) Wing basic area - 1341 ft² (124.58 m²).

———— **END OF TASK** ————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-10-00

Page 203
Sep 15/2023



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

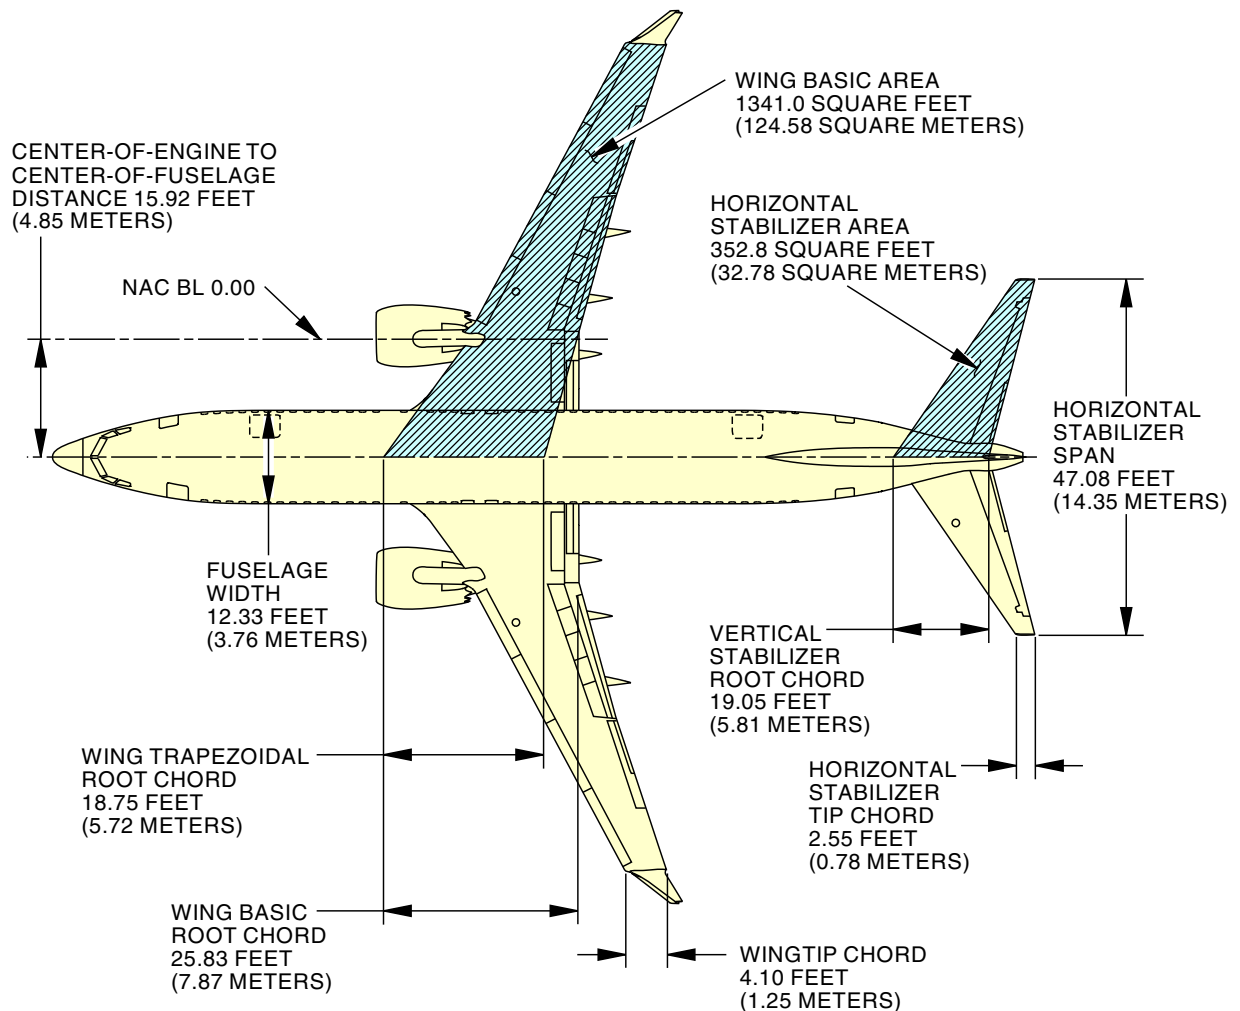

2451809 S0000569013_V2

Principal Dimensions and Areas
Figure 201/06-10-00-990-803 (Sheet 1 of 2)

EFFECTIVITY
SIA ALL


D633AM101-SIA

06-10-00

Page 204
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

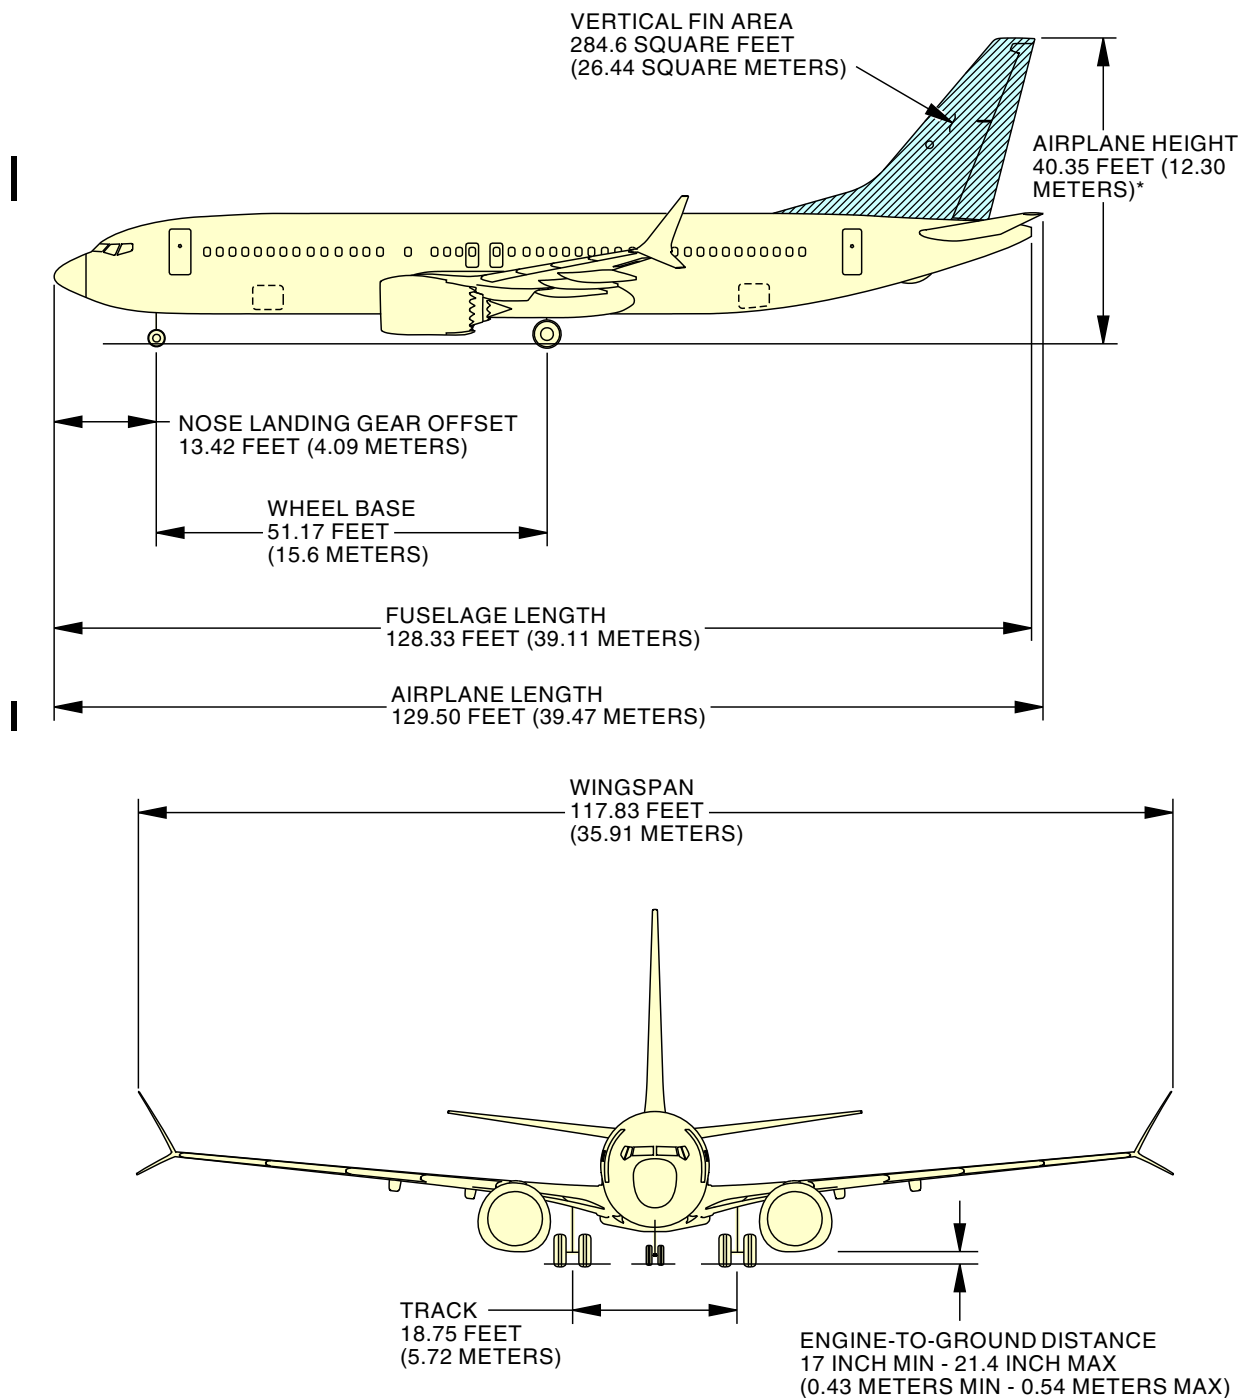

*REFERENCE ONLY. CONSULT AIRPORT/FACILITIES
PLANNING GUIDE FOR MINIMUM/MAXIMUM HEIGHT VALUES.

2451808 S0000569014_V4

Principal Dimensions and Areas
Figure 201/06-10-00-990-803 (Sheet 2 of 2)

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-10-00

Page 205
Sep 15/2023



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

FUSELAGE STATION DIAGRAM - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

- (1) Fuselage Station Diagram, Section 41
- (2) Fuselage Station Diagram, Sections 43, 44, and 46
- (3) Fuselage Station Diagram, Section 47
- (4) Fuselage Station Diagram, Section 48.

TASK 06-21-00-800-801

2. Fuselage Station Diagram, Section 41

(Figure 201)

A. **General**

- (1) The fuselage station numbering system is used to locate fuselage stations, components, features, and major fuselage structural openings in relation to a datum plane. The station number is the distance horizontally in inches from a fixed reference datum plane. The datum plane is perpendicular to the fuselage centerline and is found at station 130.0 in. (3.3 m) forward of the airplane nose.

B. **Location Zones**

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

————— **END OF TASK** —————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-21-00

Page 201
May 15/2022



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

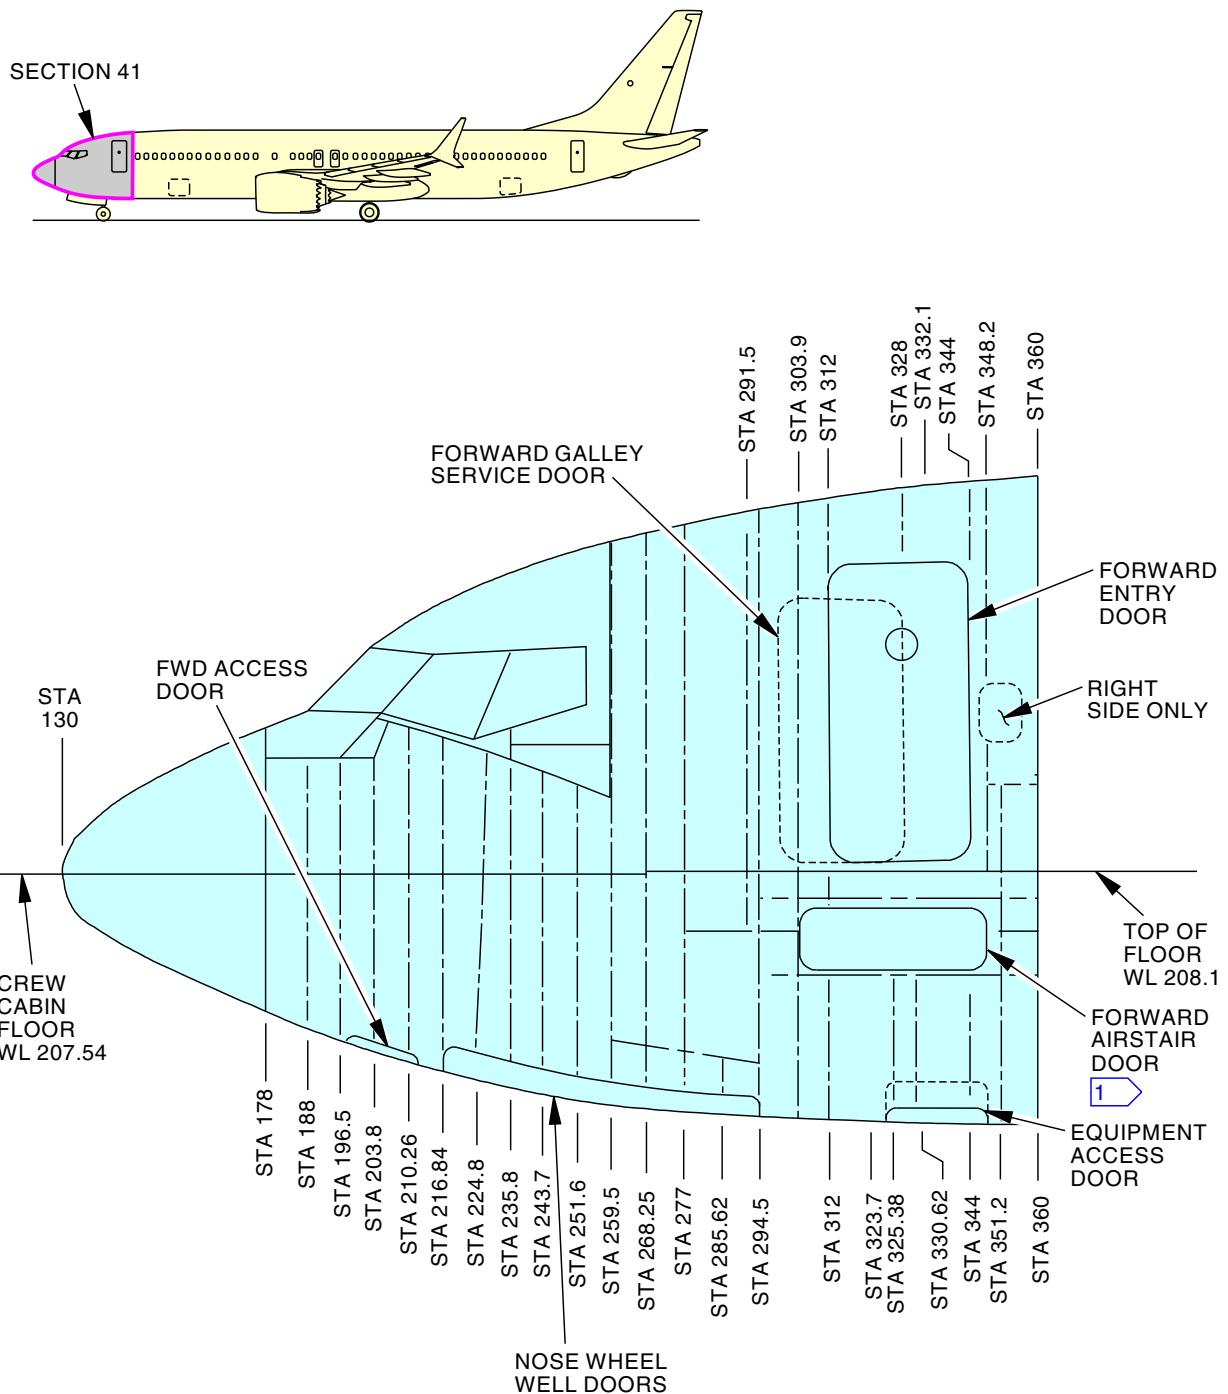

2410592 S00061525937_V2

Fuselage Station Diagram - Section 41
Figure 201/06-21-00-990-801

EFFECTIVITY
SIA ALL

D633AM101-SIA

06-21-00

Page 202
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-21-00-800-802

3. Fuselage Station Diagrams, Sections 43, 44, and 46

(Figure 202, Figure 203, Figure 204)

A. General

- (1) The fuselage station numbering system is used to locate fuselage stations, components, features, and major fuselage structural openings in relation to a datum plane. The station number is the distance horizontally in inches from a fixed reference datum plane. The datum plane is perpendicular to the fuselage centerline and is found at station 130.0 in. (3.3 m) forward of the airplane nose.

———— **END OF TASK** ————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-21-00

Page 203
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

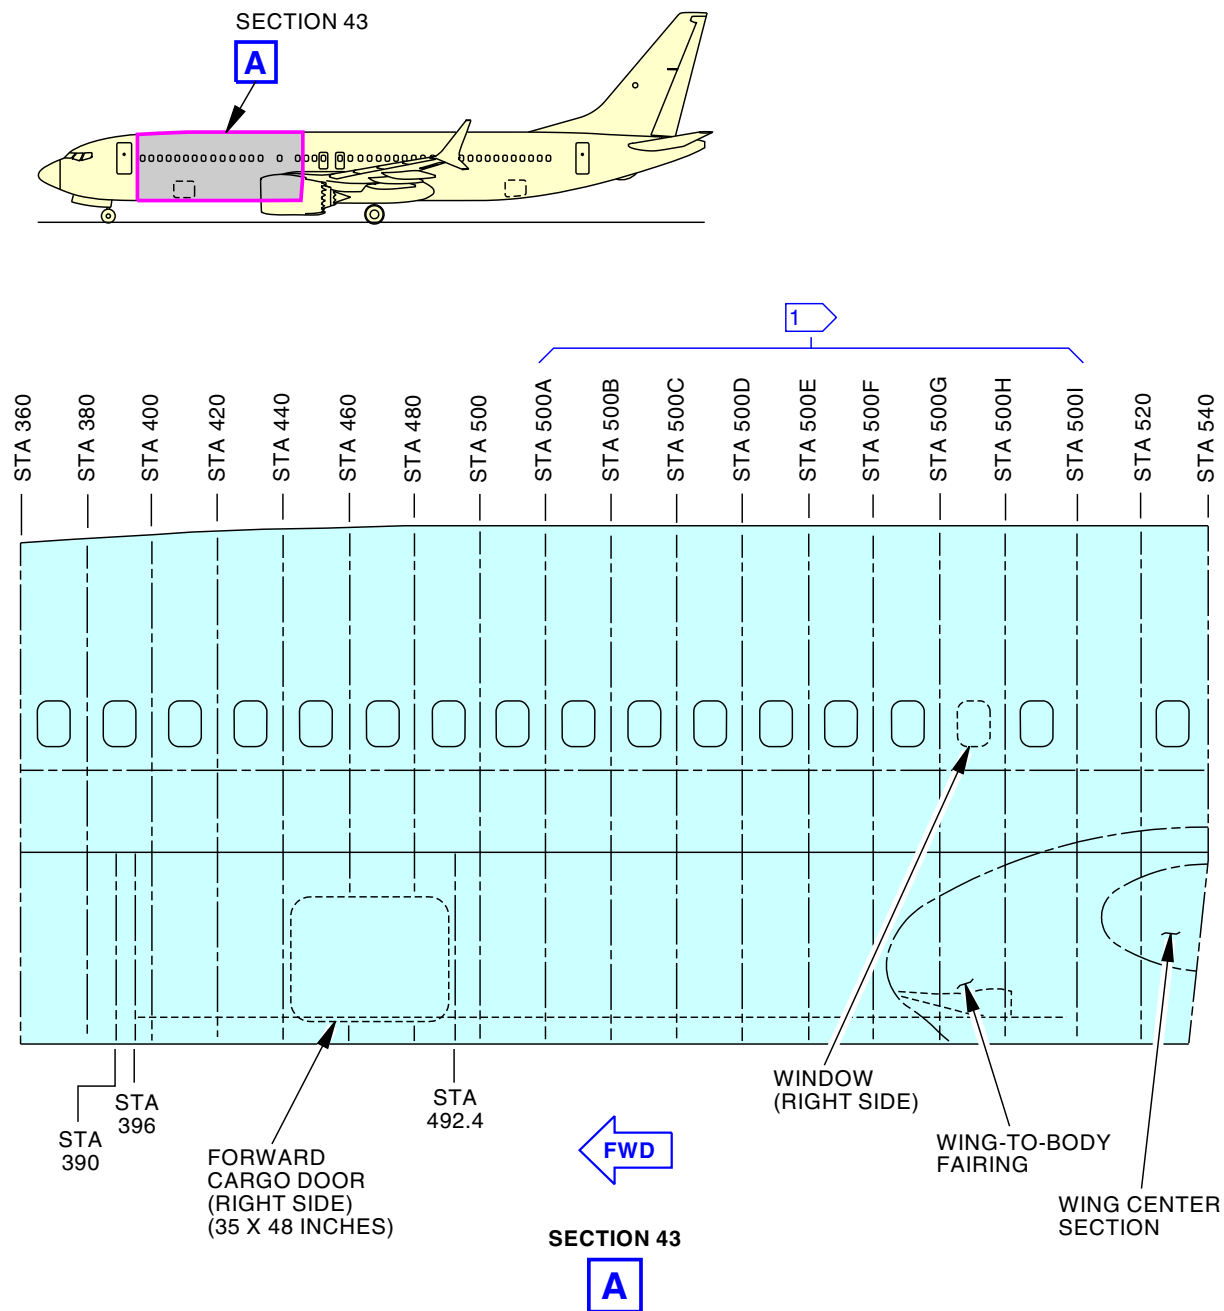

1 ALL BODY SECTION NUMBERS IN THIS AREA ARE IN ADDITION TO THE STATION NUMBERS THAT ARE INDEXED FROM THE STRUCTURAL FRAME CENTERLINE THAT ARE FORWARD OF THE LOCATIONS. EXAMPLE: 4.0 IN. AFT OF BODY STATION 727A WILL BE BODY STATION 727A + 4.0 IN.

2410593 S00061525939_V2

Fuselage Station Diagram - Section 43
Figure 202/06-21-00-990-802

EFFECTIVITY
SIA ALL



D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-21-00



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

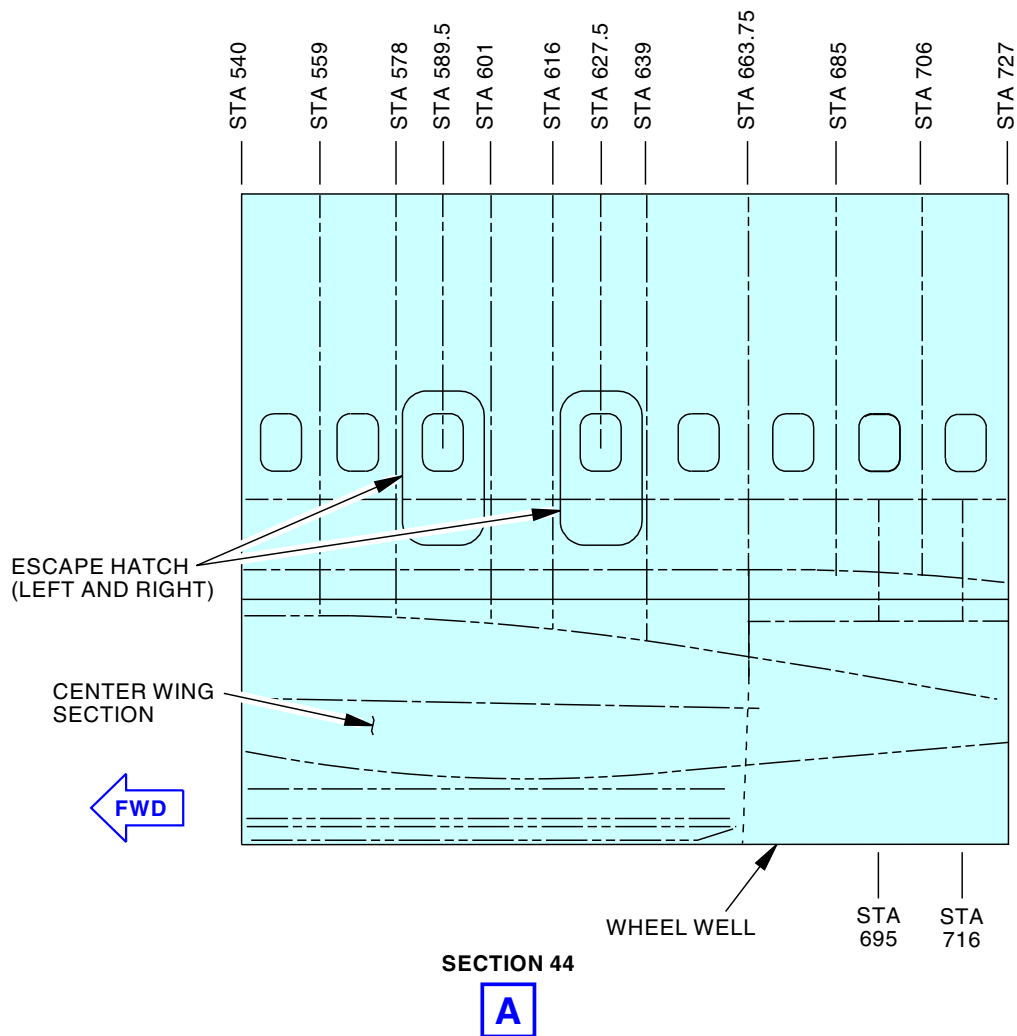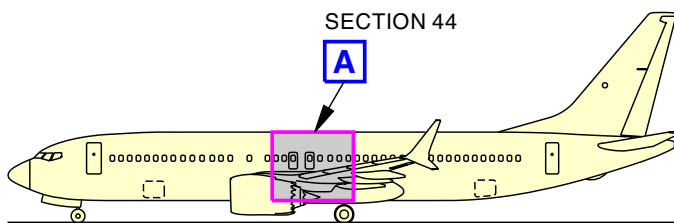

2410594 S00061525940_V2

Fuselage Station Diagram - Section 44
Figure 203/06-21-00-990-803

EFFECTIVITY
SIA ALL

D633AM101-SIA



ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-21-00

Page 205
May 15/2022



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

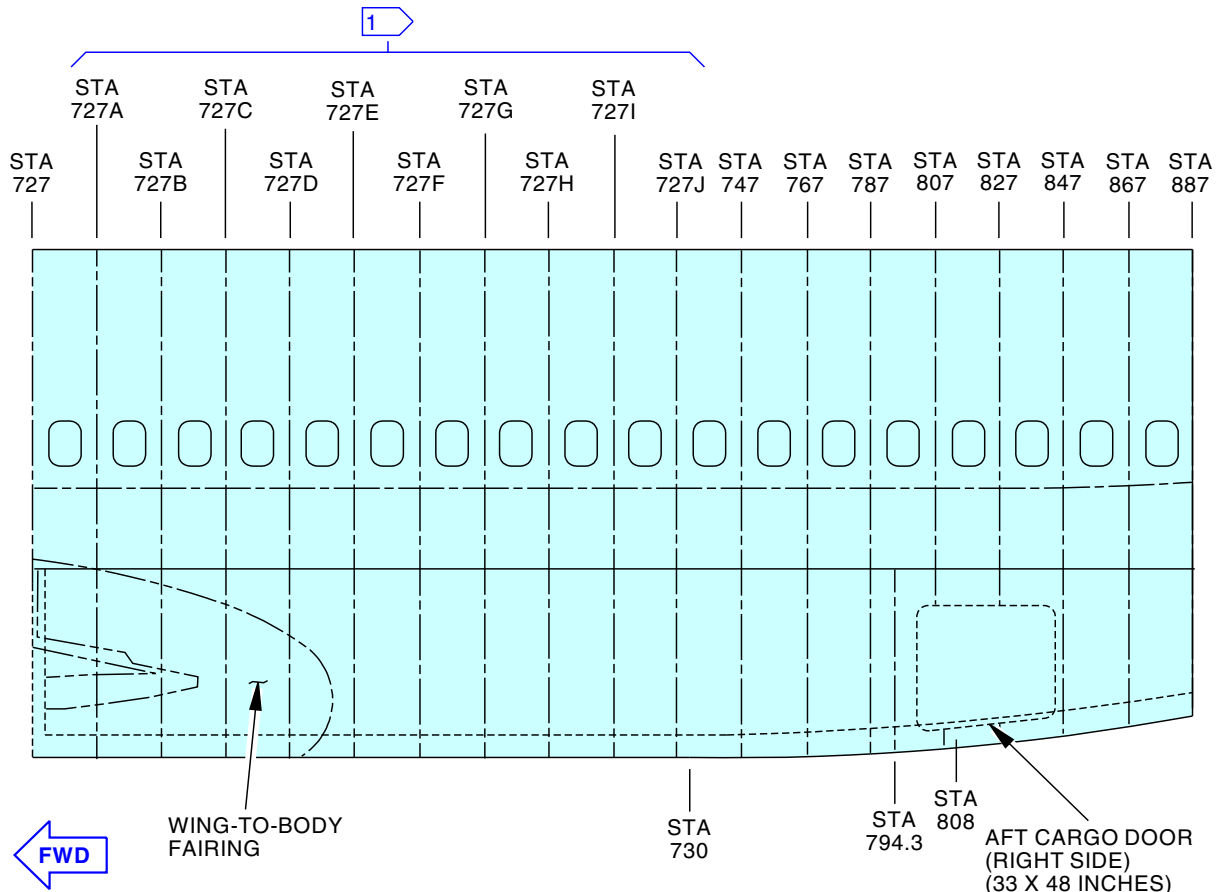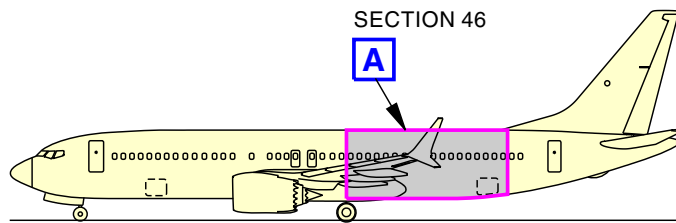

SECTION 46



1 ALL BODY SECTION NUMBERS IN THIS AREA ARE IN ADDITION TO THE STATION NUMBERS THAT ARE INDEXED FROM THE STRUCTURAL FRAME CENTERLINE THAT ARE FORWARD OF THE LOCATIONS. EXAMPLE: 4.0 IN. AFT OF BODY STATION 727A WILL BE BODY STATION 727A + 4.0 IN.

2410595 S00061525941_V2

Fuselage Station Diagram - Section 46
Figure 204/06-21-00-990-804

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-21-00

Page 206
May 15/2022



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-21-00-800-803

4. Fuselage Station Diagram, Section 47

(Figure 205)

A. General

- (1) The fuselage station numbering system is used to locate fuselage stations, components, features, and major fuselage structural openings in relation to a datum plane. The station number is the distance horizontally in inches from a fixed reference datum plane. The datum plane is perpendicular to the fuselage centerline and is found at station 130.0 in. (3.3 m) forward of the airplane nose.

————— END OF TASK —————

EFFECTIVITY
SIA ALL

D633AM101-SIA



ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-21-00

Page 207
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

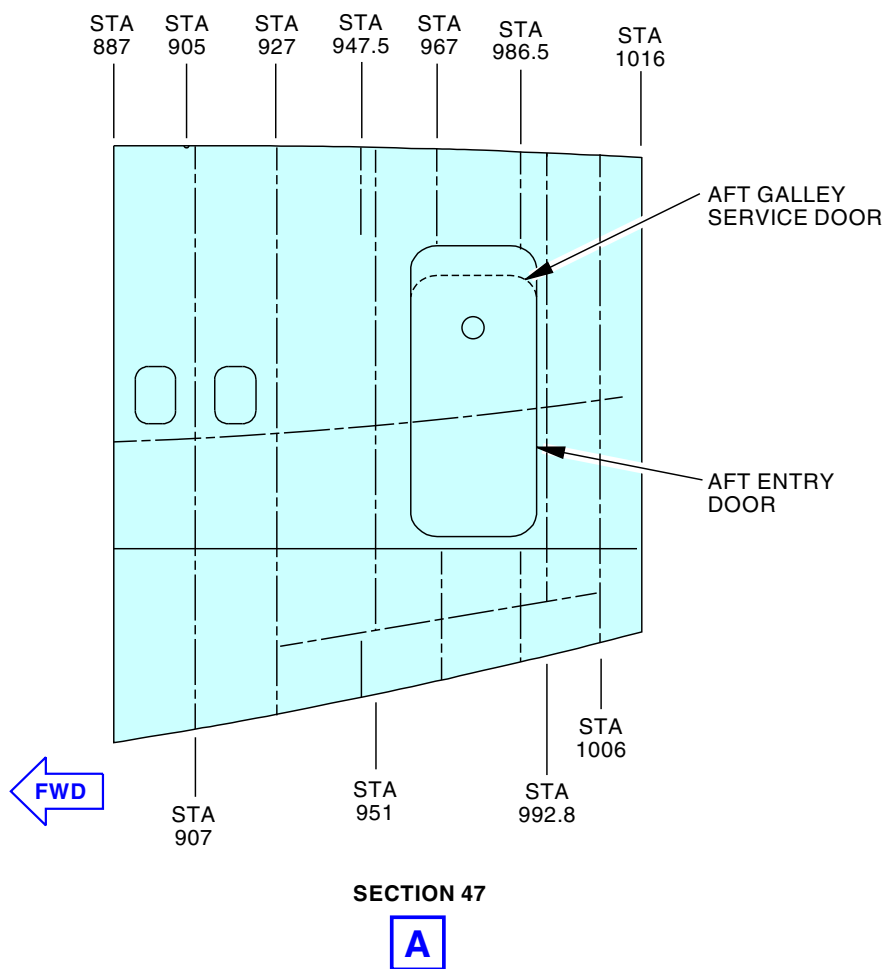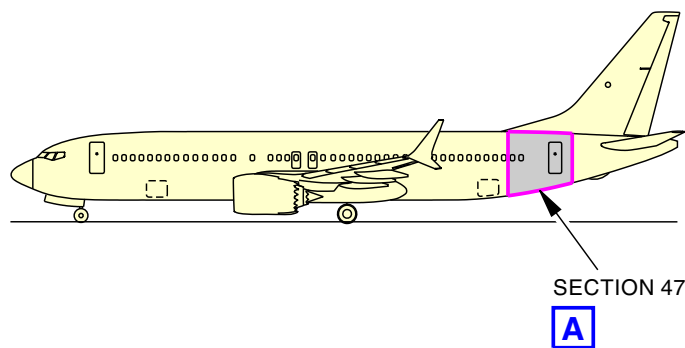

2410596 S00061525943_V2

Fuselage Station Diagram - Section 47
Figure 205/06-21-00-990-805

EFFECTIVITY	
	SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-21-00

Page 208
May 15/2022



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-21-00-800-804

5. Fuselage Station Diagram, Section 48

(Figure 206)

A. General

- (1) The fuselage station numbering system is used to locate fuselage stations, components, features, and major fuselage structural openings in relation to a datum plane. The station number is the distance horizontally in inches from a fixed reference datum plane. The datum plane is perpendicular to the fuselage centerline and is found at station 130.0 in. (3.3 m) forward of the airplane nose.

————— END OF TASK —————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-21-00

Page 209
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

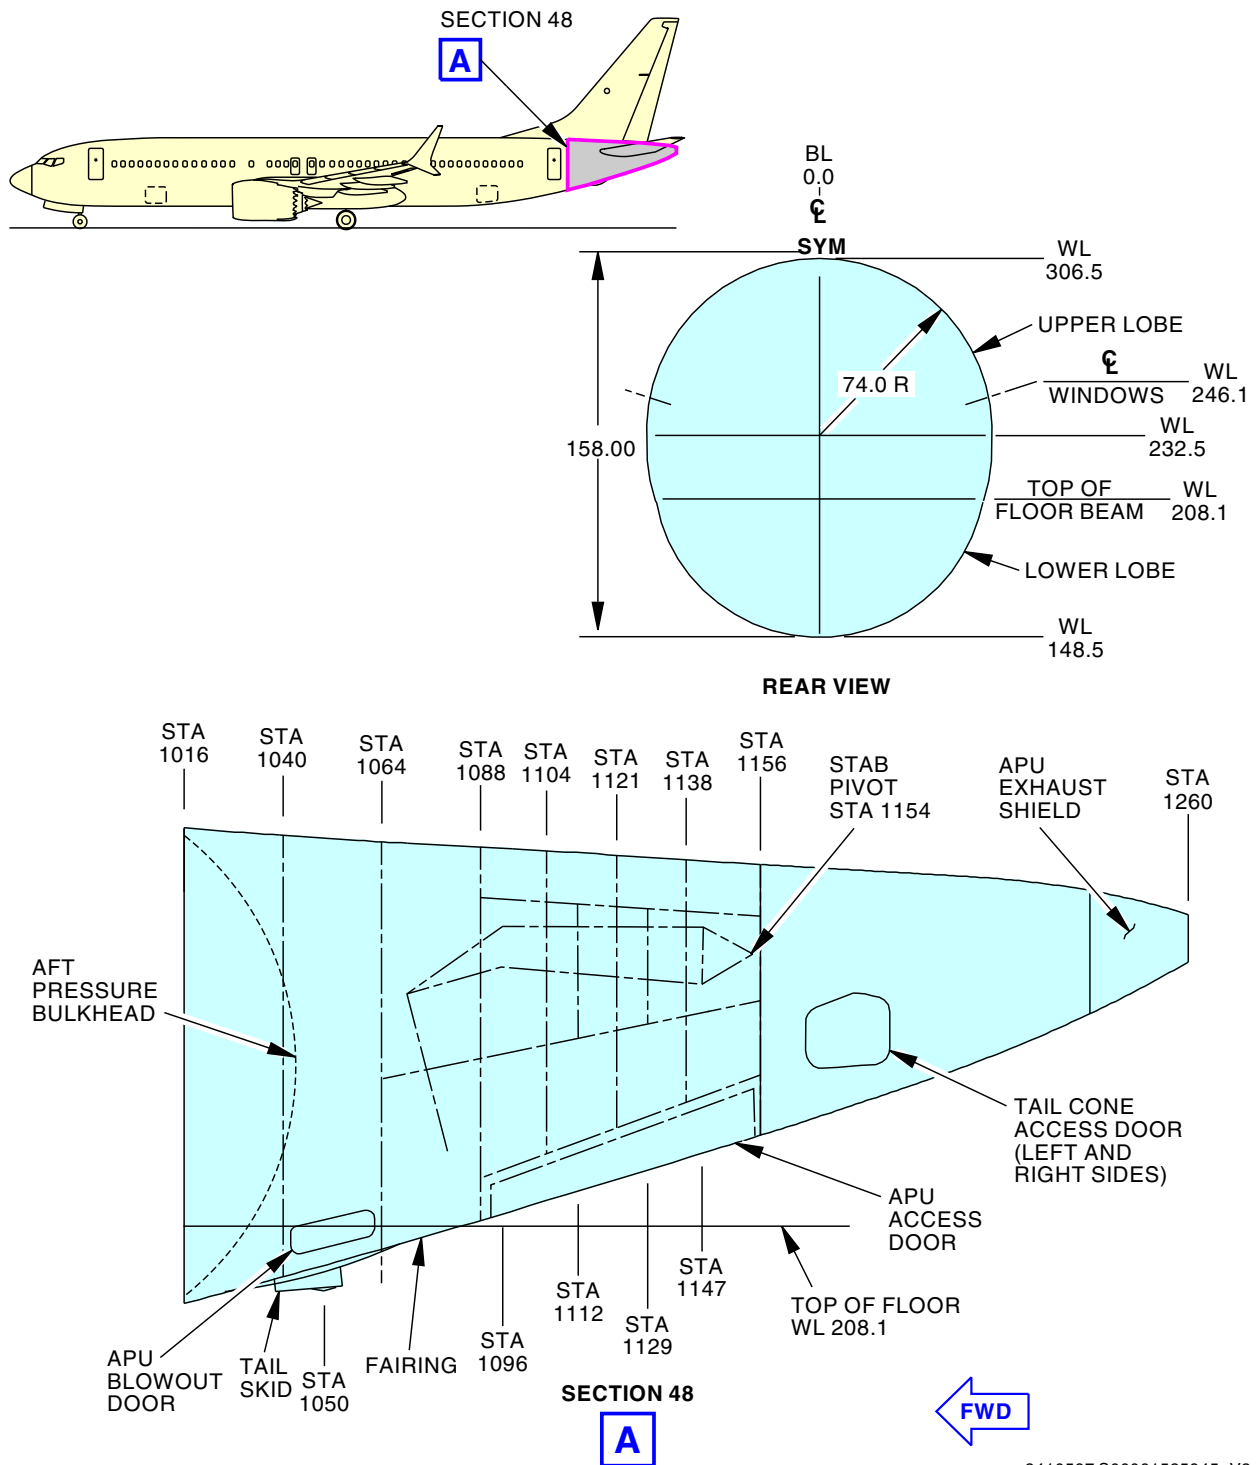

Fuselage Station Diagram - Section 48
Figure 206/06-21-00-990-806

EFFECTIVITY
SIA ALL

D633AM101-SIA

06-21-00

Page 210
May 15/2022



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

VERTICAL FIN AND RUDDER STATION DIAGRAM - MAINTENANCE PRACTICES

1. General

A. This section has this task:

- (1) Vertical Fin and Rudder Station Diagram

TASK 06-22-00-800-801

2. Vertical Fin and Rudder Station Diagram

(Figure 201)

A. **General**

- (1) The vertical fin and rudder station diagram shows the locations of the structural components and features on the vertical fin and rudder.
- (2) The diagram station identifications are as follows:
 - (a) Vertical Fin Station (FIN STA)
 - (b) Rudder Station (RUD STA)

B. **Location Zones**

Zone	Area
300	Empennage

————— END OF TASK —————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-22-00

Page 201
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

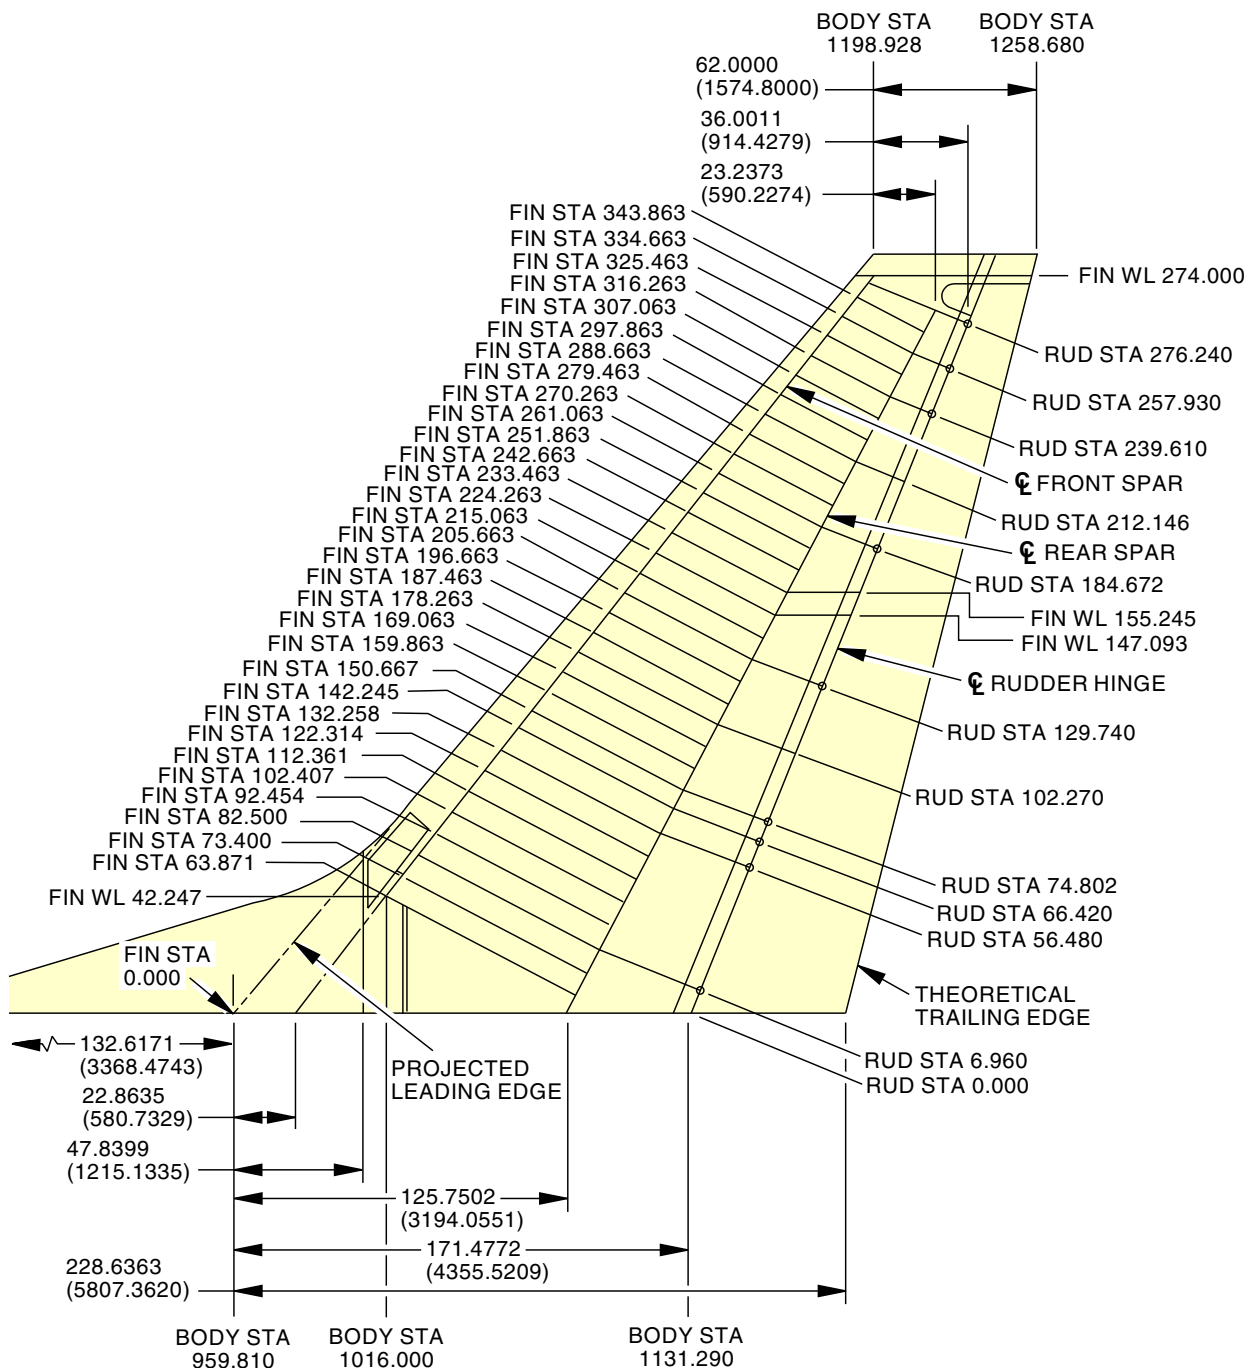

NOTE:

ALL DIMENSIONS ARE IN INCHES (mm).

2410598 S00061525950_V1

Vertical Fin and Rudder Station Diagram
Figure 201/06-22-00-990-801

EFFECTIVITY
SIA ALL

06-22-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

HORIZONTAL STABILIZER AND ELEVATOR STATION DIAGRAM - MAINTENANCE PRACTICES

1. General

A. This procedure has this task:

- (1) Horizontal Stabilizer and Elevator Station Diagram.

TASK 06-23-00-800-801

2. Horizontal Stabilizer and Elevator Station Diagram

(Figure 201)

A. General

- (1) The horizontal stabilizer and elevator station diagram shows the locations of the structural components and features on the horizontal stabilizer and elevator.
- (2) The diagram station identifications are as follows:
- (a) Elevator Station (EL STA)
- (b) Stabilizer Station (STAB STA)

B. Location Zones

Zone	Area
300	Empennage

————— END OF TASK —————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-23-00

Page 201
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

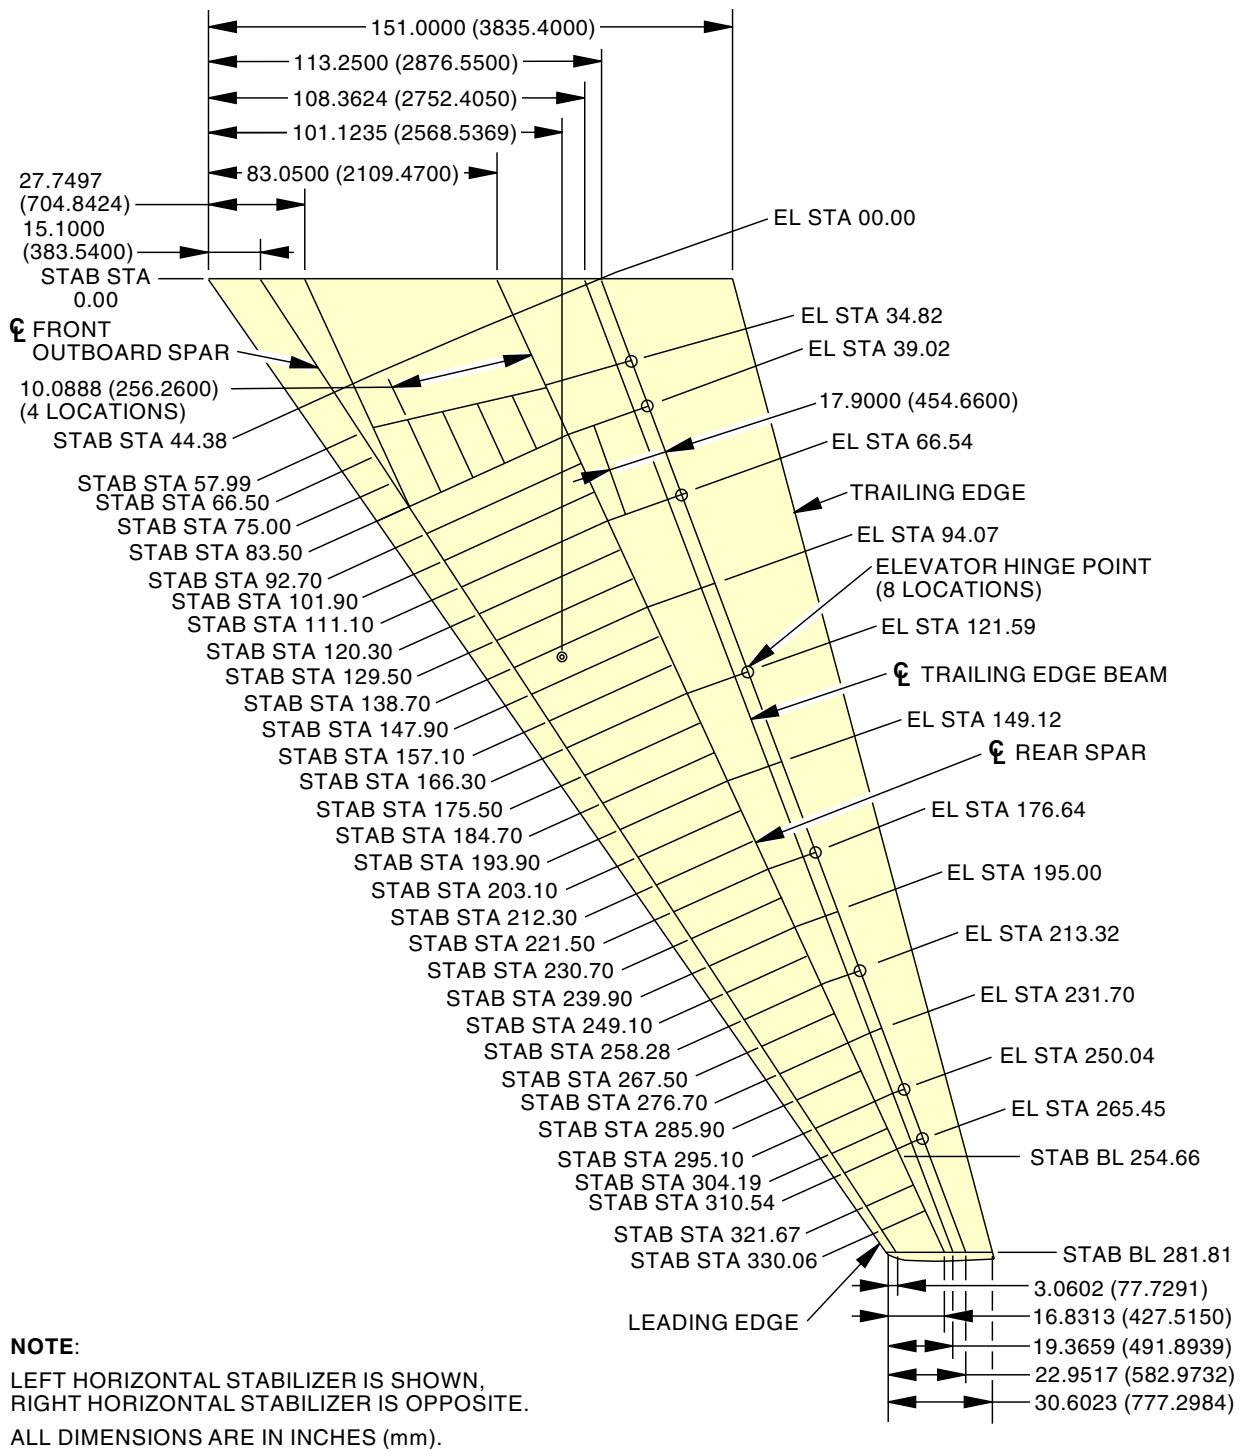

2410599 S00061525955_V1

Horizontal Stabilizer and Elevator Station Diagram
Figure 201/06-23-00-990-801

EFFECTIVITY
SIA ALL

06-23-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

WING STATION DIAGRAM - MAINTENANCE PRACTICES

1. General

- A. This procedure has this task:
(1) Wing Station Diagram

TASK 06-24-00-800-801

2. Wing Station Diagram

(Figure 201)

A. **General**

- (1) The wing station diagram shows the locations of the structural components and features on the airplane wings.
- (2) The wing station identifications are as follows:
- (a) Wing Station (WS)
 - (b) Wing Buttock Line (WBL)

B. **Location Zones**

Zone	Area
500	Left Wing
600	Right Wing

————— END OF TASK —————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-24-00

Page 201
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

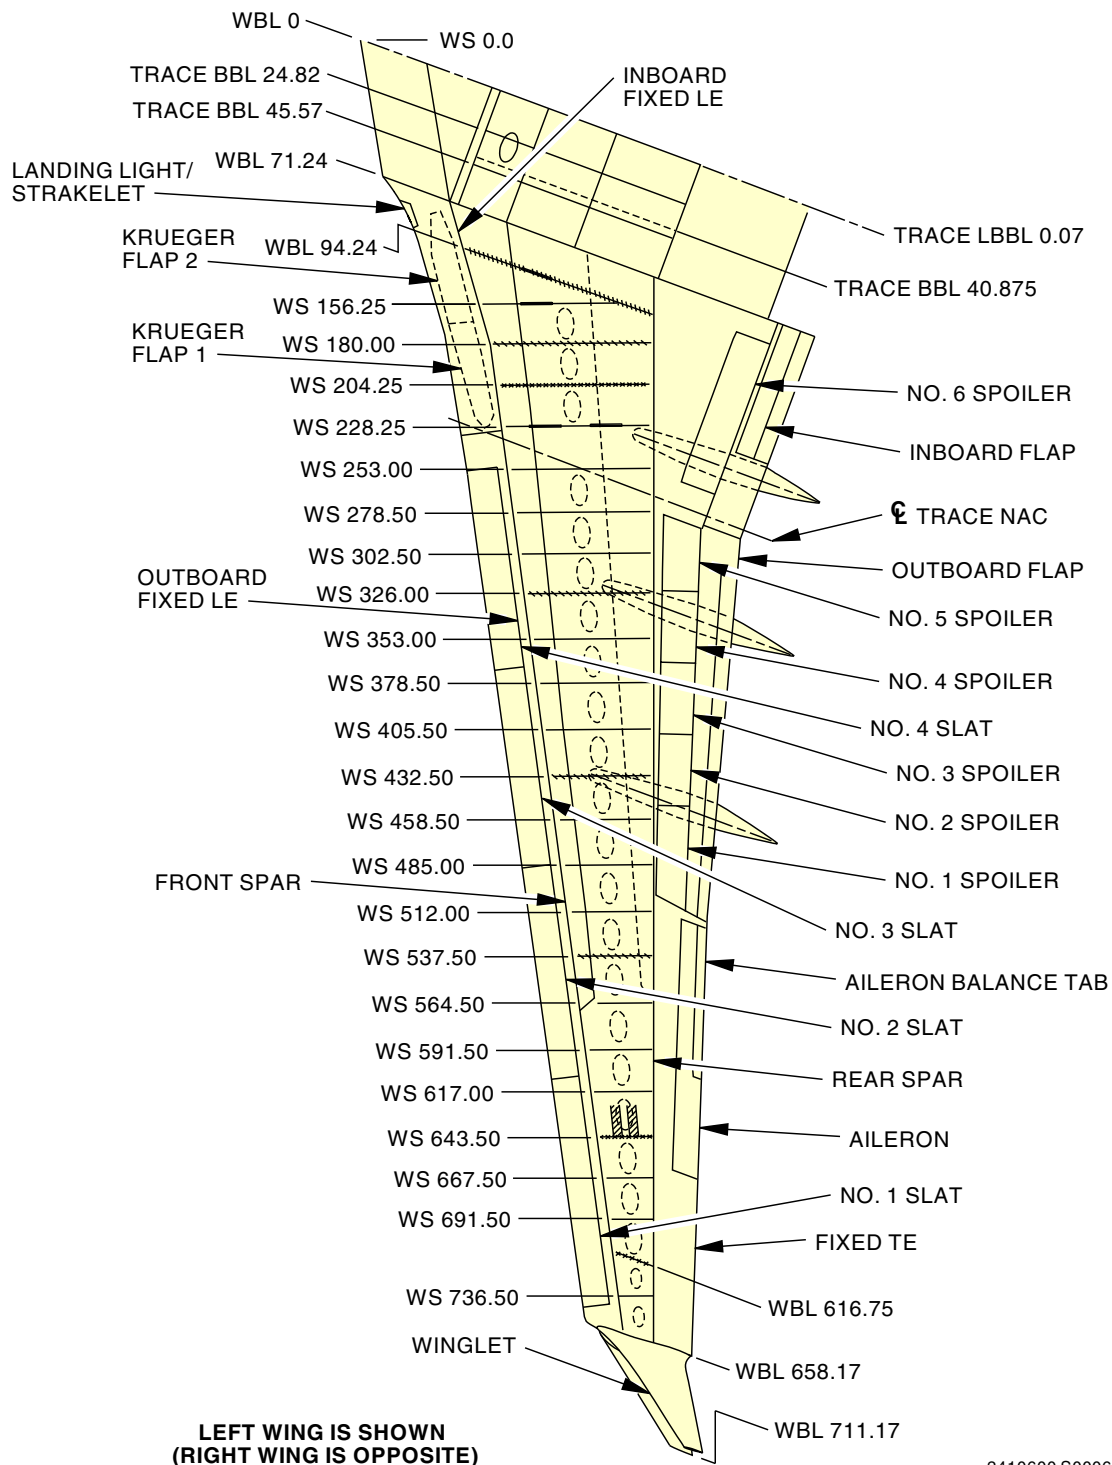

2410600 S00061525960_V1

Wing Station Diagram
Figure 201/06-24-00-990-801

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-24-00

Page 202
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

ENGINE AND NACELLE STATION DIAGRAM - MAINTENANCE PRACTICES

1. General

- A. This procedure has this task:
(1) Engine and nacelle station diagram

TASK 06-25-00-800-801

2. Engine and Nacelle Station Diagram

(Figure 201)

A. **General**

- (1) The engine and nacelle station diagram gives you the locations of the structural components and features on the engine and nacelle.

B. **Location Zones**

Zone	Area
400	Powerplant and Nacelle Struts

————— **END OF TASK** —————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-25-00

Page 201
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

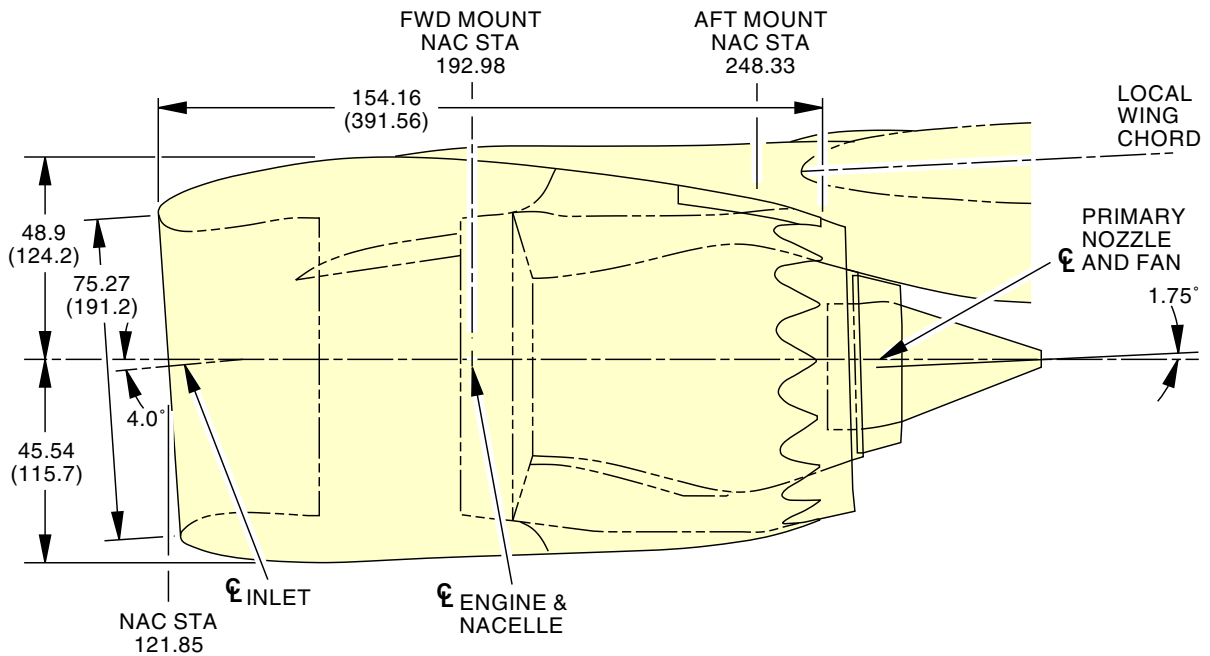

NOTE:

ALL DIMENSIONS ARE GIVEN IN INCHES
(CENTIMETERS ARE GIVEN IN PARENTHESES)

2455250 S0000568537_V1

CFM Leap-1B - Engine and Nacelle Station Diagram
Figure 201/06-25-00-990-801

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-25-00

Page 202
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

ZONE DIAGRAMS - MAINTENANCE PRACTICES

1. General

- A. This procedure has these tasks:
- (1) Major Zones
 - (2) Lower Half of the Fuselage - Major Zone 100
 - (3) Upper Half of the Fuselage - Major Zone 200
 - (4) Empennage and Body Section 48 - Major Zone 300
 - (5) Power Plants and Nacelle Struts - Major Zone 400
 - (6) Left Wing - Major Zone 500
 - (7) Right Wing - Major Zone 600
 - (8) Landing Gear and Landing Gear Doors - Major Zone 700
 - (9) Passenger and Cargo Compartment Doors - Major Zone 800

TASK 06-30-00-800-801

2. Major Zones

(Figure 201)

A. General

- (1) The airplane is divided in eight major zones that are used to identify the airplane components and parts. The major zones are divided in subzones and the subzones are divided in zones.
- (2) The major zones are numbered in sequence:
 - (a) Fuselage - Front to back and away from the floor line.
 - (b) Wings - Inboard to outboard and front to back.
 - (c) Horizontal Stabilizer and Elevator - Inboard to outboard and front to back.
 - (d) Vertical Fin and Rudder - Leading edge to the trailing edge of the vertical stabilizer.
- (3) Each of the structural components, passenger compartment doors, cargo compartment doors, landing gear doors, rudders, elevators, flaps, ailerons, spoilers, leading edge devices, and equivalent components have a different zone number.
- (4) A three digit number identifies the major zones, subzones, and zones:
 - (a) Major Zone - First digit is a number from 1 to 8 followed by two 00 (zero).
 - (b) Subzone - First digit is the major zone, second digit is a number from 1 to 6 or 9, and the third digit is a 0 (zero).
 - (c) Zone - First two digits is the subzone number and the third digit shows a component or group of components that are in the subzone.

B. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage
300	Empennage
400	Powerplant and Nacelle Struts
500	Left Wing
600	Right Wing

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 201
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

(Continued)

Zone	Area
700	Landing Gear and Landing Gear Doors
800	Doors

————— END OF TASK —————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 202
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

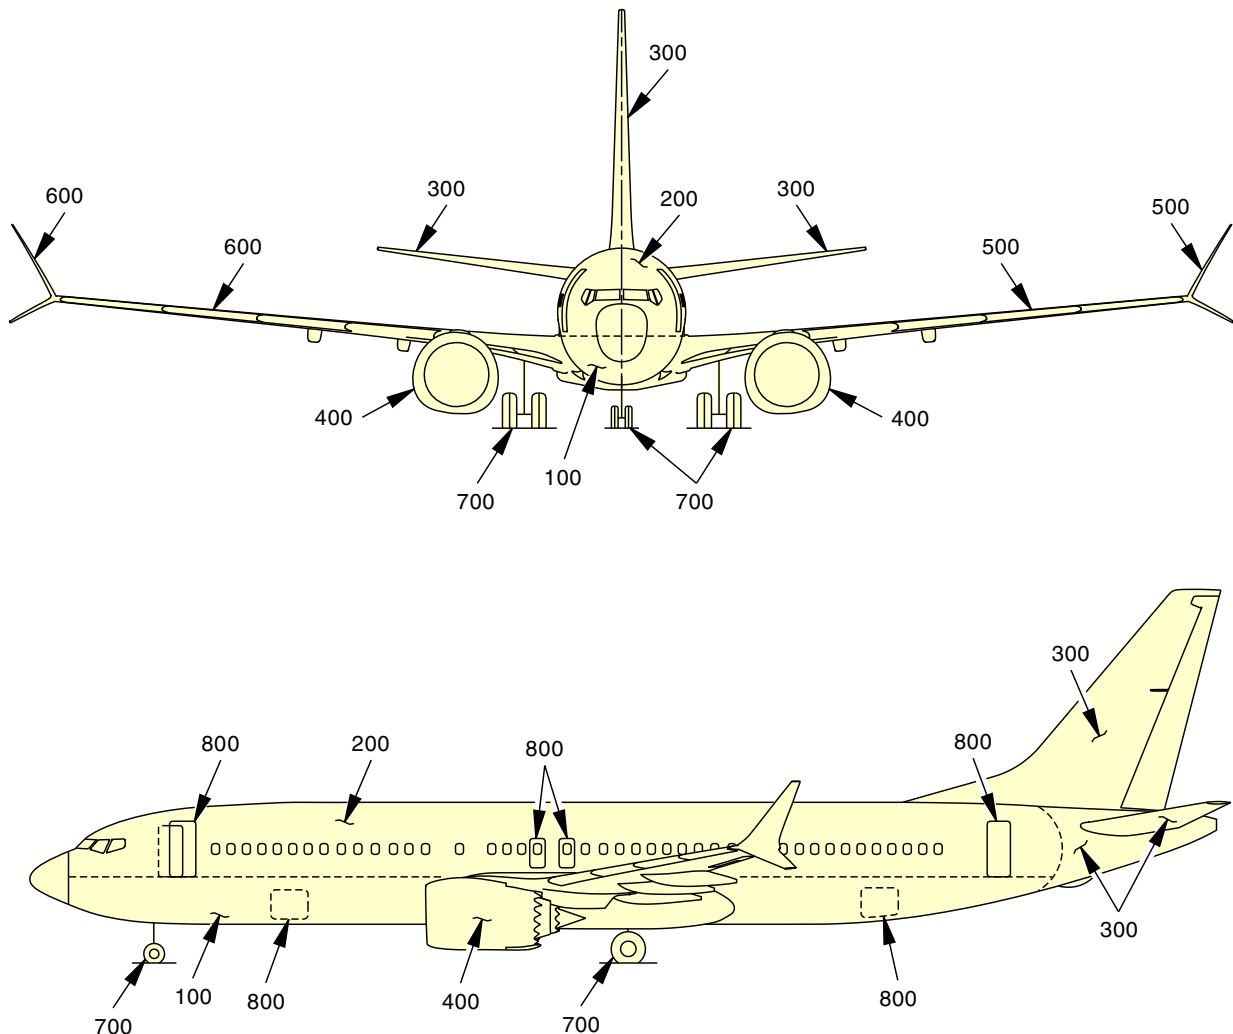

- MAJOR ZONE 100 - LOWER HALF OF FUSELAGE
- MAJOR ZONE 200 - UPPER HALF OF FUSELAGE
- MAJOR ZONE 300 - EMPENNAGE AND BODY SECTION 48
- MAJOR ZONE 400 - POWER PLANTS AND NACELLE STRUTS
- MAJOR ZONE 500 - LEFT WING
- MAJOR ZONE 600 - RIGHT WING
- MAJOR ZONE 700 - LANDING GEAR & LANDING GEAR DOORS
- MAJOR ZONE 800 - PASSENGER AND CARGO DOORS

2410602 S00061525970_V1

Airplane Major Zones
Figure 201/06-30-00-990-801

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 203
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-30-00-800-802

3. **Major Zone 100 - Lower Half of the Fuselage**

A. **Location Zones**

Zone	Area
------	------

100	Lower Half of Fuselage
-----	------------------------

B. **Major Zone 100 - Doors and Access Panels**

SUBTASK 06-30-00-800-001

- (1) The major zone 100 subzones, zones, and zone names for the lower half of the fuselage are listed in Table 201 and are shown in Figure 202.

Table 201/06-30-00-993-801 Major Zone 100 - Lower Half of Fuselage

Subzone	Zone	Zone Name
110		Body Station 130 to Body Station 396
	111	Radome
	112	Area Forward of Nose Landing Gear Wheel Well
	113	Area Above Nose Landing Gear Wheel Well - Left
	114	Area Above Nose Landing Gear Wheel Well - Right
	115	Nose Landing Gear Wheel Well - Left
	116	Nose Landing Gear Wheel Well - Right
	117	Electrical and Electronics Compartment - Left
	118	Electrical and Electronics Compartment - Right
120		Body Station 396 to Body Station 540
	121	Forward Cargo Compartment - Left
	122	Forward Cargo Compartment - Right
	123	Area Below Forward Cargo Compartment - Left
	124	Area Below Forward Cargo Compartment - Right
	125	Area Aft of Forward Cargo Compartment - Left
	126	Area Aft of Forward Cargo Compartment - Right
	129	Keel Beam (Part) Body Station 501.70 to Body Station 540.00
130		Body Station 540.00 to Body Station 727.00
	131	Center Section Wing Box, Body Station 540.00 to Body Station 663.75 - Left
	132	Center Section Wing Box, Body Station 540.00 to Body Station 663.75 - Right
	133	Main Landing Gear Wheel Well, Body Station 663.75 to Body Station 727.00 - Left
	134	Main Landing Gear Wheel Well, Body Station 663.75 to Body Station 727.00 - Right
	135	Area above Center Section Wing Box, Body Station 540.0 to Body Station 663.75 - Left
	136	Area above Center Section Wing Box, Body Station 540.0 to Body Station 663.75 - Right
	137	Area above Main Landing Gear Wheel Well, Body Station 663.75 to Body Station 727.00 - Left

EFFECTIVITY
SIA ALL

06-30-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Page 204
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201/06-30-00-993-801 Major Zone 100 - Lower Half of Fuselage (Continued)

Subzone	Zone	Zone Name
	138	Area above Main Landing Gear Wheel Well, Body Station 663-75 to Body Station 727.00 - Right
	139	Keel Beam, (Part) Body Station 540.00 to Body Station 727.00
140		Body Station 727.00 to Body Station 1016.00
	141	Aft Cargo Compartment - Left
	142	Aft Cargo Compartment - Right
	143	Area Below Aft Cargo Compartment - Left
	144	Area Below Aft Cargo Compartment - Right
	145	Area Aft of Aft Cargo Compartment - Left
	146	Area Aft of Aft Cargo Compartment - Right
	149	Keel Beam, Body Station 727.00 to Body Station 743.95
190		Wing-to-Body Fairings
	191	Lower Wing-to-Body Fairing - Forward of Wing Box
	192	Lower Wing-to-Body Fairing - Under Wing Box
	193	Lower Wing-to-Body Fairing - Wheel Well
	194	Lower Wing-to-Body Fairing - Aft of Wheel Well
	195	Above Wing Wing-to-Body Fairing - Left
	196	Above Wing Wing-to-Body Fairing - Right

———— **END OF TASK** ————

EFFECTIVITY
SIA ALL


D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 205
Sep 15/2021

737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

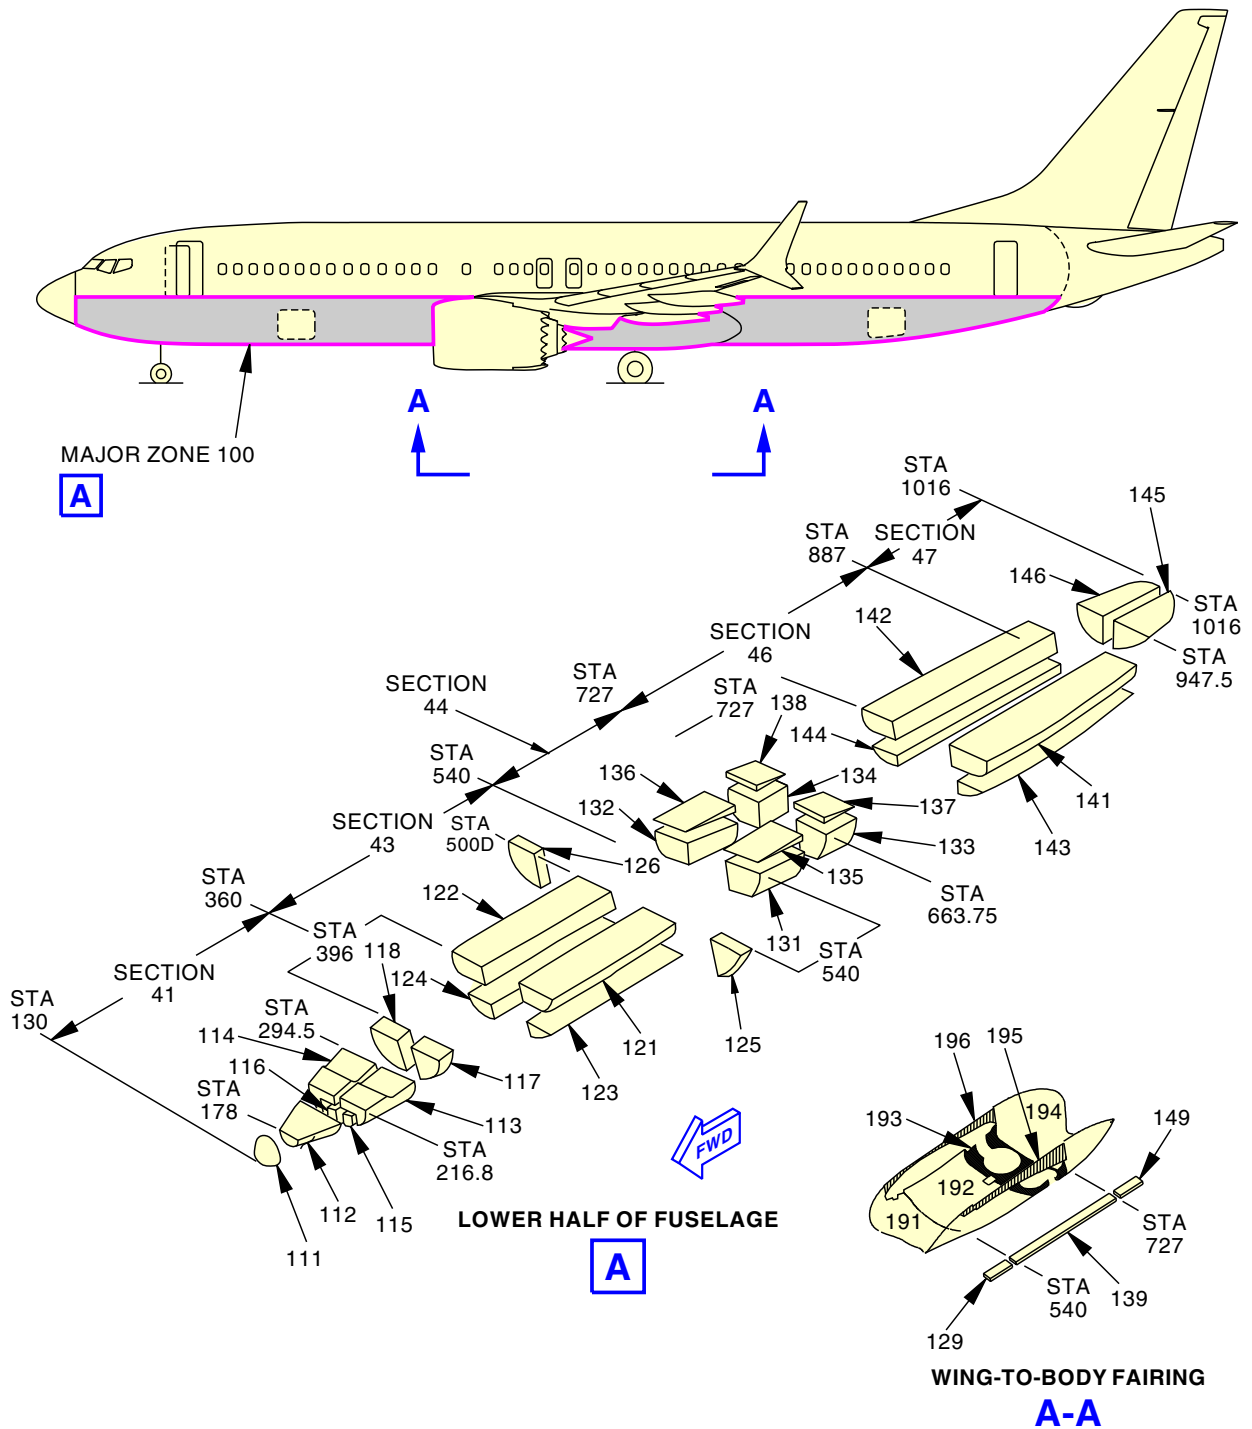

2410603 S00061525972_V1

Major Zone 100 - Lower Half of Fuselage
Figure 202/06-30-00-990-802

EFFECTIVITY
SIA ALL

D633AM101-SIA

06-30-00

Page 206
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-30-00-800-803

4. Major Zone 200 - Upper Half of the Fuselage

A. Location Zones

Zone	Area
------	------

200	Upper Half of Fuselage
-----	------------------------

B. Major Zone 200 - Doors and Access Panels

SUBTASK 06-30-00-800-002

- (1) The major zone 200 subzones, zones, and zone names for the upper half of the fuselage are listed in Table 202 and are shown in Figure 203

Table 202/06-30-00-993-802 Major Zone 200 - Upper Half of Fuselage

Subzone	Zone	Zone Name
210		Flight Compartment - Body Station 178.00 to Body Station 259.50
	211	Flight Compartment - Left
	212	Flight Compartment - Right
220		Passenger Compartment - Body Station 259.50 to Body Station 360.00
	221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door, Left
	222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door, Right
230		Passenger Compartment - Body Station 360.00 to Body Station 663.75
	231	Passenger Compartment - Forward Entry Door to Escape Hatch, Left
	232	Passenger Compartment - Forward Entry Door to Escape Hatch, Right
240		Passenger Compartment - Body Station 663.75 to Body Station 1016.00
	241	Passenger Compartment - Escape Hatch to Aft Pressure Bulkhead, Left
	242	Passenger Compartment - Escape Hatch to Aft Pressure Bulkhead, Right

————— END OF TASK —————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 207
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

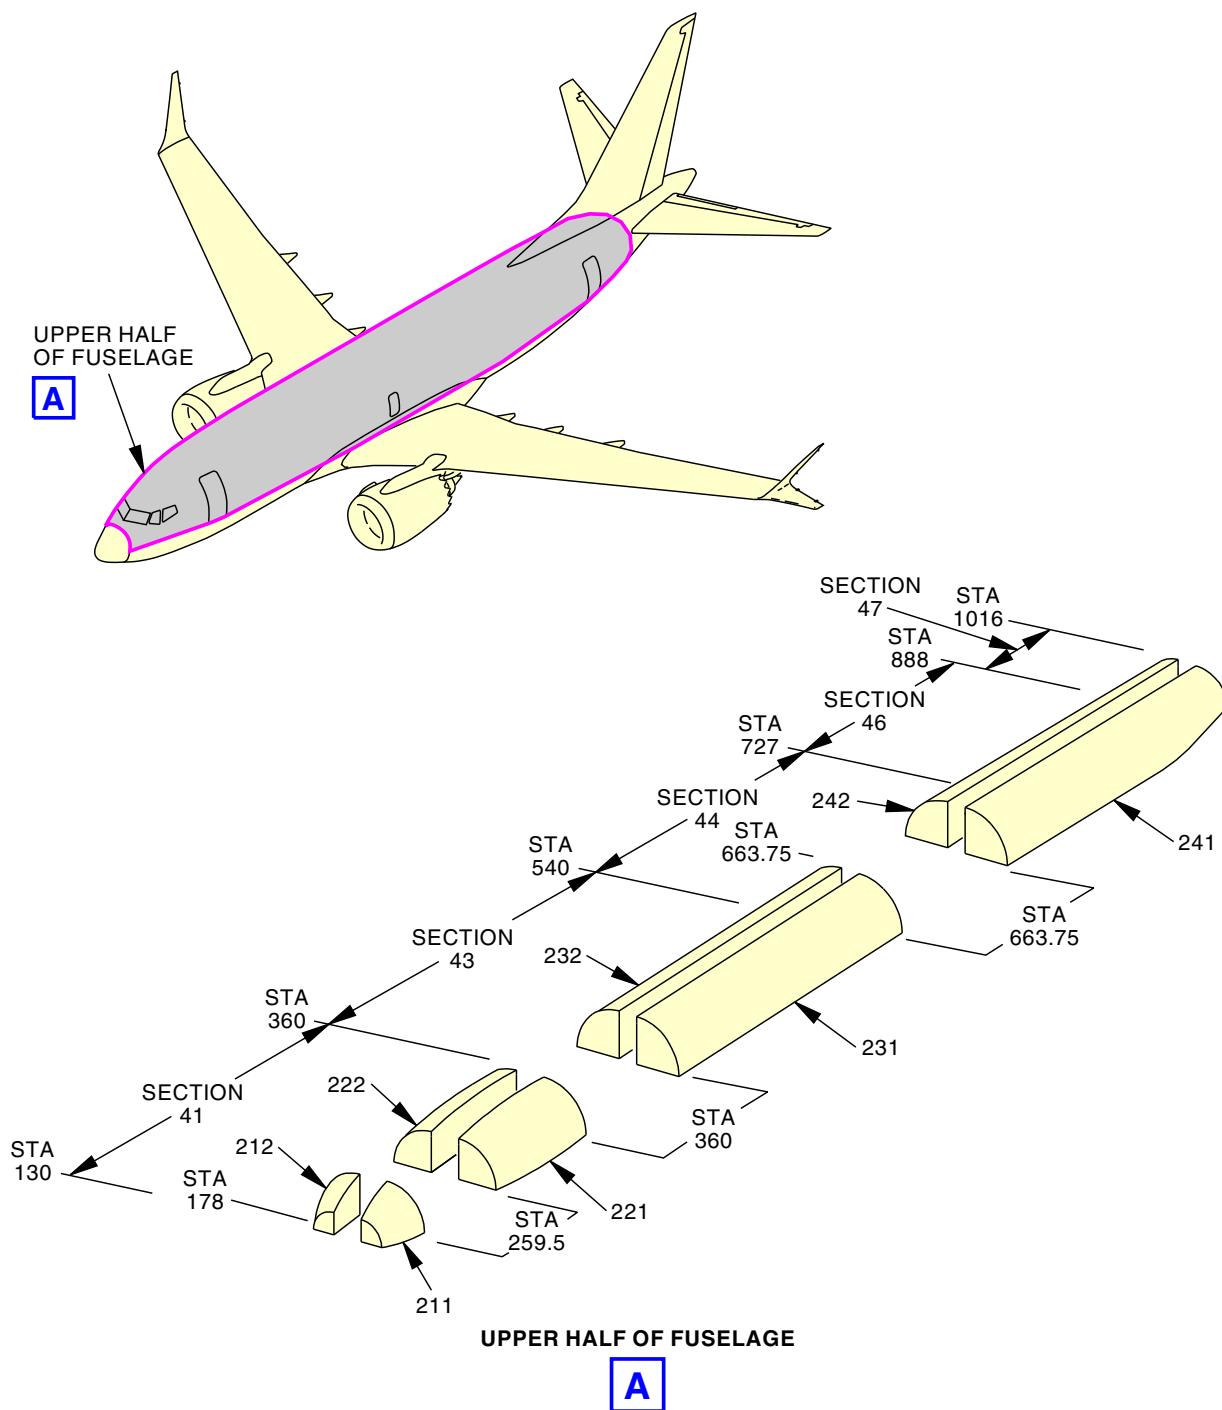

2410604 S00061525974_V1

Major Zone 200 - Upper Half of Fuselage
Figure 203/06-30-00-990-803

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 208
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-30-00-800-804

5. **Major Zone 300 - Empennage and Body Section 48**

(Figure 204)

A. **Location Zones**

Zone	Area
300	Empennage

B. **Procedure**

SUBTASK 06-30-00-800-003

- (1) The major zone 300 subzones, zones, and zone names for the airplane empennage and body section 48 are listed in Table 203 and are shown in Figure 204.

Table 203/06-30-00-993-803 Major Zone 300 - Empennage and Body Section 48

Subzone	Zone	Zone Name
310		Fuselage - Body Station 1016 to Body Station 1260
	311	Area Aft of Pressure Bulkhead - Left
	312	Area Aft of Pressure Bulkhead - Right
	313	Stabilizer Torsion Box Compartment - Left
	314	Stabilizer Torsion Box Compartment - Right
	315	APU Compartment - Left
	316	APU Compartment - Right
	317	Tail Cone - Left
	318	Tail Cone - Right
320		Vertical Fin and Rudder
	321	Dorsal Fin
	322	Fin Removable Leading Edge
	323	Fin Front Spar to Rear Spar
	324	Fin Rear Spar to Trailing Edge
	325	Rudder
	326	Fin Tip
330		Left Horizontal Stabilizer and Elevator
	331	Removable Leading Edge
	332	Front Spar to Rear Spar, Stabilizer Station 57.93 to Stabilizer Buttock Line 249.81
	333	Rear spar to Trailing Edge
	334	Inboard Elevator
	335	Tip
340		Right Horizontal Stabilizer and Elevator
	341	Leading Edge
	342	Front Spar to Rear Spar, Stabilizer Station 57.93 to Stabilizer Buttock Line 249.81

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 209
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 203/06-30-00-993-803 Major Zone 300 - Empennage and Body Section 48 (Continued)

Subzone	Zone	Zone Name
	343	Rear Spar to Trailing Edge
	344	Inboard Elevator
	345	Tip

————— END OF TASK —————


EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 210
Sep 15/2021

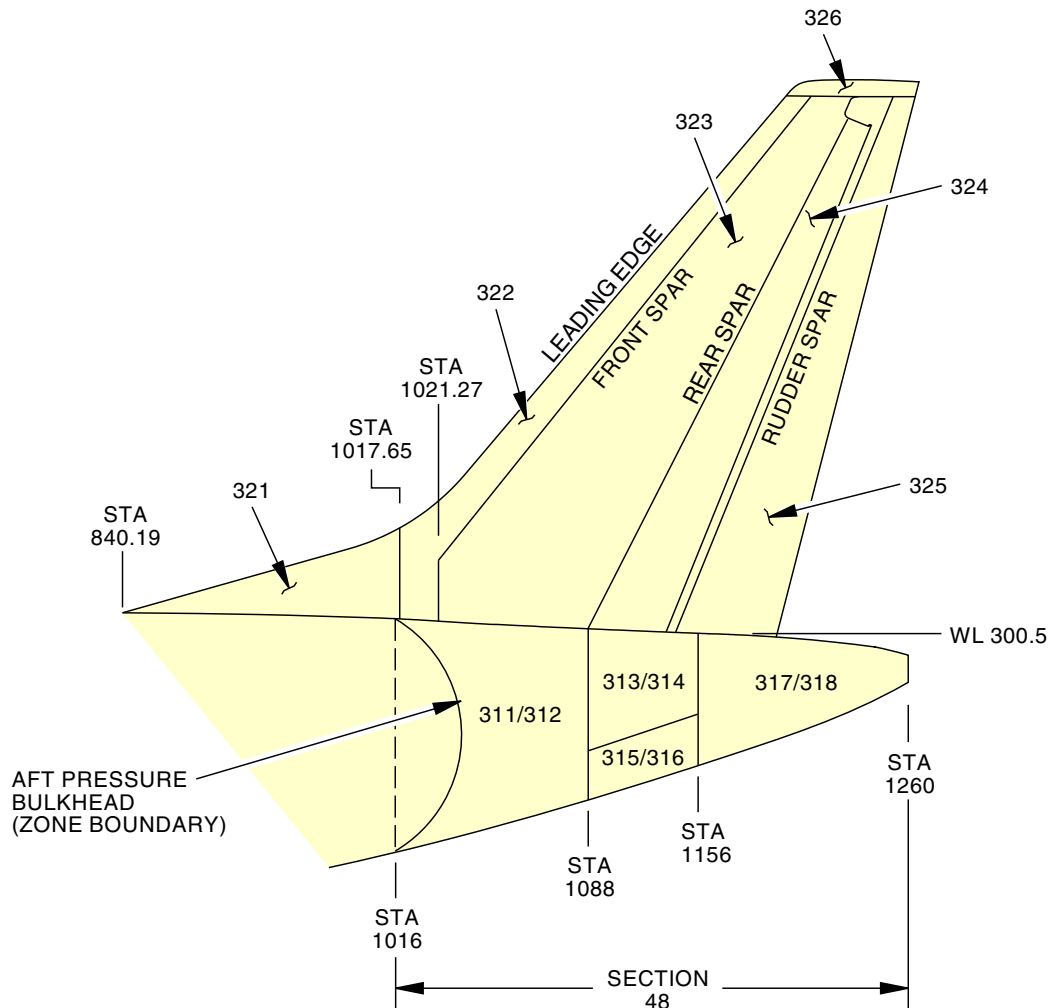

SUBZONE 310 - SECTION 48

SUBZONE 320 - VERTICAL FIN AND RUDDER

2410605 S00061525976_V1

Major Zone 300 - Empennage and Body Section 48
Figure 204/06-30-00-990-804 (Sheet 1 of 2)

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 211
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

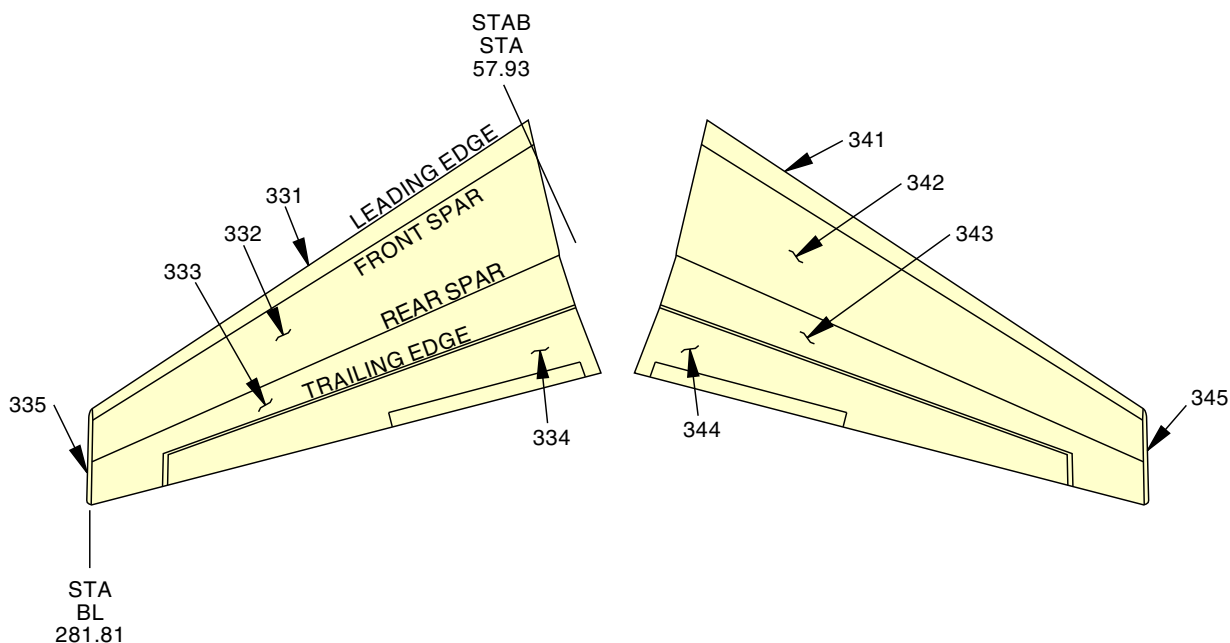

SUBZONE 330 - LEFT HORIZONTAL STABILIZER AND ELEVATOR
SUBZONE 340 - RIGHT HORIZONTAL STABILIZER AND ELEVATOR

2410606 S00061525977_V1

Major Zone 300 - Empennage and Body Section 48
Figure 204/06-30-00-990-804 (Sheet 2 of 2)

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 212
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-30-00-800-805

6. **Major Zone 400 - Power Plants and Nacelle Struts**

(Figure 205)

A. **Location Zones**

Zone	Area
------	------

400	Powerplant and Nacelle Struts
-----	-------------------------------

B. **Procedure**

SUBTASK 06-30-00-800-004

- (1) The major zone 400 subzones, zones and zone names for the power plants and nacelle struts are listed in Table 204 and are shown in Figure 205

Table 204/06-30-00-993-804 Major Zone 400 - Power Plants and Nacelle Struts

SubZone	Zone	Zone Name
410		Left Engine
	411	Left Engine - Engine
	412	Left Engine - Nose Inlet Cowl
	413	Left Engine - Fan Cowl, Left
	414	Left Engine - Fan Cowl, Right
	415	Left Engine - Thrust Reverser, Left
	416	Left Engine - Thrust Reverser, Right
	417	Left Engine - Primary Exhaust Nozzle and Plug
420		Right Engine
	421	Right Engine - Engine
	422	Right Engine - Nose Inlet Cowl
	423	Right Engine - Fan Cowl, Left
	424	Right Engine - Fan Cowl, Right
	425	Right Engine - Thrust Reverser, Left
	426	Right Engine - Thrust Reverser, Right
	427	Right Engine - Primary Exhaust Nozzle and Plug
430		Left Engine - Nacelle Strut
	431	Left Engine - Forward Strut Fairing
	432	Left Engine - Fan Cowl Support Beam
	433	Left Engine - Strut Torque Box
	434	Left Engine - Aft Strut Fairing
440		Right Engine - Nacelle Strut
	441	Right Engine - Forward Strut Fairing
	442	Right Engine - Fan Cowl Support Beam
	443	Right Engine - Strut Torque Box

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 213
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 204/06-30-00-993-804 Major Zone 400 - Power Plants and Nacelle Struts (Continued)

SubZone	Zone	Zone Name
	444	Right Engine - Aft Strut Fairing

———— **END OF TASK** ————


EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 214
Sep 15/2021

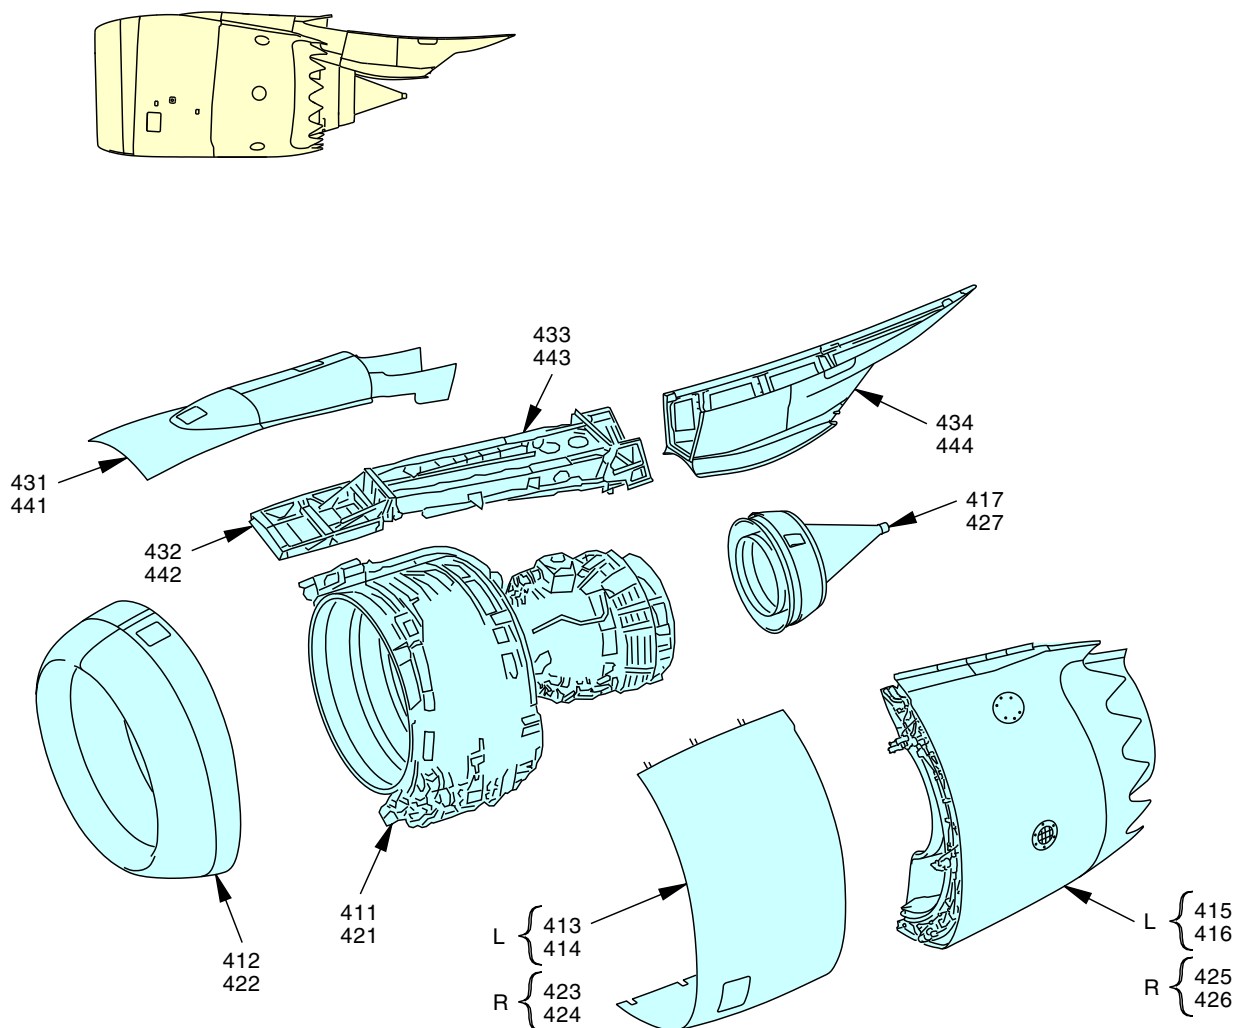

SUBZONE 410 - LEFT POWER PLANT
SUBZONE 420 - RIGHT POWER PLANT
SUBZONE 430 - LEFT NACELLE STRUT
SUBZONE 440 - RIGHT NACELLE STRUT

2410607 S00061525979_V1

Major Zone 400, LEAP-1B No. 1 and No. 2 Engines - Power Plant and Nacelle Struts
Figure 205/06-30-00-990-805

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 215
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-30-00-800-806

7. **Major Zone 500 - Left Wing**

(Figure 206)

A. **Location Zones**

Zone	Area
500	Left Wing

B. **Procedure**

SUBTASK 06-30-00-800-005

- (1) The major zone 500 subzones, zones and zone names for the left wing are listed in Table 205 and shown in Figure 206.

Table 205/06-30-00-993-805 Major Zone 500 - Left Wing

Subzone	Zone	Zone Name
510		Left Wing - Wing Leading Edge, Forward of Front Spar, Inboard of Nacelle Strut, Including Nacelle Gap Cover Area
	511	Left Wing - Leading Edge to Front Spar
	512	Left Wing - Krueger Flap No. 2
	513	Left Wing - Krueger Flap No. 1
520		Left Wing Leading Edge - Forward of Front Spar, Outboard of Nacelle Strut
	521	Left Wing - Leading Edge to Front Spar
	522	Left Wing - Slat No. 4
	523	Left Wing - Slat No. 3
	524	Left Wing - Slat No. 2
	525	Left Wing - Slat No. 1
	526	Left Wing - Wing Tip
530		Left Wing - Wing Inspar Area (Fuel Tanks), Inboard of Wing Rib 22, Wing Station 643.50
	531	Left Wing - Center Fuel Tank Rib 1 to Rib 5
	532	Left Wing -Main Tank, Rib 5 to Rib 22, Wing Station 204.25 to Wing Station 643.50
	533	Left Wing - Surge Tank, Rib 22 to Rib 25, Wing Station 616.75 to Wing Buttock Line 643.50
	534	Left Wing - Dry Bay
540		Left Wing - Wing Trailing Edge Flap Track Fairings
	541	Left Wing - Fairing Flap Support No. 4
	542	Left Wing - Fairing Flap Support No. 3
	543	Left Wing - Fairing Flap Support No. 2
	544	Left Wing - Fairing Flap Support No. 1
550		Left Wing - Wing Trailing Edge, Aft of Rear Spar, Inboard of Outboard Trailing Edge Flap
	551	Left Wing - Rear Spar to Landing Gear Support Beam
	552	Left Wing - Spoiler No. 6

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 216
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 205/06-30-00-993-805 Major Zone 500 - Left Wing (Continued)

Subzone	Zone	Zone Name
	553	Left Wing - Inboard Flap
560		Left Wing - Wing Trailing Edge, Aft of Rear Spar, Outboard of Inboard Trailing Edge Flap, Inboard of Fixed Trailing Edge
	561	Left Wing - Rear Spar to Trailing Edge, Outboard of Inboard Flap, Inboard of Fixed Trailing Edge
	562	Left Wing - Spoiler No. 5
	563	Left Wing - Spoiler No. 4
	564	Left Wing - Spoiler No. 3
	565	Left Wing - Spoiler No. 2
	566	Left Wing - Spoiler No. 1
	567	Left Wing - Outboard Flap
570		Left Wing - Wing Trailing Edge, Outboard of Outboard Flap, Inboard of Wing Tip, Wing Buttock Line 658.17
	571	Left Wing - Fixed Trailing Edge
	572	Left Wing - Aileron

————— END OF TASK —————

TASK 06-30-00-800-807

8. Major Zone 600 - Right Wing
(Figure 206)

A. Location Zones

Zone	Area
600	Right Wing

B. Procedure

SUBTASK 06-30-00-800-006

- (1) The major zone 600 subzones, zones and zone names for the right wing are listed in Table 206 and shown in Figure 206.

Table 206/06-30-00-993-806 Major Zone 600 - Right Wing

Subzone	Zone	Zone Name
610		Right Wing - Wing Leading Edge, Forward of Front Spar, Inboard of Nacelle Strut, Including Nacelle Gap Cover Area
	611	Right Wing - Leading Edge to Front Spar
	612	Right Wing - Krueger Flap No. 3
	613	Right Wing - Krueger Flap No. 4
620		Right Wing - Wing Leading Edge, Forward of Front Spar, Outboard of Nacelle Strut
	621	Right Wing - Leading Edge to Front Spar
	622	Right Wing - Slat No. 5

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 217
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 206/06-30-00-993-806 Major Zone 600 - Right Wing (Continued)

Subzone	Zone	Zone Name
	623	Right Wing - Slat No. 6
	624	Right Wing - Slat No. 7
	625	Right Wing - Slat No. 8
	626	Right Wing - Wing Tip
630		Right Wing - Wing Inspar Area (Fuel Tanks), Inboard of Wing Rib 22, Wing Station 643.50
	631	Right Wing - Center Fuel Tank, Rib 1 to Rib 5
	632	Right Wing - Main Tank, Rib 5 to Rib 22, Wing Station 204.25 to Wing Station 643.50
	633	Right Wing - Surge Tank, Rib 22 to Rib 25, Wing Station 616.75 to Wing Station 643.50
	634	Right Wing - Dry Bay
640		Right Wing - Wing Trailing Edge, Flap Track Fairings
	641	Right Wing - Fairing Flap Support No. 5
	642	Right Wing - Fairing Flap Support No. 6
	643	Right Wing - Fairing Flap Support No. 7
	644	Right Wing - Fairing Flap Support No. 8
650		Right Wing - Wing Trailing Edge, Aft of Rear Spar, Inboard of Outboard Trailing Edge Flap
	651	Right Wing - Rear Spar to Landing Gear Support Beam
	652	Right Wing - Spoiler No. 7
	653	Right Wing - Inboard Flap
660		Right Wing - Wing Trailing Edge, Aft of Rear Spar, Outboard of Inboard Trailing Edge Flap, Inboard of Fixed Trailing Edge
	661	Right Wing - Rear Spar to Trailing Edge, Outboard of Inboard Flap, Inboard of Fixed Trailing Edge
	662	Right Wing - Spoiler No. 8
	663	Right Wing - Spoiler No. 9
	664	Right Wing - Spoiler No. 10
	665	Right Wing - Spoiler No. 11
	666	Right Wing - Spoiler No. 12
	667	Right Wing - Outboard Flap
670		Right Wing - Fixed Trailing Edge, Outboard of of Outboard Flap, Inboard of Wing Tip, Wing Buttock Line 658.17
	671	Right Wing - Fixed Trailing Edge
	672	Right Wing - Aileron

———— **END OF TASK** ————

EFFECTIVITY
SIA ALL


06-30-00

D633AM101-SIA

Page 218
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

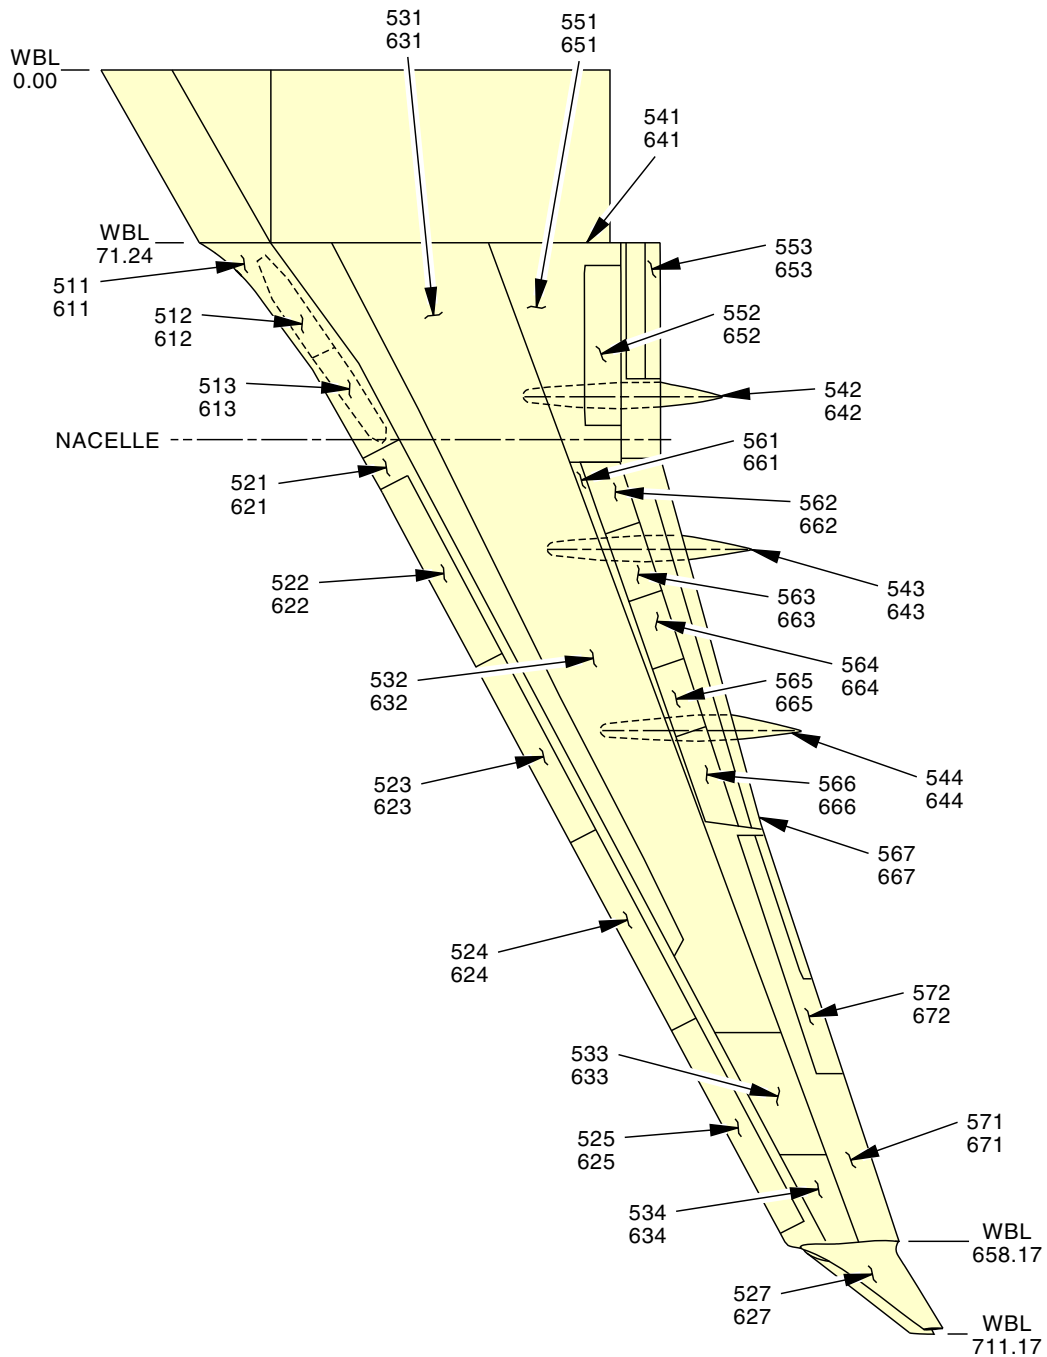

2410608 S00061525982_V1

Major Zones 500 and 600 - Left and Right Wing
Figure 206/06-30-00-990-806

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 219
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-30-00-800-808

9. **Major Zone 700 - Landing Gear and Landing Gear Doors**

(Figure 207)

A. **Location Zones**

Zone	Area
------	------

700	Landing Gear and Landing Gear Doors
-----	-------------------------------------

B. **Procedure**

SUBTASK 06-30-00-800-007

- (1) The major zone 700 subzones, zones and zone names for the landing gear and landing gear doors are listed in Table 207 and shown in Figure 207.

Table 207/06-30-00-993-807 Major Zone 700 - Landing Gear and Landing Gear Doors

Subzone	Zone	Zone Name
710		Nose Landing Gear and Landing Gear Doors
	711	Nose Landing Gear - Left
	712	Nose Landing Gear - Right
	713	Nose Landing Gear
730		Left Main Landing Gear and Landing Gear Doors
	731	Left Main Landing Gear - Outer Door
	732	Left Main Landing Gear - Middle Door
	733	Left Main Landing Gear - Inner Door
	734	Left Main Landing Gear
740		Right Main Landing Gear and Landing Gear Doors
	741	Right Main Landing Gear - Outer Door
	742	Right Main Landing Gear - Middle Door
	743	Right Main Landing Gear - Inner Door
	744	Right Main Landing Gear

———— END OF TASK ————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 220
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

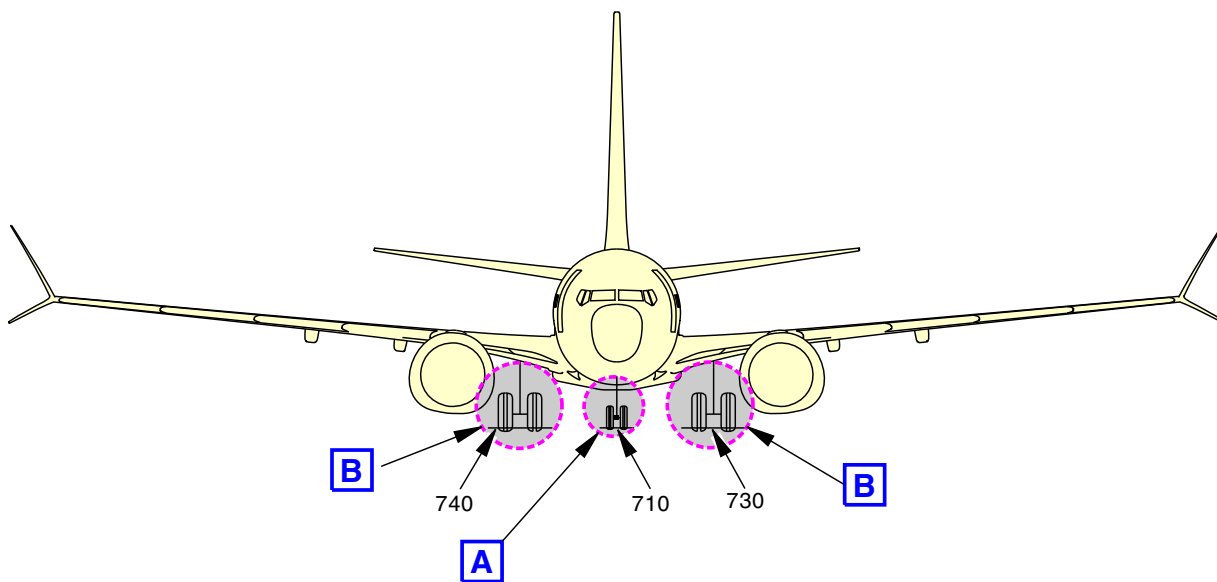

NOSE AND MAIN LANDING GEAR
AND LANDING GEAR DOORS

- 710 - NOSE LANDING GEAR AND LANDING GEAR DOORS
- 730 - LEFT MAIN LANDING GEAR AND LANDING GEAR DOORS
- 740 - RIGHT MAIN LANDING GEAR AND LANDING GEAR DOORS

2410609 S00061525984_V1

Major Zone 700 - Landing Gear and Landing Gear Doors
Figure 207/06-30-00-990-807 (Sheet 1 of 2)

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 221
Sep 15/2021




737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

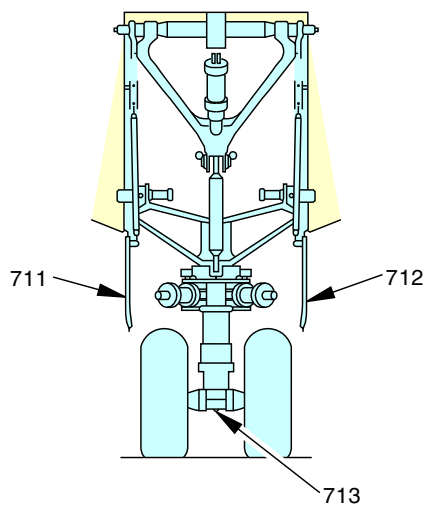

NOSE LANDING GEAR
(VIEW LOOKING FORWARD)

A

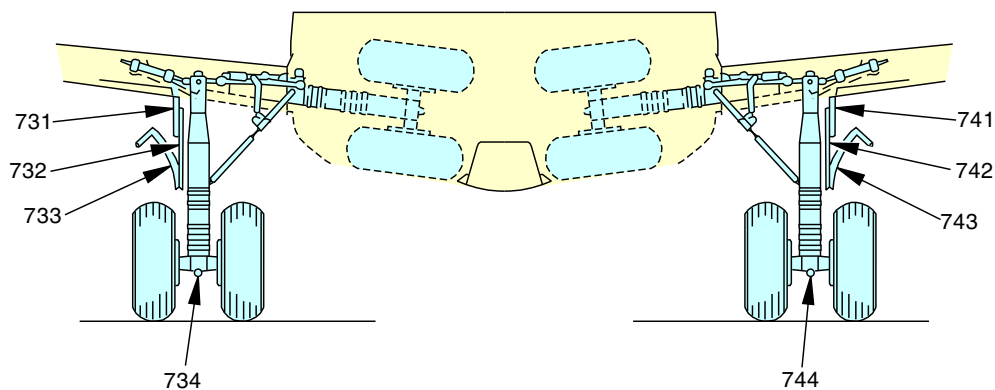

MAIN LANDING GEAR
(VIEW LOOKING FORWARD)

B

2410610 S00061525985_V1

Major Zone 700 - Landing Gear and Landing Gear Doors
Figure 207/06-30-00-990-807 (Sheet 2 of 2)

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 222
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-30-00-800-809

10. **Major Zone 800 - Passenger and Cargo Compartment Doors**

(Figure 208)

A. Location Zones

Zone	Area
800	Doors

B. Procedure

SUBTASK 06-30-00-800-008

- (1) The major zone 800 subzones, zones and zone names for the passenger and cargo compartment doors are listed in Table 208 and shown in Figure 208.

Table 208/06-30-00-993-808 Major Zone 800 - Doors

Subzone	Zone	Zone Name
820		Lower Half of Fuselage, Right Side
	821	Forward Cargo Door
	822	Aft Cargo Door
830		Passenger Compartment Doors, Left
	831	Forward Entry Door
	832	Left Emergency Exit (Sta 589.5)
	833	Left Emergency Exit (Sta 627.5)
	834	Left Aft Entry Door
	835	Main Deck Cargo Door
840		Passenger Compartment, Right
	841	Forward Galley Service Door
	842	Right Emergency Exit (Sta 589.5)
	843	Right Emergency Exit (Sta 627.5)
	844	Aft Galley Service Door

———— END OF TASK ————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 223
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

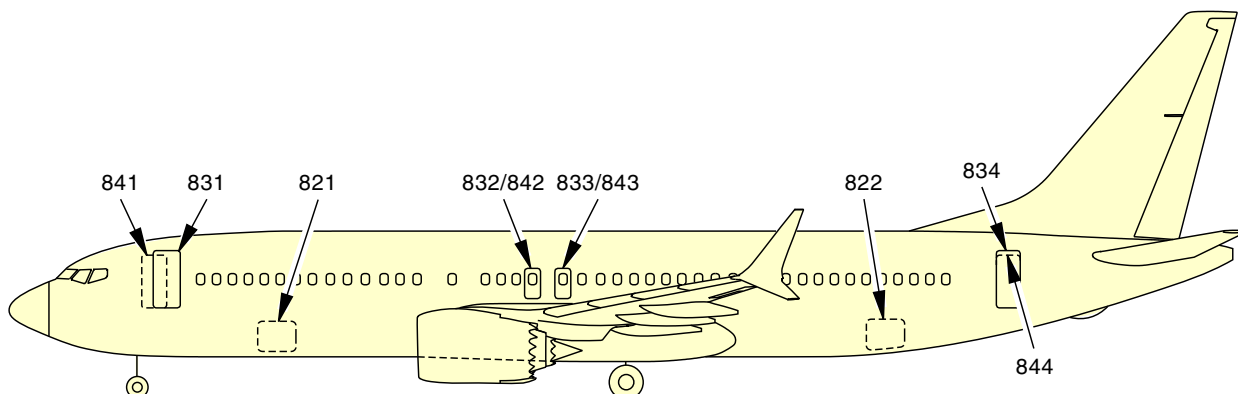

SUBZONE 820 - LOWER HALF OF FUSELAGE - RIGHT SIDE
SUBZONE 830 - UPPER HALF OF FUSELAGE - LEFT SIDE
SUBZONE 840 - UPPER HALF OF FUSELAGE - RIGHT SIDE

2410611 S00061525987_V2

Major Zone 800 - Passenger and Cargo Compartment Doors
Figure 208/06-30-00-990-808

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-30-00

Page 224
May 15/2022



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

**FUSELAGE (MAJOR ZONES 100 AND 200) ACCESS DOORS AND PANELS - MAINTENANCE
PRACTICES**

1. General

- A. The fuselage major zone 100 refers the bottom half of the fuselage, and not Section 48.
- B. The fuselage major zone 100 has subzones which are identified with two numbers followed by a zero as follows:
- (1) Subzone 110 - Nose Area
 - (2) Subzone 120 - Forward Cargo Compartment
 - (3) Subzone 130 - Wing Center Section
 - (4) Subzone 130 - Main Landing Gear Wheel Well
 - (5) Subzone 140 - Aft Cargo Compartment
 - (6) Subzone 140 - Bulk Cargo Compartment
 - (7) Subzone 190 - Wing-to-Body Fairings
- C. Major zone 200 contains the top half of the fuselage but does not include section 48. Major zone 200 includes these subzones:
- (1) Subzone 210 - Flight Compartment
 - (2) Subzone 220 - Section 41
 - (3) Subzone 230 - Section 43
 - (4) Subzone 240 - Section 44
 - (5) Subzone 250 - Section 46
 - (6) Subzone 260 - Section 47
- D. Each subzone is divided into zones that are identified with the first two numbers of the subzone followed by a number that is not zero.
- E. Access doors and panels in a zone are identified by the zone number and a two or three letter suffix. This alphanumeric label is different for each access door or panel.

TASK 06-41-00-800-801

2. Finding an Access Door or Panel on the Lower Half of the Fuselage

(Figure 201, Figure 202, Figure 203, Figure 204, Figure 205)

A. Location Zones

Zone	Area
100	Lower Half of Fuselage

B. Procedure

SUBTASK 06-41-00-800-001

- (1) In the table below, find the number of the applicable access door or panel.

Table 201 Access Door or Panel on the Lower Half of the Fuselage

Number	Name/Location
111	Radome
112A	Forward Access Door
113AC	Fwd Nose Wheel Well Upper Access Panel

EFFECTIVITY
SIA ALL

06-41-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Page 201
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Access Door or Panel on the Lower Half of the Fuselage (Continued)

Number	Name/Location
113AW	Forward Nose Wheel Well Panel
113BW	Forward Nose Wheel Well Panel
114AC	Fwd Nose Wheel Well Upper Access Panel
114AR	External Power Receptacle Door
114AW	Forward Nose Wheel Well Panel
114BW	Forward Nose Wheel Well Panel
117A	Electronic Equipment Access Door
117AW	Equipment Access Door Cover
117BL	Forward Airstair Door
146AR	Water Service Door
191AL	Forward Wing-To-Body Fairing Panel - Upper
191AR	Forward Wing-To-Body Fairing Panel - Upper
191BL	Forward Wing-To-Body Fairing Panel, Ram Air Inlet
191BR	Forward Wing-To-Body Fairing Panel, Ram Air Inlet
191CL	Forward Wing-To-Body Fairing Panel - Middle
191CR	Forward Wing-To-Body Fairing Panel - Middle
191D	Forward Wing-To-Body Fairing Panel - Lower
191E	Low Pressure ECS Panel - Forward
191FL	Forward Wing-To-Body Fairing Panel - Mid Fairing, Above Ram Air Inlet
191FR	Forward Wing-To-Body Fairing Panel - Mid Fairing, Above Ram Air Inlet
191GL	Ram Air Actuator Panel - Forward
191GR	Ram Air Actuator Panel - Forward
191HL	Ram Air Inlet Lip Panel - Forward
191HR	Ram Air Inlet Lip Panel - Forward
192AL	Underwing Bolt Cover - Forward
192AR	Underwing Bolt Cover - Forward
192BL	ECS Ram Air Inlet Mixing Duct Panel - Forward
192BR	ECS Ram Air Inlet Mixing Duct Panel - Forward
192CL	ECS Access Door
192CR	ECS Access Door
192DR	ECS High Pressure Access Door
192E	ECS Under Keel Panel - Forward
192F	ECS Under Keel Panel - Middle
192G	Sump Drain Access Door

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-41-00

Page 202
Jan 15/2023



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Access Door or Panel on the Lower Half of the Fuselage (Continued)

Number	Name/Location
192HL	Underwing Bolt Cover - Aft
192HR	Underwing Bolt Cover - Aft
192JL	Air Conditioning Panel - Aft
192JR	Air Conditioning Panel - Aft
192K	Air Conditioning Under Keel Panel - Aft
193AL	Wheel Well Panel - Forward Outboard
193AR	Wheel Well Panel - Forward Outboard
193B	Wheel Well Panel - Forward Inboard
193CL	Wheel Well Panel - Aft Outboard
193CR	Wheel Well Panel - Aft Outboard
193D	Wheel Well Panel - Aft Inboard
193EL	Access Panel - Aft Wheel Well
193ER	Access Panel - Aft Wheel Well
194AL	Aft Wing To Body Fairing Panel
194AR	Aft Wing To Body Fairing Panel
194BL	Flap Track Lubrication Panel - Aft
194BR	Flap Track Lubrication Panel - Aft
194CL	Aft Wing To Body Fairing Panel
194CR	Aft Wing To Body Fairing Panel
194DL	Aft Wing To Body Fairing Panel
194DR	Aft Wing To Body Fairing Panel
194E	Aft Wing To Body Fairing Panel
194FL	Aft Wing To Body Fairing Panel
194FR	Aft Wing To Body Fairing Panel
194GL	Aft Wing To Body Fairing Panel
194GR	Aft Wing To Body Fairing Panel
194HL	Aft Wing To Body Fairing Panel
194HR	Aft Wing To Body Fairing Panel
195AL	Wing-To-Body Fairing - Left Side
195AR	Wing-To-Body Fairing - Right Side
195BL	Wing-To-Body Fairing - Left Side
195BR	Wing-To-Body Fairing - Right Side
195CL	Wing-To-Body Fairing - Left Side
195CR	Wing-To-Body Fairing - Right Side

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-41-00

Page 203
Jan 15/2023



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Access Door or Panel on the Lower Half of the Fuselage (Continued)

Number	Name/Location
711AL	Forward Nose Wheel Door
712AR	Forward Nose Wheel Door
822	Aft Cargo Door
822AR	Access Panel on Aft Cargo Door - External
822BR	Access Panel on Aft Cargo Door

————— END OF TASK —————

TASK 06-41-00-800-802

3. Finding an Access Door or Panel on the Upper Half of the Fuselage

(Figure 205, Figure 206, Figure 208)

A. Location Zones

Zone	Area
------	------

200	Upper Half of Fuselage
-----	------------------------

B. Finding an Access Door or Panel on the Upper Half of the Fuselage

SUBTASK 06-41-00-800-002

(1) In the table below, find the number of the applicable access door or panel.

Table 202 Upper Half of the Fuselage Access Doors and Panels

Number	Name/Location
222AR	Forward Galley Service Door Hinge and Torque Tube Access Panel
231AL	Wing Scanning Light
232AR	Wing Scanning Light
241AL	Aft Entry Door Hinge and Torque Tube Access Panel
242AR	Aft Galley Service Door Hinge and Torque Tube Access Panel

————— END OF TASK —————


EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-41-00

Page 204
May 15/2022

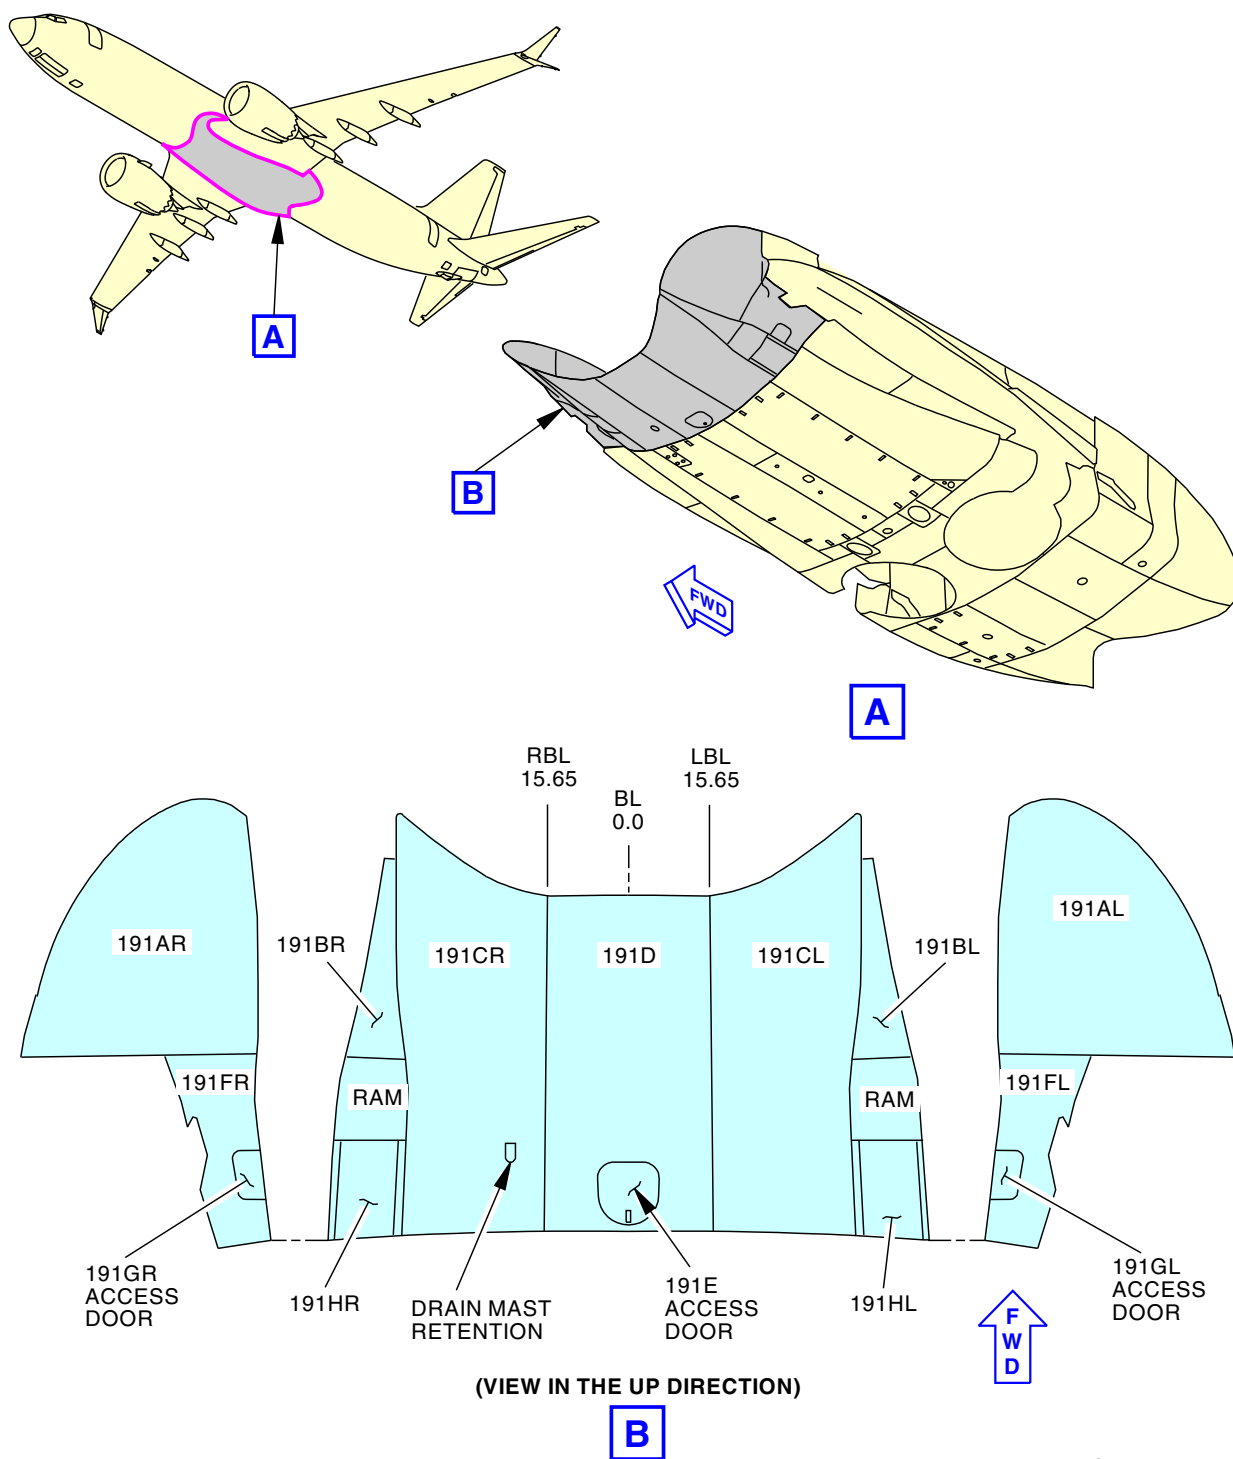

2410612 S00061525993_V1


Zone 191 - Wing-to-Body Fairing Access Doors and Panels
Figure 201/06-41-00-990-801

EFFECTIVITY
SIA ALL

06-41-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details




Zone 192 and 193 - Wing-to-Body Fairing Access Doors and Panels
Figure 202/06-41-00-990-802

06-41-00


D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

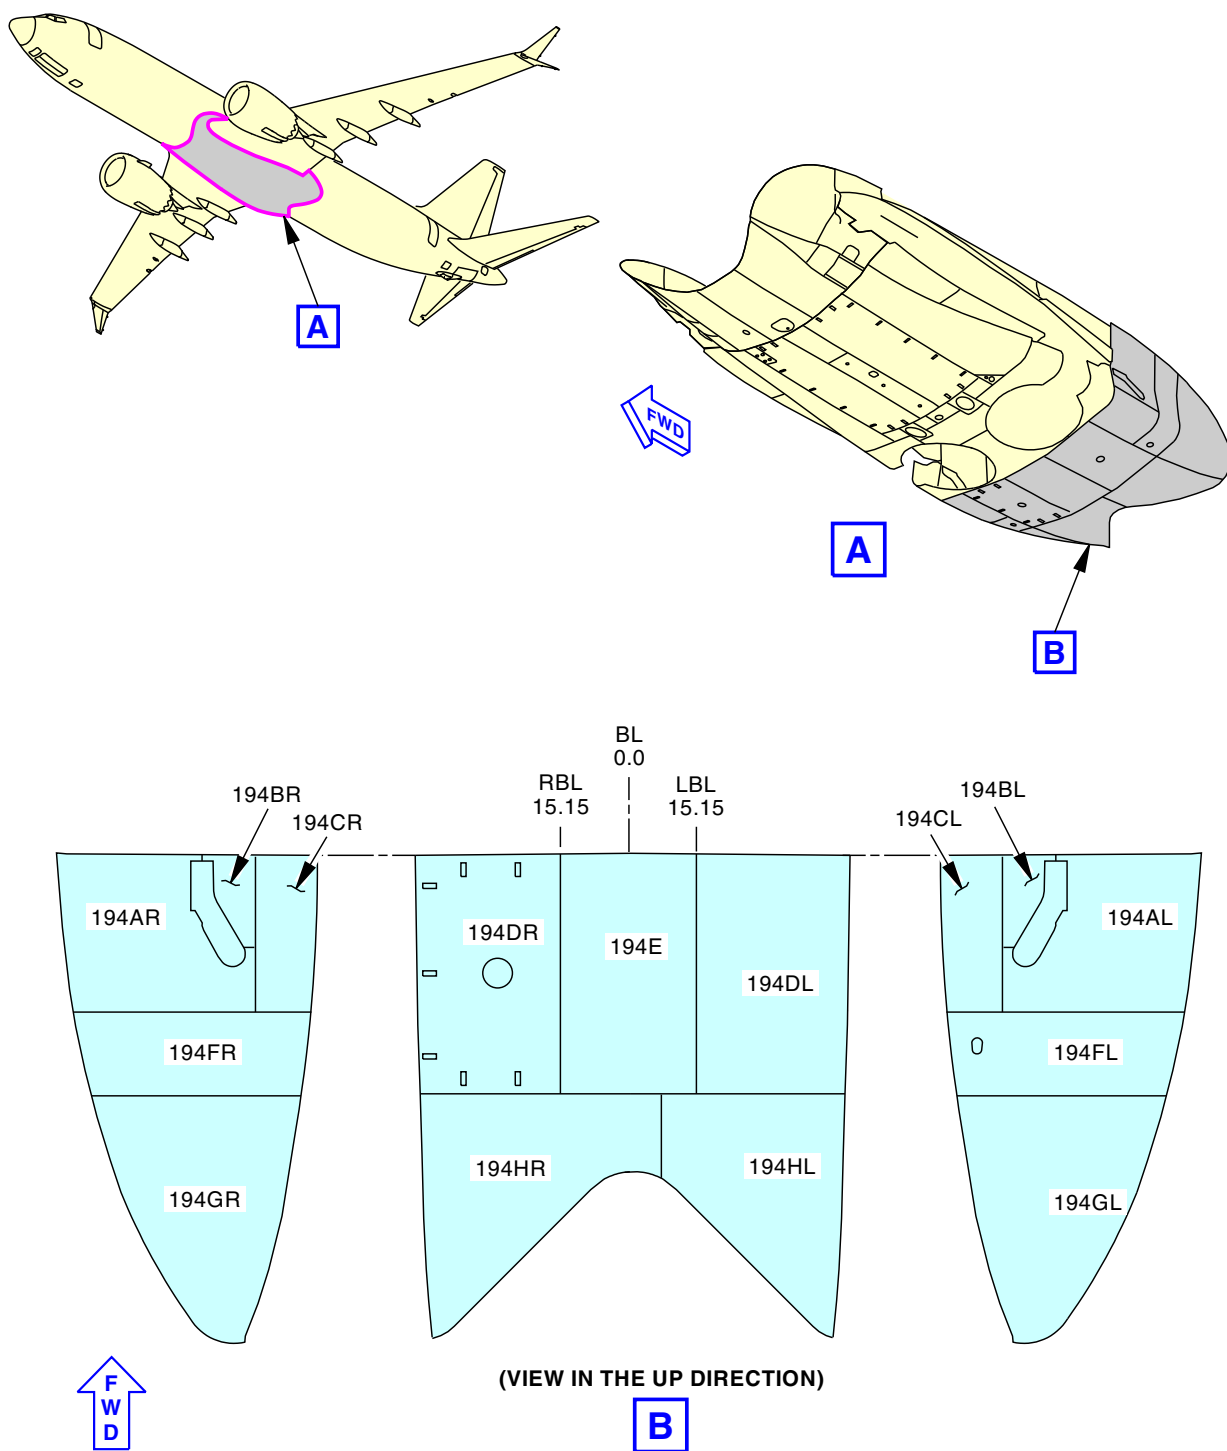

2410614 S00061525995_V1

Zone 194 - Wing-to-Body Fairing Access Doors and Panels
Figure 203/06-41-00-990-803

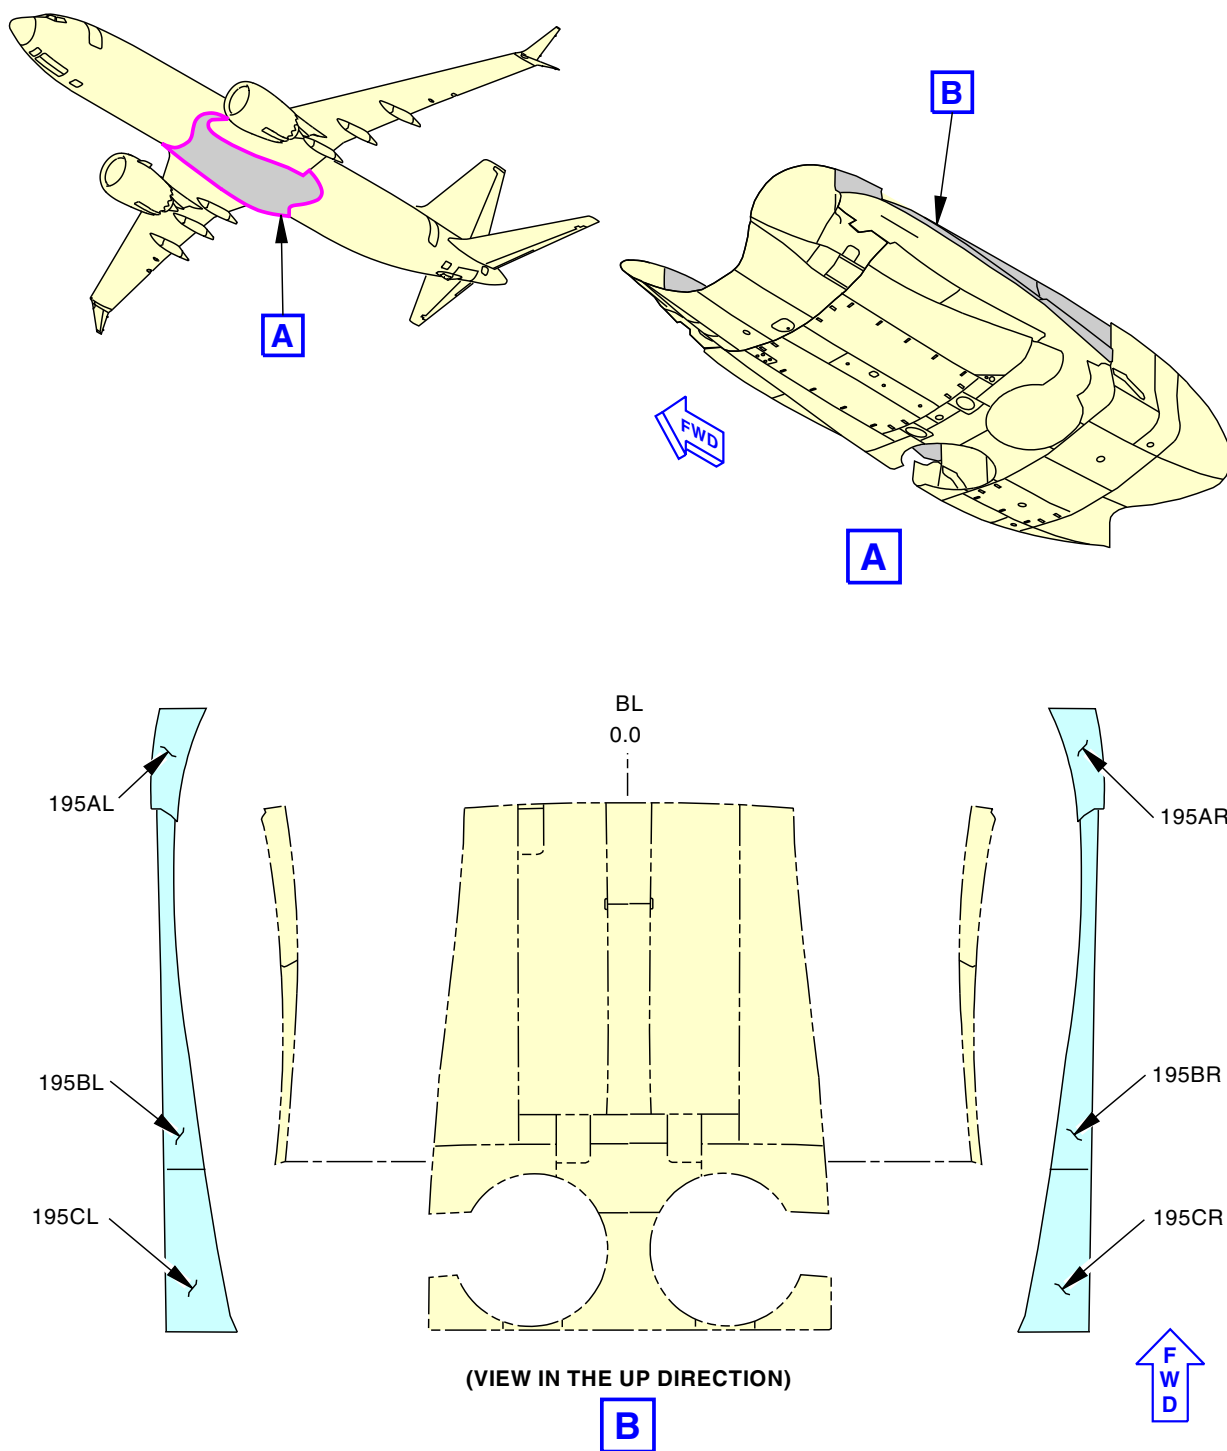

2410615 S00061525996_V3

Zone 195 and 196 - Wing-to-Body Fairing Access Doors and Panels
Figure 204/06-41-00-990-804

EFFECTIVITY
SIA ALL


D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-41-00

Page 208
May 15/2022

737-7/8/8200/9/10 AIRCRAFT MAINTENANCE MANUAL

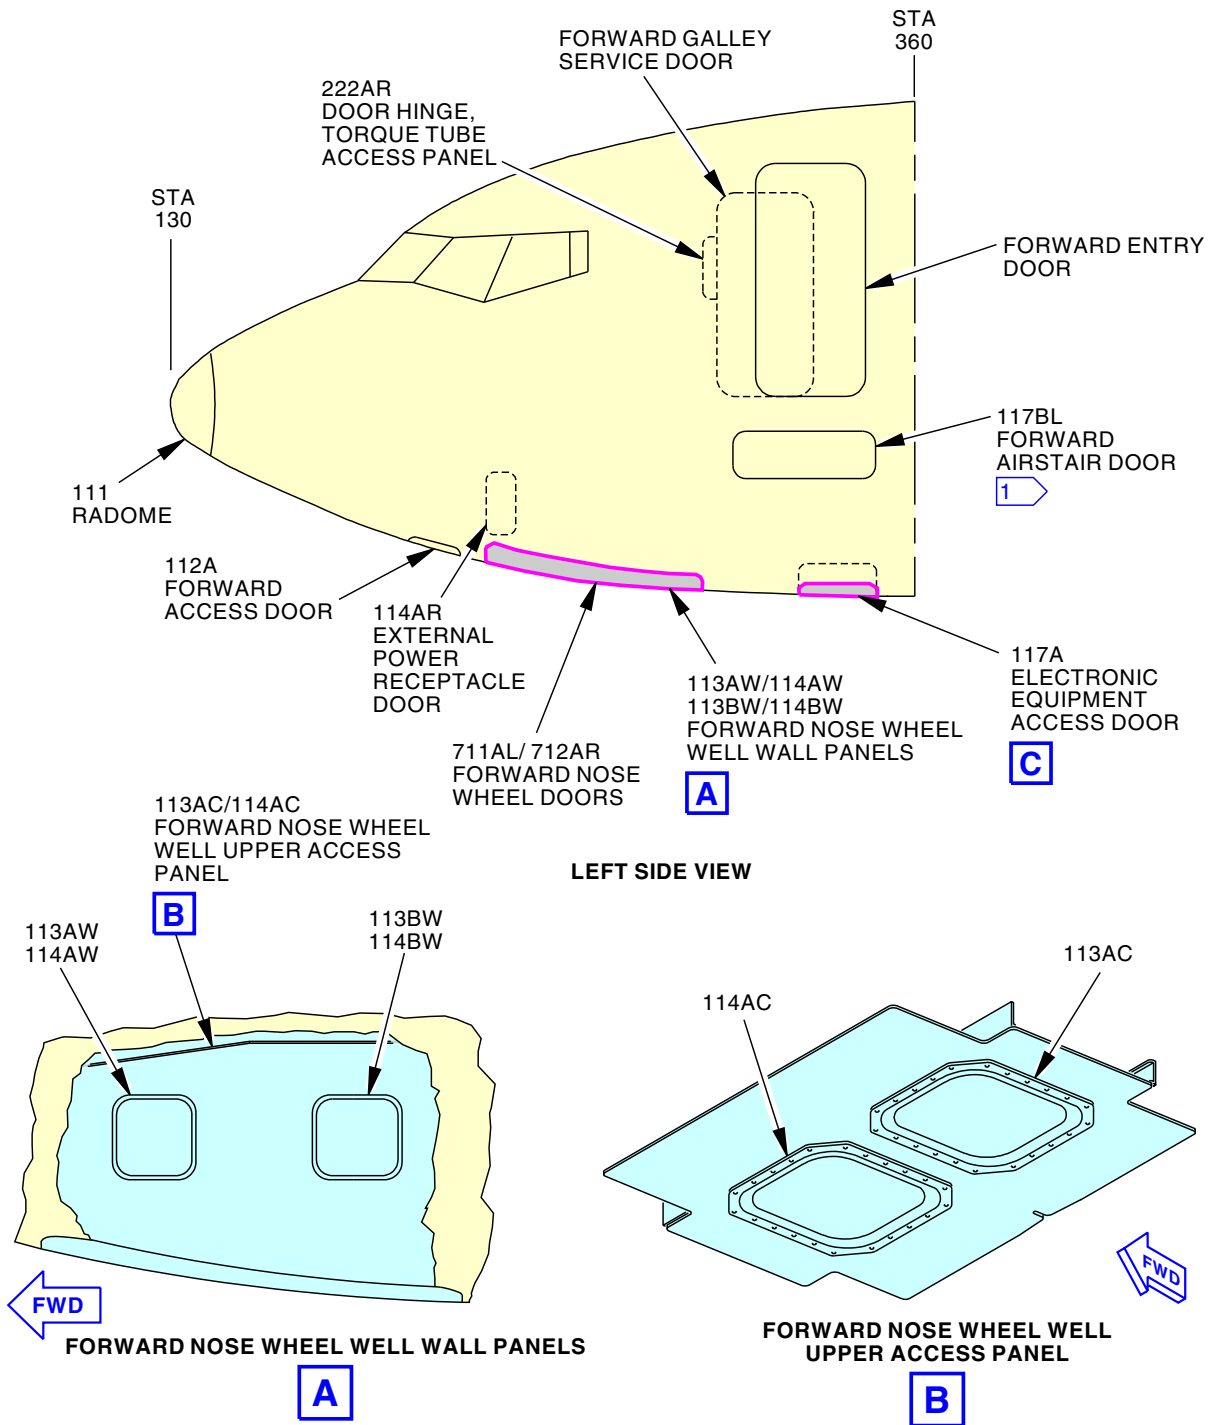

2410616 S00061525997_V3

Fuselage Section 41 - Access Door and Panels
Figure 205/06-41-00-990-805 (Sheet 1 of 2)

EFFECTIVITY
SIA ALL


D633AM101-SIA

06-41-00

Page 209
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

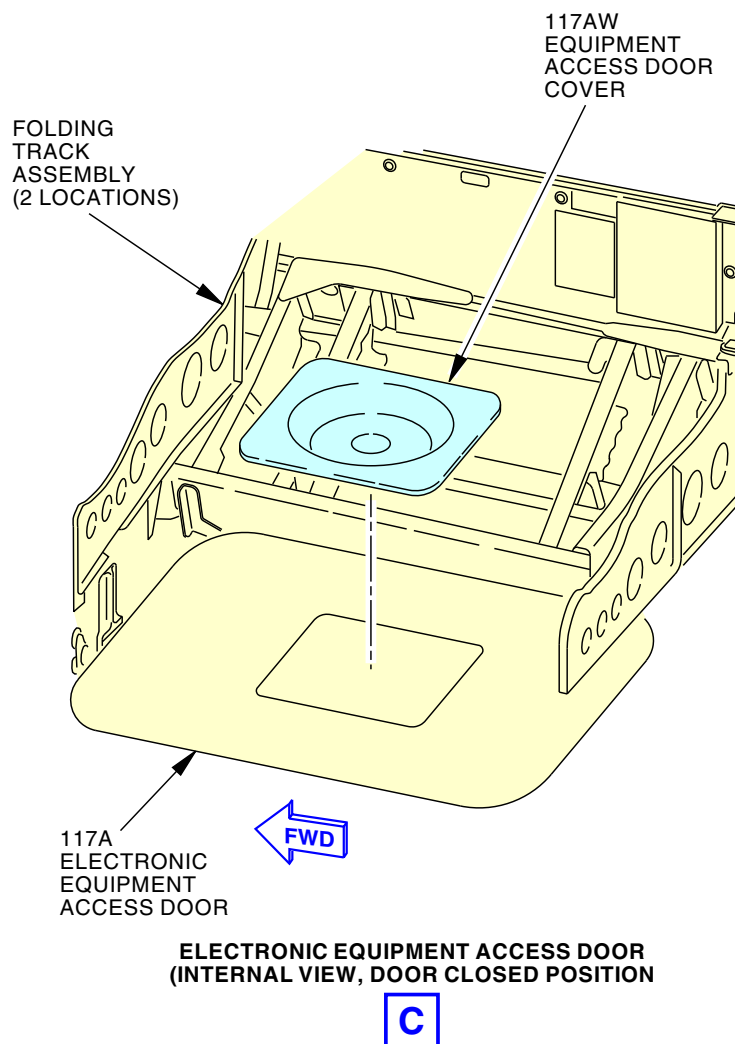

2410617 S00061525998_V2

Fuselage Section 41 - Access Door and Panels
Figure 205/06-41-00-990-805 (Sheet 2 of 2)

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-41-00

Page 210
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-41-00-800-803

4. Fuselage Major Zones 100, 200 and 800 - Sections 43 and 44
(Figure 206 and Figure 207)

A. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage
800	Doors
821	Forward Cargo Door

B. Procedure

SUBTASK 06-41-00-800-003

- (1) This task shows major zones 100, 200 and 800, and subzones at fuselage sections 43 and 44 for the passenger and cargo compartment doors, emergency hatches and access panels installed on the left and right sides of the airplane.

————— END OF TASK —————

EFFECTIVITY
SIA ALL


D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-41-00

Page 211
Sep 15/2021

BOEING
737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

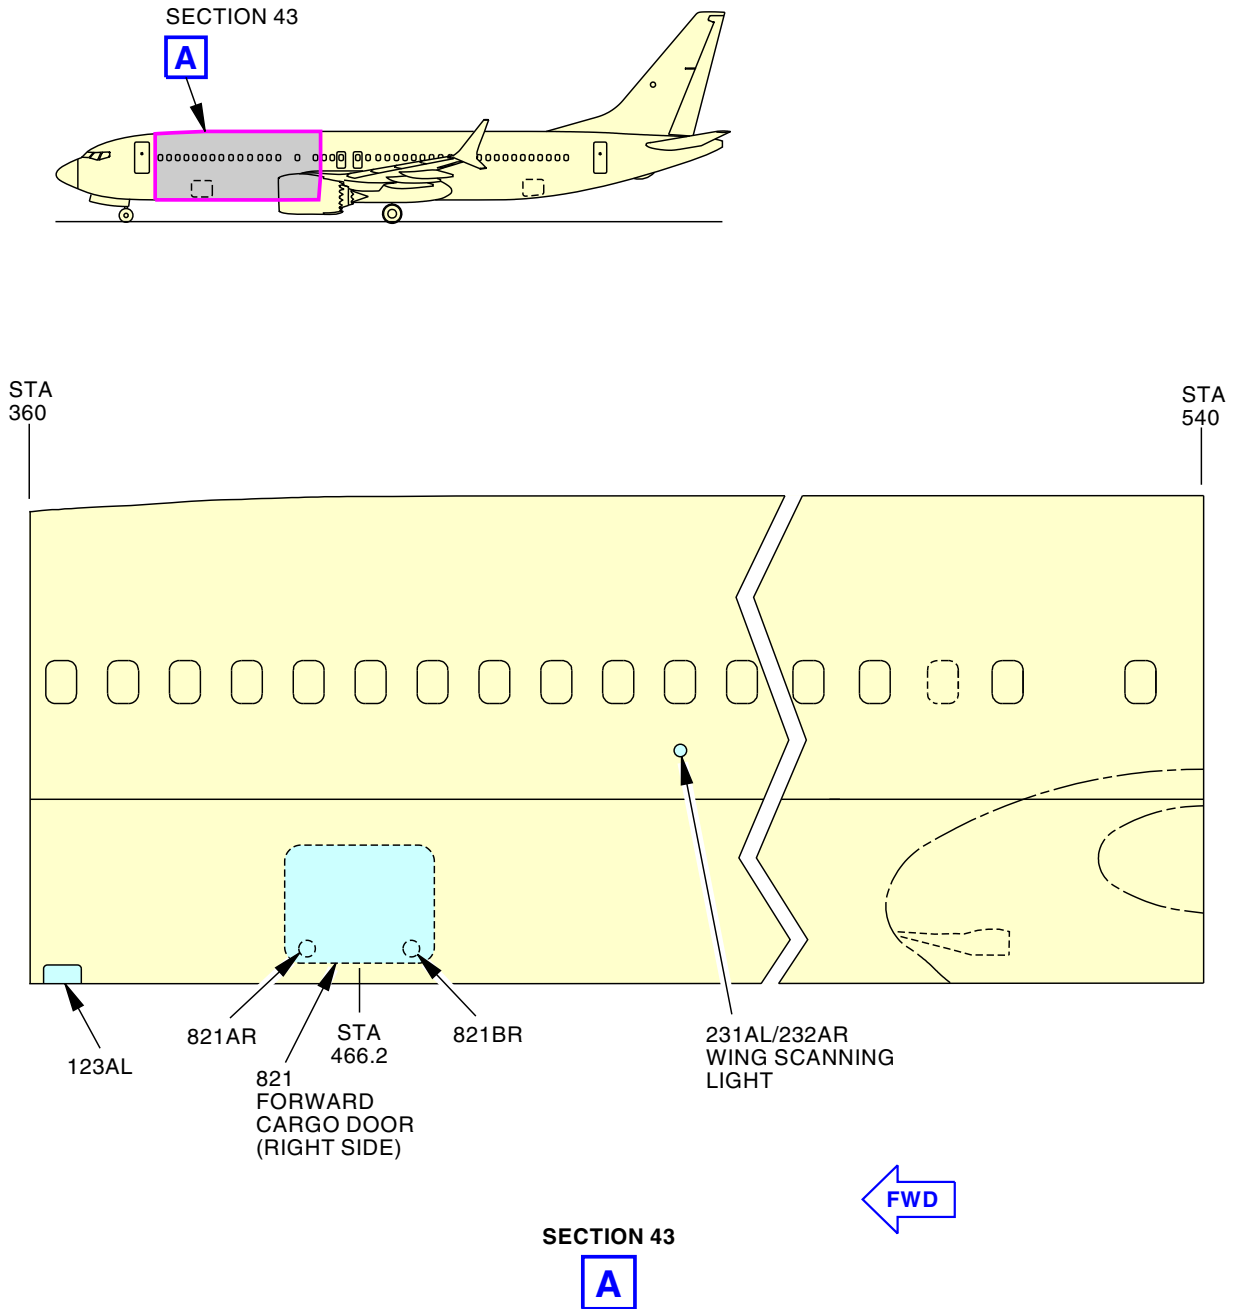

2410618 S00061526000_V3

Fuselage Section 43 - Access Doors and Panels
Figure 206/06-41-00-990-806

EFFECTIVITY
SIA ALL



D633AM101-SIA

06-41-00

Page 212
May 15/2022



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

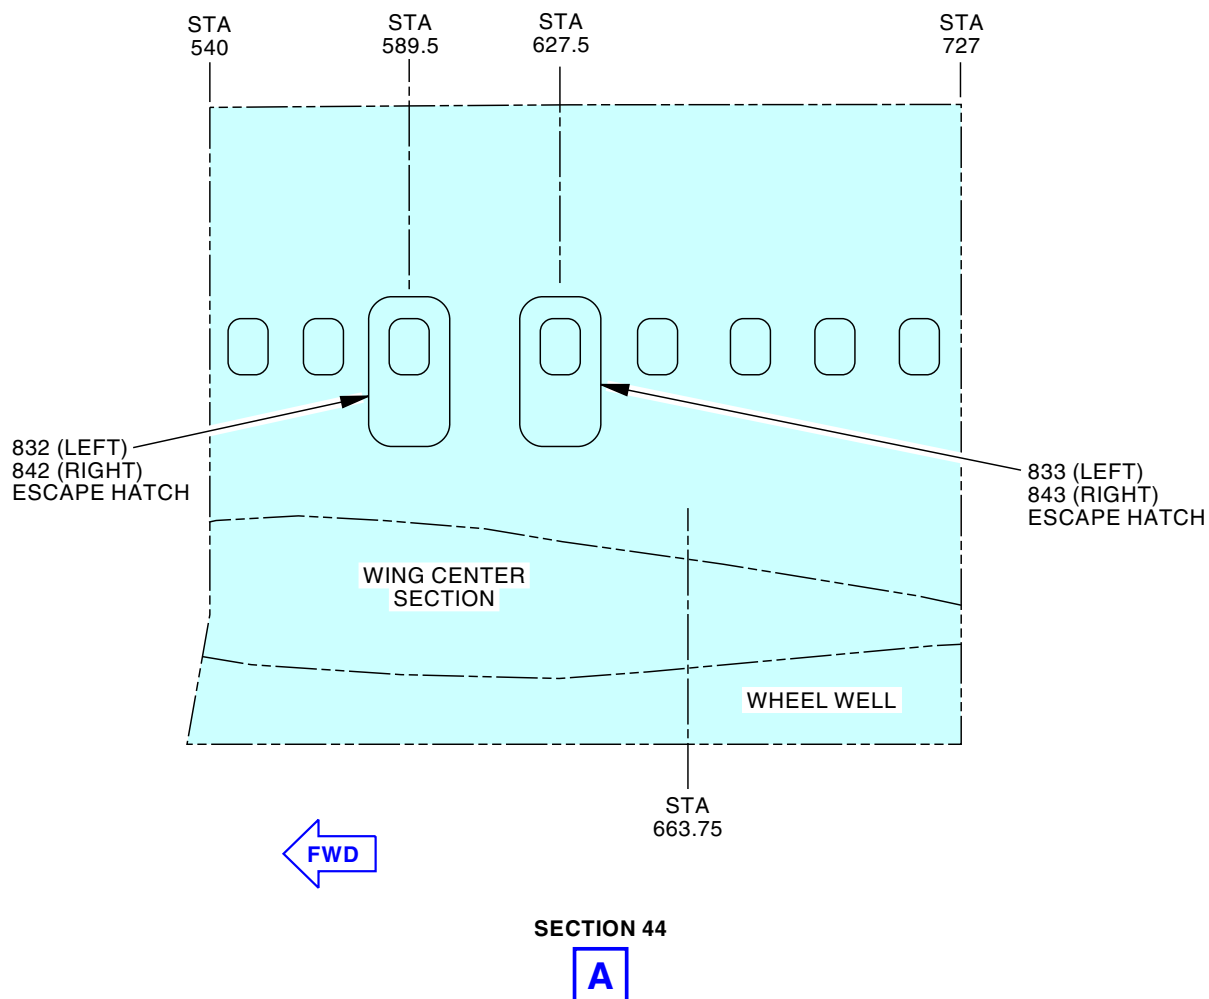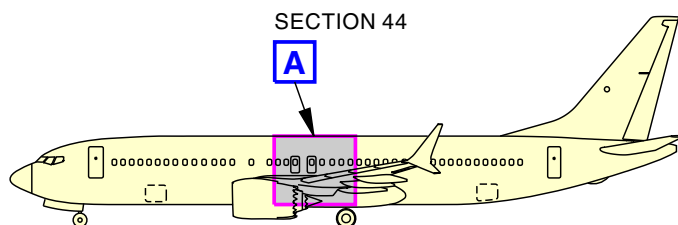

2410619 S00061526001_V2

Fuselage Section 44 - Access Doors and Panels
Figure 207/06-41-00-990-807

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-41-00

Page 213
May 15/2022



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-41-00-800-804

5. Fuselage Major Zones 100, 200 and 800 - Section 47
(Figure 208)

A. Procedure

SUBTASK 06-41-00-800-004

- (1) This task shows major zones 100, 200 and 800, and subzones at section 47 for the passenger and cargo compartment doors and access panels installed on the left and right sides of the airplane.

———— **END OF TASK** ————

EFFECTIVITY
SIA ALL

D633AM101-SIA



ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-41-00

Page 214
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

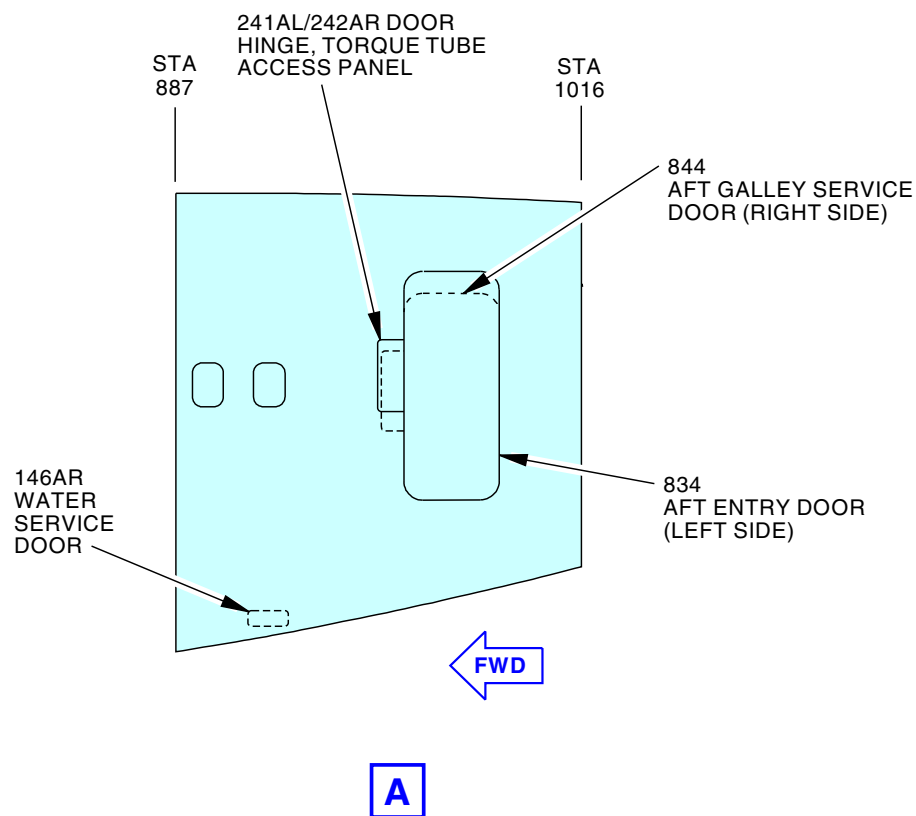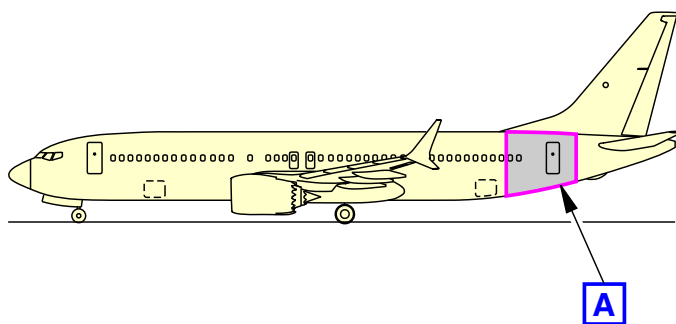

2410620 S00061526003_V1

Fuselage Section 47 - Access Doors and Panels
Figure 208/06-41-00-990-808

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-41-00

Page 215
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

TASK 06-41-00-800-805

6. Fuselage Major Zones 100, 200 and 800 - Section 46
(Figure 209)

A. Procedure

SUBTASK 06-41-00-800-005

- (1) This task shows major zones 100, 200 and 800, and subzones at section 46 for the passenger and cargo compartment doors and access panels installed on the left and right sides of the airplane.

———— **END OF TASK** ————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-41-00

Page 216
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

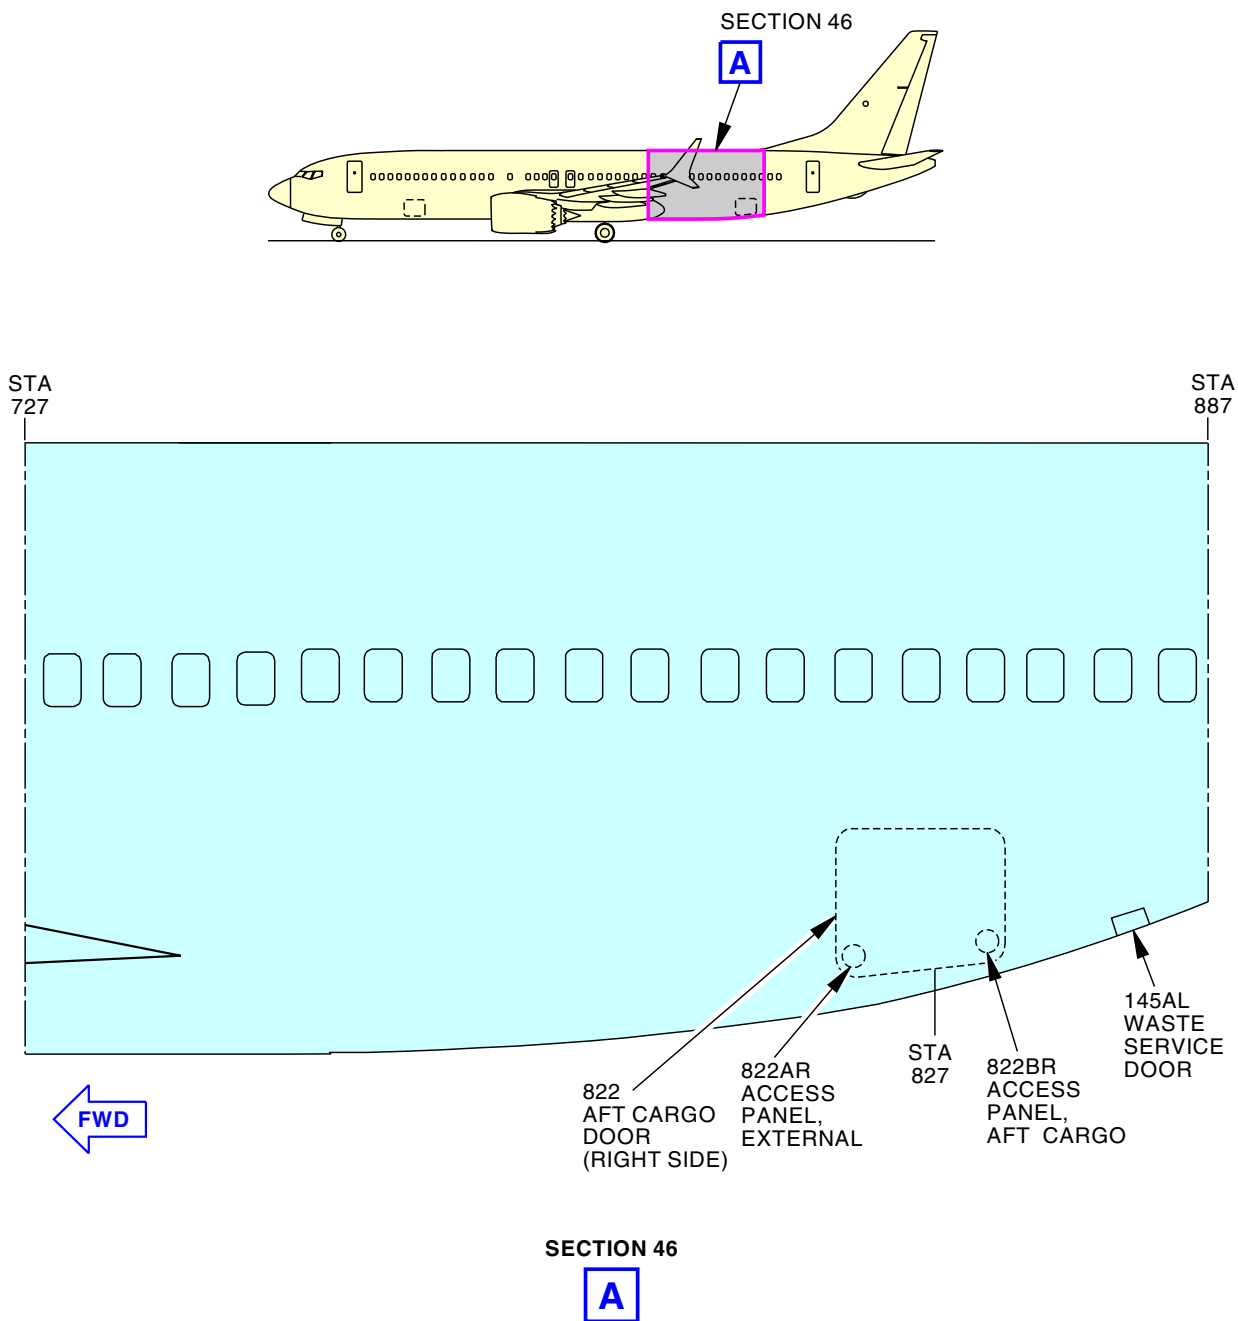

3002369 S0000778108_V1

Fuselage Section 46 - Access Doors and Panels
Figure 209/06-41-00-990-809

EFFECTIVITY
SIA ALL

D633AM101-SIA

06-41-00

Page 217
May 15/2022



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

EMPENNAGE (MAJOR ZONE 300) ACCESS DOORS AND PANELS - MAINTENANCE PRACTICES

1. General

- A. This task shows major zone 300 and subzones for the access doors and panels for the vertical and horizontal stabilizers at fuselage section 48. The subzones for major zone 300 in this task are as follows:
- (1) Subzone 310 - Section 48
 - (2) Subzone 320 - Vertical Stabilizer and Rudder
 - (3) Subzone 330 - Left Horizontal Stabilizer and Elevator
 - (4) Subzone 340 - Right Horizontal Stabilizer and Elevator
- B. Each subzone is divided into zones that are identified with the first two numbers of the subzone followed by a number that is not zero.
- C. Access doors and panels in a zone are identified by the zero number and a two or three letter suffix. This alphanumeric label is different for each access door or panel.

TASK 06-42-00-800-801

2. Finding an Access Door or Panel in the Empennage

(Figure 201, Figure 202, Figure 203, Figure 204, Figure 205, Figure 206, Figure 207)

A. Procedure

SUBTASK 06-42-00-800-001

- (1) In the table below, find the number of the applicable access door or panel.

Table 201 Empennage Access Doors and Panels

Number	Name/Location
311BL	Stabilizer Trim Access Door
315A	APU Cowl Door
315B	Drain Mast
317BL	Tailcone Access Door
317C	APU EXHAUST FAIRING
317FL	TAIL CONE LIGHT ASSY
318BR	Tailcone Access Door
318FR	TAIL CONE LIGHT ASSY
321A	Vertical Fin, Dorsal Fin
322A	Vertical Fin, Fixed Leading Edge
322AL	Vertical Fin, Fixed Leading Edge
322AR	Vertical Fin, Fixed Leading Edge
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322C	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge
323AL	Vertical Fin, Front Spar Access Door

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-42-00

Page 201
Jan 15/2023



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Empennage Access Doors and Panels (Continued)

Number	Name/Location
323AR	Vertical Fin, Front Spar Access Door
323BL	Vertical Fin, Forward Fin Access Door
323BR	Vertical Fin, Forward Fin Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door
323DL	Vertical Fin, Access
323EL	Vertical Fin, Access
323FL	Vertical Fin, Access
323GL	Vertical Fin, Access
324AAL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324AAR	Rudder Nose Cover/Rudder Hinge No. 1 At Rudder Station 56.48
324ABL	Panel Assy - Trailing Edge, Beam Seal, Vertical Fin
324ABR	Rudder Nose Cover/Rudder Hinge No. 2 At Rudder Station 66.42
324ACL	Rudder Nose Cover/Rudder Hinge No. 8 At Rudder Station 276.24
324ACR	Upper Rudder Gap Cover At Rudder Station 164.90
324ADL	Rudder Nose Cover/Rudder Hinge No. 7 At Rudder Station 257.92
324ADR	Lower Rudder Gap Cover
324AEL	Rudder Nose Cover/Rudder Hinge No. 6 At Rudder Station 239.61
324AFL	Rudder Nose Cover/Rudder Hinge No. 5 At Rudder Station 184.67
324AGL	Upper Rudder Gap Cover At Rudder Station 164.90
324AHL	Rudder Nose Fairing/Rudder Hinge No. 4 At Rudder Station 129.74.
324AJL	Rudder Nose Fairing/Rudder Hinge No. 3 At Rudder Station 70.65
324AKL	Rudder Nose Fairing/Rudder Hinge No. 2 At Rudder Station 53.48
324AL	Vertical Fin, Aft Fin Access Door
324ALL	Rudder Nose Cover/Rudder Hinge No. 1 At Rudder Station 6.96
324AML	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324AR	Vertical Fin, Aft Fin Access Door
324AXL	Lower Rudder Gap Cover
324BL	Vertical Fin, Trailing Edge Access
324BR	Vertical Fin, Trailing Edge Access
324CL	Vertical Fin, Access
324DL	Trailing Edge Access
324DR	Vertical Fin, Trailing Edge Access
324EL	Vertical Fin, Access

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-42-00

Page 202
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Empennage Access Doors and Panels (Continued)

Number	Name/Location
324ER	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324FL	Vertical Fin, Access
324FR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324GR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324HL	Vertical Fin, Access
324HR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324JL	Vertical Fin, Access
324JR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324KL	Vertical Fin, Access
324LL	Vertical Fin, Access
324ML	Vertical Fin, Access
324NL	Vertical Fin, Access
324PL	Vertical Fin, Access
324QL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324RL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324SL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324TL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324UL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324VL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324WL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324YL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ZL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
326A	Vertical Fin, Vertical Fin Tip
331A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
331AL	PANEL ASSY - HORIZONTAL STAB. STRAKELET SKIN
331AZ	Horizontal Stabilizer, Access Panel, Inboard L.E. Closure Rib
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331BZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
331DL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331DZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
331EL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-42-00

Page 203
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Empennage Access Doors and Panels (Continued)

Number	Name/Location
331EZ	Horizontal Stabilizer, Access Panel, Inboard L.E. Closure Rib
331FZ	Horizontal Stabilizer, Access Panel, Inboard L.E. Closure Rib
332AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
332AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
332BB	Horizontal Stabilizer, Access Door
332CB	Horizontal Stabilizer, Access Door
332DB	Horizontal Stabilizer, Access Door
332EB	Horizontal Stabilizer, Access Door
332FB	Horizontal Stabilizer, Access Door
332GB	Horizontal Stabilizer, Access Door
332HB	Horizontal Stabilizer, Access Door
332JB	Horizontal Stabilizer, Access Door
332KB	Horizontal Stabilizer, Access Door
332LB	Horizontal Stabilizer, Access Door
332MB	Horizontal Stabilizer, Access Door
332NB	Horizontal Stabilizer, Access Door
332PB	Horizontal Stabilizer, Access Door
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333AZ	Horizontal Stabilizer, Access Panel, Inboard T.E. Closure Rib
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
334AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334AT	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334BB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334BT	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334CB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334DB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334DT	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334ET	Horizontal Stabilizer, Seal, Trailing Edge to Elevator

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-42-00

Page 204
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Empennage Access Doors and Panels (Continued)

Number	Name/Location
334FB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334FT	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334GB	Horizontal Stabilizer, Elevator Hinge Cover
334GT	Horizontal Stabilizer, Elevator Hinge Cover
334HB	Horizontal Stabilizer, Elevator Hinge Cover
334JB	Horizontal Stabilizer, Elevator Hinge Cover
334JT	Horizontal Stabilizer, Elevator Hinge Cover
334KB	Horizontal Stabilizer, Elevator Hinge Cover
334LB	Horizontal Stabilizer, Elevator Hinge Cover
334MB	Horizontal Stabilizer, Elevator Hinge Cover
334MT	Horizontal Stabilizer, Elevator Hinge Cover
334NB	Horizontal Stabilizer, Elevator Hinge Cover
334NT	Horizontal Stabilizer, Elevator Hinge Cover
334PT	Horizontal Stabilizer, Tab Control Rod Fairing
334RB	Horizontal Stabilizer, Elevator Trim Hinge Cover
334RT	Horizontal Stabilizer, Elevator Trim Hinge Cover
334SB	Horizontal Stabilizer, Elevator Trim Hinge Cover
334ST	Horizontal Stabilizer, Elevator Trim Hinge Cover
334TB	Horizontal Stabilizer, Elevator Trim Hinge Cover
334TT	Horizontal Stabilizer, Elevator Trim Hinge Cover
334UB	Horizontal Stabilizer, Elevator Trim Hinge Cover
334UT	Horizontal Stabilizer, Elevator Trim Hinge Cover
341AR	PANEL ASSY - HORIZONTAL STAB. STRAKELET SKIN
341AZ	Horizontal Stabilizer, Access Panel - Inbd L.E. Closure Rib
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341BZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
341DR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341DZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
341ER	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341EZ	Horizontal Stabilizer, Access Panel, Inboard L.E. Closure Rib
341FZ	Horizontal Stabilizer, Access Panel, Inboard L.E. Closure Rib
342AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-42-00

Page 205
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Empennage Access Doors and Panels (Continued)

Number	Name/Location
342AT	Gap Cover, Horizontal Stabilizer
342BB	Horizontal Stabilizer, Access Door
342CB	Horizontal Stabilizer, Access Door
342DB	Horizontal Stabilizer, Access Door
342EB	Horizontal Stabilizer, Access Door
342FB	Horizontal Stabilizer, Access Door
342GB	Horizontal Stabilizer, Access Door
342HB	Horizontal Stabilizer, Access Door
342JB	Horizontal Stabilizer, Access Door
342KB	Horizontal Stabilizer, Access Door
342LB	Horizontal Stabilizer, Access Door
342MB	Horizontal Stabilizer, Access Door
342NB	Horizontal Stabilizer, Access Door
342PB	Horizontal Stabilizer, Access Door
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343AT	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343AZ	Horizontal Stabilizer, Access Panel - Inbd T.E. Closure Rib
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area
344AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344AT	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344BB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344BT	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344CB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344DB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344DT	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344ET	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344FB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344FT	Horizontal Stabilizer, Seal, Trailing Edge To Elevator
344GB	Horizontal Stabilizer, Hinge Cover, Elevator Station 24.09

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-42-00

Page 206
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Empennage Access Doors and Panels (Continued)

Number	Name/Location
344GT	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 39.02
344HB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 66.54
344JB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 121.59
344JT	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 121.59
344KB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 176.64
344LB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 213.32
344MB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 250.04
344MT	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 250.04
344NB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 265.45
344NT	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 265.45
344PT	Horizontal Stabilizer, Tab Control Rod Fairing, Elevator Sta 34.0
344RB	Horizontal Stabilizer, Elevator Trim Hinge Cover Access
344RT	Horizontal Stabilizer, Elevator Trim Hinge Cover Access
344SB	Horizontal Stabilizer, Elevator Trim Hinge Cover Access
344ST	Horizontal Stabilizer, Elevator Trim Hinge Cover Access
344TB	Horizontal Stabilizer, Elevator Trim Hinge Cover Access
344TT	Horizontal Stabilizer, Elevator Trim Hinge Cover
344UB	Horizontal Stabilizer, Elevator Trim Hinge Cover
344UT	Horizontal Stabilizer, Elevator Trim Hinge Cover Access
345A	Horizontal Stabilizer, Removable Stabilizer Tip

———— **END OF TASK** ————

EFFECTIVITY
SIA ALL


D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-42-00

Page 207
Sep 15/2021

BOEING
737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

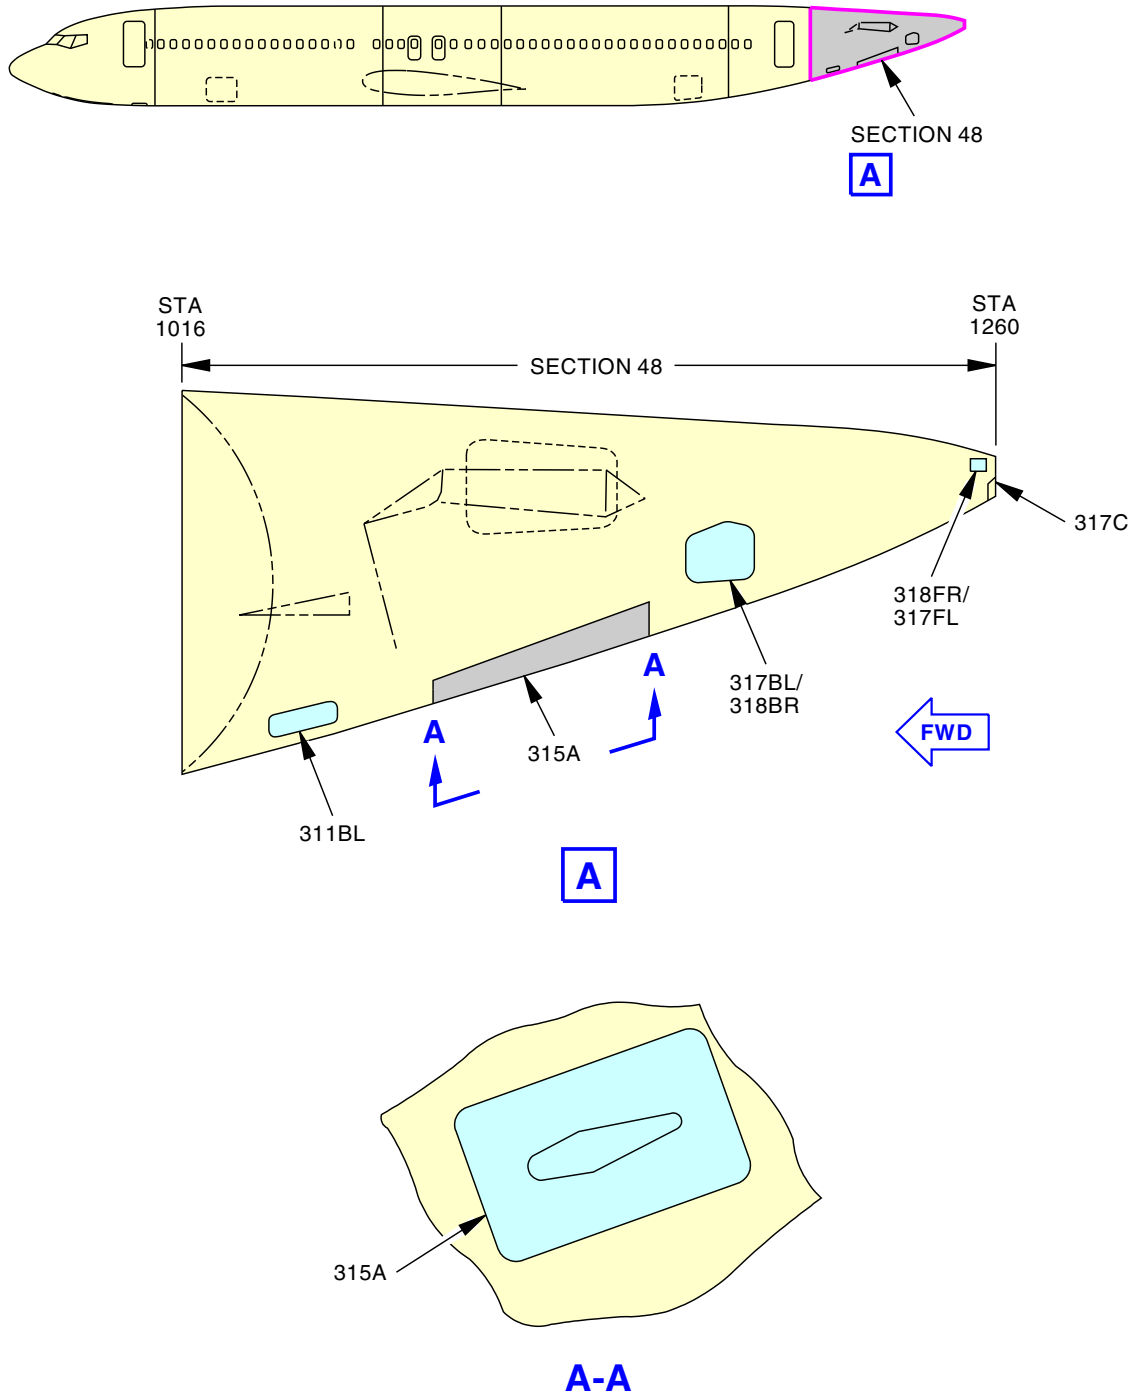

2410628 S00061526016_V1

Zone 310 - Fuselage Section 48 Access Doors and Panels
Figure 201/06-42-00-990-807

EFFECTIVITY	
SIA ALL	

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-42-00

Page 208
Sep 15/2021



2410622 S00061526010_V2

Zone 320 - Vertical Fin, Left Side
Figure 202/06-42-00-990-801


— EFFECTIVITY
SIA ALL

06-42-00

Page 209
Sep 15/2021

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

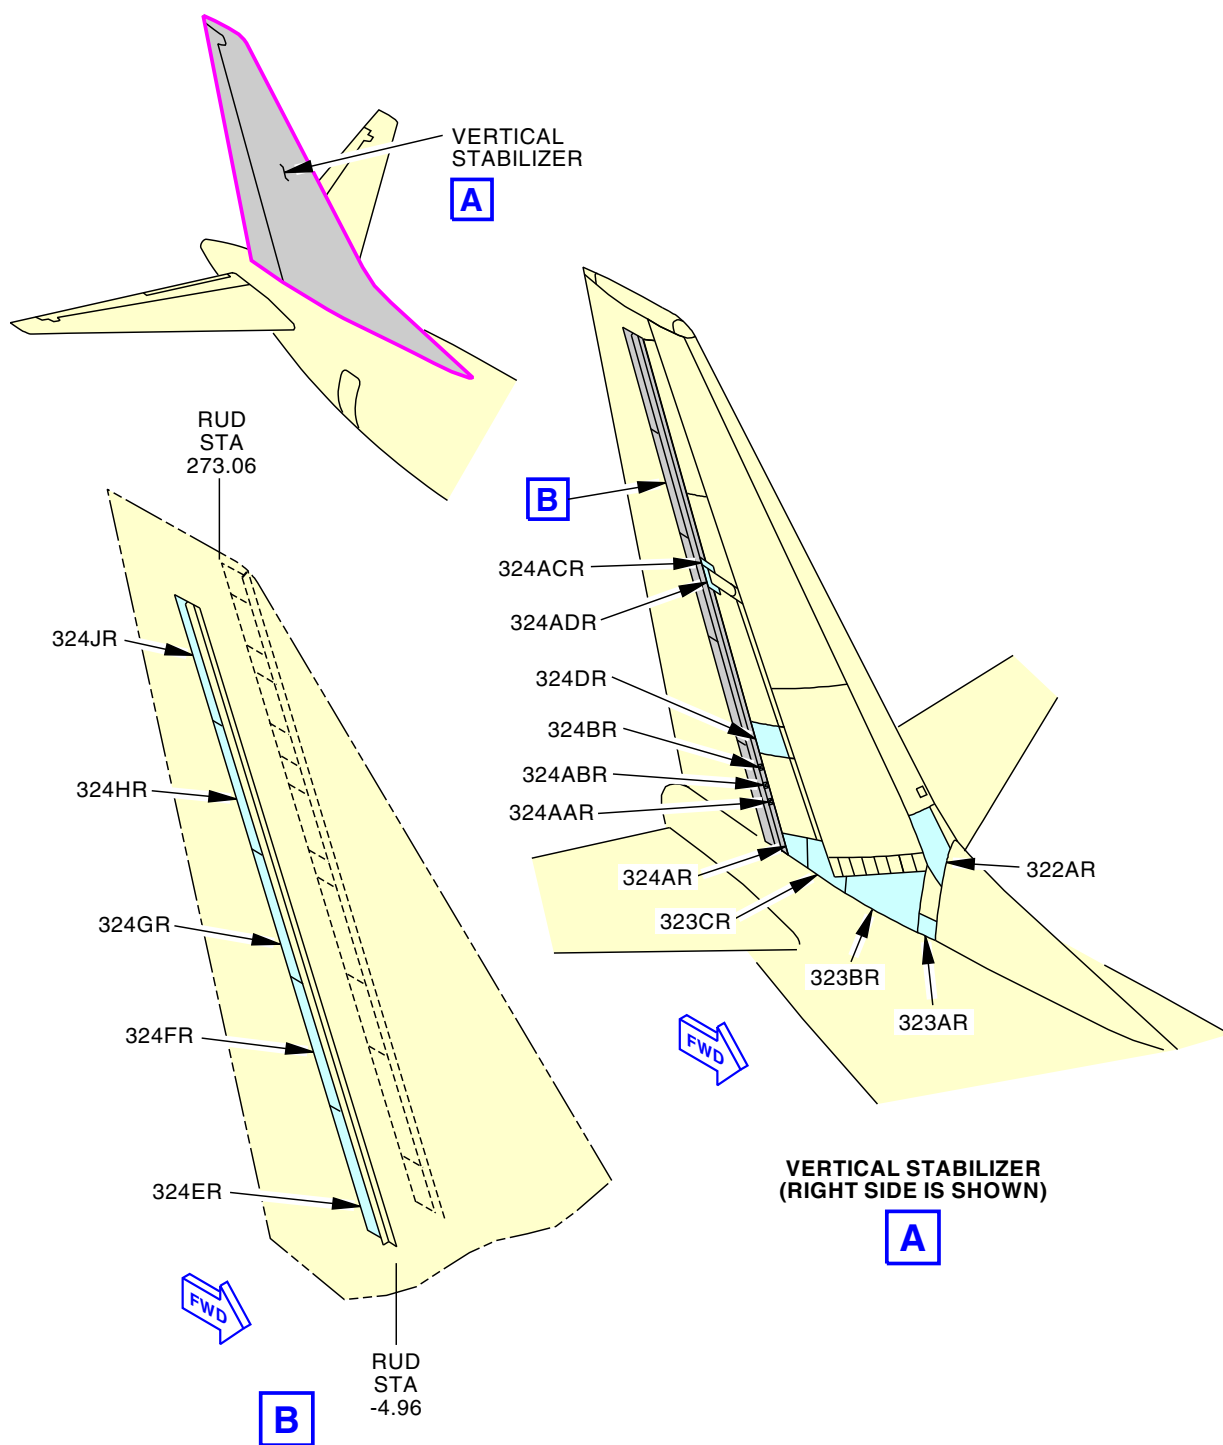

2410623 S00061526011_V1


Zone 320 - Vertical Fin, Right Side
Figure 203/06-42-00-990-802

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-42-00

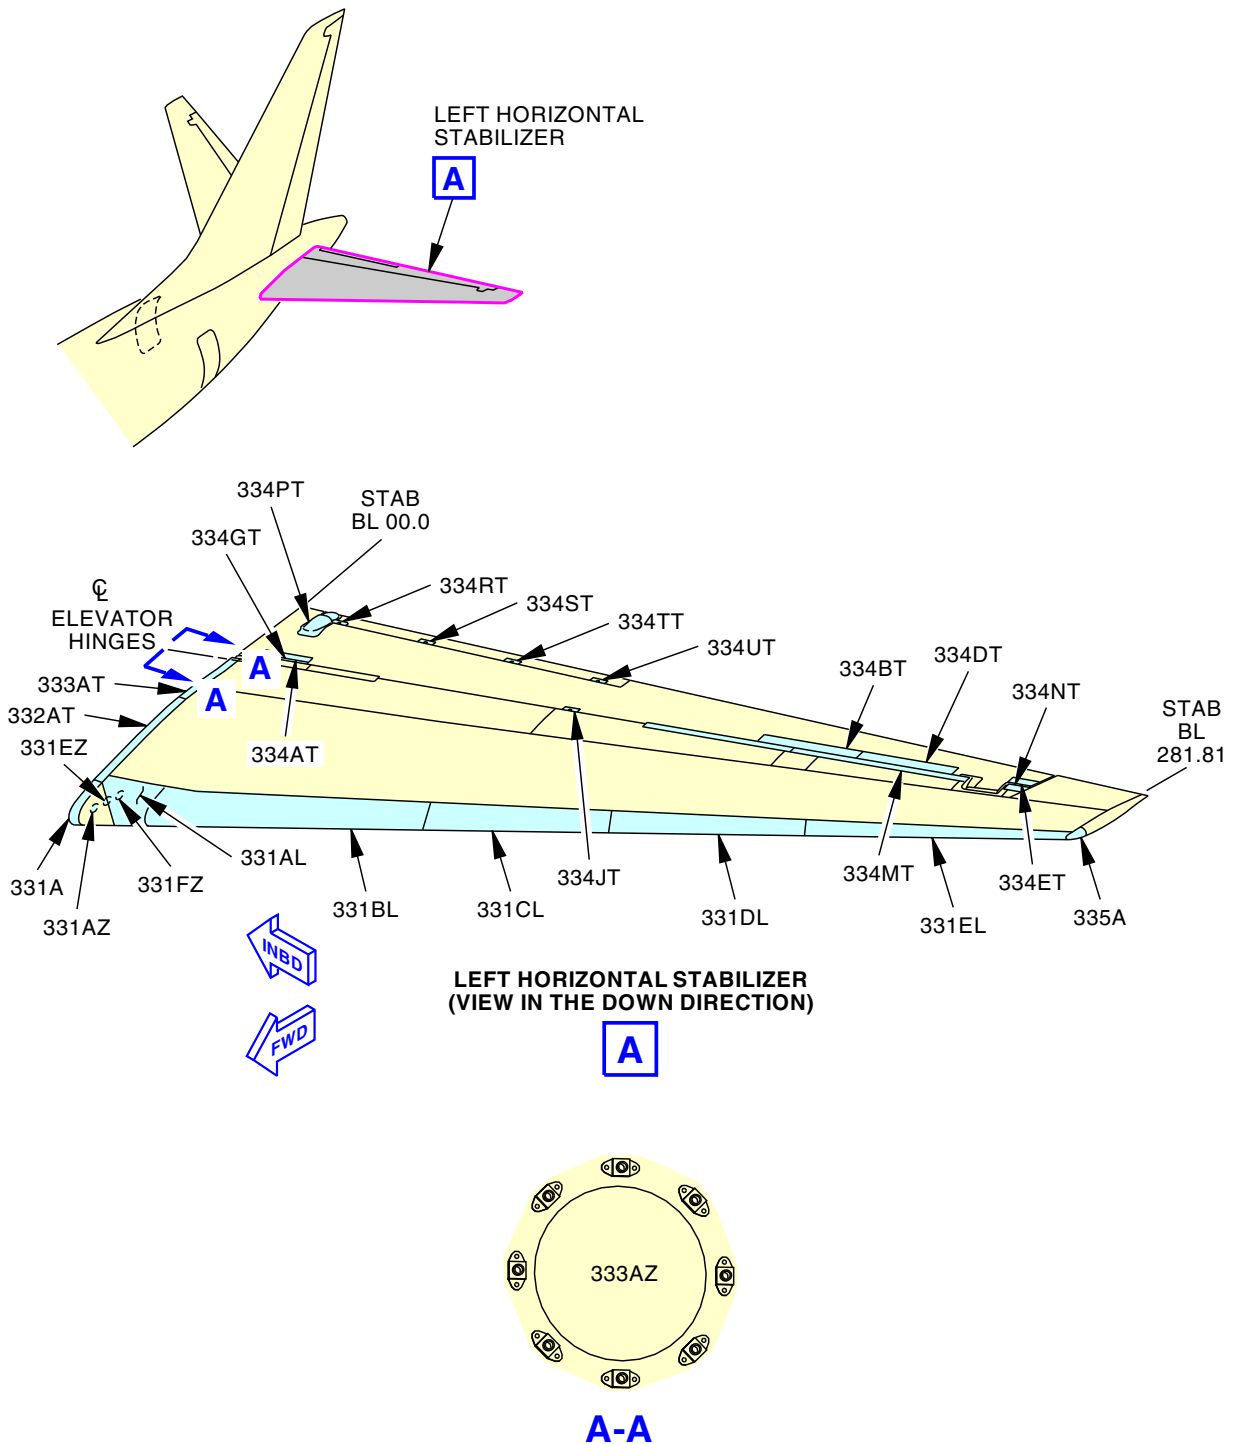

2410624 S00061526012_V1

Zone 330 - Horizontal Stabilizer Upper Access Doors and Panels
Figure 204/06-42-00-990-803

EFFECTIVITY	
SIA ALL	

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-42-00

Page 211
Sep 15/2021



ECCN 9E991 BOEING PROPRIETARY - See title page for details

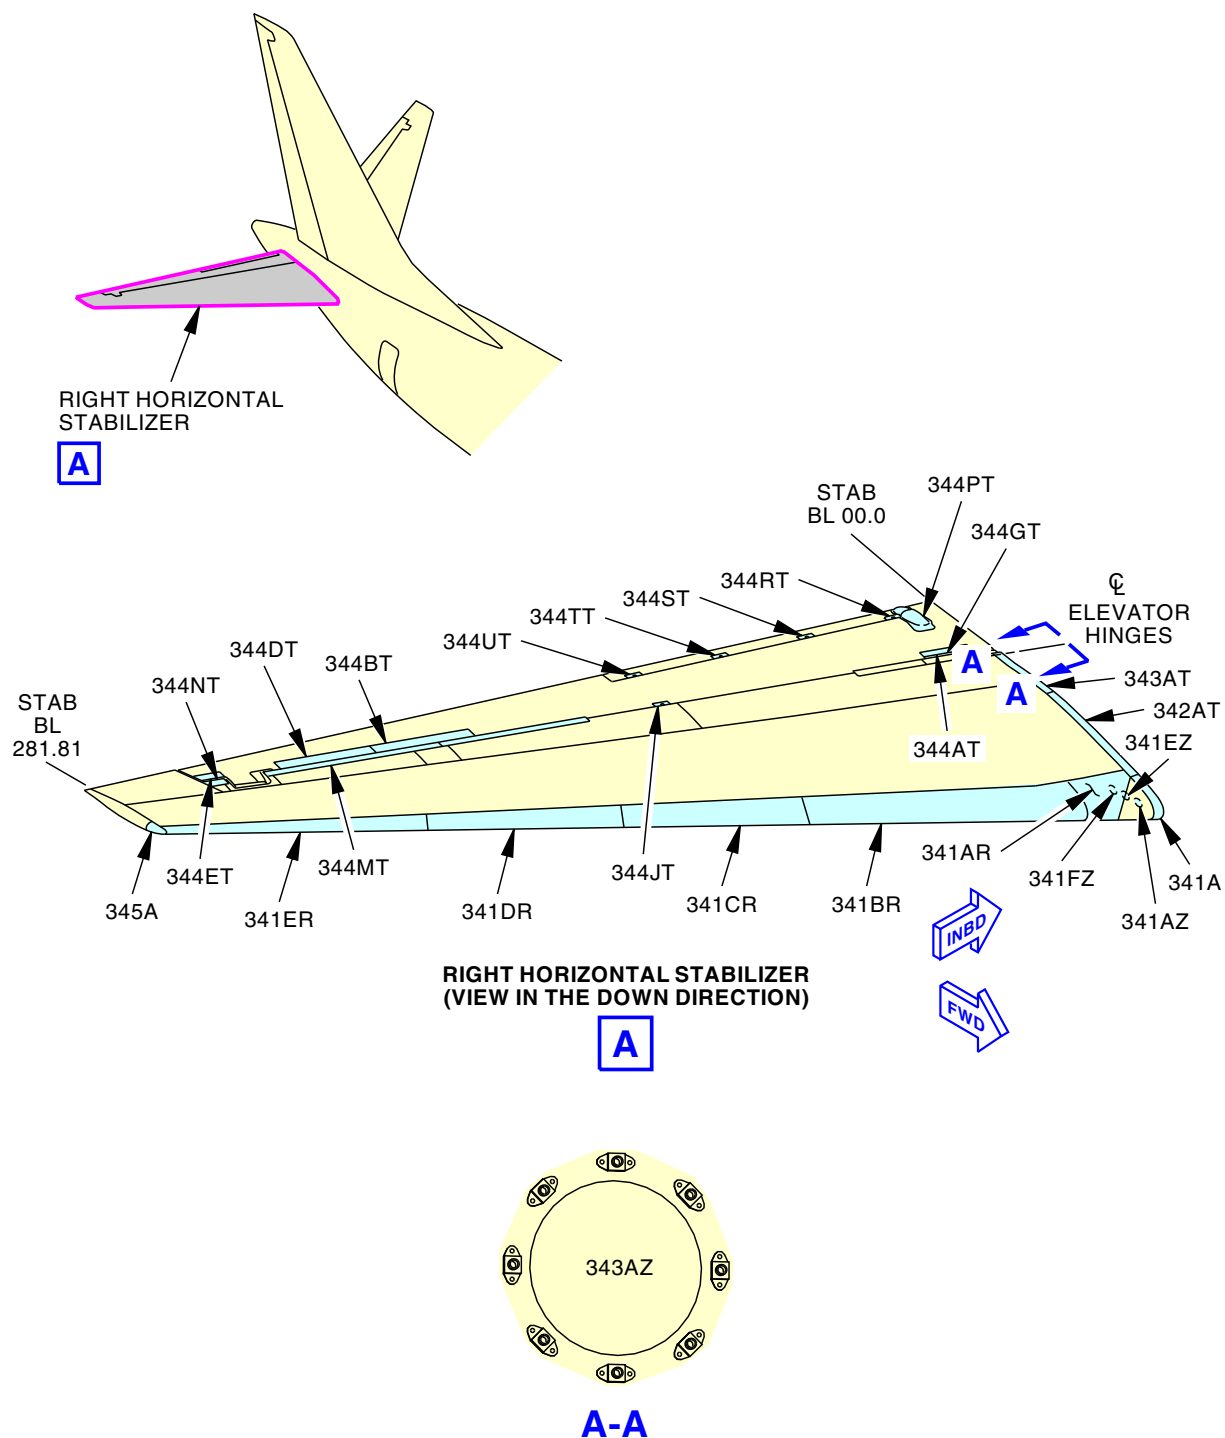

2410626 S00061526014_V1


Zone 340 - Horizontal Stabilizer Upper Access Doors and Panels
Figure 206/06-42-00-990-805

EFFECTIVITY	
SIA ALL	

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-42-00



Zone 340 - Horizontal Stabilizer Lower Access Doors and Panels
Figure 207/06-42-00-990-806

06-42-00

D633AM101-SIA



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

ENGINE AND NACELLE STRUT (MAJOR ZONE 400) ACCESS DOORS AND PANELS - MAINTENANCE PRACTICES

1. General

- A. This procedure has this task:
- (1) Engine and nacelle strut access doors and panels
- B. Major zone 400 contains the power plants and nacelle struts. Major zone 400 includes the subzones shown below, which are identified with two numbers followed by a zero.
- (1) Subzone 410 - Left Power Plant
 - (2) Subzone 420 - Right Power Plant
 - (3) Subzone 430 - Left Nacelle Strut
 - (4) Subzone 440 - Right Nacelle Strut
- C. Each subzone is divided into zones that are identified with the first two numbers of the subzone followed by a number that is not zero.
- D. Access doors and panels in a zone are identified by the zone number and a two-letter or three-letter suffix. This alpha-numeric label is different for each access door or panel.

TASK 06-43-00-800-801

2. Engine and Nacelle Strut Access Doors and Panels

(Figure 201)

A. Location Zones

Zone	Area
------	------

400	Powerplant and Nacelle Struts
-----	-------------------------------

B. Engine and Nacelle Strut Access Doors and Panels

SUBTASK 06-43-00-800-001

- (1) In the table below, find the number of the applicable access door or panel.

Table 201 Engine and Nacelle Strut Access Doors and Panels

Number	Name/Location
412	NOSE INLET COWL, ENGINE 1 - LEFT SIDE
412AB	Panel Assy - Inlet Engine Anti-Ice Exhaust, Engine 1
412AT	T12 Access Door, Engine 1
412BB	Panel Assy - Inlet Engine Anti-Ice Access, Engine 1
413	Left Fan Cowl, Engine 1
413AL	IDG Access Door, Engine 1
414	Right Fan Cowl, Engine 1
414AR	Oil Tank Access / Pressure Relief Door, Engine 1
415	Left Thrust Reverser, Engine 1
415AL	Left Forward Thrust Reverser Hinge Fairing, Engine 1
415BL	Left Aft Thrust Reverser Hinge Fairing, Engine 1
415DL	Left Thrust Reverser Actuator (Upper), Engine 1

EFFECTIVITY
SIA ALL

06-43-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Page 201
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Engine and Nacelle Strut Access Doors and Panels (Continued)

Number	Name/Location
415EL	Left Thrust Reverser Actuator (Middle), Engine 1
415FL	Left Thrust Reverser Actuator (Lower), Engine 1
416	Right Thrust Reverser, Engine 1
416AR	Right Forward Thrust Reverser Hinge Fairing, Engine 1
416BR	Right Aft Thrust Reverser Hinge Fairing, Engine 1
416DR	Right Thrust Reverser Actuator (Upper), Engine 1
416ER	Right Thrust Reverser Actuator (Middle), Engine 1
416FR	Right Thrust Reverser Actuator (Lower), Engine 1
422	NOSE INLET COWL, ENGINE 2 - RIGHT SIDE
422AB	Panel Assy - Inlet Access, Engine 2
422AT	T12 Access Door, Engine 2
422BB	Panel Assy - Inlet Engine Anti-Ice Access, Engine 2
423	Left Fan Cowl, Engine 2
423AL	IDG Access Door, Engine 2
424	Right Fan Cowl, Engine 2
424AR	Oil Tank Access / Pressure Relief Door, Engine 2
425	Left Thrust Reverser, Engine 2
425AL	Left Forward Thrust Reverser Hinge Fairing, Engine 2
425BL	Left Aft Thrust Reverser Hinge Fairing, Engine 2
425DL	Left Thrust Reverser Actuator (Upper), Engine 2
425EL	Left Thrust Reverser Actuator (Middle), Engine 2
425FL	Left Thrust Reverser Actuator (Lower), Engine 2
426	Right Thrust Reverser, Engine 2
426AR	Right Forward Thrust Reverser Hinge Fairing, Engine 2
426BR	Right Aft Thrust Reverser Hinge Fairing, Engine 2
426DR	Right Thrust Reverser Actuator (Upper), Engine 2
426ER	Right Thrust Reverser Actuator (Middle), Engine 2
426FR	Right Thrust Reverser Actuator (Lower), Engine 2
431AT	Forward Strut Fairing, Thumbnail Fairing, Strut 1
431AZ	Forward Strut Fairing, Forward Fuel/Hydraulic Tube Shroud Access, Strut 1
431BL	Forward Strut Fairing, Left Mid Strut Fairing, Strut 1
431BR	Forward Strut Fairing, Right Mid Strut Fairing, Strut 1
431BT	Forward Strut Fairing, Pressure Relief Door, Strut 1
431BZ	Forward Strut Fairing, Aft Fuel/Hydraulic Tube Shroud Access, Strut 1

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-43-00

Page 202
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Engine and Nacelle Strut Access Doors and Panels (Continued)

Number	Name/Location
431CL	Forward Strut Fairing, Left Overwing Fairing, Strut 1
431CR	Forward Strut Fairing, Right Overwing Fairing, Strut 1
431CT	Forward Strut Fairing, Right Mid-Strut Fairing Pressure Relief Door, Strut 1
431DL	Forward Strut Fairing, Left Underwing Fairing, Strut 1
431DR	Forward Strut Fairing, Right Underwing Fairing, Strut 1
433CT	Strut, Upper Spar Web, Strut 1
433DT	Strut, Upper Spar Web, Strut 1
434AL	Aft Strut Fairing, Left Panel, Strut 1
434AR	Aft Strut Fairing, Right Panel, Strut 1
434CL	Aft Strut Fairing, Left Access To Fuel Door, Strut 1
441AT	Forward Strut Fairing, Thumbnail Fairing, Strut 2
441AZ	Forward Strut Fairing, Forward Fuel/Hydraulic Tube Shroud Access, Strut 2
441BL	Forward Strut Fairing, Left Mid Strut Fairing, Strut 2
441BR	Forward Strut Fairing, Right Mid Strut Fairing, Strut 2
441BT	Forward Strut Fairing, Pressure Relief Door, Strut 2
441BZ	Forward Strut Fairing, Aft Fuel/Hydraulic Tube Shroud Access, Strut 2
441CL	Forward Strut Fairing, Left Overwing Fairing, Strut 2
441CR	Forward Strut Fairing, Right Overwing Fairing, Strut 2
441CT	Forward Strut Fairing, Forward Fuel/Hydraulic Tube Shroud Access, Strut 2
441DL	Forward Strut Fairing, Left Underwing Fairing, Strut 2
441DR	Forward Strut Fairing, Right Underwing Fairing, Strut 2
443CT	Strut, Upper Spar Web, Strut 2
443DT	Strut, Upper Spar Web, Strut 2
444AL	Aft Strut Fairing, Left Panel, Strut 2
444AR	Aft Strut Fairing, Right Panel, Strut 2
444CR	Aft Strut Fairing, Right Access To Fuel Door, Strut 2

———— **END OF TASK** ————



EFFECTIVITY
SIA ALL

06-43-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Page 203
Sep 15/2021

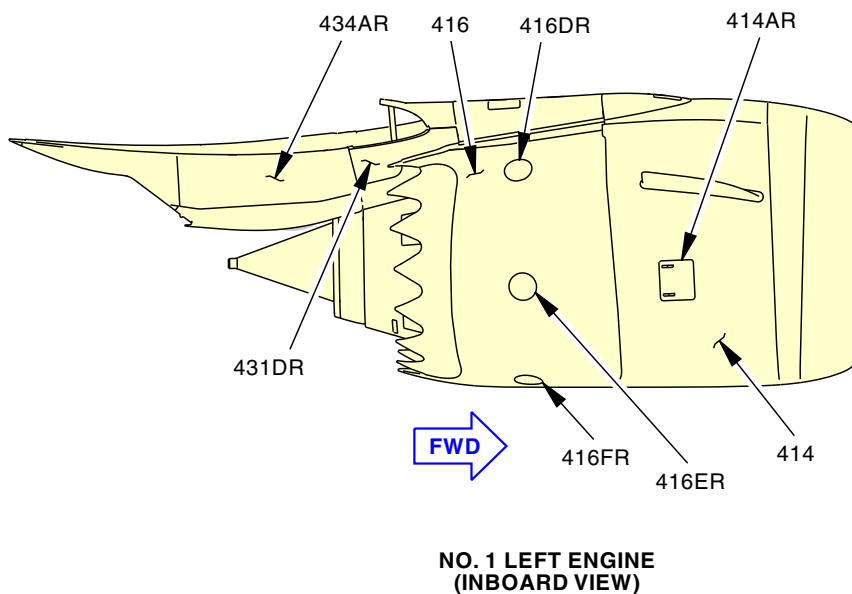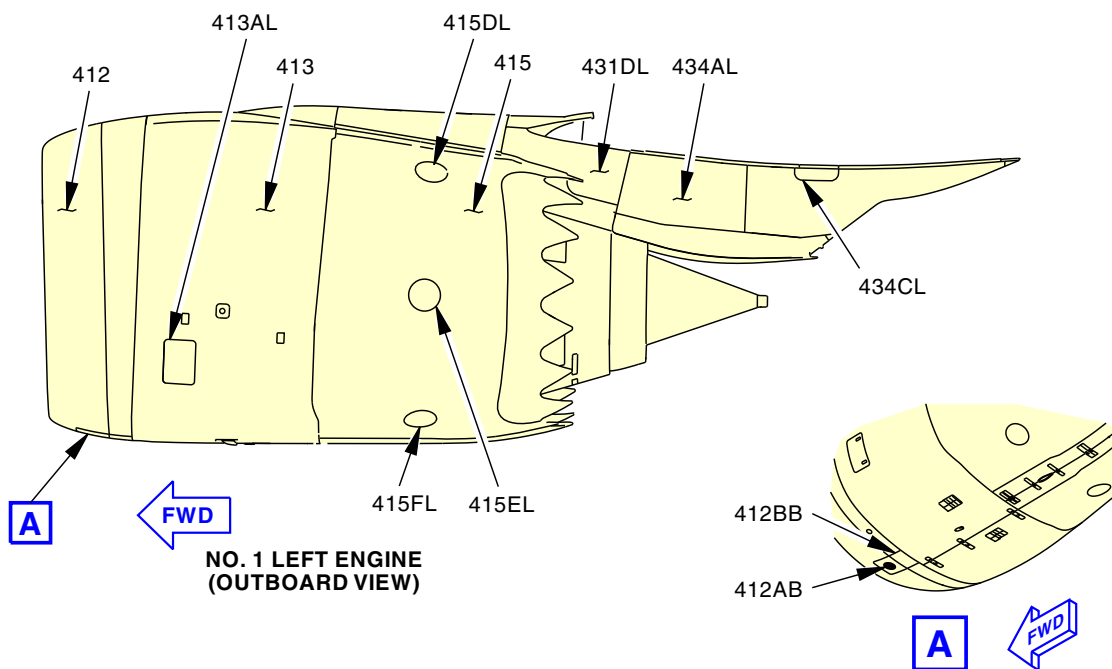

2410629 S00061526021_V2

Engine and Nacelle Strut Access Doors and Panels
Figure 201/06-43-00-990-801 (Sheet 1 of 4)

EFFECTIVITY
SIA ALL

D633AM101-SIA




ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-43-00

Page 204
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

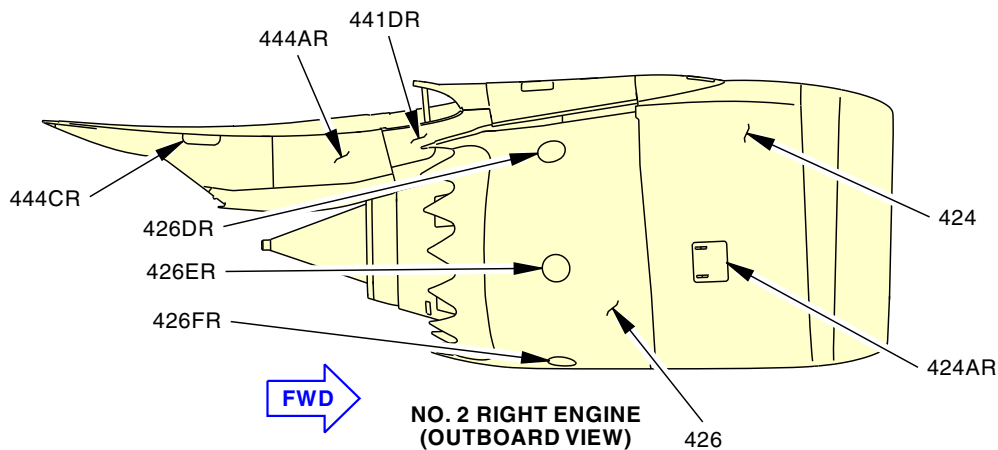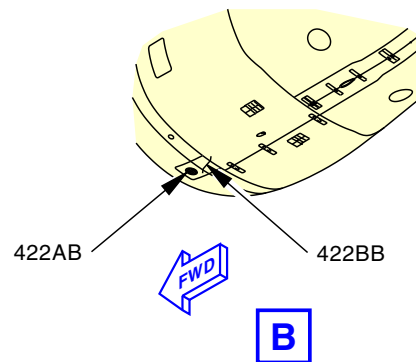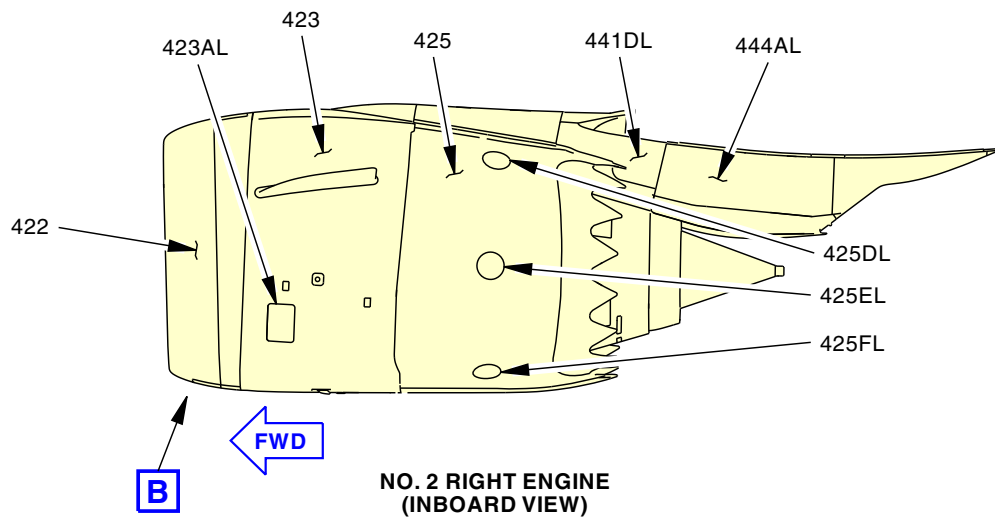

2410630 S00061526022_V6

Engine and Nacelle Strut Access Doors and Panels
Figure 201/06-43-00-990-801 (Sheet 2 of 4)

EFFECTIVITY
SIA ALL

D633AM101-SIA



ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-43-00

Page 205
Sep 15/2023



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

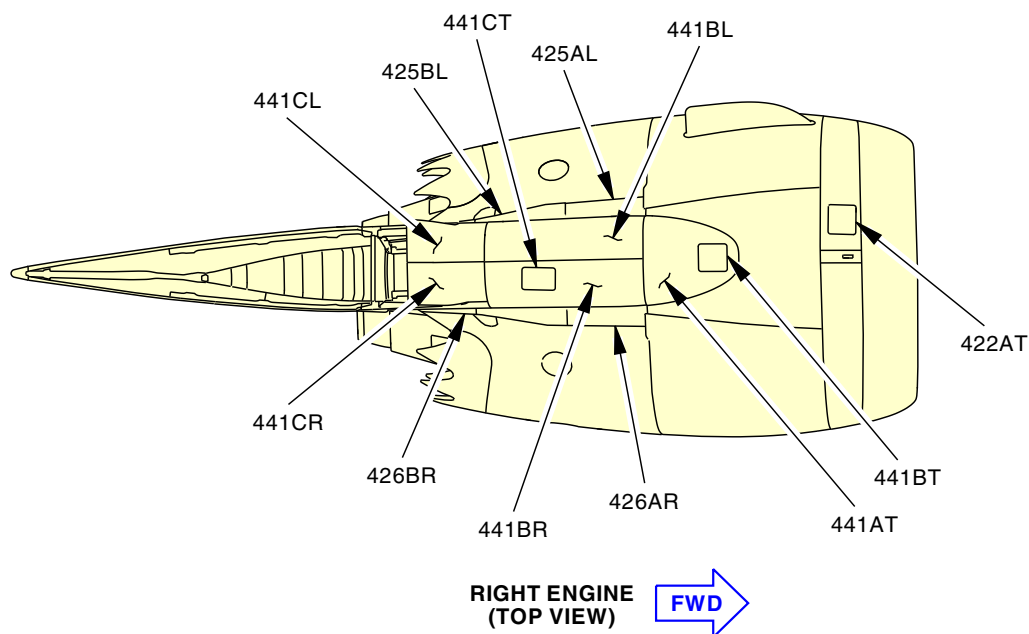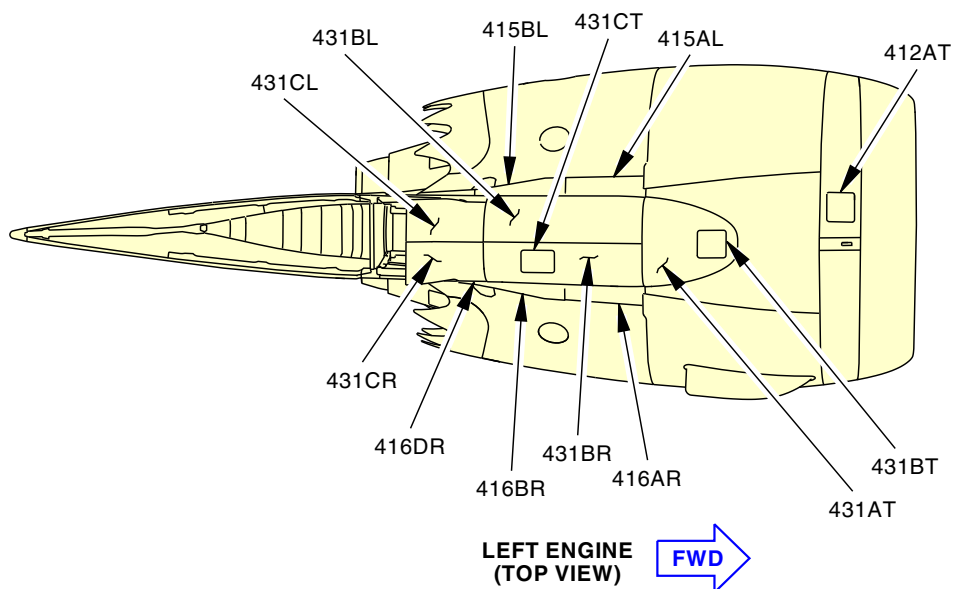

2410631 S00061526023_V3

Engine and Nacelle Strut Access Doors and Panels
Figure 201/06-43-00-990-801 (Sheet 3 of 4)


EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-43-00

Page 206
Sep 15/2021

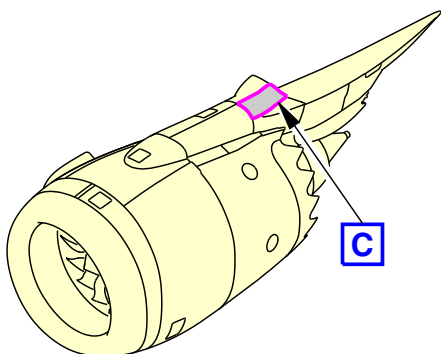

**LEFT STRUT
(RIGHT STRUT IS OPPOSITE)**

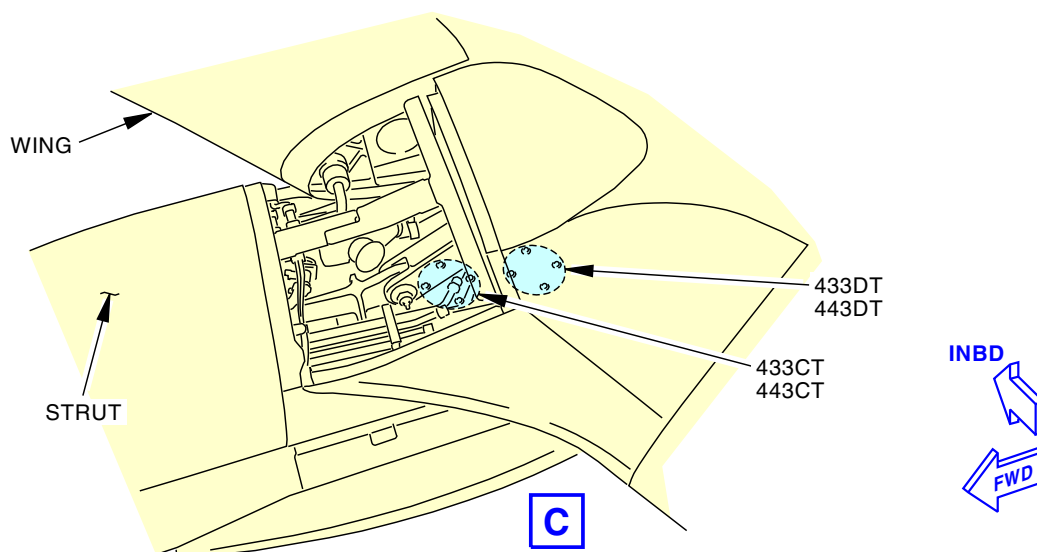

2410632 S00061526024_V2

**Engine and Nacelle Strut Access Doors and Panels
Figure 201/06-43-00-990-801 (Sheet 4 of 4)**

EFFECTIVITY
SIA ALL

D633AM101-SIA

06-43-00

Page 207
Sep 15/2021



737-7/8/8200/9/10 AIRCRAFT MAINTENANCE MANUAL

WINGS (MAJOR ZONES 500 AND 600) ACCESS DOORS AND PANELS - MAINTENANCE PRACTICES

1. General

- A. The airplane wings, major zones 500 and 600 have subzones which are identified with two numbers followed by a zero.
- B. The airplane left wing is identified as major zone 500 and has the subzones that follow:
 - (1) Subzone 510 - Wing Leading Edge - Forward of Front Spar, Inboard of Nacelle Strut, Including Nacelle Gap Cover Area
 - (2) Subzone 520 -Wing Leading Edge - Forward of Front Spar, Outboard of Nacelle Strut
 - (3) Subzone 530 - Wing Inspar Area (Fuel Tanks), Inboard of Wing Rib 25, Wing BL 658.17
 - (4) Subzone 540 - Wing Trailing Edge Flap Track Fairings
 - (5) Subzone 550 - Wing Trailing Edge - Aft of Rear Spar, Inboard of Outboard Trailing Edge Flap
 - (6) Subzone 560 - Wing Trailing Edge - Aft of Rear Spar, Outboard of Inboard Flap, Inboard of Fixed Trailing Edge
 - (7) Subzone 570 - Wing Trailing Edge - Outboard of Outboard Flap, Inboard of Wing Tip, Wing BL 658.17
- C. The airplane right wing is identified as major zone 600 and has the subzones that follow:
 - (1) Subzone 610 - Wing Leading Edge - Forward of Front Spar, Inboard of Nacelle Strut, Including Nacelle Gap Cover Area
 - (2) Subzone 620 -Wing Leading Edge - Forward of Front Spar, Outboard of Nacelle Strut
 - (3) Subzone 630 - Wing Inspar Area (Fuel Tanks), Inboard of Wing Rib 25, Wing BL 658.17
 - (4) Subzone 640 - Wing Trailing Edge Flap Track Fairings
 - (5) Subzone 650 - Wing Trailing Edge - Aft of Rear Spar, Inboard of Outboard Trailing Edge Flap
 - (6) Subzone 660 - Wing Trailing Edge - Aft of Rear Spar, Outboard of Inboard Flap, Inboard of Fixed Trailing Edge
 - (7) Subzone 670 - Wing Trailing Edge - Outboard of Outboard Flap, Inboard of Wing Tip, Wing BL 658.17
- D. Each subzone is divided in zones that are identified with the first two numbers of the subzone followed by a number that is not zero.
- E. The access doors and panels in a zone are identified by the specific zone number and a two or three letter suffix. The alphanumeric label is different for each access door or panel. The third alphanumeric character identifies the location, top or bottom.

TASK 06-44-00-800-801

2. Finding an Access Door or Panel on the Wings

(Figure 201, Figure 202, Figure 203, Figure 204, Figure 205, Figure 206, Figure 207, Figure 208, Figure 209, Figure 210, Figure 211, Figure 212, Figure 213, Figure 214, Figure 215 and Figure 216)

A. Location Zones

Zone	Area
500	Left Wing
600	Right Wing

B. Finding an Access Door or Panel on the Wings

SUBTASK 06-44-00-800-001

- (1) In the table below, find the number of the applicable access door or panel.

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 201
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Wing Access Doors and Panels

Number	Name/Location
511A	Inboard Leading Edge, Skin Assembly
511AB	Inboard Leading Edge, Lower Removable Panel
511AT	Inboard Leading Edge, Strakelet Upper Panel
511BT	Fairing
521AAB	Lower Leading Edge Access Panel - Slat Station 497
521AB	Outboard Leading Edge Blowout Door - Slat Station 20
521ABB	Lower Leading Edge Access Panel-Slat Station 519
521AT	Outbd Leading Edge - Gap Cover Access
521BB	Engine Fuel Valve Shutoff Access Panel - Slat Station 27
521BT	ACCESS PANEL- UPPER LEADING EDGE PANEL
521CB	Lower Leading Edge Access Panel - Slat Station 50
521DB	Lower Leading Edge Access Panel - Slat Station 70
521EB	Lower Leading Edge Access Panel - Slat Station 91
521FB	Lower Leading Edge Access Panel - Slat Station 107
521GB	Lower Leading Edge Access Panel - Slat Station 125
521HB	Lower Leading Edge Access Panel - Slat Station 144
521JB	Lower Leading Edge Access Panel - Slat Station 161
521KB	Lower Leading Edge Access Panel - Slat Station 179
521LB	Lower Leading Edge Access Panel - Slat Station 208
521MB	Lower Leading Edge Access Panel - Slat Station 226
521NB	Lower Leading Edge Access Panel - Slat Station 244
521PB	Lower Leading Edge Access Panel - Slat Station 261
521QB	Lower Leading Edge Access Panel - Slat Station 280
521RB	Lower Leading Edge Access Panel - Slat Station 298
521SB	Lower Leading Edge Access Panel - Slat Station 328
521TB	Lower Leading Edge Access Panel - Slat Station 347
521UB	Lower Leading Edge Access Panel - Slat Station 365
521VB	Lower Leading Edge Access Panel - Slat Station 385
521WB	Lower Leading Edge Access Panel - Slat Station 406
521XB	Lower Leading Edge Access Panel - Slat Station 425
521YB	Lower Leading Edge Access Panel - Slat Station 470
521ZB	Lower Leading Edge Access Panel - Slat Station 479
522AB	Slat No. 4 - Cove Skin
522BB	Slat No. 4 - Cove Skin

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 202
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Wing Access Doors and Panels (Continued)

Number	Name/Location
522CB	Slat No. 4 - Cove Skin
522DB	Slat No. 4 - Cove Skin
522EB	Slat No. 4 - Cove Skin
522FB	Slat No. 4 - Cove Skin
522GB	Slat No. 4 - Cove Skin
523AB	Slat No. 3 - Cove Skin
523BB	Slat No. 3 - Cove Skin
523CB	Slat No. 3 - Cove Skin
523DB	Slat No. 3 - Cove Skin
523EB	Slat No. 3 - Cove Skin
523FB	Slat No. 3 - Cove Skin
523GB	Slat No. 3 - Cove Skin
524AB	Slat No. 2 - Cove Skin
524BB	Slat No. 2 - Cove Skin
524CB	Slat No. 2 - Cove Skin
524DB	Slat No. 2 - Cove Skin
524EB	Slat No. 2 - Cove Skin
524FB	Slat No. 2 - Cove Skin
524GB	Slat No. 2 - Cove Skin
525AB	Slat No. 1 - Cove Skin
525BB	Slat No. 1 - Cove Skin
525CB	Slat No. 1 - Cove Skin
525DB	Slat No. 1 - Cove Skin
525EB	Slat No. 1 - Cove Skin
525FB	Slat No. 1 - Cove Skin
525GB	Slat No. 1 - Cove Skin
525HB	Slat No. 1 - Cove Skin
527AL	ACCESS PANEL - TRANSITION FAIRING, WINGLET
527BB	ACCESS PANEL - CENTER INBOARD LOWER PANEL, WINGLET
527BL	ACCESS PANEL - CENTER OUTBOARD PANEL, WINGLET
527BT	ACCESS PANEL - CENTER INBOARD UPPER PANEL, WINGLET
531AB	Center Tank Access Door - Wing Station 168
531BB	Center Tank Access Door - Wing Station 192
532AB	Main Tank Access Door - Wing Station 216

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 203
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Wing Access Doors and Panels (Continued)

Number	Name/Location
532AZ	Main Tank Inner Access at Rib 6
532BB	Main Tank Access Door - Wing Station 265
532BZ	Main Tank Inner Access at Rib 6
532CB	Main Tank Access Door - Wing Station 290
532DB	Main Tank Access Door - Wing Station 313
532EB	Main Tank Access Door - Wing Station 337
532FB	Main Tank Access Door - Wing Station 367
532GB	Main Tank Access Door - Wing Station 390
532HB	Main Tank Access Door - Wing Station 417
532JB	Main Tank Access Door - Wing Station 443
532KB	Main Tank Access Door - Wing Station 470
532LB	Main Tank Access Door - Wing Station 496
532MB	Main Tank Access Door - Wing Station 523
532NB	Main Tank Access Door - Wing Station 549
532PB	Main Tank Access Door - Wing Station 576
532QB	Main Tank Access Door - Wing Station 602
532RB	Main Tank Access Door - Wing Station 629
533AB	Surge Tank Access Door - Wing Station 655
533BB	Surge Tank Access Door - Wing Station 679
533CB	Surge Tank Access Door - Wing Station 703
534AB	Dry Bay Tank Access Door - Left Wing Station 727
534BB	Dry Bay Tank Access Door - Left Wing Station 748
542AB	Flap Support No. 3, Forward Assembly Access Panel
542BB	Flap Support No. 3, Aft Assembly Access Panel
542CL	Flap Support No. 3, Access Cover
542CR	Flap Support No. 3, Access Cover
542EB	Flap Support No. 3, Tailcone Access Panel
543AB	Flap Support No. 2 Access Panel, Forward Assembly
543BB	Flap Support No. 2 Access Panel, Aft Assembly
543CL	Flap Support No. 2 Access Cover
543CR	Flap Support No. 2 Access Cover
543DR	Flap Support No. 2 Access Door
543EB	Flap Support No. 2 Access Panel, Tailcone
544AB	Flap Support No. 1 Access Panel, Forward Assembly

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 204
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Wing Access Doors and Panels (Continued)

Number	Name/Location
544BB	Flap Support No. 1 Access Panel, Aft Assembly
544CL	Flap Support No. 1 Access Cover
544CR	Flap Support No. 1 Access Cover
544DR	Flap Support No. 1 Access Door
544EB	Flap Support No. 1 Access Panel, Tailcone
551AB	Lower Inboard Fixed Trailing Edge Access Panel
551AT	Upper Inboard Fixed Trailing Edge Access Panel
551BB	Lower Inboard Fixed Trailing Edge, Gear Adjustment Door
551BT	Upper Inboard Fixed Trailing Edge, MLG Actuator Access Panel
551CB	Lower Inboard Fixed Trailing Edge, Gear Access Panel
551CT	Upper Inboard Fixed Trailing Edge, Structural Pin Access Panel
551DB	Lower Inboard Fixed Trailing Edge, Lube Actuator & MLG Beam Outboard Attach Pin Access Panel
551DT	Upper Inboard Fixed Trailing Edge, MLG Beam Access Panel
551EB	Lower Inboard Fixed Trailing Edge, MLG Attach Fitting Access Panel
551ET	Upper Inboard Fixed Trailing Edge, MLG Beam Access Panel
551FB	Lower Inboard Fixed Trailing Edge, Landing Gear Access Panel
551GB	Lower inboard fixed trailing edge
553AT	Inboard Flap - L.E. Skin
553BB	Inboard Flap - Lower Skin
553CT	Inboard Flap - L.E. Skin
553DT	Inboard Flap - Upper Skin
553ET	Inboard Flap - Upper Skin
561AB	Midspan Fixed Trailing Edge Access Panel - WBL 224
561BB	Midspan Fixed Trailing Edge Access Panel - WBL 305
561CB	Midspan Fixed Trailing Edge Access Panel - WBL 388
567AT	Outboard Flap - Leading Edge Skin
567BT	Flap, Forward Carriage Bearing And Fitting
567CT	Outboard Flap - Leading Edge Skin
567DT	Outboard Flap - Leading Edge Skin
567ET	Flap, Forward Carriage Bearing And Fitting
567FT	Outboard Flap - Leading Edge Skin
567GT	Outboard Flap - Upper Skin
567HT	Outboard Flap - Upper Skin
571AB	Lower Outboard Fixed Trailing Edge Access Panel at Deflector Rib

EFFECTIVITY
SIA ALL

06-44-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Page 205
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Wing Access Doors and Panels (Continued)

Number	Name/Location
571AT	Upper Outboard Fixed Trailing Edge, Quadrant Bolt Access Panel
571BB	Lower Outboard Fixed Trailing Edge Access Panel
571BT	Upper Outboard Fixed Trailing Edge, Pulley Bolt Access Panel
571CB	Lower Outboard Fixed Trailing Edge Access Panel
571DB	Lower Outboard Fixed Trailing Edge Access Panel
571EB	Lower Outboard Fixed Trailing Edge Wedge Access Panel
571FB	Lower Outboard Fixed Trailing Edge Wedge Access Panel
572AB	Lower Aileron, Hinge Cover - WBL 423.00
572BB	Lower Aileron, Actuator Rod Fairing - WBL 472.00
572CB	Lower Aileron, Hinge Cover - WBL 447.00
572CT	Upper Aileron, Hinge Cover - WBL 447.00
572DB	Lower Aileron, Hinge Cover - WBL 469.00
572DT	Upper Aileron, Hinge Cover - WBL 474.00
572EB	Lower Aileron, Hinge Cover - WBL 481.00
572FB	Lower Aileron, Hinge Cover - WBL 502.00
572FT	Upper Aileron, Hinge Cover - WBL 502.00
572GB	Lower Aileron, Hinge Cover - WBL 528.00
572GT	Upper Aileron, Hinge Cover - WBL 528.00
572HB	Lower Aileron, Hinge Cover - WBL 553.00

SUBTASK 06-44-00-800-002

(2) In the table below, find the number of the applicable access door or panel.

Table 202 Wing Access Doors and Panels

Number	Name/Location	Drawing
611A	Inboard Leading Edge - Skin Assembly	116A4007
611AB	Inboard Leading Edge, Lower Removable Access Panel	116A2100
611AT	Inboard Leading Edge, Strakelet Upper Access Panel	116A1200
611BT	Fairing	116A2800
621AAB	Lower Leading Edge Access Panel - Slat Station 524.31	116A9100
621AB	Outboard Leading Edge Blowout Door - Slat Station 20	116A5500
621ABB	Lower Leading Edge Access Panel-Slat Station 519	116A6100
621AT	Outbd Leading Edge - Gap Cover Access	116A5500
621BB	Engine Fuel Valve Shutoff Access Panel - Slat Station 27	116A8500
621BT	UPPER LEADING EDGE ACCESS PANEL	116A6100
621CB	Lower Leading Edge Access Panel - Slat Station 50	116A9100

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 206
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 202 Wing Access Doors and Panels (Continued)

Number	Name/Location	Drawing
621DB	Lower Leading Edge Access Panel - Slat Station 70	116A9100
621EB	Lower Leading Edge Access Panel - Slat Station 91	116A8500
621FB	Lower Leading Edge Access Panel - Slat Station 107	116A9100
621GB	Refuel Valve Door - Slat Station 125	116A8500
621JB	Lower Leading Edge Access Panel - Slat Station 161	116A9100
621KB	Lower Leading Edge Access Panel - Slat Station 179	116A9100
621LB	Lower Leading Edge Access Panel - Slat Station 208	116A9100
621MB	Lower Leading Edge Access Panel - Slat Station 226	116A9100
621NB	Lower Leading Edge Access Panel - Slat Station 244	116A9100
621PB	Lower Leading Edge Access Panel - Slat Station 261	116A9100
621QB	Lower Leading Edge Access Panel - Slat Station 280	116A9100
621RB	Lower Leading Edge Access Panel - Slat Station 298	116A9100
621SB	Lower Leading Edge Access Panel - Slat Station 328	116A9100
621TB	Lower Leading Edge Access Panel - Slat Station 347	116A9100
621UB	Lower Leading Edge Access Panel - Slat Station 365	116A9100
621VB	Lower Leading Edge Access Panel - Slat Station 385	116A9100
621WB	Lower Leading Edge Access Panel - Slat Station 406	116A9100
621XB	Lower Leading Edge Access Panel - Slat Station 425	116A9100
621YB	Lower Leading Edge Access Panel - Slat Station 470	116A9100
621ZB	Lower Leading Edge Access Panel - Slat Station 479	116A9100
622AB	Slat No. 5 - Cove Skin	114A5040
622BB	Slat No. 5 - Cove Skin	114A5040
622CB	Slat No. 5 - Cove Skin	114A5040
622DB	Slat No. 5 - Cove Skin	114A5040
622EB	Slat No. 5 - Cove Skin	114A5040
622FB	Slat No. 5 - Cove Skin	114A5040
622GB	Slat No. 5 - Cove Skin	114A5040
623AB	Slat No. 6 - Cove Skin	114A5030
623BB	Slat No. 6 - Cove Skin	114A5030
623CB	Slat No. 6 - Cove Skin	114A5030
623DB	Slat No. 6 - Cove Skin	114A5030
623EB	Slat No. 6 - Cove Skin	114A5030
623FB	Slat No. 6 - Cove Skin	114A5030
623GB	Slat No. 6 - Cove Skin	114A5030

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 207
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 202 Wing Access Doors and Panels (Continued)

Number	Name/Location	Drawing
624AB	Slat No. 7 - Cove Skin	114A5020
624BB	Slat No. 7 - Cove Skin	114A5020
624CB	Slat No. 7 - Cove Skin	114A5020
624DB	Slat No. 7 - Cove Skin	114A5020
624EB	Slat No. 7 - Cove Skin	114A5020
624FB	Slat No. 7 - Cove Skin	114A5020
624GB	Slat No. 7 - Cove Skin	114A5020
625AB	Slat No. 8 - Cove Skin	114A5010
625BB	Slat No. 8 - Cove Skin	114A5010
625CB	Slat No. 8 - Cove Skin	114A5010
625DB	Slat No. 8 - Cove Skin	114A5010
625EB	Slat No. 8 - Cove Skin	114A5010
625FB	Slat No. 8 - Cove Skin	114A5010
625GB	Slat No. 8 - Cove Skin	114A5010
625HB	Slat No. 8 - Cove Skin	114A5010
627AR	ACCESS PANEL - TRANSITION FAIRING, WINGLET	119A0105
627BB	ACCESS PANEL - CENTER INBOARD LOWER PANEL, WINGLET	119A0105
627BR	ACCESS PANEL - CENTER OUTBOARD PANEL, WINGLET	119A0105
627BT	ACCESS PANEL - CENTER INBOARD UPPER PANEL, WINGLET	119A0105
631AB	Center Tank Access Door - Wing Station 168	110A0110
631BB	Center Tank Access Door - Wing Station 192	110A0110
632AB	Main Tank Access Door - Wing Station 216	110A0110
632AZ	Main Tank Inner Access at Rib 6	112A5060
632BB	Main Tank Access Door - Wing Station 265	110A0110
632BZ	Main Tank Inner Access at Rib 6	112A5060
632CB	Main Tank Access Door - Wing Station 290	110A0110
632DB	Main Tank Access Door - Wing Station 313	110A0110
632EB	Main Tank Access Door - Wing Station 337	110A0110
632FB	Main Tank Access Door - Wing Station 367	110A0110
632GB	Main Tank Access Door - Wing Station 390	110A0110
632HB	Main Tank Access Door - Wing Station 417	110A0110
632JB	Main Tank Access Door - Wing Station 443	110A0110

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 208
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 202 Wing Access Doors and Panels (Continued)

Number	Name/Location	Drawing
632KB	Main Tank Access Door - Wing Station 470	110A0110
632LB	Main Tank Access Door - Wing Station 496	110A0110
632MB	Main Tank Access Door - Wing Station 523	110A0110
632NB	Main Tank Access Door - Wing Station 549	110A0110
632PB	Main Tank Access Door - Wing Station 576	110A0110
632QB	Main Tank Access Door - Wing Station 602	110A0110
632RB	Main Tank Access Door - Wing Station 629	110A0110
633AB	Surge Tank Access Door - Wing Station 655	110A0110
633BB	Surge Tank Access Door - Wing Station 679	110A0110
633CB	Surge Tank Access Door - Wing Station 703	110A0110
634AB	Dry Bay Tank Access Door - Right Wing Station 727	110A0110
634BB	Dry Bay Tank Access Door - Right Wing Station 748	110A0110
642AB	Flap Support No. 6, Forward Assembly Access Panel	113A9300
642BB	Flap Support No. 6, Aft Assembly Access Panel	113A9300
642CL	Flap Support No. 6, Access Cover	113A9300
642CR	Flap Support No. 6, Access Cover	113A9300
642EB	Flap Support No. 6, Tailcone Access Panel	113A9300
643AB	Flap Support No. 7, Forward Assembly Access Panel	113A9200
643BB	Flap Support No. 7, Aft Assembly Access Panel	113A9200
643CL	Flap Support No. 7, Access Cover	113A9200
643CR	Flap Support No. 7, Access Cover	113A9200
643DL	Flap Support No. 7, Access Door	113A9200
643EB	Flap Support No. 7, Tailcone Access Panel	113A9200
644AB	Flap Support No. 8, Forward Assembly Access Panel	113A9100
644BB	Flap Support No. 8, Aft Assembly Access Panel	113A9100
644CL	Flap Support No. 8, Access Cover	113A9100
644CR	Flap Support No. 8, Access Cover	113A9100
644DL	Flap Support No. 8, Access Door	113A9100
644EB	Flap Support No. 8, Tailcone Access Panel	113A9100
651AB	Lower Inboard Fixed Trailing Edge Access Panel	115A2200
651AT	Upper Inboard Fixed Trailing Edge Access Panel	115A2000
651BB	Lower Inboard Fixed Trailing Edge, Gear Adjustment Door	115A2001
651BT	Upper Inboard Fixed Trailing Edge, MLG Actuator Access Panel	115A2000
651CB	Lower Inboard Fixed Trailing Edge, Gear Access Panel	115A2001

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 209
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 202 Wing Access Doors and Panels (Continued)

Number	Name/Location	Drawing
651CT	Upper Inboard Fixed Trailing Edge, Structural Pin Access Panel	115A2000
651DB	Lower Inboard Fixed Trailing Edge, Lube Actuator & MLG Beam Outboard Attach Pin Access Panel	115A2001
651DT	Upper Inboard Fixed Trailing Edge, MLG Beam Access Panel	115A2000
651EB	Lower Inboard Fixed Trailing Edge, MLG Attach Fitting Access Panel	115A2001
651ET	Upper Inboard Fixed Trailing Edge, MLG Beam Access Panel	115A2000
651FB	Lower Inboard Fixed Trailing Edge, Landing Gear Access Panel	115A2001
651GB	Lower inboard fixed trailing edge	115A2001
653AT	Inboard Flap - Leading Edge Skin	113A2001
653BB	Inboard Flap - Lower Skin	113A2001
653CT	Inboard Flap - Leading Edge Skin	113A2001
653DT	Inboard Flap - Upper Skin	113A2001
653ET	Inboard Flap - Upper Skin	113A2001
661AB	Midspan Fixed Trailing Edge Access Panel - WBL 224	115A3700
661BB	Midspan Fixed Trailing Edge Access Panel - WBL 305	115A3700
661CB	Midspan Fixed Trailing Edge Access Panel - WBL 388	115A3700
667AT	Outboard Flap - Leading Edge Skin	113A3100
667BT	Flap, Forward Carriage Bearing And Fitting	113A3100
667CT	Outboard Flap - Leading Edge Skin	113A3100
667DT	Outboard Flap - Leading Edge Skin	113A3100
667ET	Flap, Forward Carriage Bearing And Fitting	113A3100
667FT	Outboard Flap - Leading Edge Skin	113A3100
667GT	Outboard Flap - Upper Skin	113A3100
667HT	Outboard Flap - Upper Skin	113A3100
671AB	Lower Outboard Fixed Trailing Edge Access Panel	115A4700
671AT	Upper Outboard Fixed Trailing Edge, Quadrant Bolt Access Panel	115A4500
671BB	Lower Outboard Fixed Trailing Edge Access Panel	115A4700
671BT	Upper Outboard Fixed Trailing Edge, Pulley Bolt Access Panel	115A4500
671CB	Lower Outboard Fixed Trailing Edge Access Panel	115A4700
671DB	Lower Outboard Fixed Trailing Edge Access Panel	115A4700

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 210
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 202 Wing Access Doors and Panels (Continued)

Number	Name/Location	Drawing
671EB	Lower Outboard Fixed Trailing Edge, Wedge Access Panel	115A4900
671FB	Lower Outboard Fixed Trailing Edge, Wedge Access Panel	115A4900
672AB	Lower Aileron, Hinge Cover - WBL 423.00	113A7001
672BB	Lower Aileron, Actuator Rod Fairing - WBL 472.00	113A7001
672CB	Lower Aileron, Hinge Cover - WBL 447.00	113A7001
672CT	Upper Aileron, Hinge Cover - WBL 447.00	113A7001
672DB	Lower Aileron, Hinge Cover - WBL 469.00	113A7001
672DT	Upper Aileron, Hinge Cover - WBL 474.00	113A7001
672EB	Lower Aileron, Hinge Cover - WBL 481.00	113A7001
672FB	Lower Aileron, Hinge Cover - WBL 502.00	113A7001
672FT	Upper Aileron, Hinge Cover - WBL 502.00	113A7001
672GB	Lower Aileron, Hinge Cover - WBL 528.00	113A7001
672GT	Upper Aileron, Hinge Cover - WBL 528.00	113A7001
672HB	Lower Aileron, Hinge Cover - WBL 553.00	113A7001

END OF TASK

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 211
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

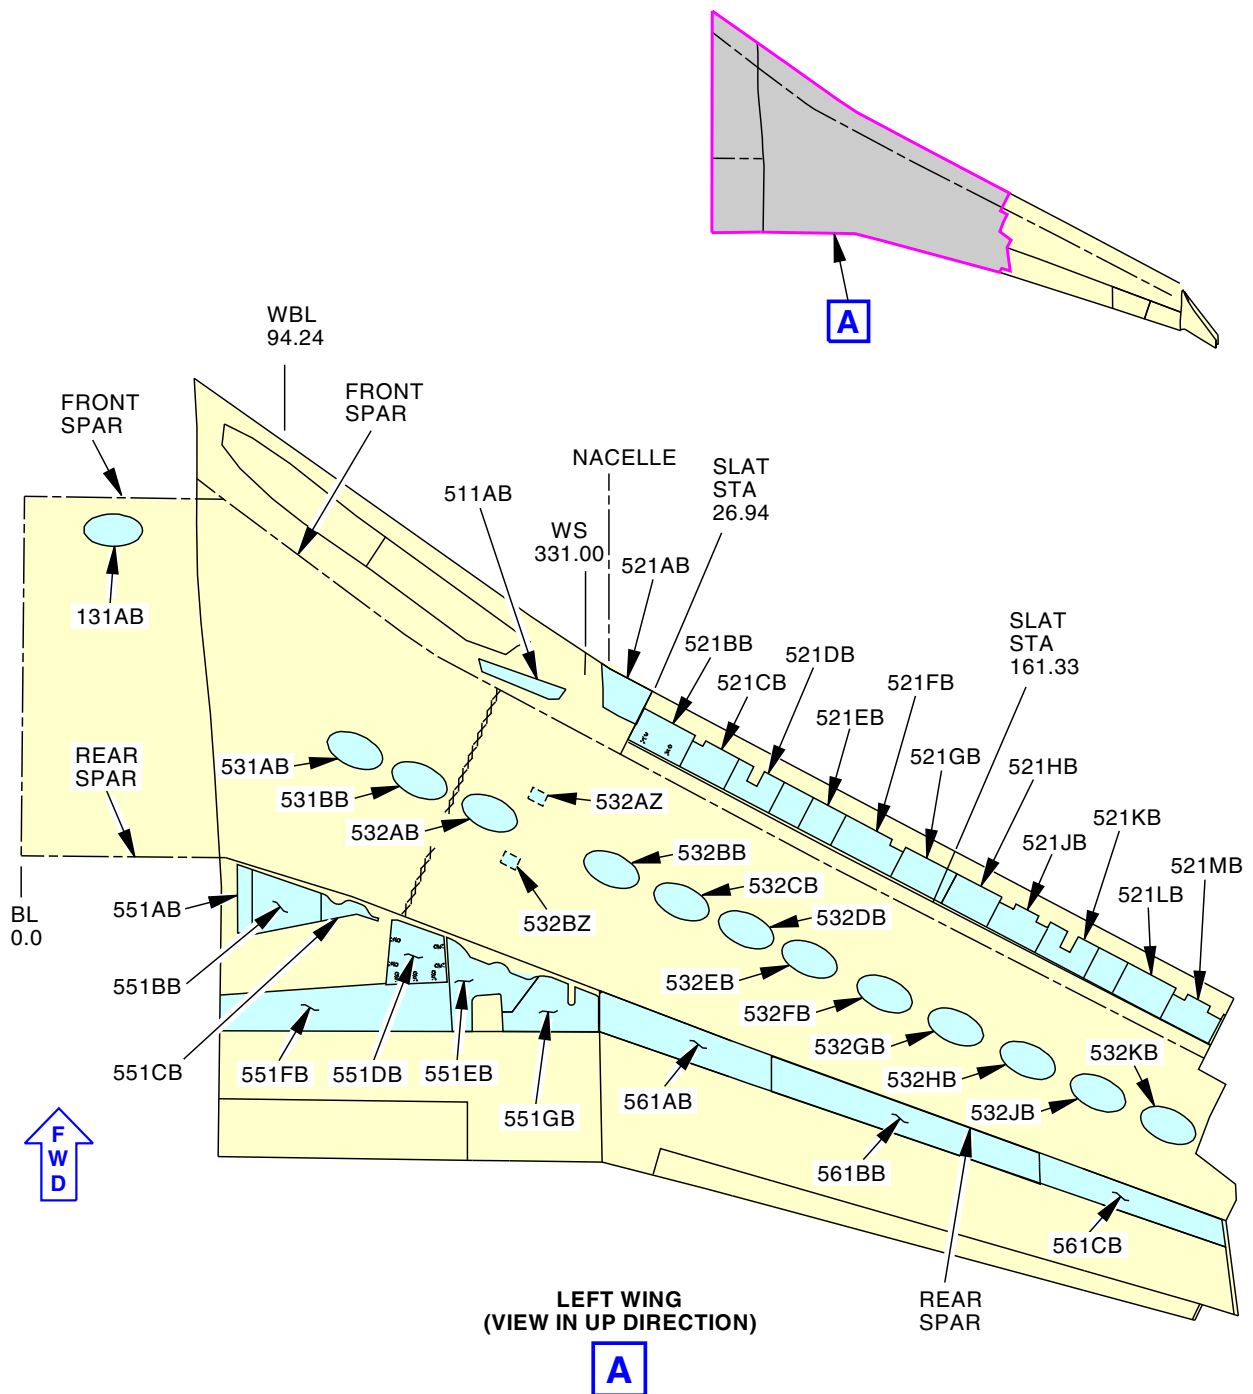

2410633 S00061526029_V1

Left Wing - Lower Subzone Access Doors and Panels
Figure 201/06-44-00-990-801 (Sheet 1 of 2)


EFFECTIVITY
SIA ALL

06-44-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Page 212
Sep 15/2021




Left Wing - Lower Subzone Access Doors and Panels
Figure 201/06-44-00-990-801 (Sheet 2 of 2)

06-44-00

Page 213
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

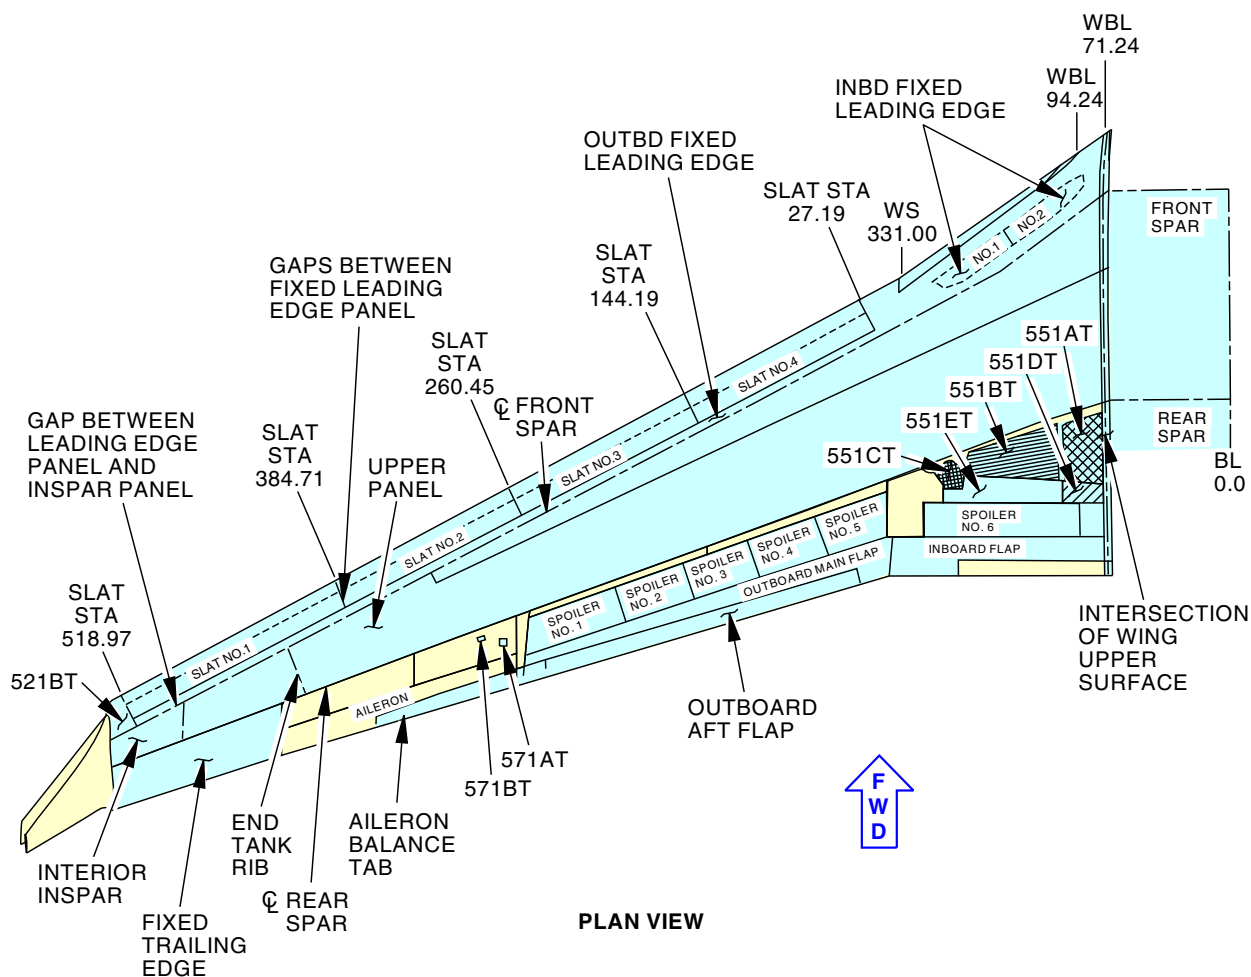

2410266 S00061525216_V2

Left Wing - Upper Subzone Access Doors and Panels
Figure 202/06-44-00-990-802

EFFECTIVITY
SIA ALL


06-44-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

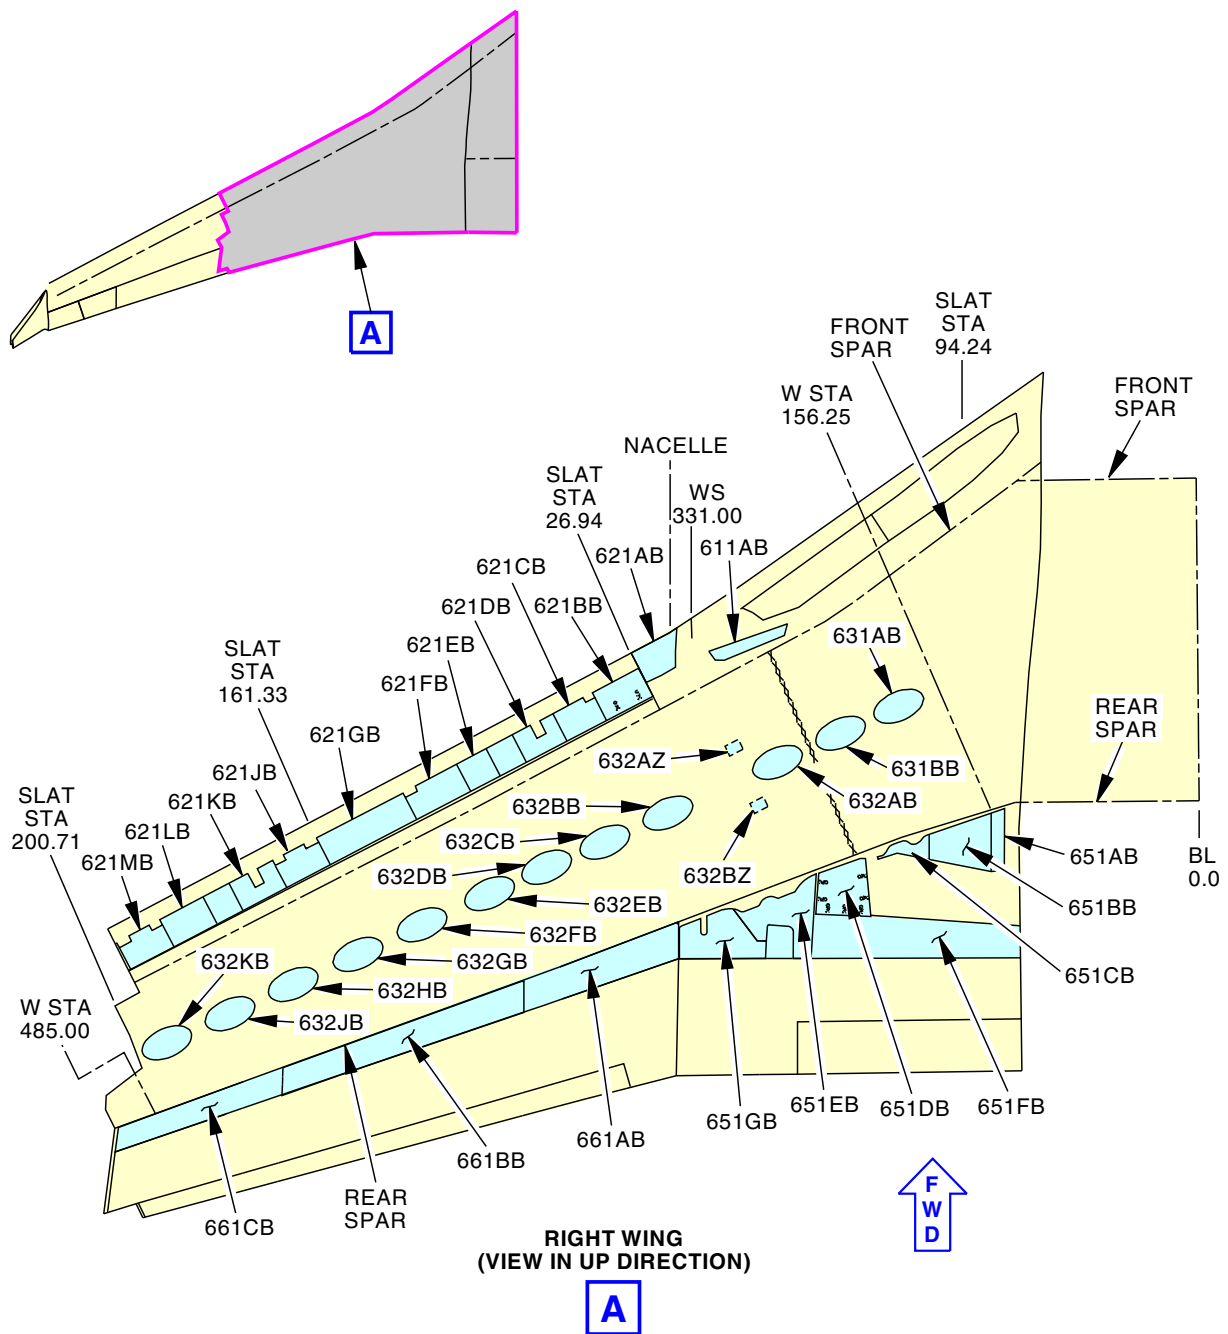

2410635 S00061526031_V3

Right Wing - Lower Subzone Access Doors and Panels
Figure 203/06-44-00-990-803 (Sheet 1 of 2)


EFFECTIVITY
SIA ALL

06-44-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Page 215
Sep 15/2021




Right Wing - Lower Subzone Access Doors and Panels
Figure 203/06-44-00-990-803 (Sheet 2 of 2)

06-44-00

Page 216
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

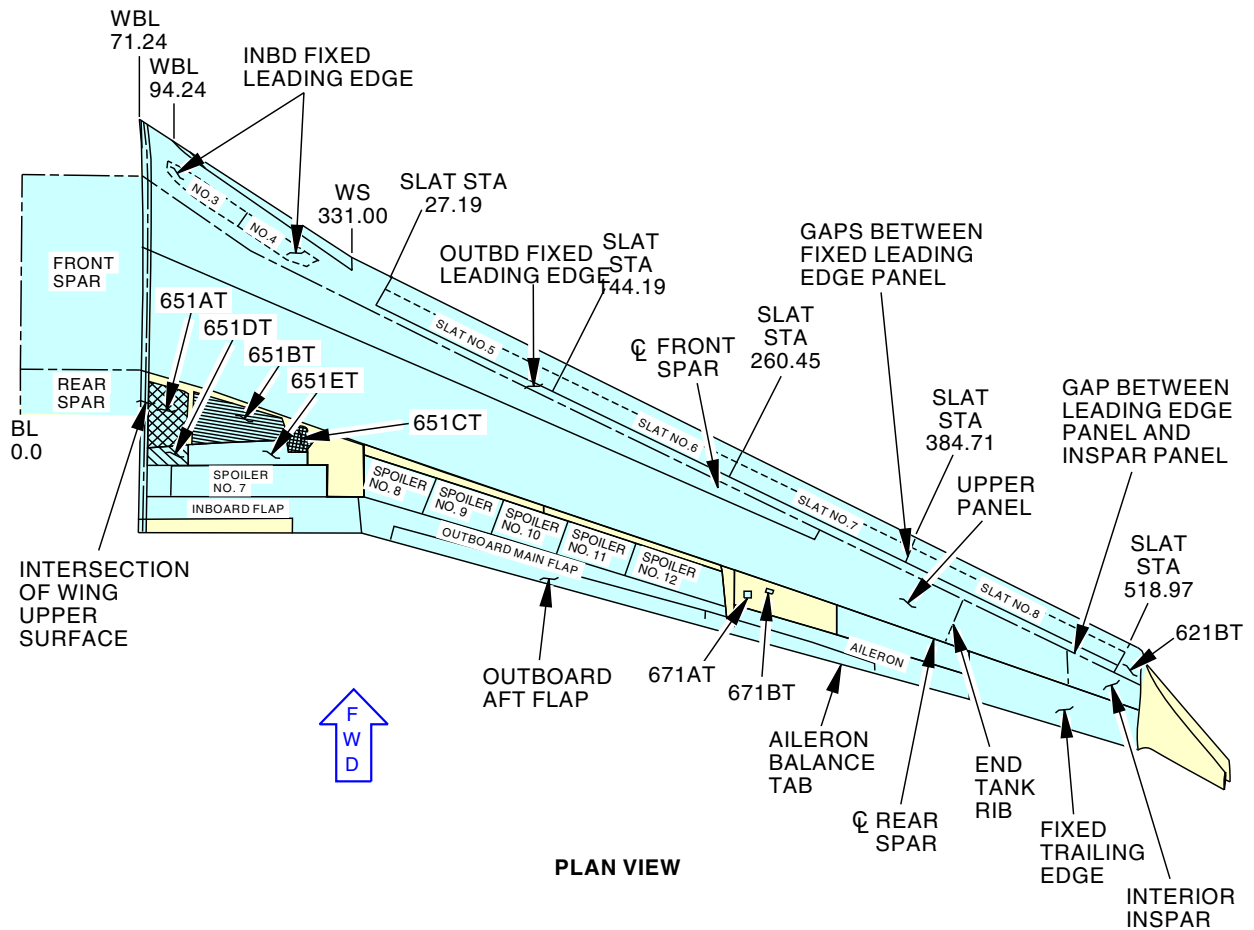

PLAN VIEW

2410637 S00061526033_V2

Right Wing - Upper Subzone Access Doors and Panels
Figure 204/06-44-00-990-804



EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 217
Sep 15/2021

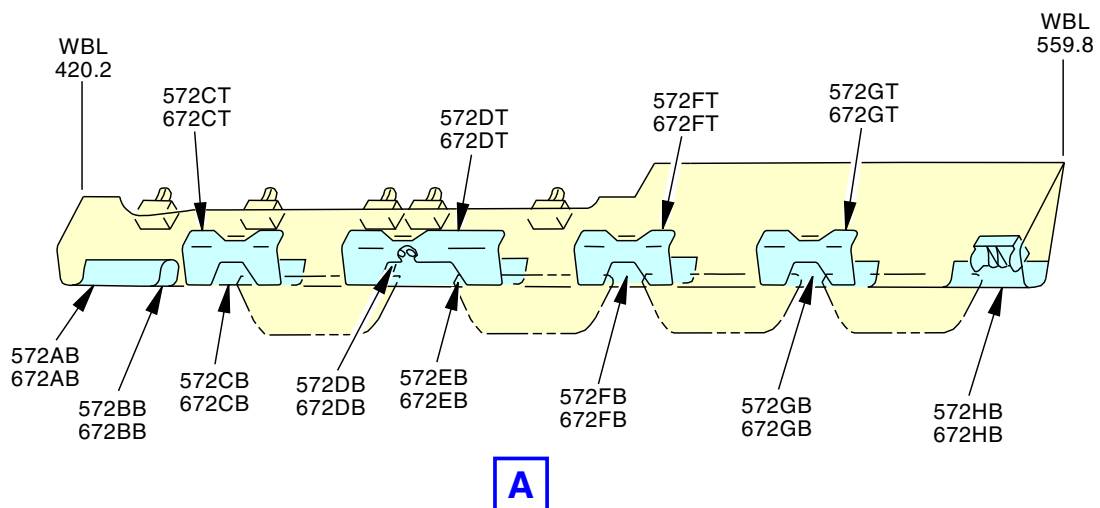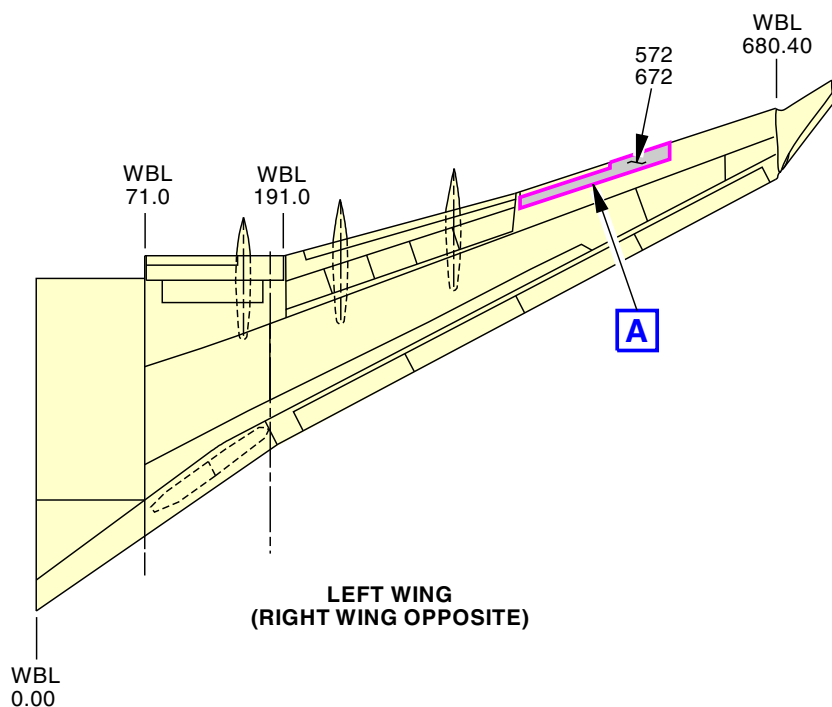

2410638 S00061526034_V1

Left and Right Wing Aileron Hinge Cover Access Panels
Figure 205/06-44-00-990-805


EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 218
Sep 15/2021

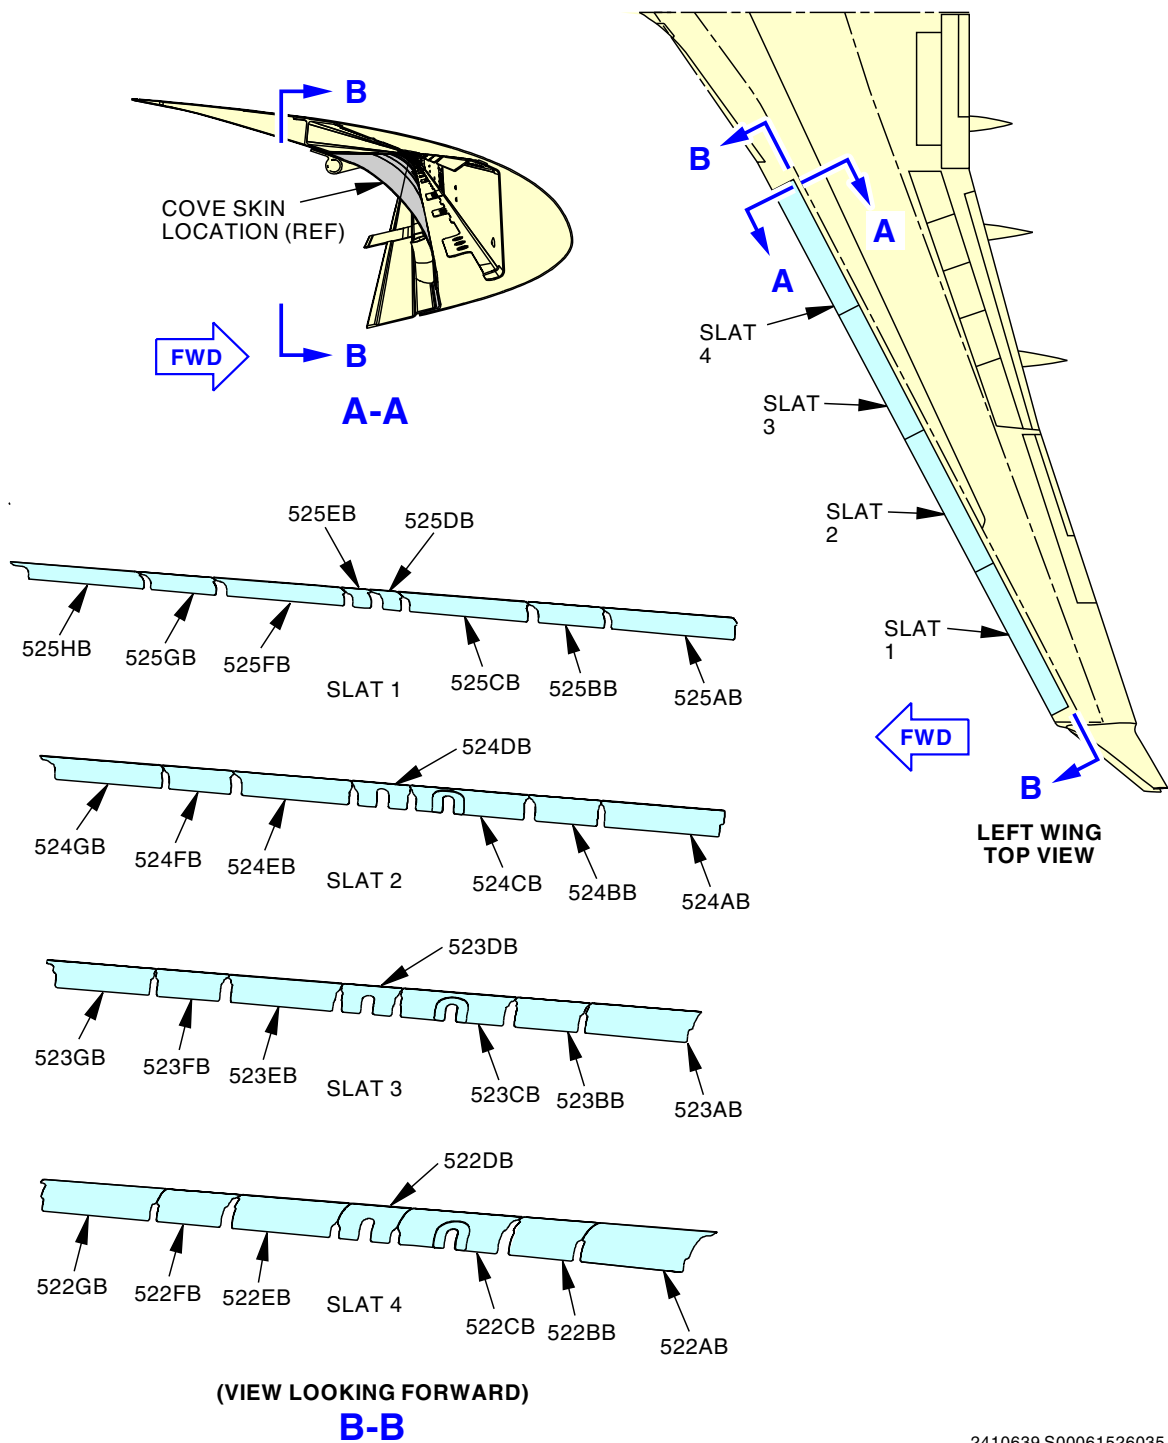

2410639 S00061526035_V1

Left Wing - Cove Skin Panels
Figure 206/06-44-00-990-806


EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 219
Sep 15/2021

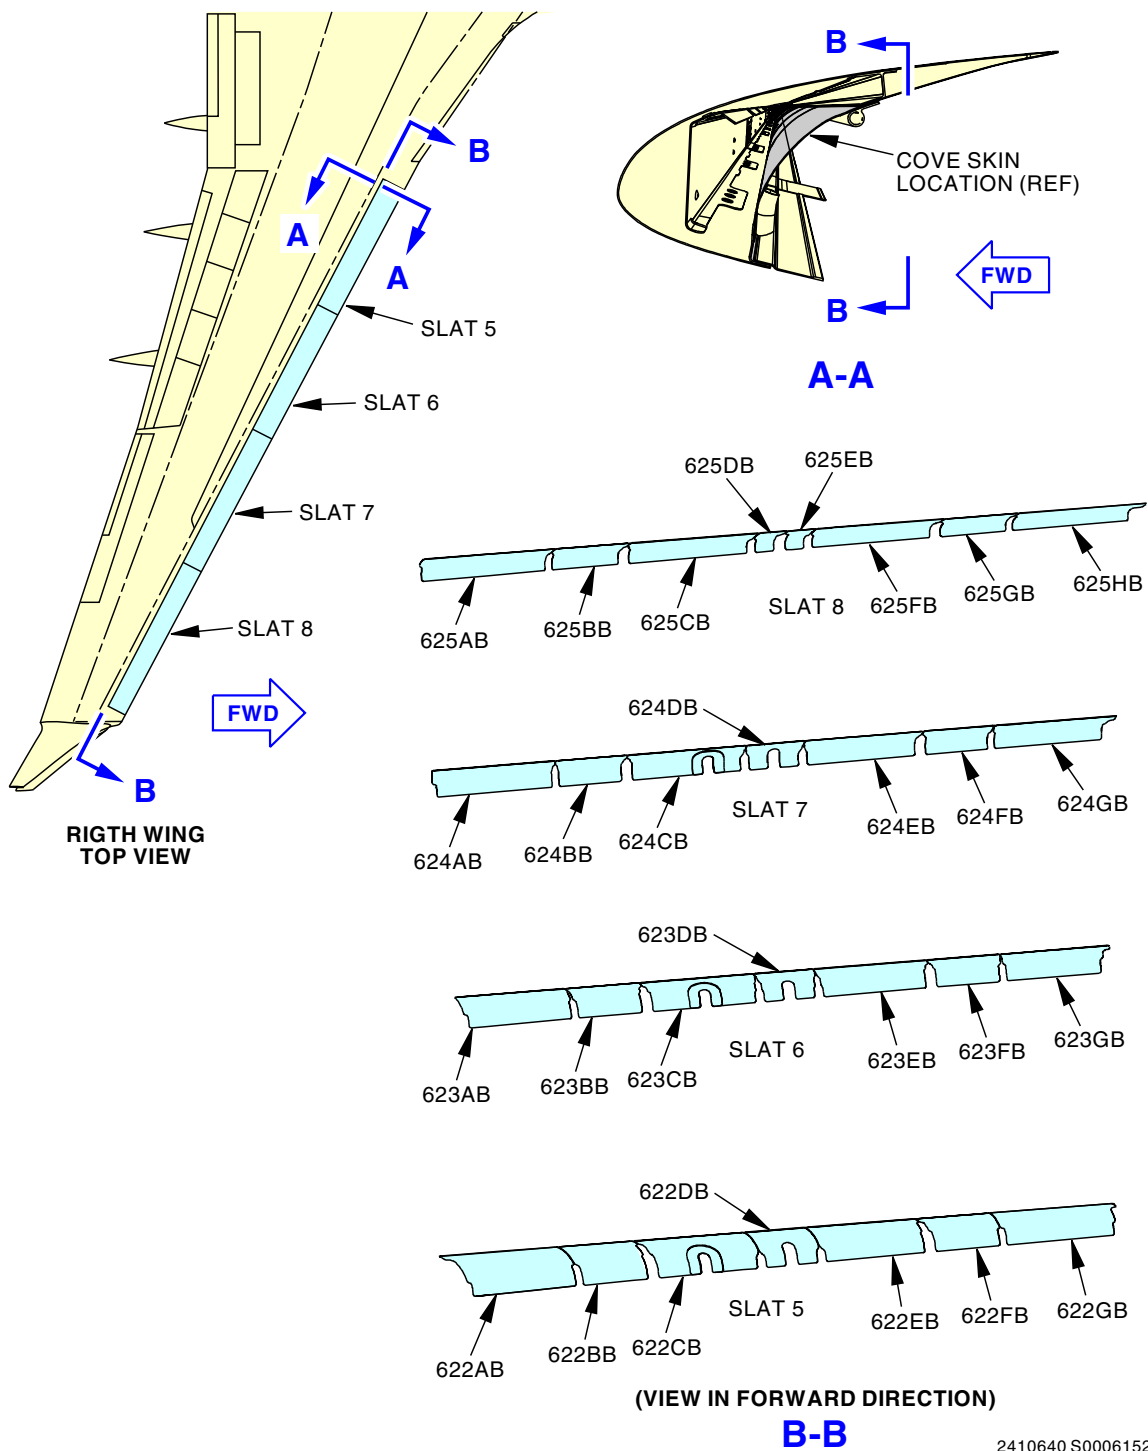

2410640 S00061526036_V1

Right Wing - Cove Skin Panels
Figure 207/06-44-00-990-807

EFFECTIVITY
SIA ALL


D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 220
Sep 15/2021

BOEING
737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

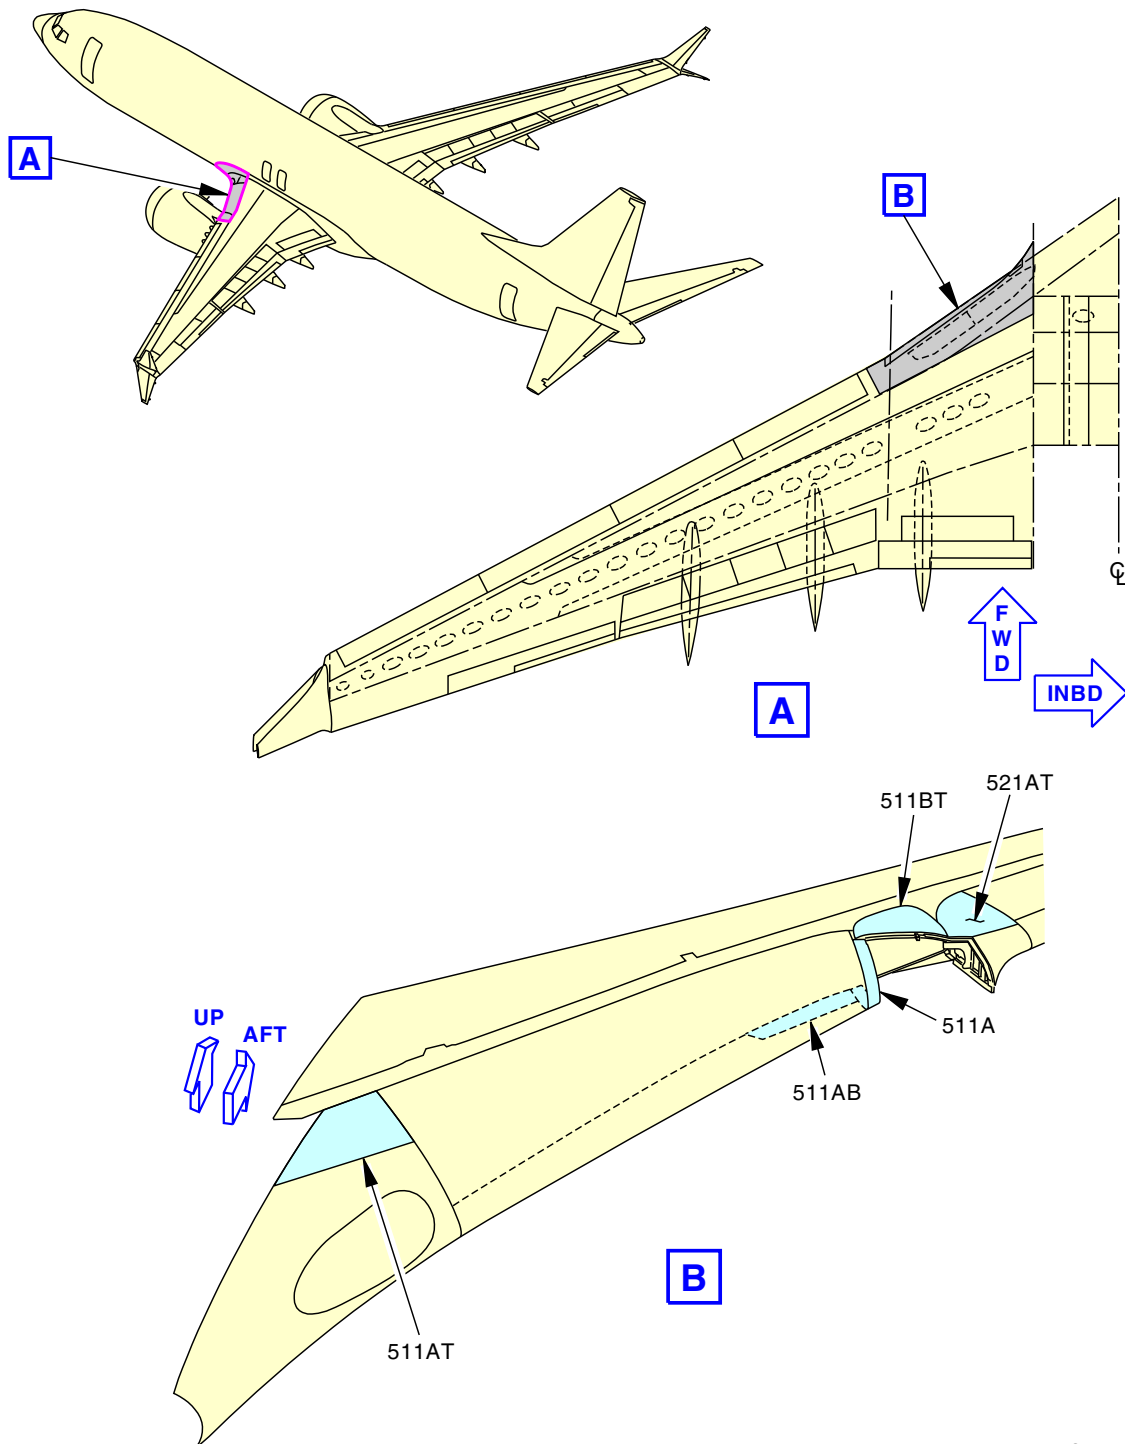

2410641 S00061526037_V1

Left Wing - Leading Edge Inboard of Nacelle Strut
Figure 208/06-44-00-990-808

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 221
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

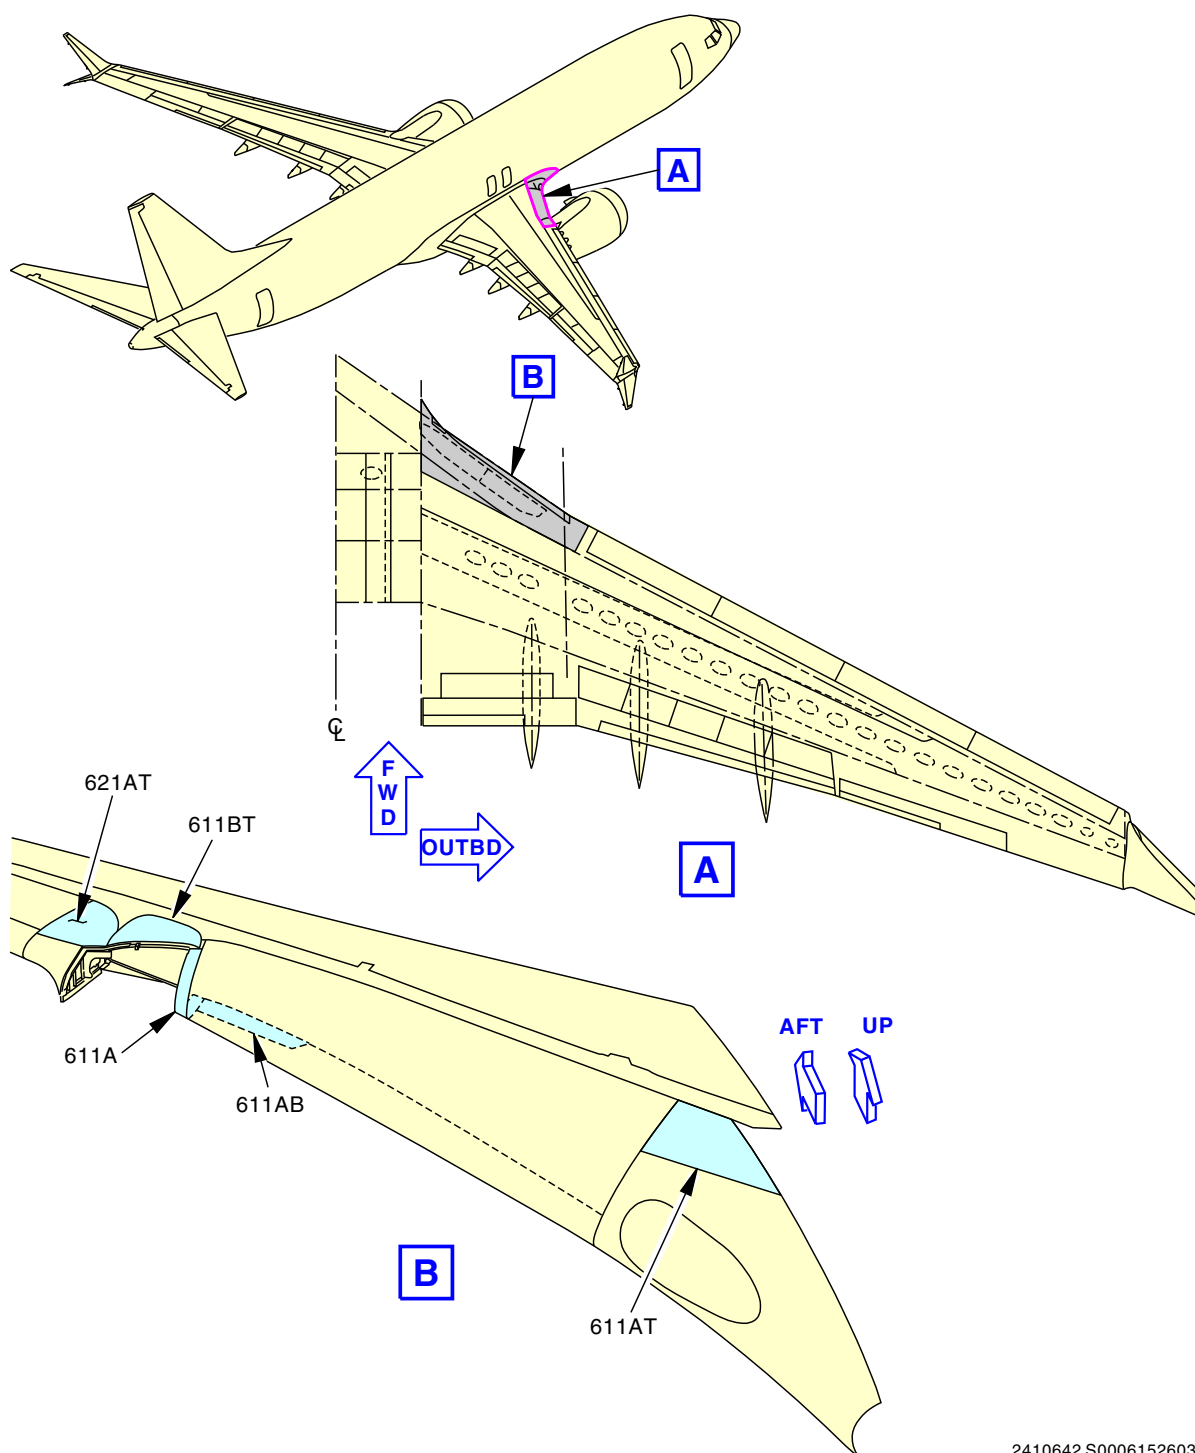

2410642 S00061526038_V1

Right Wing - Leading Edge Inboard of Nacelle Strut
Figure 209/06-44-00-990-809

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 222
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

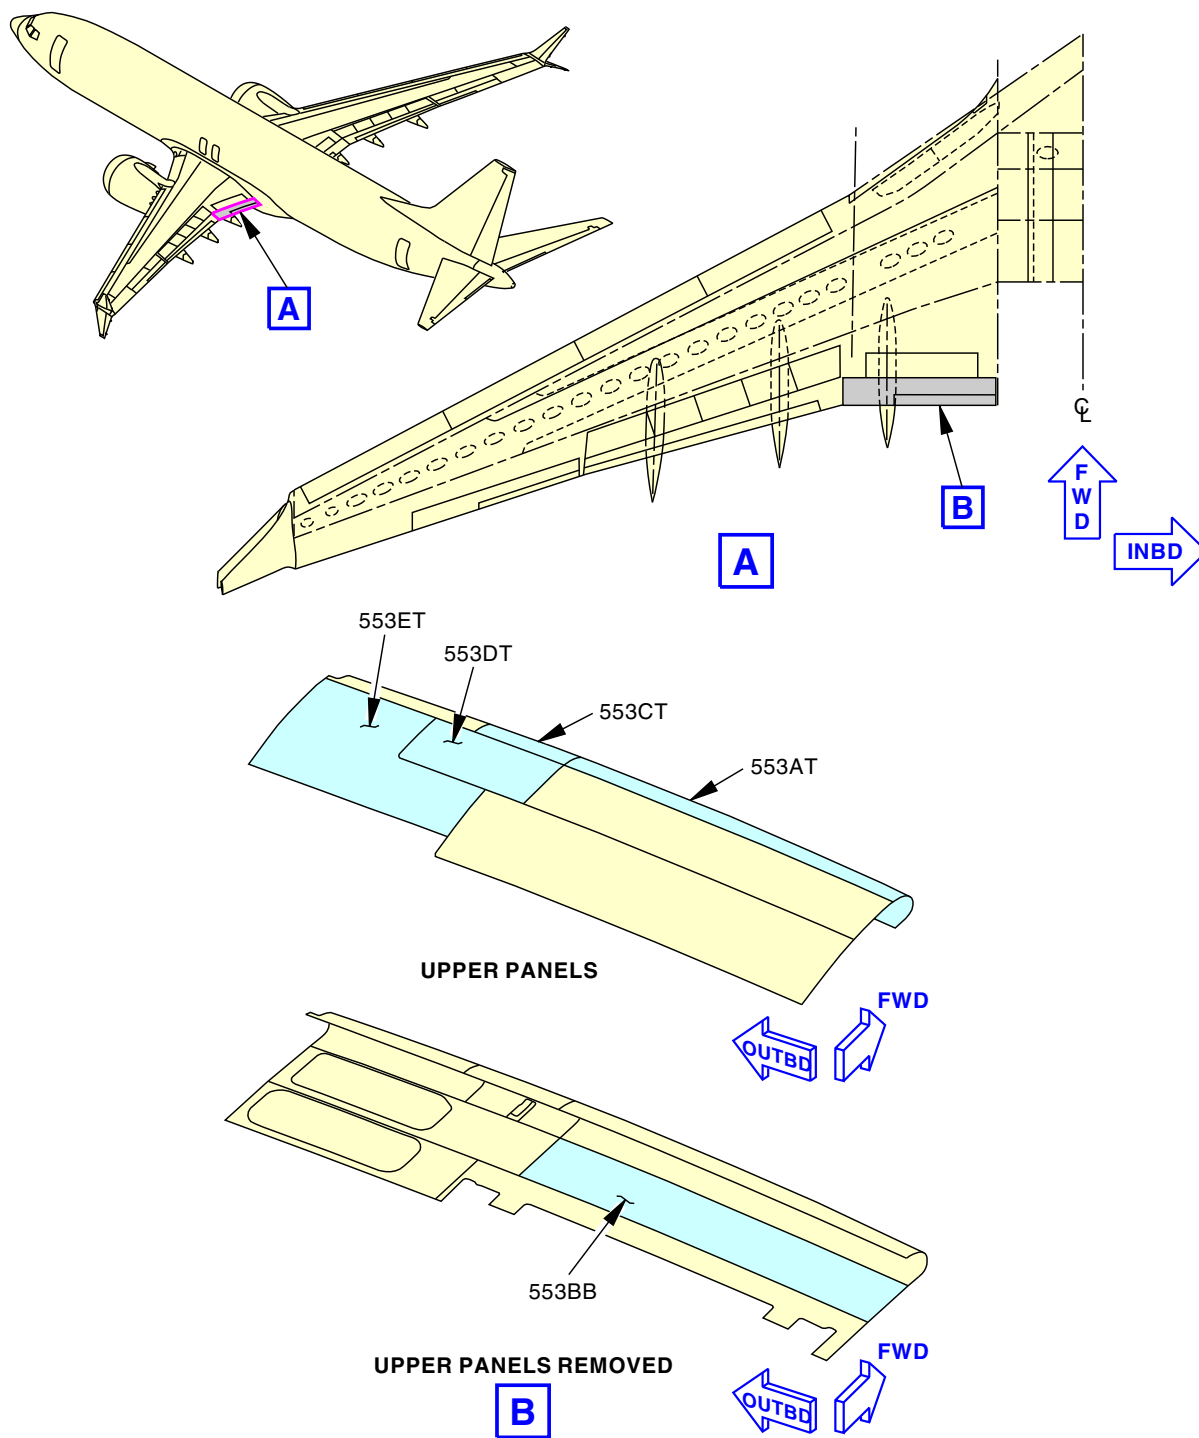

2410643 S00061526039_V1

Left Wing - Trailing Edge Inboard Flap
Figure 210/06-44-00-990-810


EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 223
Sep 15/2021

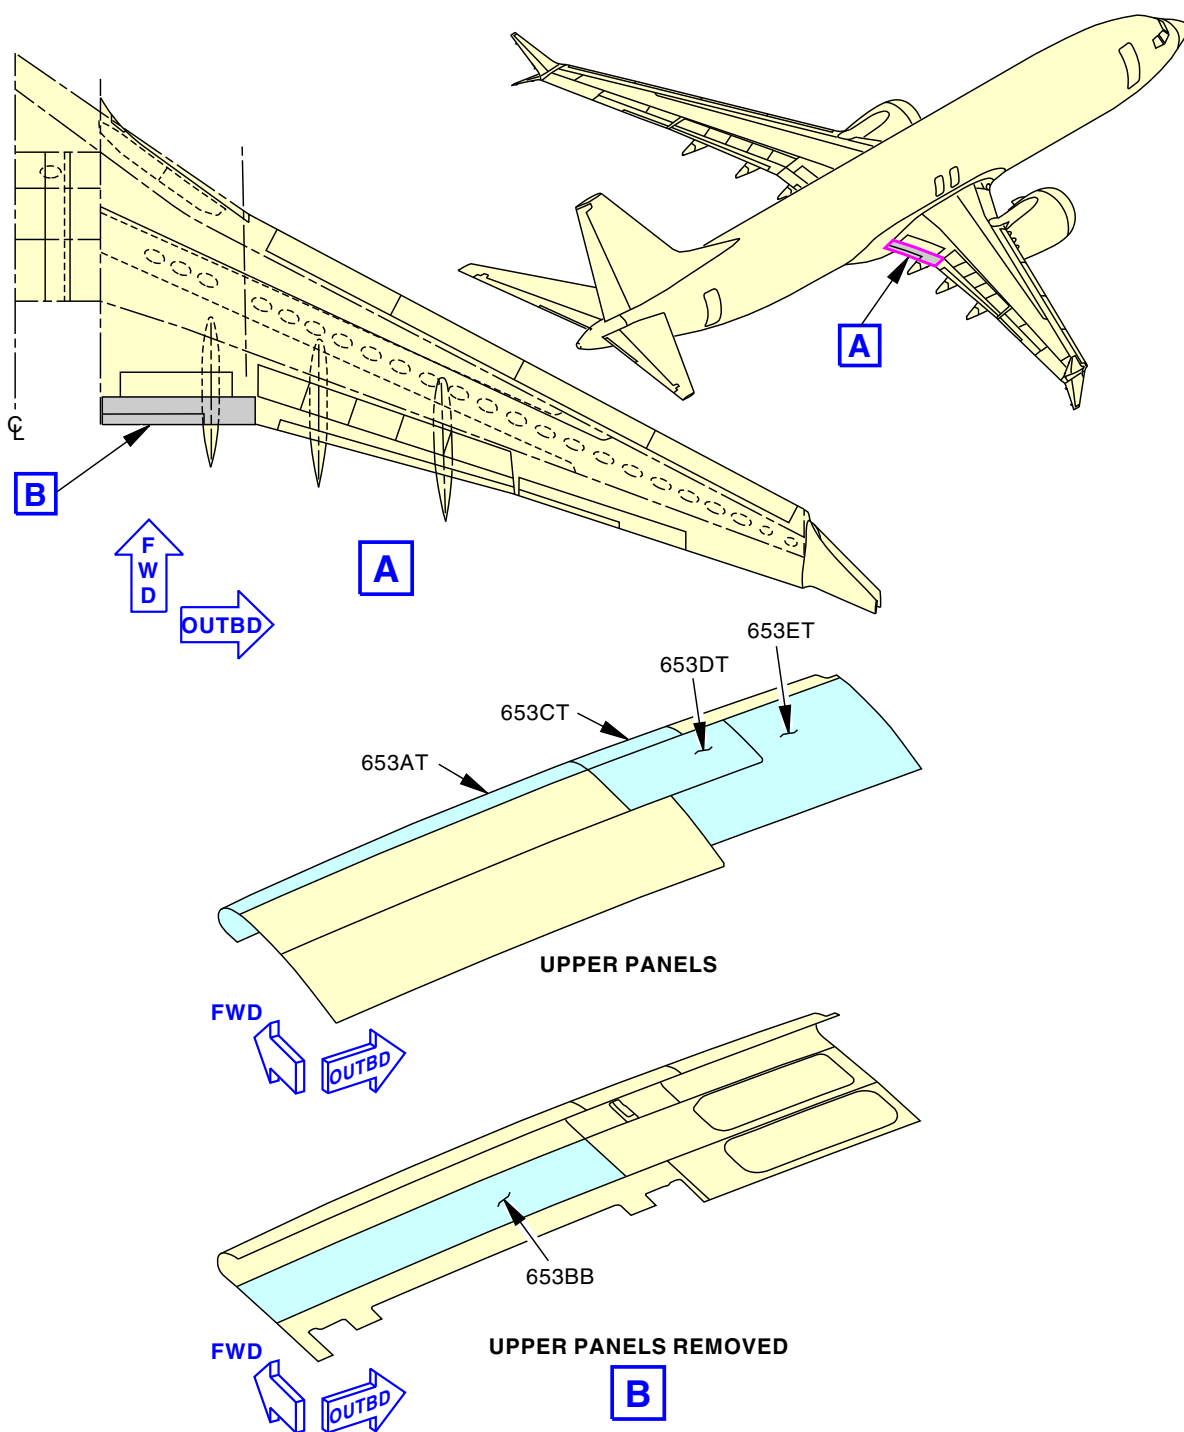

2410644 S00061526040_V1

Right Wing - Trailing Edge Inboard Flap
Figure 211/06-44-00-990-811

EFFECTIVITY
SIA ALL


D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 224
Sep 15/2021

BOEING
737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

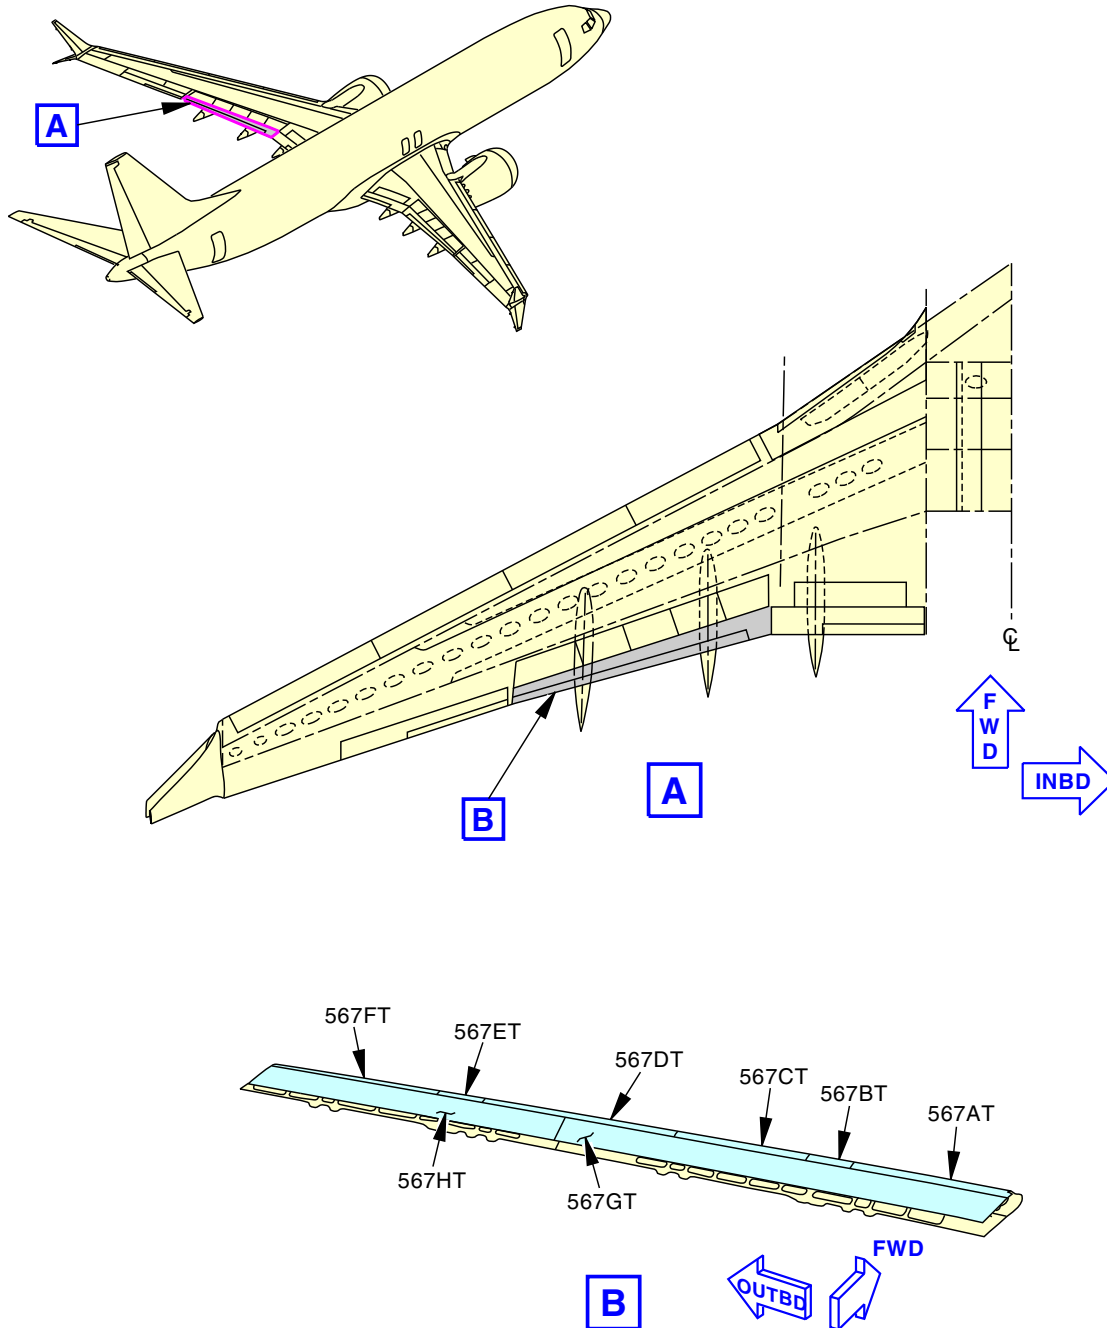

2410645 S00061526041_V1

Left Wing - Trailing Edge Outboard Flap
Figure 212/06-44-00-990-812

EFFECTIVITY
SIA ALL


D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 225
Sep 15/2021

BOEING
737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

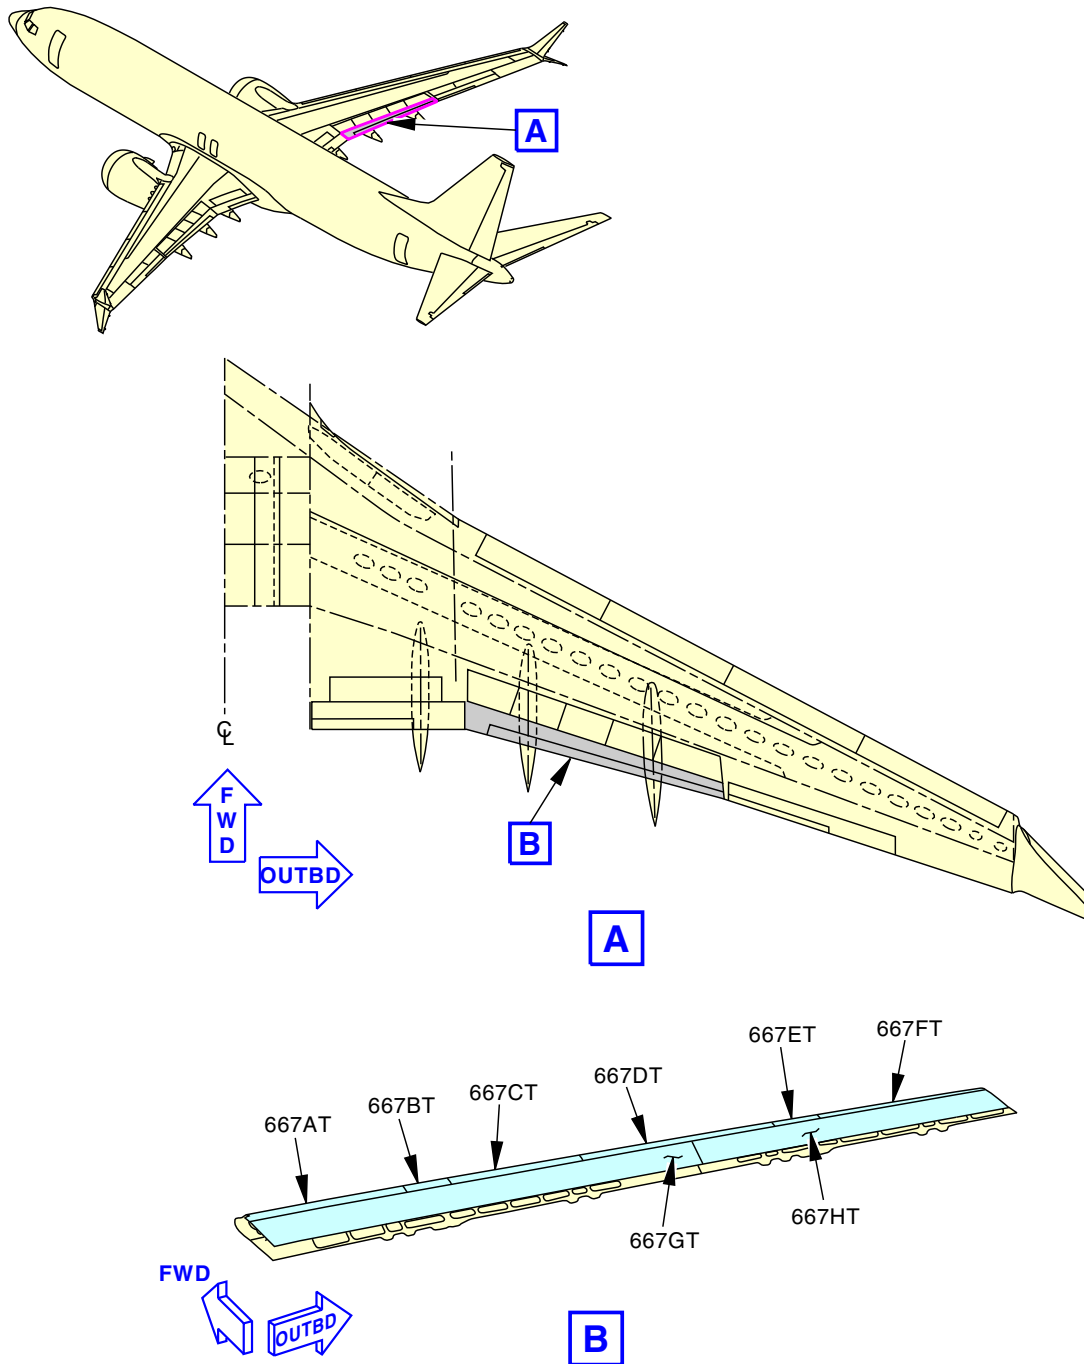

2410646 S00061526042_V1

Right Wing - Trailing Edge Outboard Flap
Figure 213/06-44-00-990-813

	EFFECTIVITY
SIA ALL	

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 226
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

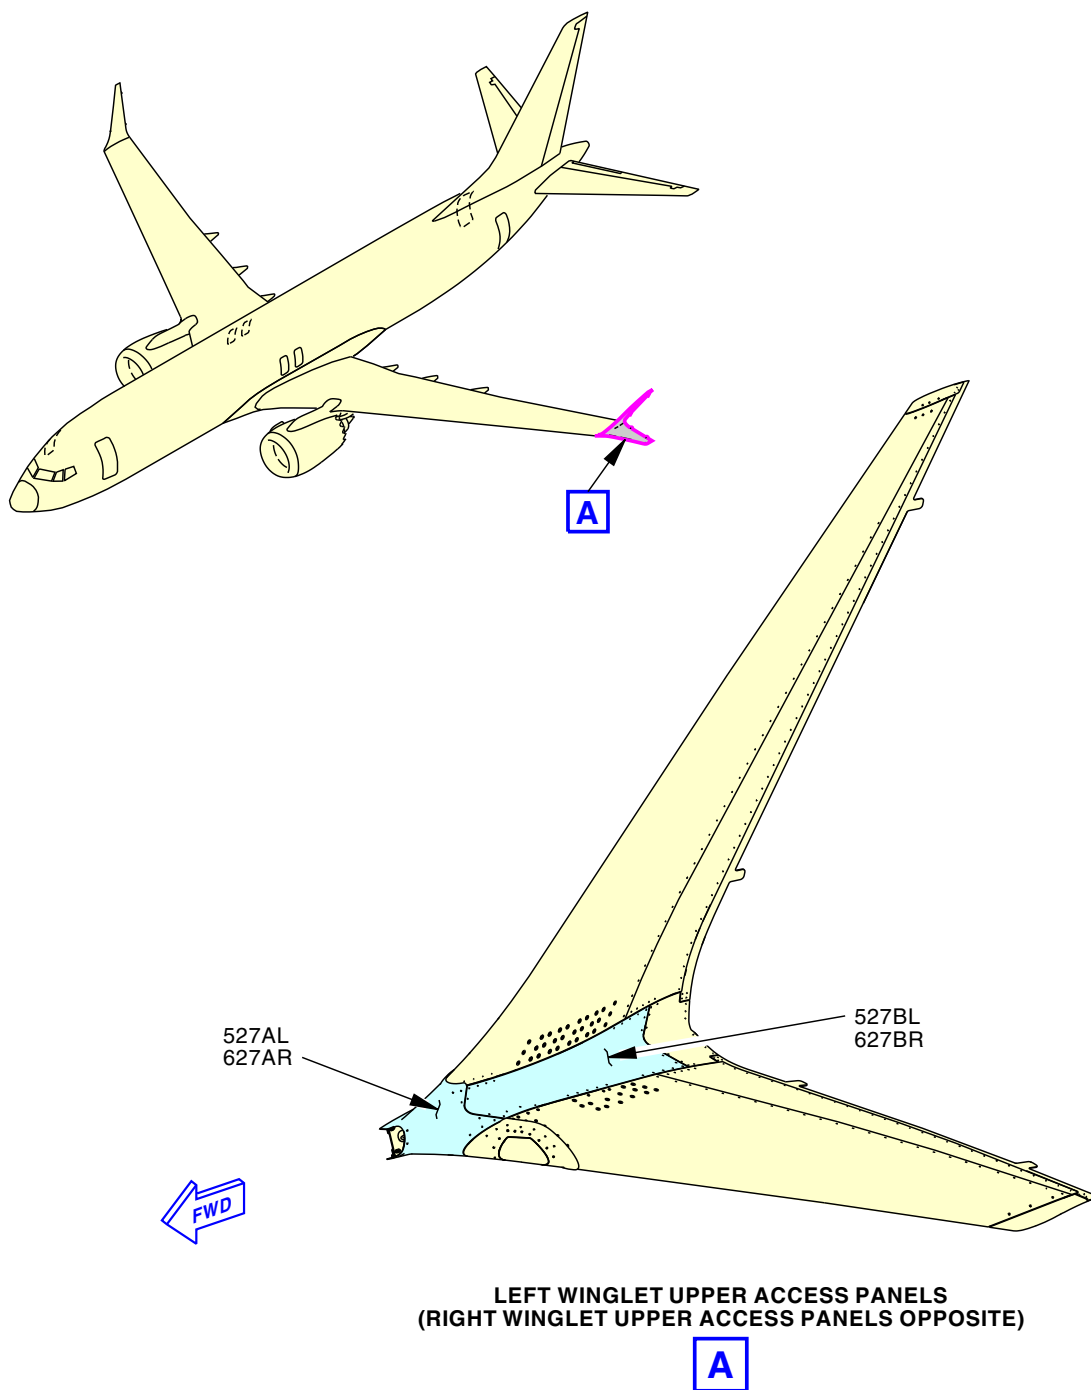

LEFT WINGLET UPPER ACCESS PANELS
(RIGHT WINGLET UPPER ACCESS PANELS OPPOSITE)

2410647 S00061526043_V1

Left and Right Winglet - Upper and Lower Access Panels
Figure 214/06-44-00-990-814 (Sheet 1 of 2)

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 227
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

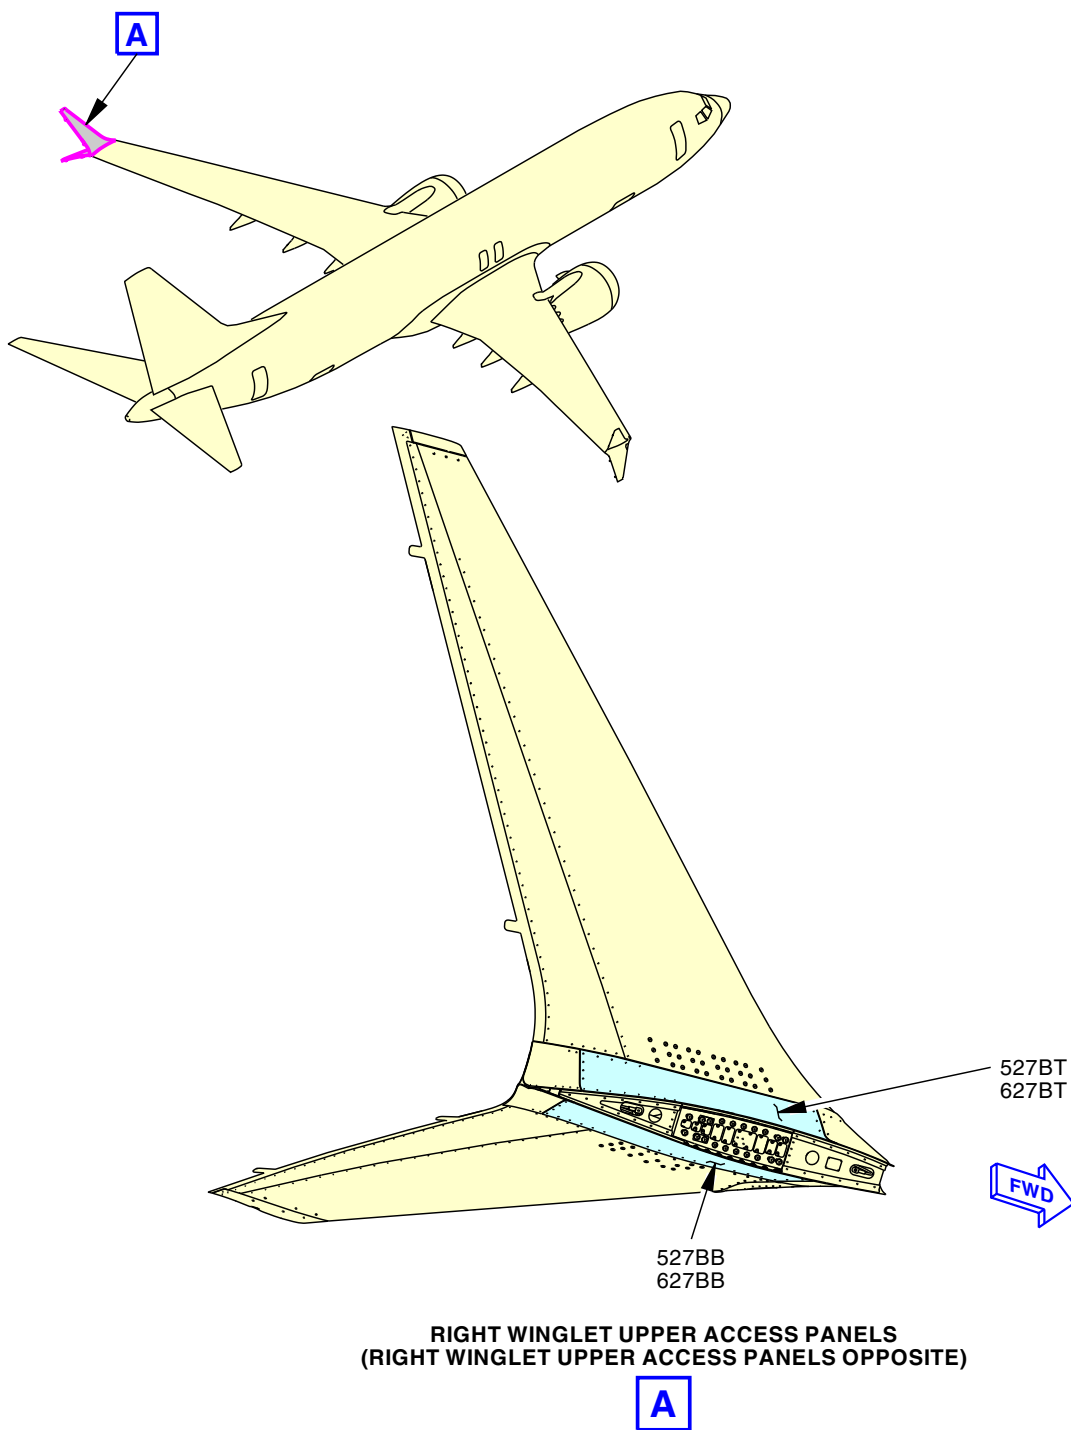

RIGHT WINGLET UPPER ACCESS PANELS
(RIGHT WINGLET UPPER ACCESS PANELS OPPOSITE)

2410648 S00061526044_V1

Left and Right Winglet - Upper and Lower Access Panels
Figure 214/06-44-00-990-814 (Sheet 2 of 2)


EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

Page 228
Sep 15/2021

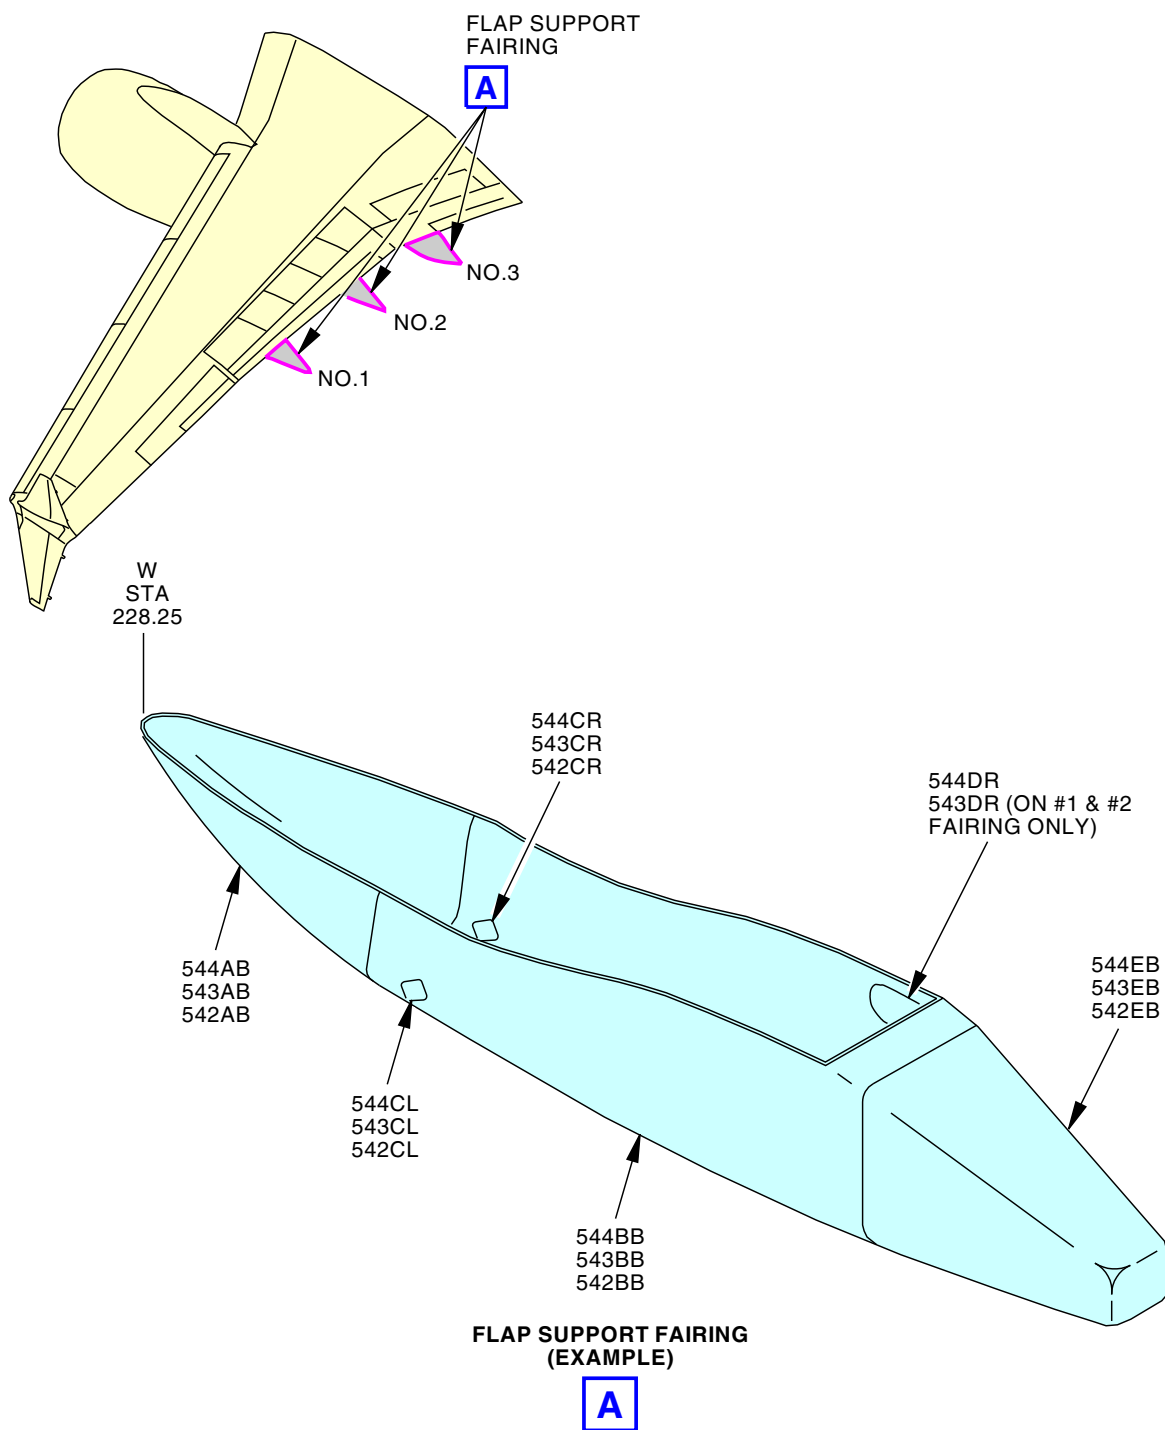

2410649 S00061526045_V1


Left Wing - Flap Support Fairing Access
Figure 215/06-44-00-990-815

EFFECTIVITY	
SIA ALL	

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-44-00

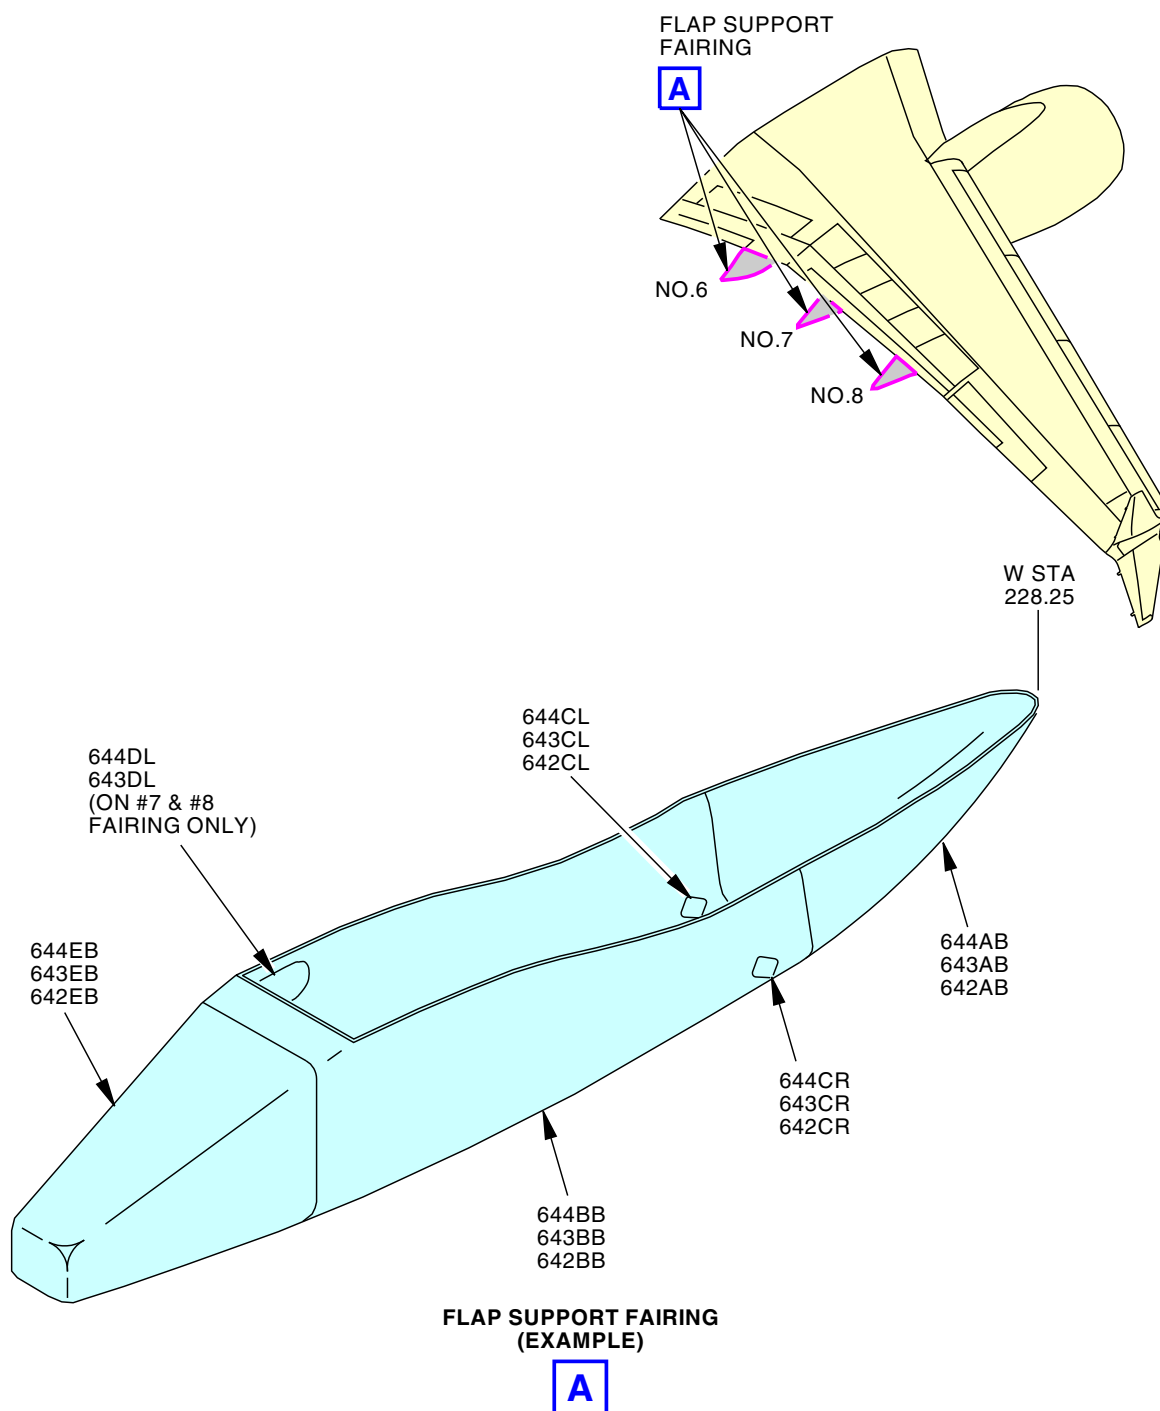

2518106 S0000591501_V1

Right Wing - Flap Support Fairing Access
Figure 216/06-44-00-990-816

EFFECTIVITY
SIA ALL

06-44-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

**PASSENGER AND CARGO COMPARTMENT DOORS (MAJOR ZONE 800) ACCESS DOORS AND
PANELS - MAINTENANCE PRACTICES**

1. General

- A. This task shows major zone 800 and subzones for the upper and lower fuselage entry and service access doors and panels for the passenger and cargo compartments. The subzones for major zone 800 in this task are as follows:
- (1) Subzone 820 - Cargo Compartment Doors
 - (2) Subzone 830 - Passenger Compartment Doors, Left
 - (3) Subzone 840 - Passenger Compartment Doors, Right
- B. Each subzone is divided into zones that are identified with the first two numbers of the subzone followed by a number that is not zero.
- C. Access doors and panels in a zone are identified by the zero number and a two or three letter suffix. This alphanumeric label is different for each access door or panel.

TASK 06-46-00-800-801

2. Passenger and Cargo Compartment Access Doors and Panels

(Figure 201, Figure 202, Figure 203, Figure 204, Figure 205)

A. Location Zones

Zone	Area
800	Doors

B. Finding an Access Door or Panel

SUBTASK 06-46-00-800-001

- (1) In the table below, find the applicable access door or panel.

Table 201 Passenger and Cargo Compartment Doors — Access Doors and Panels

Number	Name/Location
821	Forward Cargo Door
821AR	Access Panel on Forward Cargo Door - External
821AZ	Panel Assy - Forward Cargo Door - Protective Pad Liner
821BR	Access Panel on Forward Cargo Door - External
821BZ	Panel Assy - Forward Cargo Door - Handle Box Cover Plate
822	Aft Cargo Door
822AR	Access Panel on Aft Cargo Door - External
822AZ	Panel Assy - Aft Cargo Door - Protective Pad Liner
822BR	Access Panel on Aft Cargo Door
822BZ	Panel Assy - Aft Cargo Door - Handle Box Cover Plate
831	Forward Entry Door
831AW	Fwd Entry Door - Door Liner (Cosmetic)
831AZ	Forward Entry Door - Torque Tube Access
831BZ	Forward Entry Door - Handle Box and Cam for Handle Box Access

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-46-00

Page 201
Sep 15/2023



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Passenger and Cargo Compartment Doors — Access Doors and Panels (Continued)

Number	Name/Location
831CZ	Forward Entry Door - Handle Box Access
831DZ	Forward Entry Door - Gate Hinge Pin Access
831EZ	Forward Entry Door - Gate Hinge Pin Access
832	Emergency Exit Door (AOE)
832AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner
832BZ	Panel Assy - Emergency Exit Door (AOE) - Cover Plate
832CZ	Panel Assy - Emergency Exit Door (AOE) - Cover Plate
833	Emergency Exit Door (AOE)
833AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner
833BZ	Panel Assy - Emergency Exit Door (AOE) - Cover Plate
833CZ	Panel Assy - Emergency Exit Door (AOE) - Cover Plate
834	Aft Entry Door
834AW	Aft Entry Door - Door Liner
834AZ	Aft Entry Door - Torque Tube Access
834BZ	Aft Entry Door - Handle Box and Cam for Handle Box Access
834CZ	Aft Entry Door - Handle Box Access
834DZ	Aft Entry Door - Lower Hinge Access
834EZ	Aft Entry Door - Upper Hinge Access
834FZ	Aft Entry Door - Torque Tube Access
834GZ	AFT Entry Door - Torque Tube Access
841	Forward Galley Service Door
841AW	Fwd Galley Service Door - Door Liner
841AZ	Forward Galley Service Door - Torque Tube Access
841BZ	Forward Galley Service Door - Handle Box and Cam for Handle Box Access
841CZ	Forward Galley Service Door - Handle Box Access
841DZ	Forward Galley Service Door - Lower Hinge Access
841EZ	Forward Galley Service Door - Upper Hinge Access
841FZ	Forward Galley Service Door - Torque Tube Access
841GZ	Forward Galley Service Door - Torque Tube Access
842	Emergency Exit Door (AOE)
842AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner
842BZ	Panel Assy - Emergency Exit Door (AOE) - Cover Plate
842CZ	Panel Assy - Emergency Exit Door (AOE) - Cover Plate
843	Emergency Exit Door (AOE)

EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-46-00

Page 202
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

Table 201 Passenger and Cargo Compartment Doors — Access Doors and Panels (Continued)

Number	Name/Location
843AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner
843BZ	Panel Assy - Emergency Exit Door (AOE) - Cover Plate
843CZ	Panel Assy - Emergency Exit Door (AOE) - Cover Plate
844	Aft Galley Service Door
844AW	Aft Galley Service Door - Door Liner (Cosmetic)
844AZ	Aft Galley Service Door - Torque Tube Access
844BZ	Aft Galley Service Door - Handle Box and Cam for Handle Box Access
844CZ	Aft Galley Service Door - Handle Box Access
844DZ	Aft Galley Service Door - Lower Hinge Access
844EZ	Aft Galley Service Door - Upper Hinge Access
844FZ	Aft Galley Service Door - Torque Tube Access
844GZ	Aft Galley Service Door - Torque Tube Access

———— **END OF TASK** ————

EFFECTIVITY
SIA ALL

D633AM101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-46-00

Page 203
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

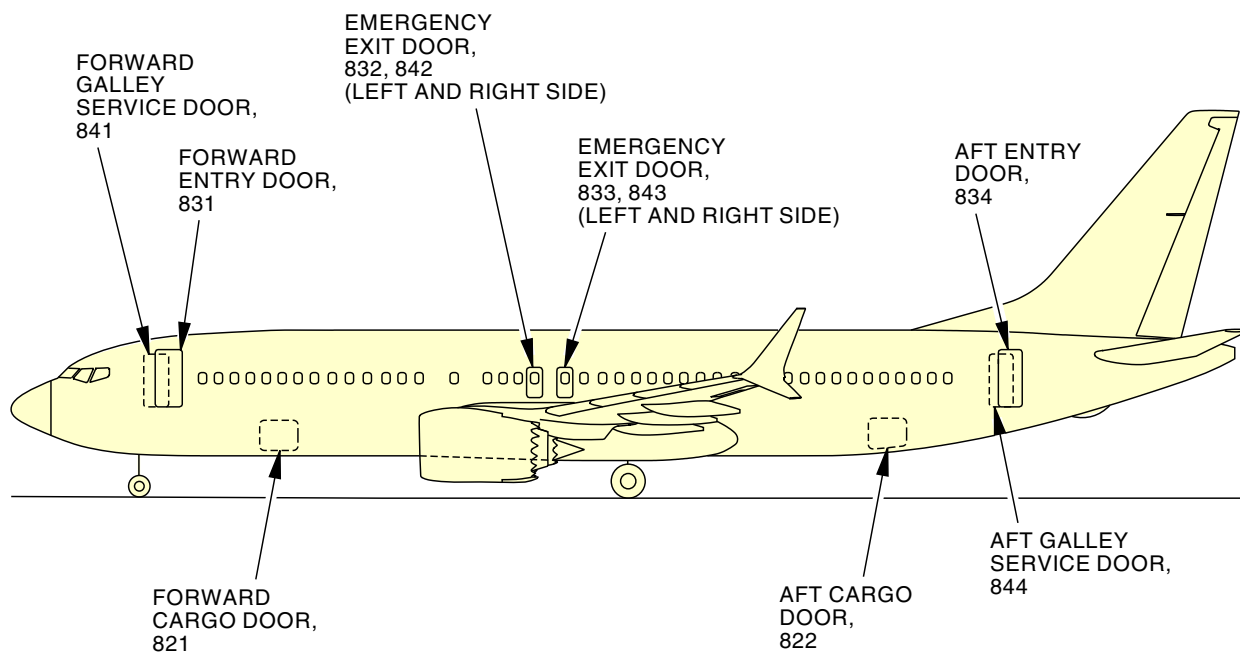

2517905 S0000591785_V1

Passenger and Cargo Compartment Doors - Subzones 820, 830, and 840
Figure 201/06-46-00-990-801



EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-46-00

Page 204
Sep 15/2021

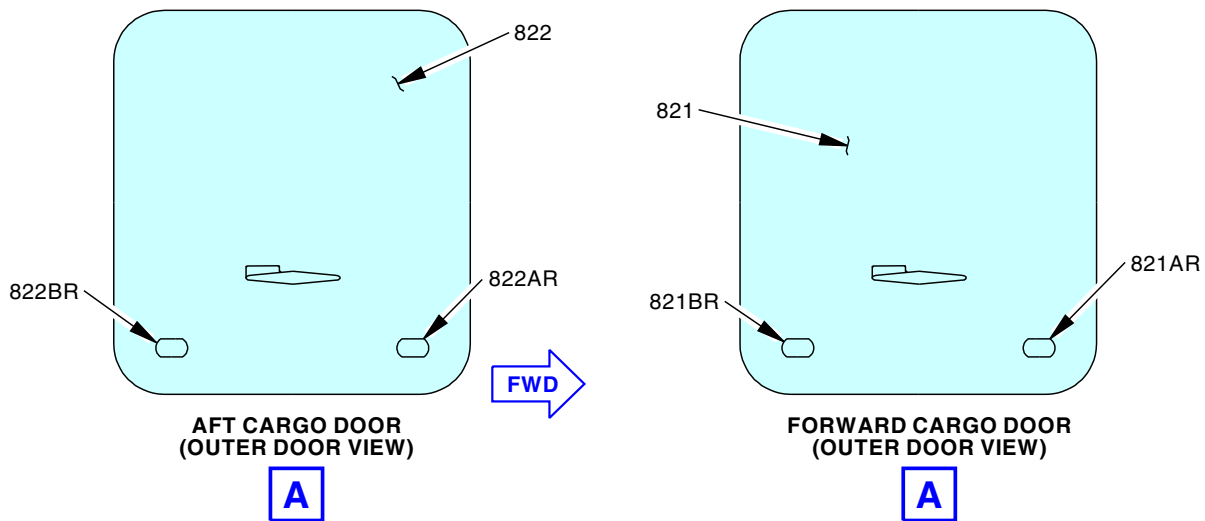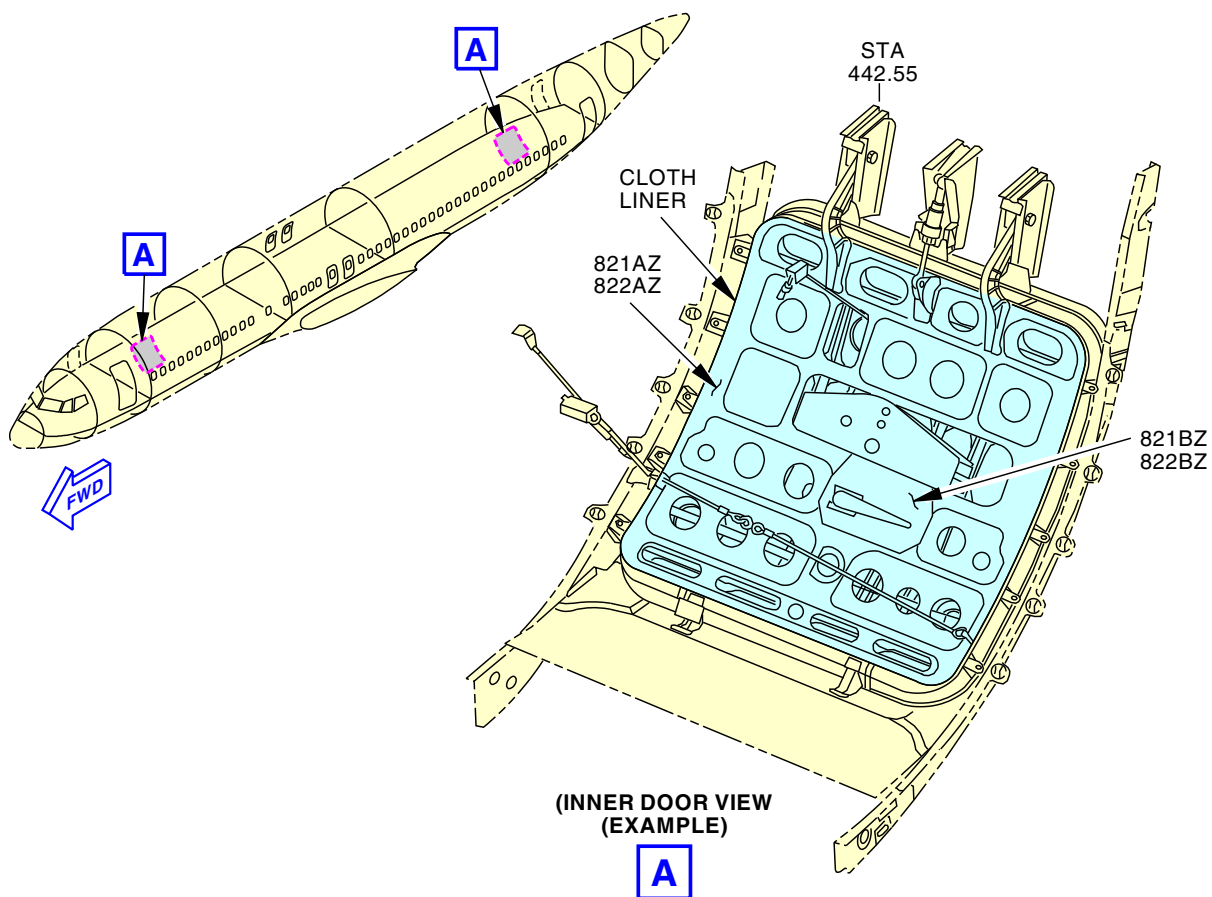

2410650 S00061526050_V1

Forward and Aft Cargo Compartment Doors, Access Doors and Panels
Figure 202/06-46-00-990-802


EFFECTIVITY
SIA ALL

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

06-46-00

Page 205
Sep 15/2021

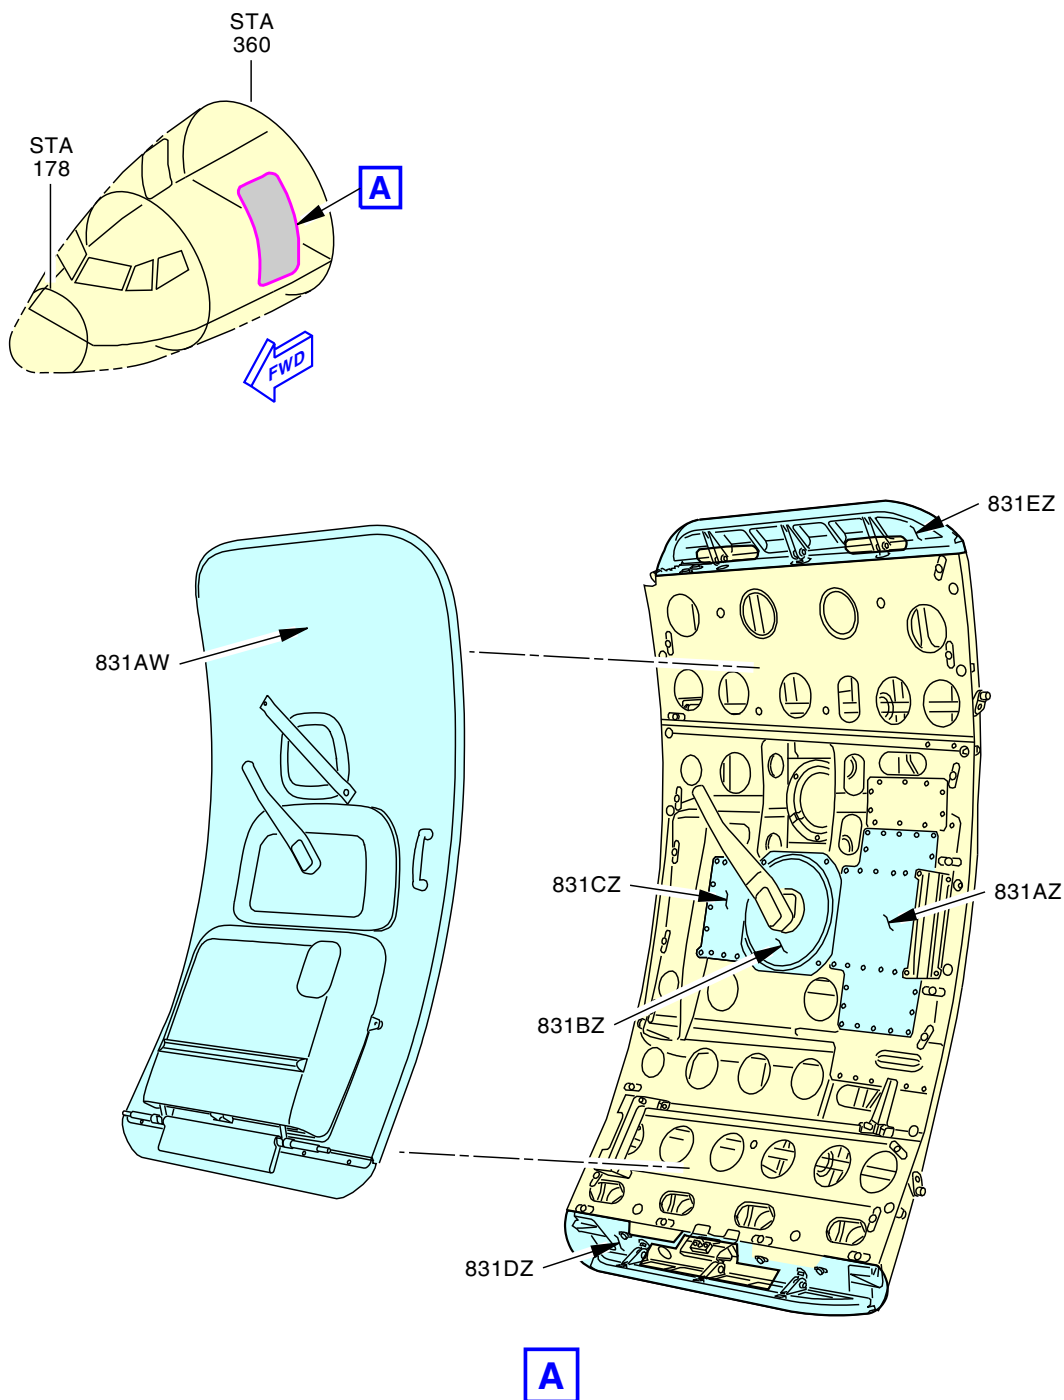

2517907 S0000591786_V1

Forward Entry Door, Access Doors and Panels
Figure 203/06-46-00-990-803

EFFECTIVITY
SIA ALL

06-46-00


D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Page 206
Sep 15/2021



737-7/8/8200/9/10
AIRCRAFT MAINTENANCE MANUAL

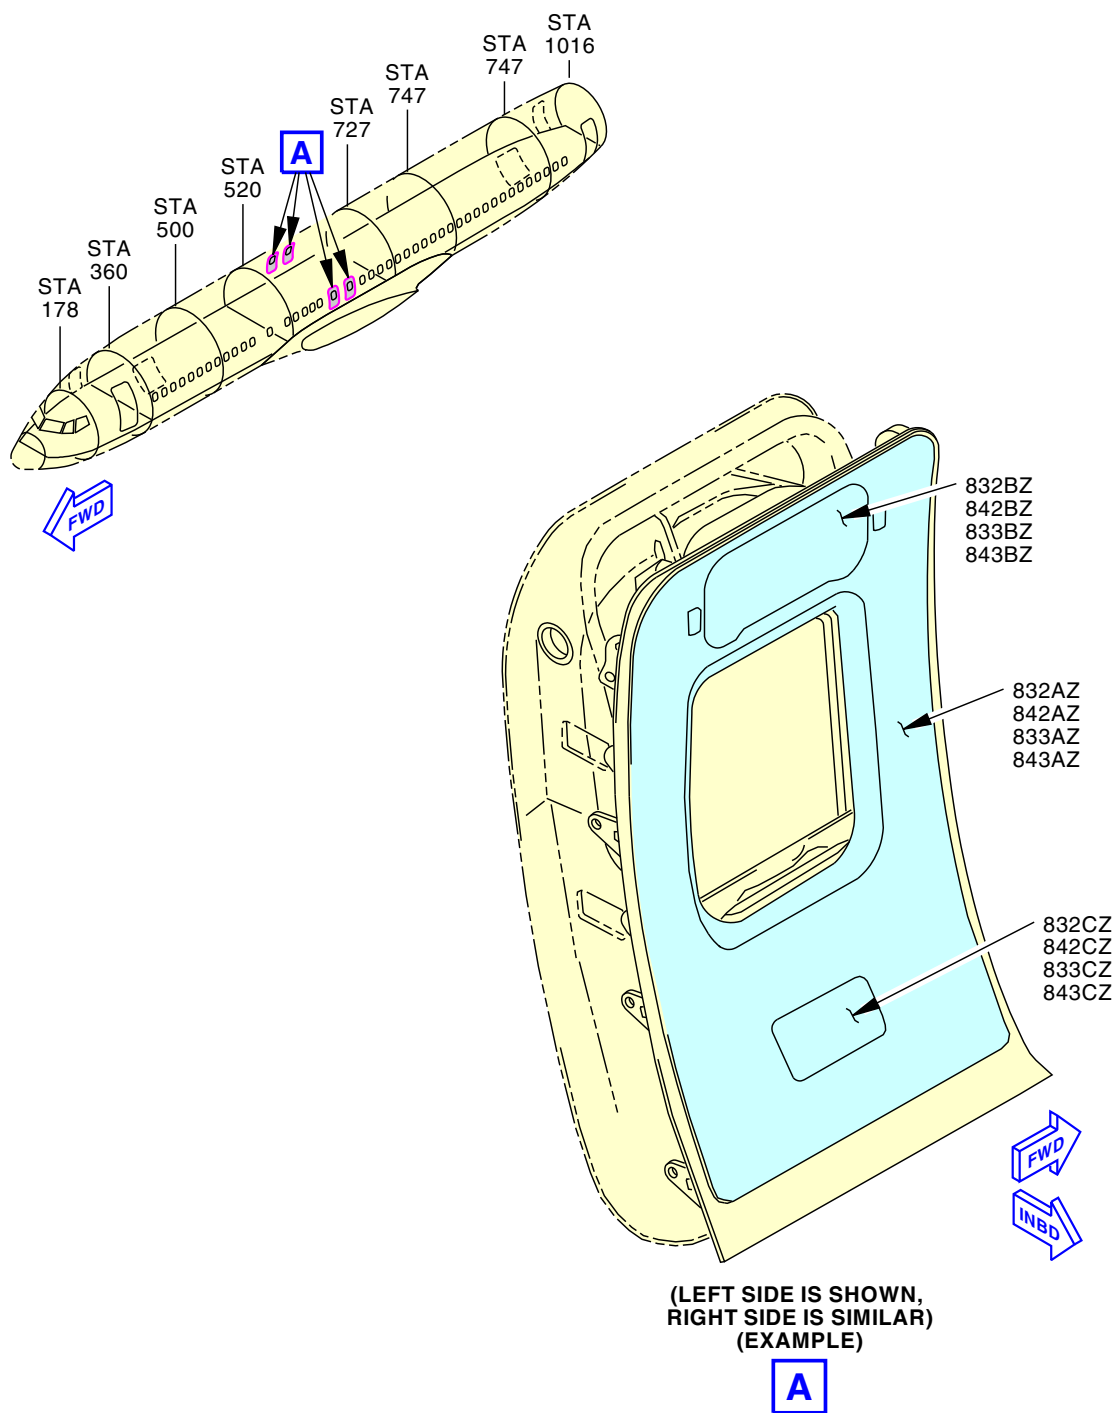

2517908 S0000591789_V1


Emergency Exits, Access Doors and Panels
Figure 204/06-46-00-990-804

EFFECTIVITY
SIA ALL

D633AM101-SIA

06-46-00

Page 207
Sep 15/2021

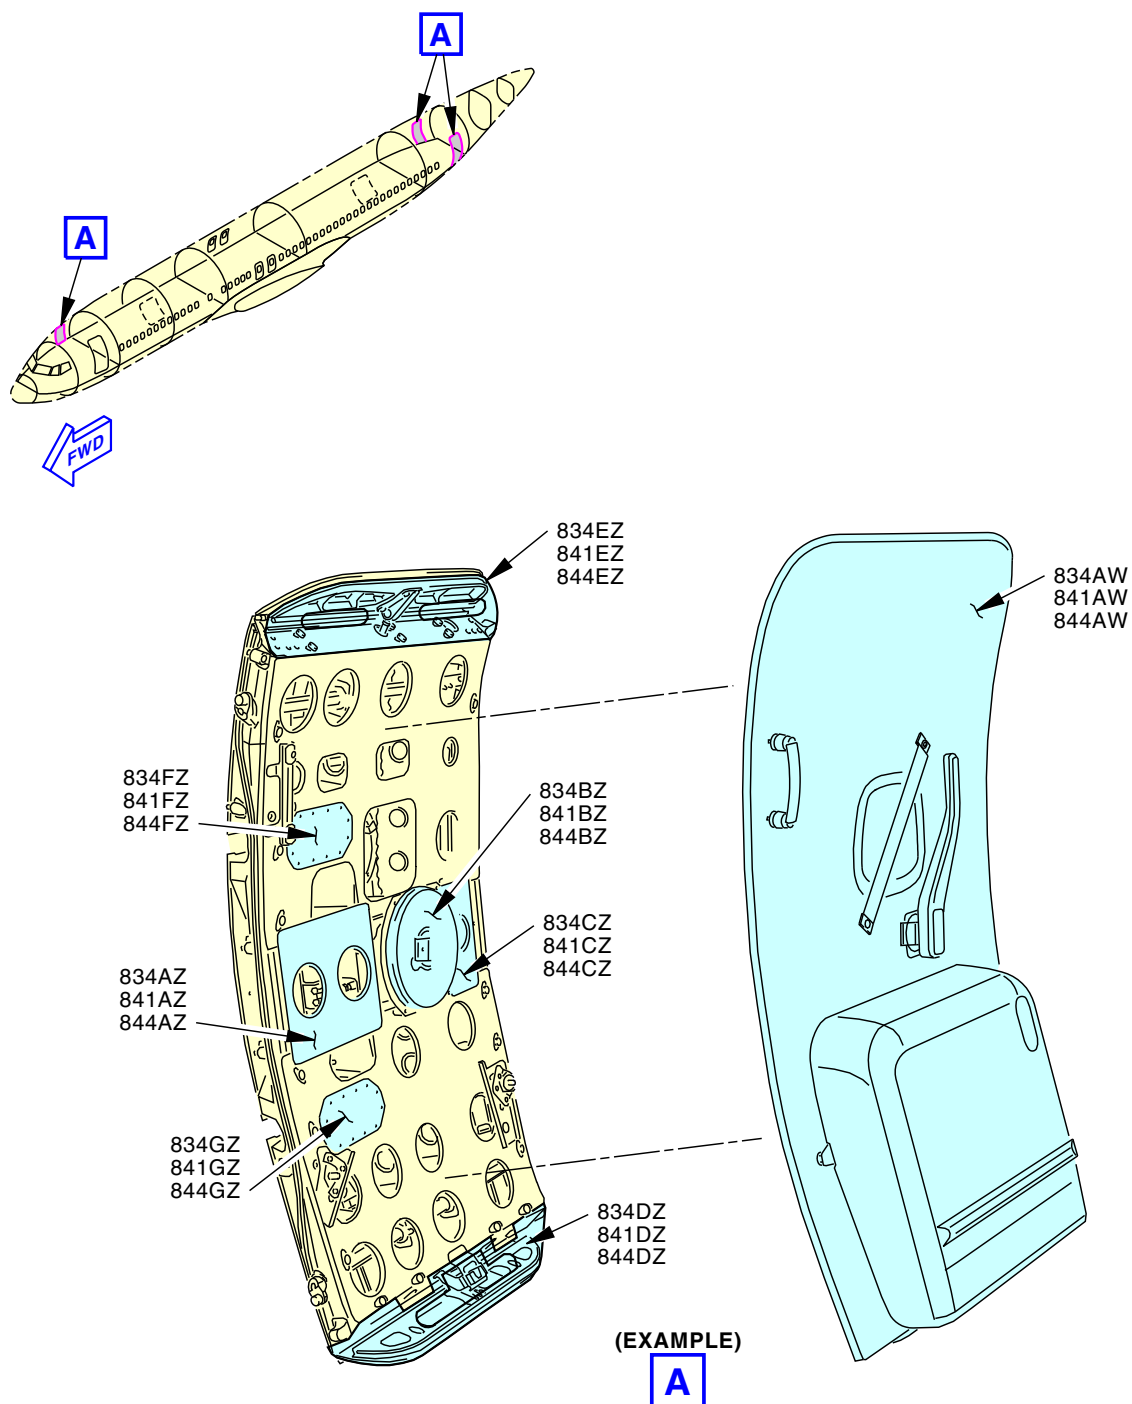

2517909 S0000591791_V1

Forward and Aft Entry Door/Aft Galley Service Door, Access Doors and Panels
Figure 205/06-46-00-990-805

EFFECTIVITY
SIA ALL

06-46-00

D633AM101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details