

**CHAPTER**

**32**

**Landing Gear**



CHAPTER 32  
LANDING GEAR

| Subject/Page       | Date        | COC | Subject/Page     | Date        | COC |
|--------------------|-------------|-----|------------------|-------------|-----|
| 32-EFFECTIVE PAGES |             |     | 32-00-00 (cont.) |             |     |
| 1 thru 9           | Oct 15/2023 |     | 11               | Oct 15/2021 |     |
| 10                 | BLANK       |     | 12               | BLANK       |     |
| 32-CONTENTS        |             |     | 32-09-00         |             |     |
| 1                  | Oct 15/2021 |     | 1                | Oct 15/2021 |     |
| 2                  | Oct 15/2021 |     | 2                | Oct 15/2021 |     |
| 3                  | Oct 15/2021 |     | 3                | Oct 15/2021 |     |
| 4                  | Oct 15/2021 |     | 4                | Oct 15/2021 |     |
| 5                  | Oct 15/2021 |     | 5                | Oct 15/2021 |     |
| 6                  | Oct 15/2021 |     | 6                | Oct 15/2021 |     |
| 7                  | Oct 15/2021 |     | 7                | Oct 15/2021 |     |
| 8                  | Oct 15/2021 |     | 8                | Oct 15/2021 |     |
| 9                  | Oct 15/2021 |     | 9                | Oct 15/2021 |     |
| 10                 | BLANK       |     | 10               | Oct 15/2021 |     |
| 32-00-00           |             |     | 11               | Oct 15/2021 |     |
| 1                  | Oct 15/2021 |     | 12               | Oct 15/2021 |     |
| 2                  | Oct 15/2021 |     | 13               | Oct 15/2021 |     |
| 3                  | Oct 15/2021 |     | 14               | Oct 15/2021 |     |
| 4                  | Oct 15/2021 |     | 15               | Oct 15/2021 |     |
| 5                  | Oct 15/2021 |     | 16               | Oct 15/2021 |     |
| 6                  | Oct 15/2021 |     | 17               | Oct 15/2021 |     |
| 7                  | Oct 15/2021 |     | 18               | Jun 15/2022 |     |
| 8                  | Oct 15/2021 |     | 19               | Jun 15/2022 |     |
| 9                  | Oct 15/2021 |     | 20               | Oct 15/2021 |     |
| 10                 | Oct 15/2021 |     |                  |             |     |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

**32-EFFECTIVE PAGES**

CHAPTER 32  
LANDING GEAR

| Subject/Page     | Date        | COC | Subject/Page     | Date        | COC |
|------------------|-------------|-----|------------------|-------------|-----|
| 32-09-00 (cont.) |             |     | 32-09-00 (cont.) |             |     |
| 21               | Oct 15/2021 |     | 45               | Oct 15/2021 |     |
| 22               | Oct 15/2021 |     | R 46             | Oct 15/2023 |     |
| 23               | Oct 15/2021 |     | 47               | Oct 15/2021 |     |
| 24               | Oct 15/2021 |     | 48               | Oct 15/2021 |     |
| 25               | Oct 15/2021 |     | 49               | Oct 15/2021 |     |
| 26               | Oct 15/2021 |     | 50               | Oct 15/2021 |     |
| 27               | Oct 15/2021 |     | 32-10-00         |             |     |
| 28               | Oct 15/2021 |     | 1                | Oct 15/2021 |     |
| 29               | Oct 15/2021 |     | 2                | Oct 15/2021 |     |
| 30               | Oct 15/2021 |     | 3                | Oct 15/2021 |     |
| 31               | Oct 15/2021 |     | 4                | Oct 15/2021 |     |
| 32               | Oct 15/2021 |     | 5                | Oct 15/2021 |     |
| 33               | Oct 15/2021 |     | 6                | Oct 15/2021 |     |
| 34               | Oct 15/2021 |     | 7                | Oct 15/2021 |     |
| 35               | Oct 15/2021 |     | 8                | Oct 15/2021 |     |
| 36               | Oct 15/2021 |     | 9                | Oct 15/2021 |     |
| 37               | Oct 15/2021 |     | 10               | Oct 15/2021 |     |
| 38               | Oct 15/2021 |     | 11               | Oct 15/2021 |     |
| 39               | Oct 15/2021 |     | 12               | Oct 15/2021 |     |
| 40               | Oct 15/2021 |     | 13               | Oct 15/2021 |     |
| 41               | Oct 15/2021 |     | 14               | Oct 15/2021 |     |
| 42               | Oct 15/2021 |     | 15               | Oct 15/2021 |     |
| 43               | Oct 15/2021 |     | 16               | Oct 15/2021 |     |
| 44               | Oct 15/2021 |     |                  |             |     |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

## 32-EFFECTIVE PAGES

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 32  
LANDING GEAR

| Subject/Page     | Date        | COC | Subject/Page     | Date        | COC |
|------------------|-------------|-----|------------------|-------------|-----|
| 32-10-00 (cont.) |             |     | 32-31-00 (cont.) |             |     |
| 17               | Oct 15/2021 |     | 3                | Oct 15/2021 |     |
| 18               | BLANK       |     | 4                | Oct 15/2021 |     |
| 32-20-00         |             |     | 5                | Oct 15/2021 |     |
| 1                | Oct 15/2021 |     | 6                | Oct 15/2021 |     |
| R 2              | Oct 15/2023 |     | 7                | Oct 15/2021 |     |
| 3                | Oct 15/2021 |     | 8                | Oct 15/2021 |     |
| 4                | Oct 15/2021 |     | 9                | Oct 15/2021 |     |
| 5                | Oct 15/2021 |     | 10               | Oct 15/2021 |     |
| 6                | Oct 15/2021 |     | 11               | Oct 15/2021 |     |
| 7                | Oct 15/2021 |     | 12               | Oct 15/2021 |     |
| 8                | Oct 15/2021 |     | 13               | Oct 15/2021 |     |
| 9                | Oct 15/2021 |     | 14               | Oct 15/2021 |     |
| 10               | Oct 15/2021 |     | 15               | Oct 15/2021 |     |
| 11               | Oct 15/2021 |     | 16               | Oct 15/2021 |     |
| 12               | Oct 15/2021 |     | 17               | Oct 15/2021 |     |
| 13               | Oct 15/2021 |     | 18               | Oct 15/2021 |     |
| 14               | BLANK       |     | 19               | Oct 15/2021 |     |
| 32-30-00         |             |     | 20               | Oct 15/2021 |     |
| 1                | Oct 15/2021 |     | 21               | Oct 15/2021 |     |
| 2                | Oct 15/2021 |     | 22               | BLANK       |     |
| 3                | Oct 15/2021 |     | 32-32-00         |             |     |
| 4                | BLANK       |     | 1                | Oct 15/2021 |     |
| 32-31-00         |             |     | 2                | Oct 15/2021 |     |
| 1                | Oct 15/2021 |     |                  |             |     |
| 2                | Oct 15/2021 |     |                  |             |     |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

## 32-EFFECTIVE PAGES

CHAPTER 32  
LANDING GEAR

| Subject/Page     | Date        | COC | Subject/Page     | Date        | COC |
|------------------|-------------|-----|------------------|-------------|-----|
| 32-32-00 (cont.) |             |     | 32-33-00 (cont.) |             |     |
| 3                | Oct 15/2021 |     | 5                | Oct 15/2021 |     |
| 4                | Oct 15/2021 |     | 6                | Oct 15/2021 |     |
| 5                | Oct 15/2021 |     | 7                | Oct 15/2021 |     |
| 6                | Oct 15/2021 |     | 8                | Oct 15/2021 |     |
| 7                | Oct 15/2021 |     | 9                | Oct 15/2021 |     |
| 8                | Oct 15/2021 |     | 10               | Oct 15/2021 |     |
| 9                | Oct 15/2021 |     | 11               | Oct 15/2021 |     |
| 10               | Oct 15/2021 |     | 12               | Oct 15/2021 |     |
| 11               | Oct 15/2021 |     | 13               | Oct 15/2021 |     |
| 12               | Oct 15/2021 |     | 14               | Oct 15/2021 |     |
| 13               | Oct 15/2021 |     | 15               | Oct 15/2021 |     |
| 14               | Oct 15/2021 |     | 16               | BLANK       |     |
| 15               | Oct 15/2021 |     | 32-34-00         |             |     |
| 16               | Oct 15/2021 |     | 1                | Oct 15/2021 |     |
| 17               | Oct 15/2021 |     | 2                | Oct 15/2021 |     |
| 18               | Oct 15/2021 |     | 3                | Oct 15/2021 |     |
| 19               | Oct 15/2021 |     | 4                | Oct 15/2021 |     |
| 20               | BLANK       |     | 5                | Oct 15/2021 |     |
| 32-33-00         |             |     | 6                | Oct 15/2021 |     |
| 1                | Oct 15/2021 |     | 7                | Oct 15/2021 |     |
| 2                | Oct 15/2021 |     | 8                | Oct 15/2021 |     |
| 3                | Oct 15/2021 |     | 9                | Oct 15/2021 |     |
| 4                | Oct 15/2021 |     | 10               | BLANK       |     |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

## 32-EFFECTIVE PAGES

CHAPTER 32  
LANDING GEAR

| Subject/Page | Date        | COC | Subject/Page     | Date        | COC |
|--------------|-------------|-----|------------------|-------------|-----|
| 32-35-00     |             |     | 32-41-00 (cont.) |             |     |
| 1            | Oct 15/2021 |     | 11               | Oct 15/2021 |     |
| 2            | Oct 15/2021 |     | 12               | Oct 15/2021 |     |
| 3            | Oct 15/2021 |     | 13               | Oct 15/2021 |     |
| 4            | Oct 15/2021 |     | 14               | Oct 15/2021 |     |
| 5            | Oct 15/2021 |     | 15               | Oct 15/2021 |     |
| 6            | Oct 15/2021 |     | 16               | Oct 15/2021 |     |
| 7            | Oct 15/2021 |     | 17               | Oct 15/2021 |     |
| 8            | BLANK       |     | 18               | Oct 15/2021 |     |
| 32-40-00     |             |     | 19               | Oct 15/2021 |     |
| 1            | Oct 15/2021 |     | 20               | Oct 15/2021 |     |
| 2            | Oct 15/2021 |     | 21               | Oct 15/2021 |     |
| 3            | Oct 15/2021 |     | 22               | Oct 15/2021 |     |
| 4            | BLANK       |     | 23               | Oct 15/2021 |     |
| 32-41-00     |             |     | 24               | Oct 15/2021 |     |
| 1            | Oct 15/2021 |     | 25               | Oct 15/2021 |     |
| 2            | Oct 15/2021 |     | 26               | Oct 15/2021 |     |
| 3            | Oct 15/2021 |     | 27               | Oct 15/2021 |     |
| 4            | Oct 15/2021 |     | 28               | Oct 15/2021 |     |
| 5            | Oct 15/2021 |     | 29               | Oct 15/2021 |     |
| 6            | Oct 15/2021 |     | 30               | BLANK       |     |
| 7            | Oct 15/2021 |     | 32-42-00         |             |     |
| 8            | Oct 15/2021 |     | 1                | Oct 15/2021 |     |
| 9            | Oct 15/2021 |     | 2                | Oct 15/2021 |     |
| 10           | Oct 15/2021 |     |                  |             |     |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

## 32-EFFECTIVE PAGES

CHAPTER 32  
LANDING GEAR

| Subject/Page     | Date        | COC | Subject/Page     | Date        | COC |
|------------------|-------------|-----|------------------|-------------|-----|
| 32-42-00 (cont.) |             |     | 32-42-00 (cont.) |             |     |
| 3                | Oct 15/2021 |     | 27               | Oct 15/2021 |     |
| 4                | Oct 15/2021 |     | 28               | Oct 15/2021 |     |
| 5                | Oct 15/2021 |     | 29               | Oct 15/2021 |     |
| 6                | Oct 15/2021 |     | 30               | Feb 15/2023 |     |
| 7                | Oct 15/2021 |     | 31               | Oct 15/2021 |     |
| 8                | Oct 15/2021 |     | 32               | Oct 15/2021 |     |
| 9                | Oct 15/2021 |     | 33               | Oct 15/2021 |     |
| 10               | Oct 15/2021 |     | 34               | Oct 15/2021 |     |
| 11               | Oct 15/2021 |     | 35               | Oct 15/2021 |     |
| 12               | Oct 15/2021 |     | 36               | Oct 15/2021 |     |
| 13               | Oct 15/2021 |     | 37               | Oct 15/2021 |     |
| 14               | Oct 15/2021 |     | 38               | Oct 15/2021 |     |
| 15               | Oct 15/2021 |     | 39               | Oct 15/2021 |     |
| O 16             | Oct 15/2023 |     | 40               | Oct 15/2021 |     |
| 17               | Oct 15/2021 |     | 41               | Oct 15/2021 |     |
| 18               | Oct 15/2021 |     | 42               | Oct 15/2021 |     |
| 19               | Oct 15/2021 |     | 43               | Oct 15/2021 |     |
| 20               | Oct 15/2021 |     | 44               | Oct 15/2021 |     |
| 21               | Oct 15/2021 |     | 45               | Oct 15/2021 |     |
| R 22             | Oct 15/2023 |     | 46               | Oct 15/2021 |     |
| 23               | Oct 15/2021 |     | 47               | Oct 15/2021 |     |
| 24               | Oct 15/2021 |     | 48               | Oct 15/2021 |     |
| 25               | Oct 15/2021 |     | 49               | Oct 15/2021 |     |
| 26               | Oct 15/2021 |     | 50               | Oct 15/2021 |     |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

## 32-EFFECTIVE PAGES

CHAPTER 32  
LANDING GEAR

| Subject/Page     | Date        | COC | Subject/Page     | Date        | COC |
|------------------|-------------|-----|------------------|-------------|-----|
| 32-42-00 (cont.) |             |     | 32-44-00 (cont.) |             |     |
| 51               | Oct 15/2021 |     | 11               | Oct 15/2021 |     |
| 52               | Oct 15/2021 |     | 12               | BLANK       |     |
| 53               | Oct 15/2021 |     | 32-45-00         |             |     |
| 54               | Oct 15/2021 |     | 1                | Oct 15/2021 |     |
| 55               | Oct 15/2021 |     | 2                | Oct 15/2021 |     |
| 56               | Oct 15/2021 |     | 3                | Oct 15/2021 |     |
| 57               | Oct 15/2021 |     | 4                | Oct 15/2021 |     |
| 58               | Oct 15/2021 |     | 5                | Oct 15/2021 |     |
| 59               | Oct 15/2021 |     | 6                | Oct 15/2021 |     |
| 60               | Oct 15/2021 |     | 7                | Oct 15/2021 |     |
| 61               | Oct 15/2021 |     | 8                | Oct 15/2021 |     |
| 62               | Oct 15/2021 |     | 9                | Oct 15/2021 |     |
| 32-44-00         |             |     | 10               | Oct 15/2021 |     |
| 1                | Oct 15/2021 |     | 11               | Oct 15/2021 |     |
| 2                | Oct 15/2021 |     | 12               | BLANK       |     |
| 3                | Oct 15/2021 |     | 32-46-00         |             |     |
| 4                | Oct 15/2021 |     | 1                | Oct 15/2021 |     |
| 5                | Oct 15/2021 |     | 2                | Oct 15/2021 |     |
| 6                | Oct 15/2021 |     | 3                | Oct 15/2021 |     |
| 7                | Oct 15/2021 |     | 4                | Oct 15/2021 |     |
| 8                | Oct 15/2021 |     | 5                | Oct 15/2021 |     |
| 9                | Oct 15/2021 |     | 6                | Oct 15/2021 |     |
| 10               | Oct 15/2021 |     | 7                | Oct 15/2021 |     |
|                  |             |     | 8                | Oct 15/2021 |     |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

## 32-EFFECTIVE PAGES

CHAPTER 32  
LANDING GEAR

| Subject/Page     | Date        | COC | Subject/Page     | Date        | COC |
|------------------|-------------|-----|------------------|-------------|-----|
| 32-46-00 (cont.) |             |     | 32-51-00 (cont.) |             |     |
| 9                | Oct 15/2021 |     | 15               | Oct 15/2021 |     |
| 10               | Jun 15/2022 |     | 16               | Oct 15/2021 |     |
| 11               | Jun 15/2022 |     | 17               | Oct 15/2021 |     |
| 12               | Oct 15/2021 |     | 18               | Oct 15/2021 |     |
| 13               | Oct 15/2021 |     | 19               | Oct 15/2021 |     |
| 14               | Oct 15/2021 |     | 20               | Oct 15/2021 |     |
| 15               | Oct 15/2021 |     | 21               | Oct 15/2021 |     |
| 16               | BLANK       |     | 22               | BLANK       |     |
| 32-51-00         |             |     | 32-61-00         |             |     |
| 1                | Oct 15/2021 |     | 1                | Oct 15/2021 |     |
| 2                | Oct 15/2021 |     | 2                | Oct 15/2021 |     |
| 3                | Oct 15/2021 |     | 3                | Oct 15/2021 |     |
| 4                | Oct 15/2021 |     | 4                | Oct 15/2021 |     |
| 5                | Oct 15/2021 |     | 5                | Oct 15/2021 |     |
| 6                | Oct 15/2021 |     | 6                | Oct 15/2021 |     |
| 7                | Oct 15/2021 |     | 7                | Oct 15/2021 |     |
| 8                | Oct 15/2021 |     | 8                | Oct 15/2021 |     |
| 9                | Oct 15/2021 |     | 9                | Oct 15/2021 |     |
| 10               | Oct 15/2021 |     | 10               | Oct 15/2021 |     |
| 11               | Oct 15/2021 |     | 11               | Oct 15/2021 |     |
| 12               | Oct 15/2021 |     | 12               | Oct 15/2021 |     |
| 13               | Oct 15/2021 |     | 13               | Oct 15/2021 |     |
| 14               | Oct 15/2021 |     | 14               | Oct 15/2021 |     |
|                  |             |     | 15               | Feb 15/2023 |     |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

## 32-EFFECTIVE PAGES

CHAPTER 32  
LANDING GEAR

| Subject/Page     | Date        | COC | Subject/Page | Date | COC |
|------------------|-------------|-----|--------------|------|-----|
| 32-61-00 (cont.) |             |     |              |      |     |
| 16               | Oct 15/2021 |     |              |      |     |
| 17               | Oct 15/2021 |     |              |      |     |
| 18               | Oct 15/2021 |     |              |      |     |
| 19               | Oct 15/2021 |     |              |      |     |
| 20               | Oct 15/2021 |     |              |      |     |
| 21               | Oct 15/2021 |     |              |      |     |
| 22               | Oct 15/2021 |     |              |      |     |
| 23               | Oct 15/2021 |     |              |      |     |
| 24               | Oct 15/2021 |     |              |      |     |
| 25               | Oct 15/2021 |     |              |      |     |
| 26               | Oct 15/2021 |     |              |      |     |
| 27               | Oct 15/2021 |     |              |      |     |
| 28               | Oct 15/2021 |     |              |      |     |
| 32-71-00         |             |     |              |      |     |
| 1                | Oct 15/2021 |     |              |      |     |
| 2                | Oct 15/2021 |     |              |      |     |
| 3                | Oct 15/2021 |     |              |      |     |
| 4                | Oct 15/2021 |     |              |      |     |
| 5                | Oct 15/2021 |     |              |      |     |
| 6                | BLANK       |     |              |      |     |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

**32-EFFECTIVE PAGES**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



**CHAPTER 32  
LANDING GEAR**

| <b>CH-SC-SU</b> | <b>SUBJECT</b>                                                                 | <b>PAGE</b> | <b>EFFECT</b> |
|-----------------|--------------------------------------------------------------------------------|-------------|---------------|
| 32-00-00        | LANDING GEAR - INTRODUCTION                                                    | 1           | SIA ALL       |
| 32-00-00        | LANDING GEAR - GENERAL DESCRIPTION                                             | 5           | SIA ALL       |
| 32-00-00        | LANDING GEAR - DOWNLOCK PIN - MAIN LANDING GEAR                                | 8           | SIA ALL       |
| 32-00-00        | LANDING GEAR - DOWNLOCK PIN - NOSE LANDING GEAR                                | 10          | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - INTRODUCTION                                               | 1           | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - GENERAL DESCRIPTION                                        | 4           | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - MAIN LANDING GEAR COMPRESSED SENSORS                       | 6           | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - NOSE LANDING GEAR COMPRESSED SENSORS                       | 8           | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - AIR/GROUND RELAYS                                          | 10          | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - PROXIMITY SWITCH ELECTRONICS UNIT                          | 12          | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - AIR/GROUND DISCRETES - SYSTEM 1                            | 14          | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - AIR/GROUND DISCRETES - SYSTEM 2                            | 16          | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - AIR/GROUND RELAYS - SYSTEM 1      | 18          | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - AIR/GROUND RELAYS - SYSTEM 2      | 20          | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - PSEU FAULT LIGHT LOGIC            | 23          | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION                                     | 26          | SIA ALL       |
| 32-09-00        | AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - PSEU BITE INSTRUCTION PLACARD | 28          | SIA ALL       |

**32-CONTENTS**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**CHAPTER 32**  
**LANDING GEAR**

| <b><u>CH-SC-SU</u></b> | <b><u>SUBJECT</u></b>                                                      | <b><u>PAGE</u></b> | <b><u>EFFECT</u></b> |
|------------------------|----------------------------------------------------------------------------|--------------------|----------------------|
| 32-09-00               | AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - PSEU BITE                 | 31                 | SIA ALL              |
| 32-09-00               | AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - EXISTING FAULTS           | 35                 | SIA ALL              |
| 32-09-00               | AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - FAULT HISTORY             | 38                 | SIA ALL              |
| 32-09-00               | AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - GROUND TESTS              | 41                 | SIA ALL              |
| 32-09-00               | AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - AIR/GND OVRD              | 44                 | SIA ALL              |
| 32-09-00               | AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - OTHER FUNCTIONS           | 46                 | SIA ALL              |
| 32-10-00               | MAIN LANDING GEAR AND DOORS - GENERAL DESCRIPTION                          | 1                  | SIA ALL              |
| 32-10-00               | MAIN LANDING GEAR AND DOORS - SHOCK STRUT SEALS                            | 5                  | SIA ALL              |
| 32-10-00               | MAIN LANDING GEAR AND DOORS - MAIN LANDING GEAR DOORS                      | 8                  | SIA ALL              |
| 32-10-00               | MAIN LANDING GEAR AND DOORS - WHEEL WELL BLADE SEALS                       | 10                 | SIA ALL              |
| 32-10-00               | MAIN LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 1 | 12                 | SIA ALL              |
| 32-10-00               | MAIN LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 2 | 14                 | SIA ALL              |
| 32-10-00               | MAIN LANDING GEAR AND DOORS - MAIN GEAR SHIMMY DAMPER                      | 16                 | SIA ALL              |
| 32-20-00               | NOSE LANDING GEAR AND DOORS - GENERAL DESCRIPTION                          | 1                  | SIA ALL              |
| 32-20-00               | NOSE LANDING GEAR AND DOORS - SHOCK STRUT SEALS                            | 5                  | SIA ALL              |
| 32-20-00               | NOSE LANDING GEAR AND DOORS - NOSE LANDING GEAR DOORS                      | 8                  | SIA ALL              |

## 32-CONTENTS

**CHAPTER 32**  
**LANDING GEAR**

| <b>CH-SC-SU</b> | <b>SUBJECT</b>                                                                                  | <b>PAGE</b> | <b>EFFECT</b> |
|-----------------|-------------------------------------------------------------------------------------------------|-------------|---------------|
| 32-20-00        | NOSE LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 1                      | 10          | SIA ALL       |
| 32-20-00        | NOSE LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT 2                        | 12          | SIA ALL       |
| 32-30-00        | LANDING GEAR EXTENSION AND RETRACTION - GENERAL DESCRIPTION                                     | 2           | SIA ALL       |
| 32-31-00        | LANDING GEAR CONTROL SYSTEM - GENERAL DESCRIPTION                                               | 2           | SIA ALL       |
| 32-31-00        | LANDING GEAR CONTROL SYSTEM - LEVER ASSEMBLY                                                    | 4           | SIA ALL       |
| 32-31-00        | LANDING GEAR CONTROL SYSTEM - FORWARD QUADRANT                                                  | 6           | SIA ALL       |
| 32-31-00        | LANDING GEAR CONTROL SYSTEM - SELECTOR VALVE                                                    | 8           | SIA ALL       |
| 32-31-00        | LANDING GEAR CONTROL SYSTEM - TRANSFER VALVE                                                    | 10          | SIA ALL       |
| 32-31-00        | LANDING GEAR CONTROL SYSTEM - LEVER LOCK - FUNCTIONAL DESCRIPTION - ELECTRICAL                  | 13          | SIA ALL       |
| 32-31-00        | LANDING GEAR CONTROL SYSTEM - LANDING GEAR TRANSFER VALVE - FUNCTIONAL DESCRIPTION - ELECTRICAL | 16          | SIA ALL       |
| 32-31-00        | LANDING GEAR CONTROL SYSTEM - FUNCTIONAL DESCRIPTION - HYDRAULIC                                | 19          | SIA ALL       |
| 32-32-00        | MLG EXTENSION AND RETRACTION - GENERAL DESCRIPTION                                              | 2           | SIA ALL       |
| 32-32-00        | MLG EXTENSION AND RETRACTION - OPERATION                                                        | 4           | SIA ALL       |
| 32-32-00        | MLG EXTENSION AND RETRACTION - MAIN LANDING GEAR ACTUATOR                                       | 6           | SIA ALL       |
| 32-32-00        | MLG EXTENSION AND RETRACTION - UPLOCK MECHANISM AND ACTUATOR                                    | 8           | SIA ALL       |
| 32-32-00        | MLG EXTENSION AND RETRACTION - UPLOCK MECHANISM AND ACTUATOR - FUNCTIONAL DESCRIPTION           | 10          | SIA ALL       |

## 32-CONTENTS

**CHAPTER 32**  
**LANDING GEAR**

| <b><u>CH-SC-SU</u></b> | <b><u>SUBJECT</u></b>                                             | <b><u>PAGE</u></b> | <b><u>EFFECT</u></b> |
|------------------------|-------------------------------------------------------------------|--------------------|----------------------|
| 32-32-00               | MLG EXTENSION AND RETRACTION - DOWNLOCK MECHANISM AND ACTUATOR    | 12                 | SIA ALL              |
| 32-32-00               | MLG EXTENSION AND RETRACTION - TRANSFER CYLINDER                  | 14                 | SIA ALL              |
| 32-32-00               | MLG EXTENSION AND RETRACTION - FRANGIBLE FITTING                  | 16                 | SIA ALL              |
| 32-32-00               | MLG EXTENSION AND RETRACTION - FUNCTIONAL DESCRIPTION             | 18                 | SIA ALL              |
| 32-33-00               | NLG EXTENSION AND RETRACTION - GENERAL DESCRIPTION                | 2                  | SIA ALL              |
| 32-33-00               | NLG EXTENSION AND RETRACTION - OPERATION                          | 4                  | SIA ALL              |
| 32-33-00               | NLG EXTENSION AND RETRACTION - NOSE LANDING GEAR ACTUATOR         | 6                  | SIA ALL              |
| 32-33-00               | NLG EXTENSION AND RETRACTION - LOCK MECHANISM AND LOCK ACTUATOR   | 8                  | SIA ALL              |
| 32-33-00               | NLG EXTENSION AND RETRACTION - VALVE MANIFOLD                     | 10                 | SIA ALL              |
| 32-33-00               | NLG EXTENSION AND RETRACTION - TRANSFER CYLINDER                  | 12                 | SIA ALL              |
| 32-33-00               | NLG EXTENSION AND RETRACTION - FUNCTIONAL DESCRIPTION             | 14                 | SIA ALL              |
| 32-34-00               | MLG MANUAL EXTENSION SYSTEM - GENERAL DESCRIPTION                 | 2                  | SIA ALL              |
| 32-34-00               | MLG MANUAL EXTENSION SYSTEM - CONTROL MECHANISM                   | 4                  | SIA ALL              |
| 32-34-00               | MLG MANUAL EXTENSION SYSTEM - MLG EXTENSION LINKAGE               | 6                  | SIA ALL              |
| 32-34-00               | MLG MANUAL EXTENSION SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL | 8                  | SIA ALL              |
| 32-35-00               | NLG MANUAL EXTENSION SYSTEM - GENERAL DESCRIPTION                 | 2                  | SIA ALL              |
| 32-35-00               | NLG MANUAL EXTENSION SYSTEM - NLG RELEASE MECHANISM               | 4                  | SIA ALL              |
| 32-35-00               | NLG MANUAL EXTENSION SYSTEM - FUNCTIONAL DESCRIPTION              | 6                  | SIA ALL              |
| 32-40-00               | WHEELS AND BRAKES - INTRODUCTION                                  | 2                  | SIA ALL              |

## 32-CONTENTS

**CHAPTER 32  
LANDING GEAR**

| <b>CH-SC-SU</b> | <b>SUBJECT</b>                                                                                  | <b>PAGE</b> | <b>EFFECT</b> |
|-----------------|-------------------------------------------------------------------------------------------------|-------------|---------------|
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - GENERAL DESCRIPTION                                                    | 2           | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - COMPONENT LOCATION                                                     | 4           | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - BRAKE PEDAL BUS MECHANISM                                              | 6           | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - BRAKE METERING VALVE ASSEMBLY                                          | 8           | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - BRAKE METERING VALVE ASSEMBLY - FUNCTIONAL DESCRIPTION                 | 10          | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - ALTERNATE BRAKE SELECTOR AND ACCUMULATOR ISOLATION VALVES              | 12          | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - ALT BRAKE SELECTOR AND ACCUM ISOLATION VALVES - FUNCTIONAL DESCRIPTION | 14          | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - BRAKE ACCUMULATOR                                                      | 16          | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - BRAKE HYDRAULIC FUSES                                                  | 18          | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - BRAKE SHUTTLE VALVES                                                   | 20          | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - BRAKE ASSEMBLY                                                         | 22          | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - FUNCTIONAL DESCRIPTION                                                 | 26          | SIA ALL       |
| 32-41-00        | HYDRAULIC BRAKE SYSTEM - BRAKE PRESSURE TRANSDUCER                                              | 28          | SIA ALL       |
| 32-42-00        | ANTISKID/AUTOBRAKE SYSTEM - INTRODUCTION                                                        | 2           | SIA ALL       |
| 32-42-00        | ANTISKID/AUTOBRAKE SYSTEM - ANTISKID GENERAL DESCRIPTION                                        | 5           | SIA ALL       |
| 32-42-00        | ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE GENERAL DESCRIPTION                                       | 9           | SIA ALL       |
| 32-42-00        | ANTISKID/AUTOBRAKE SYSTEM - TRANSDUCER                                                          | 14          | SIA ALL       |
| 32-42-00        | ANTISKID/AUTOBRAKE SYSTEM - ANTISKID/AUTOBRAKE CONTROL UNIT                                     | 16          | SIA ALL       |

## 32-CONTENTS

**CHAPTER 32  
LANDING GEAR**

| <b><u>CH-SC-SU</u></b> | <b><u>SUBJECT</u></b>                                                                          | <b><u>PAGE</u></b> | <b><u>EFFECT</u></b> |
|------------------------|------------------------------------------------------------------------------------------------|--------------------|----------------------|
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE                                                     | 20                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE - FUNCTIONAL DESCRIPTION                            | 24                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE PRESSURE CONTROL MODULE                                  | 28                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE PRESSURE CONTROL MODULE - FUNCTIONAL DESCRIPTION         | 30                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE SHUTTLE VALVES                                           | 32                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - CONTROLS AND INDICATIONS                                           | 34                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - ANTISKID CONTROL - 1             | 36                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - ANTISKID CONTROL - 2             | 38                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - FAULT INDICATION                 | 40                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - AUTOBRAKE CONTROL               | 42                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - LANDING ARM & APPLICATION LOGIC | 44                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - LANDING DISARM LOGIC            | 46                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - RTO ARM AND APPLICATION LOGIC   | 48                 | SIA ALL              |
| 32-42-00               | ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - RTO DISARM LOGIC                | 50                 | SIA ALL              |

## 32-CONTENTS

**CHAPTER 32  
LANDING GEAR**

| <b>CH-SC-SU</b> | <b>SUBJECT</b>                                                                  | <b>PAGE</b> | <b>EFFECT</b> |
|-----------------|---------------------------------------------------------------------------------|-------------|---------------|
| 32-42-00        | ANTISKID/AUTOBRAKE SYSTEM - TRAINING INFORMATION POINT - AACU BITE              | 53          | SIA ALL       |
| 32-42-00        | ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - FAULT INDICATION | 58          | SIA ALL       |
| 32-42-00        | ANTISKID/AUTOBRAKE SYSTEM - ENGINE THROTTLE SWITCHES                            | 60          | SIA ALL       |
| 32-44-00        | PARKING BRAKE SYSTEM - INTRODUCTION                                             | 2           | SIA ALL       |
| 32-44-00        | PARKING BRAKE SYSTEM - GENERAL DESCRIPTION                                      | 4           | SIA ALL       |
| 32-44-00        | PARKING BRAKE SYSTEM - LINKAGE                                                  | 6           | SIA ALL       |
| 32-44-00        | PARKING BRAKE SYSTEM - PARKING BRAKE SHUTOFF VALVE                              | 8           | SIA ALL       |
| 32-44-00        | PARKING BRAKE SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL                      | 10          | SIA ALL       |
| 32-45-00        | TIRES AND WHEELS - GENERAL DESCRIPTION                                          | 2           | SIA ALL       |
| 32-45-00        | TIRES AND WHEELS - MAIN LANDING GEAR WHEEL AND TIRE                             | 5           | SIA ALL       |
| 32-45-00        | TIRES AND WHEELS - NOSE LANDING GEAR WHEEL AND TIRE                             | 8           | SIA ALL       |
| 32-45-00        | TIRES AND WHEELS - NOSE LANDING GEAR WHEEL SPIN BRAKE                           | 10          | SIA ALL       |
| 32-46-00        | BRAKE TEMPERATURE MONITORING SYSTEM - INTRODUCTION                              | 2           | SIA ALL       |
| 32-46-00        | BRAKE TEMPERATURE MONITORING SYSTEM - GENERAL DESCRIPTION                       | 4           | SIA ALL       |
| 32-46-00        | BRAKE TEMPERATURE MONITORING SYSTEM - TEMPERATURE SENSOR                        | 6           | SIA ALL       |
| 32-46-00        | BRAKE TEMPERATURE MONITORING SYSTEM - BRAKE TEMPERATURE MONITORING UNIT         | 8           | SIA ALL       |
| 32-46-00        | BRAKE TEMPERATURE MONITORING SYSTEM - CONTROLS AND INDICATIONS                  | 10          | SIA ALL       |

## 32-CONTENTS

**CHAPTER 32  
LANDING GEAR**

| <b><u>CH-SC-SU</u></b> | <b><u>SUBJECT</u></b>                                                                 | <b><u>PAGE</u></b> | <b><u>EFFECT</u></b> |
|------------------------|---------------------------------------------------------------------------------------|--------------------|----------------------|
| 32-46-00               | BRAKE TEMPERATURE MONITORING SYSTEM - FUNCTIONAL DESCRIPTION                          | 12                 | SIA ALL              |
| 32-46-00               | BRAKE TEMPERATURE MONITORING SYSTEM - TRAINING INFORMATION POINT - BTMU BITE          | 14                 | SIA ALL              |
| 32-51-00               | NOSE WHEEL STEERING SYSTEM - GENERAL DESCRIPTION                                      | 2                  | SIA ALL              |
| 32-51-00               | NOSE WHEEL STEERING SYSTEM - COMPONENT LOCATION                                       | 4                  | SIA ALL              |
| 32-51-00               | NOSE WHEEL STEERING SYSTEM - RUDDER PEDAL STEERING MECHANISM AND ROTARY ACTUATOR      | 6                  | SIA ALL              |
| 32-51-00               | NOSE WHEEL STEERING SYSTEM - RUDDER PEDAL STEERING MECHANISM - FUNCTIONAL DESCRIPTION | 8                  | SIA ALL              |
| 32-51-00               | NOSE WHEEL STEERING SYSTEM - SUMMING MECHANISM AND STEERING METERING VALVE MODULE     | 10                 | SIA ALL              |
| 32-51-00               | NOSE WHEEL STEERING SYSTEM - STEERING ACTUATORS AND STEERING COLLAR                   | 12                 | SIA ALL              |
| 32-51-00               | NOSE WHEEL STEERING SYSTEM - FUNCTIONAL DESCRIPTION - HYDRAULIC                       | 14                 | SIA ALL              |
| 32-51-00               | NOSE WHEEL STEERING SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL                      | 16                 | SIA ALL              |
| 32-51-00               | NOSE WHEEL STEERING SYSTEM - TRAINING INFORMATION POINT - TOWING                      | 19                 | SIA ALL              |
| 32-61-00               | LG POSITION INDICATING AND WARNING SYSTEM - INTRODUCTION                              | 2                  | SIA ALL              |
| 32-61-00               | LG POSITION INDICATING AND WARNING SYSTEM - POSITION LIGHTS, LEVER POSITION SWITCHES  | 4                  | SIA ALL              |
| 32-61-00               | LG POSITION INDICATING AND WARNING SYSTEM - MAIN GEAR UP AND LOCKED SENSOR            | 6                  | SIA ALL              |

## 32-CONTENTS

**CHAPTER 32**  
**LANDING GEAR**

| <b><u>CH-SC-SU</u></b> | <b><u>SUBJECT</u></b>                                                                  | <b><u>PAGE</u></b> | <b><u>EFFECT</u></b> |
|------------------------|----------------------------------------------------------------------------------------|--------------------|----------------------|
| 32-61-00               | LG POSITION INDICATING AND WARNING SYSTEM - MAIN GEAR<br>DOWNLOCK SENSOR               | 8                  | SIA ALL              |
| 32-61-00               | LG POSITION INDICATING AND WARNING SYSTEM - NOSE GEAR<br>UP/DOWN LOCK SENSOR           | 10                 | SIA ALL              |
| 32-61-00               | LG POSITION INDICATING AND WARNING SYSTEM - NOSE GEAR DOWN<br>SENSOR                   | 12                 | SIA ALL              |
| 32-61-00               | LG POSITION INDICATING AND WARNING SYSTEM - FUNCTIONAL<br>DESCRIPTION - MLG INDICATION | 15                 | SIA ALL              |
| 32-61-00               | LG POSITION INDICATING AND WARNING SYSTEM - FUNCTIONAL<br>DESCRIPTION - NLG INDICATION | 18                 | SIA ALL              |
| 32-61-00               | LG POSITION INDICATING AND WARNING SYSTEM - AURAL WARNING -<br>GENERAL DESCRIPTION     | 20                 | SIA ALL              |
| 32-61-00               | LG POSITION INDICATING AND WARNING SYSTEM - AURAL WARNING -<br>FUNCTIONAL DESCRIPTION  | 23                 | SIA ALL              |
| 32-61-00               | LG POSITION INDICATING AND WARNING SYSTEM - ENGINE THROTTLE<br>SWITCHES                | 26                 | SIA ALL              |
| 32-71-00               | TAIL SKID - GENERAL DESCRIPTION                                                        | 2                  | SIA ALL              |
| 32-71-00               | TAIL SKID - FUNCTIONAL DESCRIPTION                                                     | 4                  | SIA ALL              |

**32-CONTENTS**



## LANDING GEAR - INTRODUCTION

### Purpose

The landing gear provides support for the airplane static and ground maneuvering conditions. The landing gear also reacts to airplane load forces that are generated during airplane movement.

These are the landing gear systems:

- The main landing gear (MLG) and doors (32-10)
- The nose landing gear (NLG) and doors (32-20).

The landing gear extension and retraction systems extend and retract the landing gear (32-30).

The nose wheel steering system supplies the ground directional control of the airplane (32-50).

The tail skid system protects the lower aft fuselage if the airplane rotates too much during takeoff and landing (32-70).

### Training Information Point

Observe these warnings and cautions when you do maintenance on the landing gear components:



**WARNING**

USE NITRILE GLOVES FOR SKIN PROTECTION AGAINST BMS 3-27 (MASTINOX 6856K). IF MASTINOX GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER AND GET MEDICAL AID. THIS MATERIAL CONTAINS VERY POISONOUS AND FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONS.



**CAUTION**

REMOVE UNWANTED MASTINOX FROM SURFACES WHICH WILL BE LUBRICATED. IF YOU APPLY MASTINOX TO JOINTS THAT TURN, FAILURE OF THE LANDING GEAR TO EXTEND OR RETRACT COULD OCCUR.

### Abbreviations and Acronyms

- AACU - antiskid/autobrake control unit
- A/B - autobrake
- AC - alternating current
- accum - accumulator
- ADIRU - air data inertial reference unit
- alt - alternate
- bat - battery
- BITE - built-in-test-equipment
- BMS - Boeing material specification
- BMV - brake metering valve
- DC - direct current
- ext - extend
- flt dk - flight deck
- GRD - ground
- gpm - gallons per minute
- hyd - hydraulic
- inbd - inboard
- inop - inoperative
- LG - landing gear
- lpm - liters per minute
- MLG - main landing gear
- max - maximum
- NLG - nose landing gear
- norm - normal



**32-00-00**



## LANDING GEAR - INTRODUCTION

- NWS - nose wheel steering
- outbd - outboard
- P - pressure
- pri - primary
- PSEU - proximity switch electronics unit
- PSI - pounds per square inch
- qty - quantity
- RTO - rejected takeoff
- sec - secondary
- sol - solenoid
- sw - switch
- sys - system
- vlv - valve
- ww - wheel well
- xfr - transfer
- xmtr - transmitter

## LANDING GEAR - INTRODUCTION

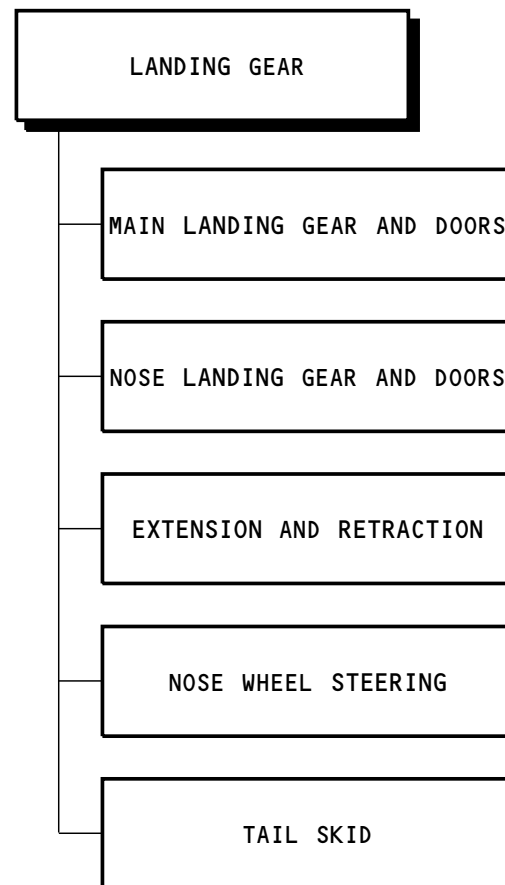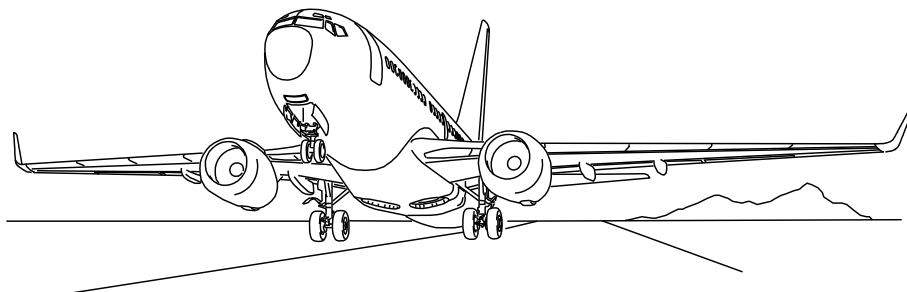

M84917 S0004627726\_V1

## LANDING GEAR - INTRODUCTION

**32-00-00**

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-00-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## LANDING GEAR - GENERAL DESCRIPTION

### General

The 737 airplane has a tricycle type landing gear with air/oil shock struts.

These are the landing gear structural systems:

- The main landing gear (MLG) and doors (32-10)
- The nose landing gear (NLG) and doors (32-20)

The landing gear extension and retraction systems extend and retract the main and nose landing gear (32-30).

The nose wheel steering system supplies the ground directional control of the airplane (32-50).

### Components

The components for the main and nose landing gear systems are in these locations:

- Flight compartment
- Forward equipment compartment
- Nose landing gear wheel well
- Main landing gear wheel well

The components for the nose wheel steering system are in these locations:

- Flight compartment
- Forward equipment compartment
- Nose landing gear wheel well

### Landing Gear System

These are the components of the landing gear system in the flight compartment:

- Landing gear control lever assembly
- Manual extension control handles
- Landing gear position lights

- Auxiliary landing gear position lights
- Landing gear panel

These are the components of the landing gear system in the forward equipment compartment:

- Control cables
- Forward quadrant
- Proximity switch electronics unit (PSEU)

These are the components of the landing gear system in the nose landing gear wheel well:

- Nose landing gear
- Nose landing gear actuator
- Lock mechanism and lock actuator
- Valve manifold
- Transfer cylinder

These are the components of the landing gear system in the main landing gear wheel well:

- Transfer valve
- Selector valve
- Shimmy damper
- Main landing gear (2)
- Main landing gear actuator (2)
- Uplock mechanism and actuator (2)
- Downlock mechanism and actuator (2)
- Transfer cylinder (2)
- Frangible fitting (2)

The locations of the components for the nose wheel steering system are given in SECTION 32-51.

# 32-00-00

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## LANDING GEAR - GENERAL DESCRIPTION

### General Description

Hydraulic system A normally supplies pressure to the landing gear extension and retraction. Hydraulic system B supplies pressure for retraction only.

The landing gear transfer valve receives electrical signals from the proximity switch electronics unit (PSEU). The landing gear transfer valve changes the pressure source of the landing gear from hydraulic system A to hydraulic system B.

See the Air/Ground System section for more information about the proximity switch electronics unit (PSEU) (SECTION 32-09).

You move the landing gear control lever assembly to control landing gear extension and retraction. The control lever moves the selector valve through cables.

The selector valve also gets an electrical input from the manual extension system. This operates a bypass valve in the selector valve to connect the landing gear retraction to the hydraulic system return. This lets the manual extension system extend the landing gear.

Landing gear lights show the position of the landing gear. The PSEU receives landing position signals from sensors on the landing gear. The normal and auxiliary lights are controlled by the PSEU.

The pressure for nose wheel steering comes from the nose landing gear extension pressure only. Hydraulic system A normally supplies pressure to the nose gear steering through the landing gear control system.

See the nose wheel steering system for more information about the nose wheel steering (SECTION 32-51).

The landing gear control system also provides normal or alternate hydraulic pressure to these systems:

- Main landing gear shimmy damper
- Gear retract brake system

See the Main Landing Gear and Doors System for more information about the main landing gear shimmy damper (SECTION 32-10).

**32-00-00**


EFFECTIVITY

SIA ALL

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# LANDING GEAR - GENERAL DESCRIPTION

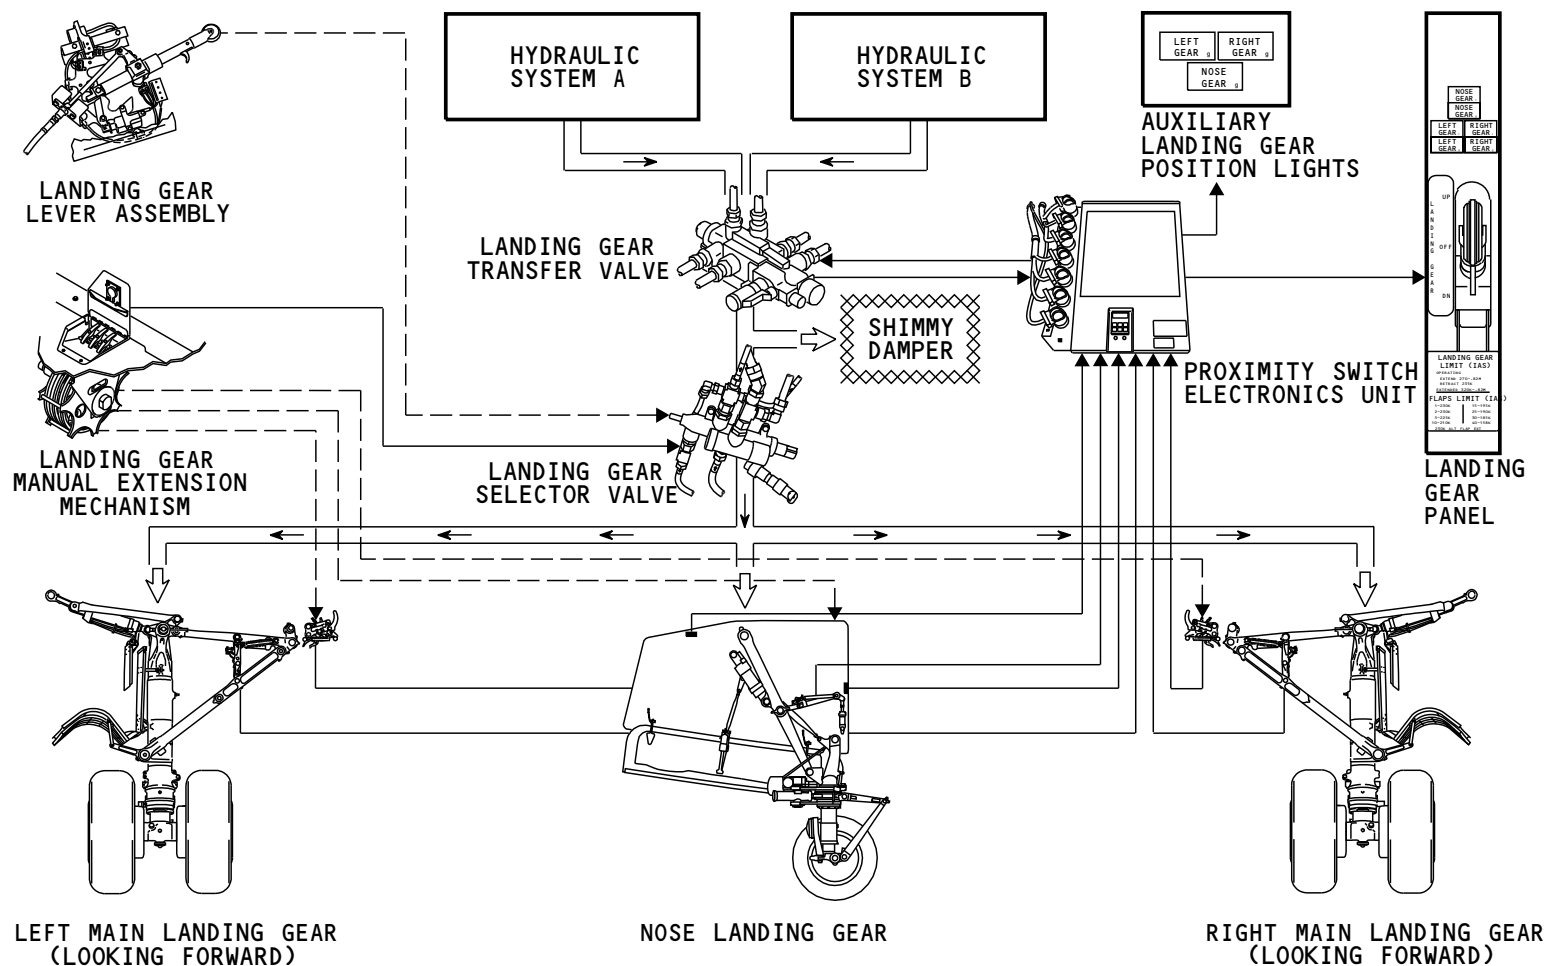

M84918 S0004627728\_V1

# LANDING GEAR - GENERAL DESCRIPTION

32-00-00-002

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-00-00**

## LANDING GEAR - DOWNLOCK PIN - MAIN LANDING GEAR

General

You install a downlock pin into the main landing gear to make sure an outside force does not unlock the main landing gear.


There is one main landing gear downlock pin for each main landing gear.

The downlock pin installs in the MLG downlock strut.



YOU MUST CAREFULLY INSTALL THE GROUND LOCKS IN ALL LANDING GEAR. AN ACCIDENTAL RETRACTION OF THE LANDING GEAR CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

LANDING GEAR - DOWNLOCK PIN - MAIN LANDING GEAR

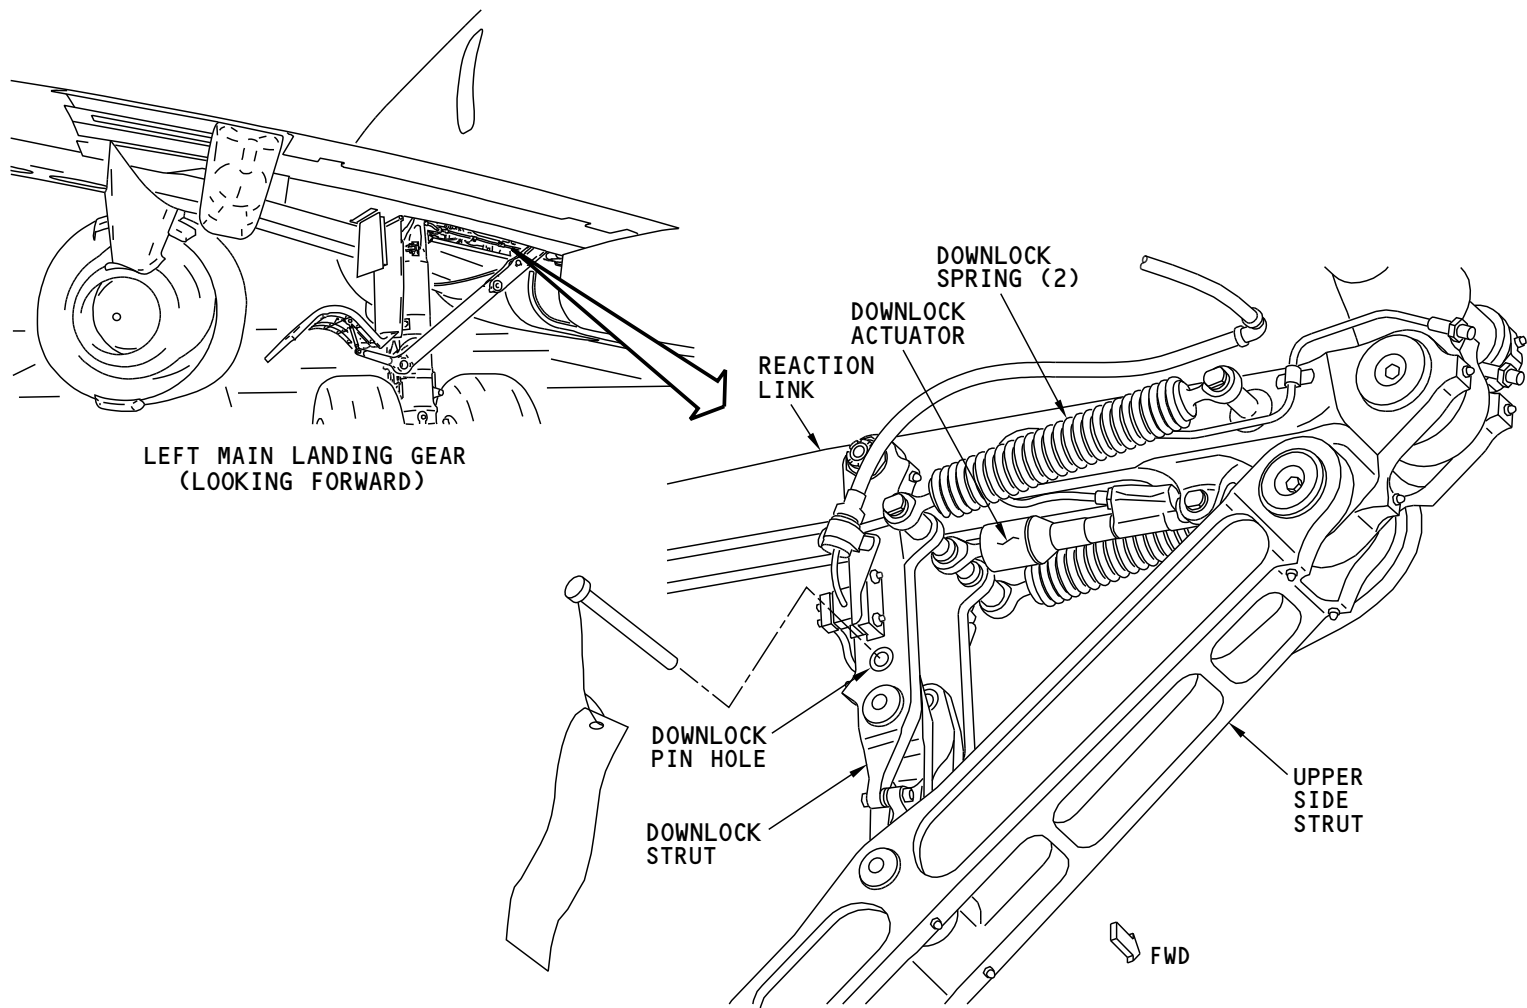

M84920 S0004627731\_V1

LANDING GEAR - DOWNLOCK PIN - MAIN LANDING GEAR

32-00-00-003

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-00-00**

## LANDING GEAR - DOWNLOCK PIN - NOSE LANDING GEAR

General

You install a downlock pin into the nose landing gear to make sure an outside force does not unlock the nose landing gear.


There is one nose landing gear downlock pin for the nose landing gear.

The nose landing gear downlock pin installs in the NLG downlock pin hole.

**WARNING**

YOU MUST CAREFULLY INSTALL THE GROUND LOCKS IN ALL LANDING GEAR. AN ACCIDENTAL RETRACTION OF THE LANDING GEAR CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

# LANDING GEAR - DOWNLOCK PIN - NOSE LANDING GEAR

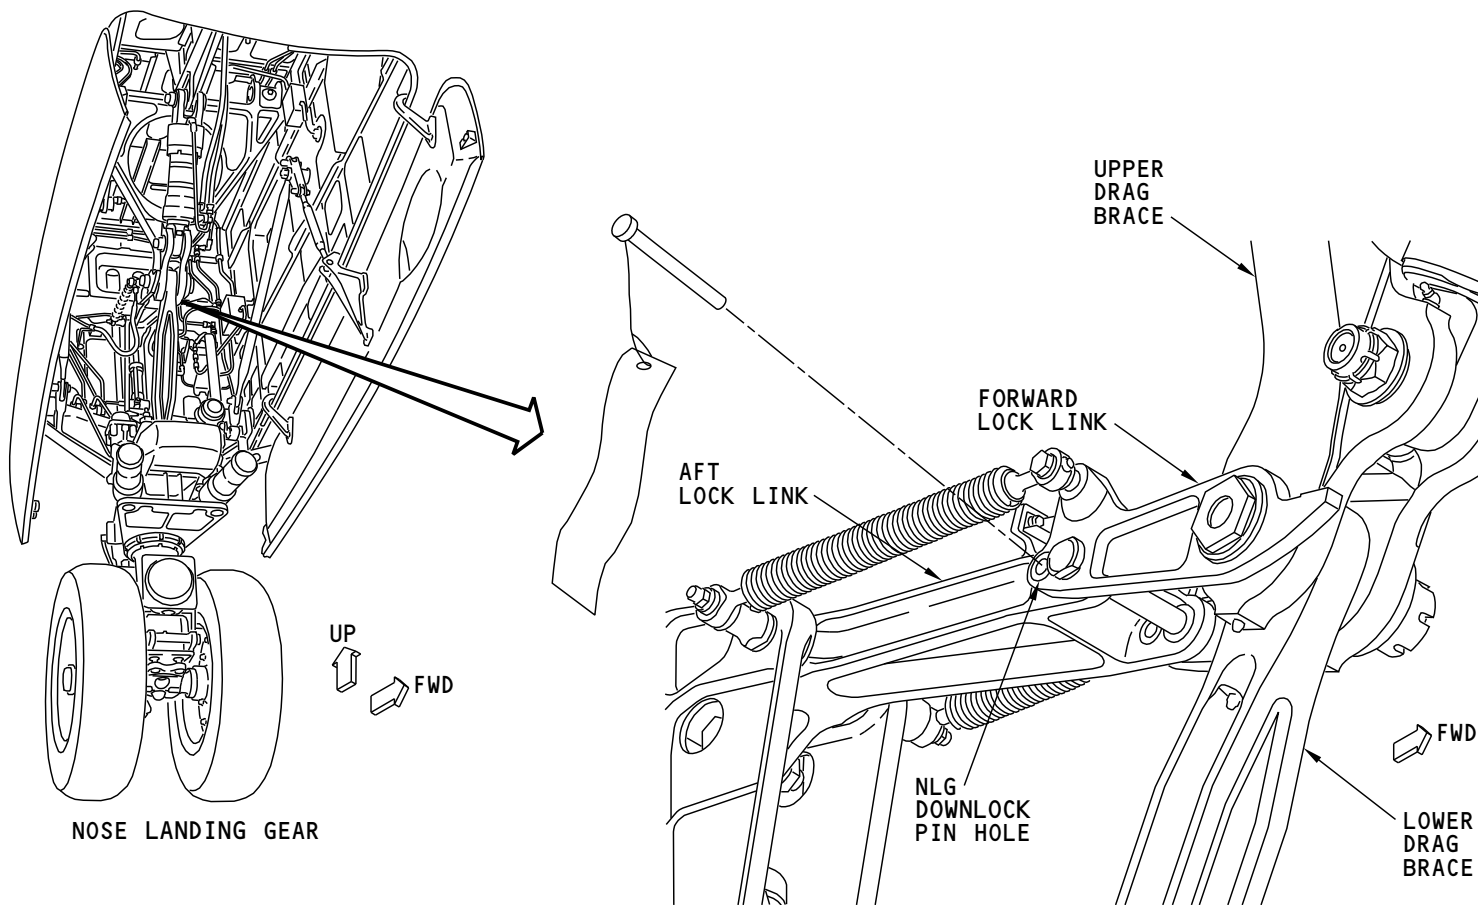

NOSE LANDING GEAR LOCKING MECHANISM

M84921 S0004627733\_V1

# LANDING GEAR - DOWNLOCK PIN - NOSE LANDING GEAR

32-00-00

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |





## AIR/GROUND SYSTEM - INTRODUCTION

### Purpose

The air/ground system supplies air/ground discrete signals to many airplane systems.

The proximity switch electronics unit (PSEU) is a component of the air/ground system. Many airplane systems send signals to the PSEU through position sensors and switches. The PSEU also controls the air/ground relays (12).

These are the systems/components controlled by the proximity switch electronics unit (PSEU):

- Landing gear transfer valve
- Landing gear position indicating and warning
- Speedbrake deployed indication
- Takeoff warning
- Door warning
- Air/ground relays.

### General

The landing gear transfer valve lets the landing gear be raised by the B hydraulic system. See the landing gear control system section for more information about the landing gear transfer valve. (SECTION 32-31)

Landing gear position indication and warning provides indication about the status of the landing gear. It also warns the pilot of an unsafe condition. See the landing gear position indication and warning system section for more information about landing gear position indication and warning. (SECTION 32-61)

The speedbrake deployed indication system turns on the SPEEDBRAKES EXTENDED light when the ground spoilers are deployed in an unsafe condition. See the speedbrake control system section for more information about the SPEEDBRAKES EXTENDED amber light. (SECTION 27-62)

The takeoff warning system turns on the aural warning horn for an unsafe airplane configuration before takeoff (on ground) or after takeoff (in air). See the takeoff warning system section for more information about the takeoff warning system. (SECTION 31-53)

The door warning system provides indication about the status of the airplane doors. See the door warning system section for more information about the door warning. (SECTION 52-71)

### Abbreviations and Acronyms

- AACU - antiskid/autobrake control unit
- ACARS - aircraft communications addressing and reporting system
- ADF - automatic direction finder
- ADIRU - air data inertial reference unit
- altn - alternate
- APU - auxiliary power unit
- ATC - air traffic control
- bat - battery
- BITE - built-in test equipment
- BPCU - bus power control unit
- CB - circuit breaker
- CDS - common display unit
- config - configuration
- DC - direct current
- DFCS - digital flight control system
- DME - distance measuring equipment
- FCC - flight control computer
- FDAU - flight data acquisition unit
- FDRS - flight data recording system
- FMCS - flight management computer system
- FPGA - field programmable gate unit
- FSEU - flap/slat electronics unit

**32-09-00**

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## AIR/GROUND SYSTEM - INTRODUCTION

- fwd - forward
- GCU - generator control unit
- gnd - ground
- GRD - ground
- GPWS - ground proximity warning system
- HF - high frequency
- I/O - input/output
- L - left
- IFSAU - integrated flight system accessory unit
- IGS - Inert Gas System
- LG - landing gear
- LGTV - landing gear transfer valve
- ILS - instrument landing system
- LRU - line replaceable unit
- MLG - main landing gear
- NLG - nose landing gear
- NWS - nose wheel steering
- pri - primary
- PSEU - proximity switch electronics unit
- sec - secondary
- R - right
- RA - radio altimeter
- REF - reference
- SBRK - speedbrake
- SMYD - stall management yaw damper
- sys - system
- sw - switch
- TCAS - traffic collision avoidance system
- TE - trailing edge
- T/O - takeoff
- V - volt
- VHF - very high frequency
- VOR - VHF omnidirectional ranging
- WW - wheel well
- WX - weather radar


| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

**32-09-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## AIR/GROUND SYSTEM - INTRODUCTION

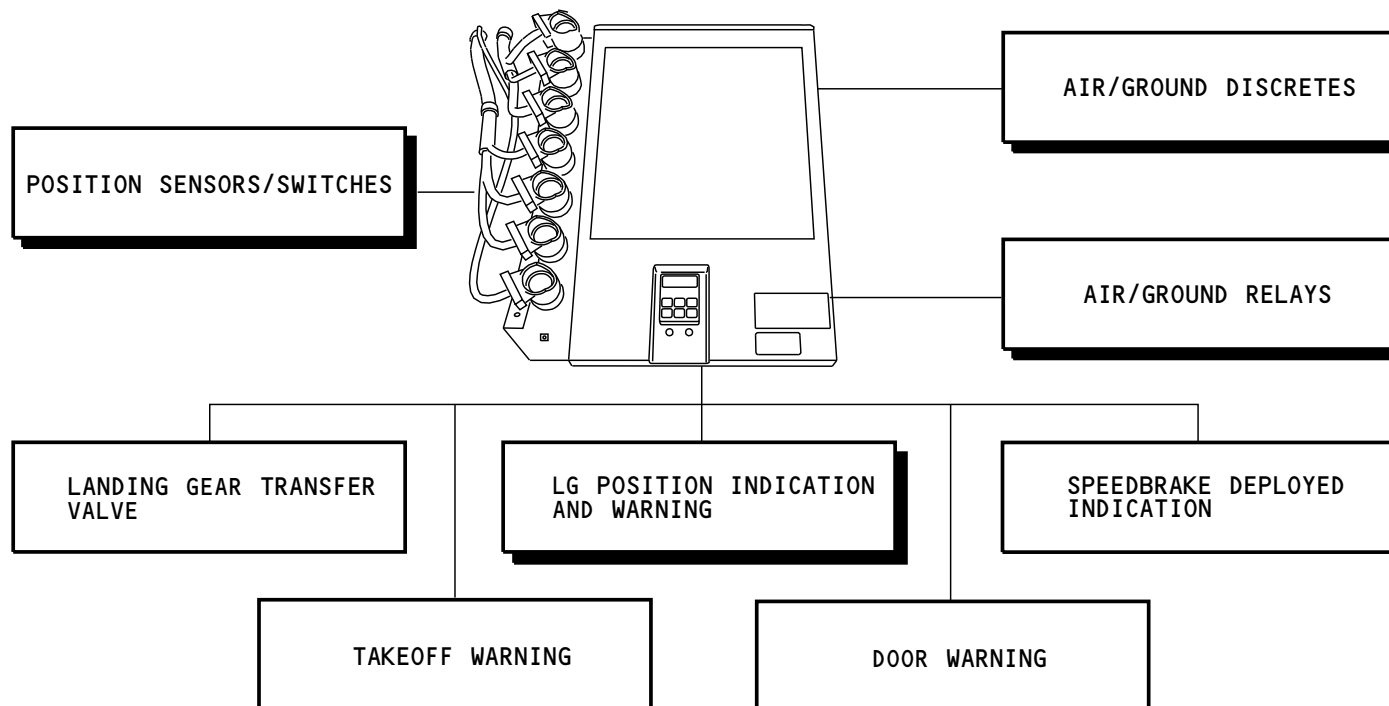

M84967 S0004627737\_V1

## AIR/GROUND SYSTEM - INTRODUCTION

**32-09-00**

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

**AIR/GROUND SYSTEM - GENERAL DESCRIPTION****Purpose**

The air/ground system supplies air mode and ground mode signals to airplane systems.

**Components**

These are the air/ground system components:

- Nose landing gear compressed sensors
- Left main landing gear compressed sensors
- Right main landing gear compressed sensors
- Proximity switch electronics unit (PSEU)
- Air/ground relays
- PSEU fault light.

**General Description**

Two air/ground systems monitor the compression of the landing gear shock struts.


Two compressed sensors are on each landing gear. One sensor sends inputs to air/ground system 1 and the other sensor sends inputs to air/ground system 2.

Sensor signals go to the PSEU. The two air/ground systems in the PSEU monitor signals from the sensors in their air/ground system. The PSEU then sends air/ground discrete signals and signals to operate air/ground relays. Airplane systems use the air/ground discrete signals and relays for airplane air/ground inputs.

The amber PSEU light comes on when either air/ground system is in override mode. The light is also used for fault indication.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## AIR/GROUND SYSTEM - GENERAL DESCRIPTION

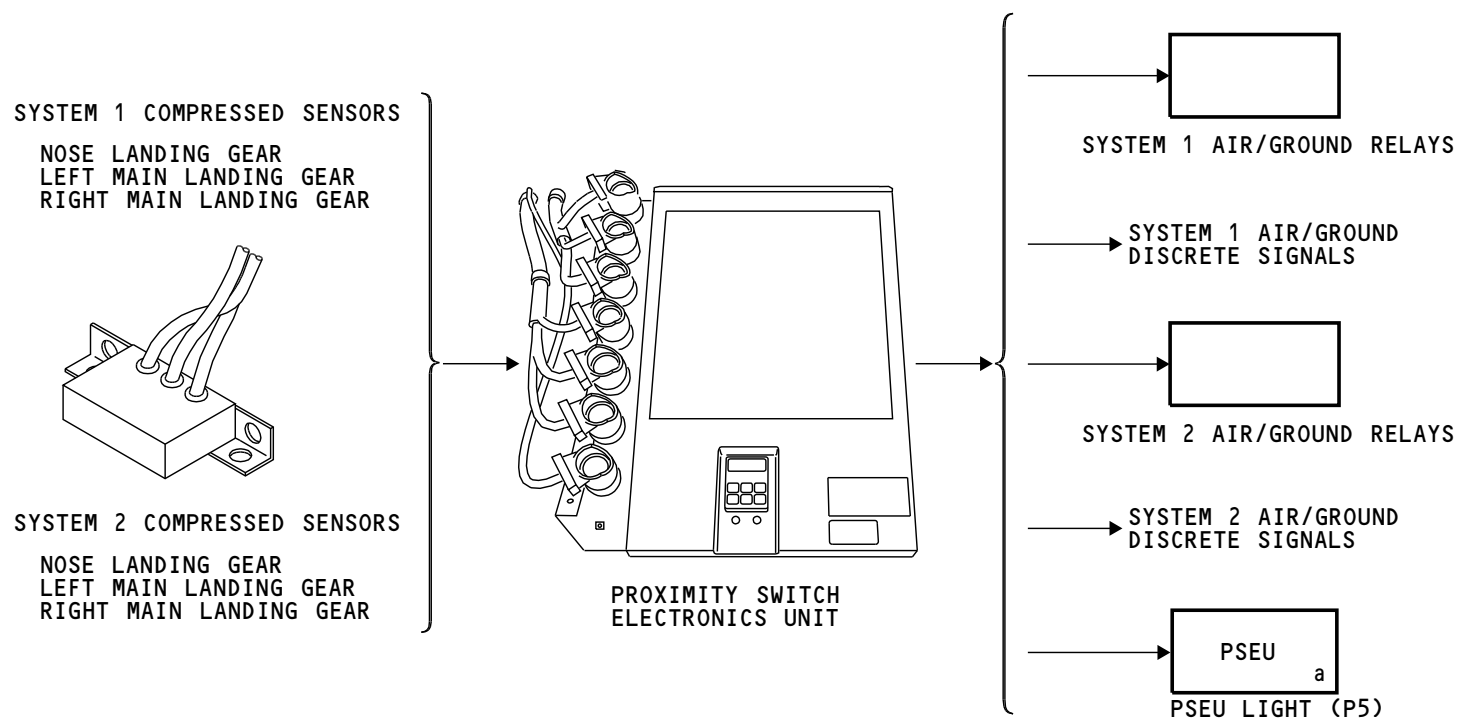

M84922 S0004627742\_V1

## AIR/GROUND SYSTEM - GENERAL DESCRIPTION

32-09-00

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**AIR/GROUND SYSTEM - MAIN LANDING GEAR COMPRESSED SENSORS****Purpose**

Two main landing gear compressed sensors on each main landing gear supply main landing gear shock strut compressed position signals to the air/ground system.

**Physical Description**

The landing gear compressed sensors are inductance type sensors. Each sensor has a metal target and a sensor.

**Location**

The main landing gear compressed sensors are on the lower area of the outer cylinder of the main landing gear. The targets are on each side of the upper torsion link where the link attaches to the outer cylinder of the main landing gear.

The sensor identification placards on the sensor bracket show the sensor number. These are the main landing gear compressed sensor numbers:

| Sensor Number | MLG   | Location |
|---------------|-------|----------|
| S1010         | Right | Outboard |
| S1011         | Right | Inboard  |
| S1012         | Left  | Outboard |
| S1013         | Left  | Inboard  |

Junction boxes, one above each sensor, contain the sensor wire connections.

**Functional Description**

The targets are near the sensors when the main landing gear shock strut compresses and the airplane is on the ground. This sends signals to the air/ground systems in the proximity switch electronic unit (PSEU). The PSEU detects the change in sensor inductance and considers the sensor status as target near. If the target is outside the sensing range, the status of the sensor is set to target far.

If the PSEU detects a failed sensor, the sensor status is set to target far.


**32-09-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# AIR/GROUND SYSTEM - MAIN LANDING GEAR COMPRESSED SENSORS

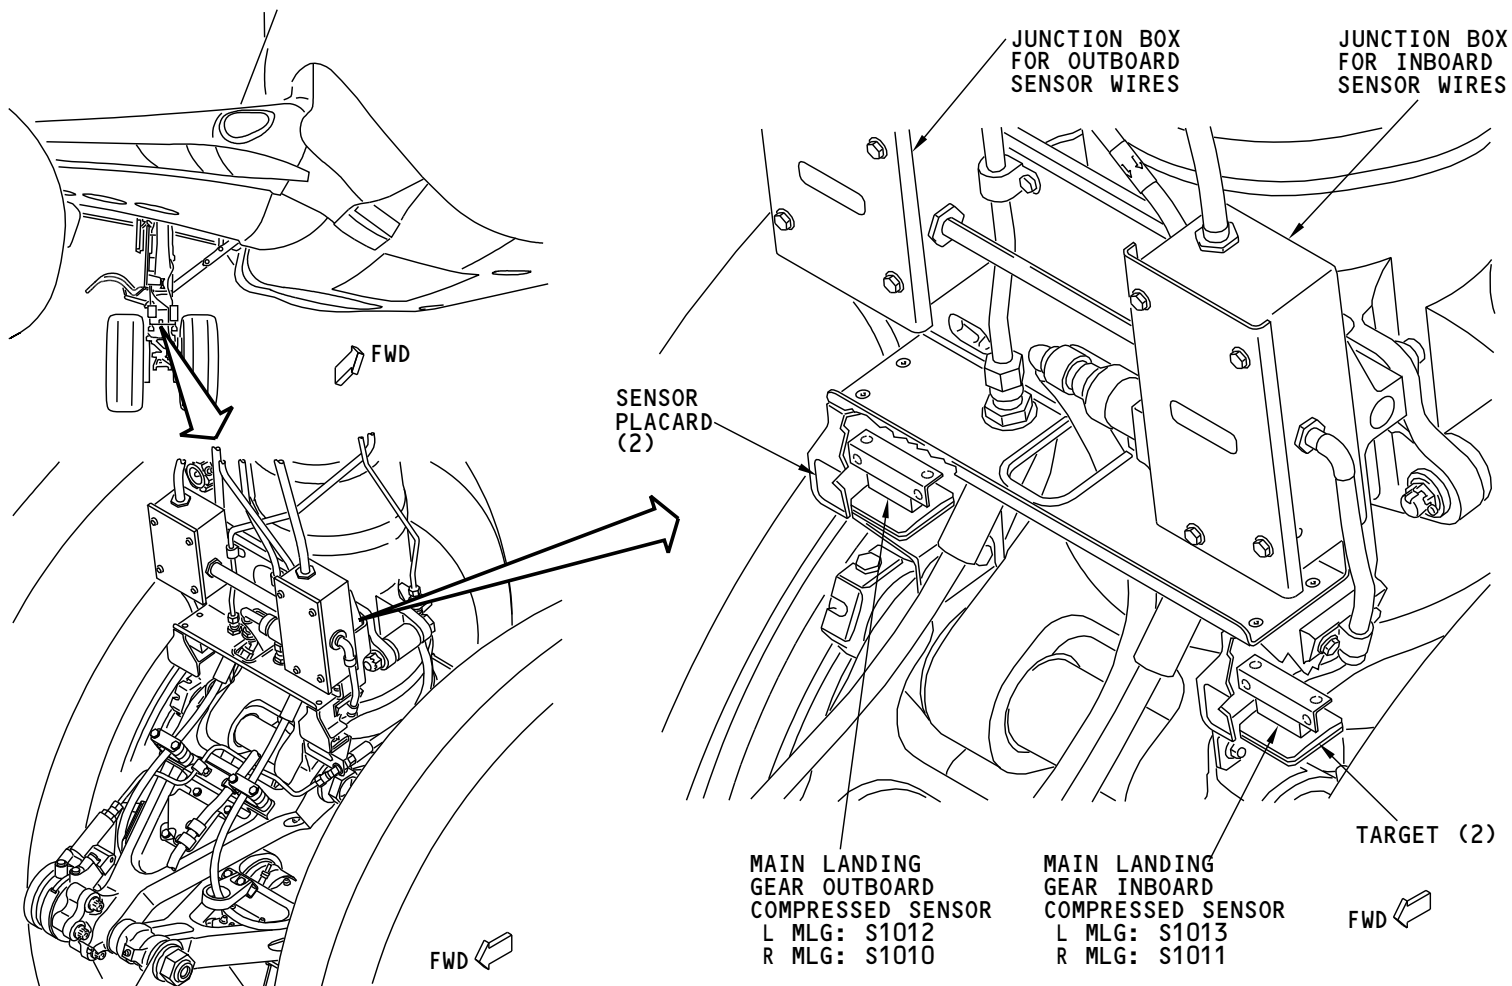

M84923 S0004627744\_V1

## AIR/GROUND SYSTEM - MAIN LANDING GEAR COMPRESSED SENSORS

32-09-00-002

SIA ALL

EFFECTIVITY

32-09-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**AIR/GROUND SYSTEM - NOSE LANDING GEAR COMPRESSED SENSORS****Purpose**

Two nose landing gear compressed sensors supply nose landing gear shock strut compressed position signals to the air/ground system.

**Physical Description**

The landing gear compressed sensors are inductance type sensors. Each sensor has a metal target and a sensor.

**Location**

The nose landing gear compressed sensors are on each side of the upper torsion link where the link attaches to the outer cylinder of the nose landing gear. The targets are on the lower area of the outer cylinder of the nose landing gear.

The sensor identification placards on the sensor bracket show the sensor number. These are the NLG compressed sensor numbers:

| Sensor Number | Location |
|---------------|----------|
| S1014         | Left     |
| S1015         | Right    |

A junction box on the left wall of the nose landing gear wheel well contains the wire connections for both compressed sensors.


**Functional Description**

The targets are near the sensors when the nose landing gear shock strut compresses and the airplane is on the ground. This sends signals to the air/ground systems in the proximity switch electronics unit (PSEU) when the nose landing gear is on the ground. The PSEU detects the change in sensor inductance and sets the sensor status as target near. If the target is outside the sensing range, the status of the sensor is set to target far.

If the PSEU detects a failed sensor, the sensor status is set to target far.

|             |  |
|-------------|--|
| EFFECTIVITY |  |
| SIA ALL     |  |

# AIR/GROUND SYSTEM - NOSE LANDING GEAR COMPRESSED SENSORS

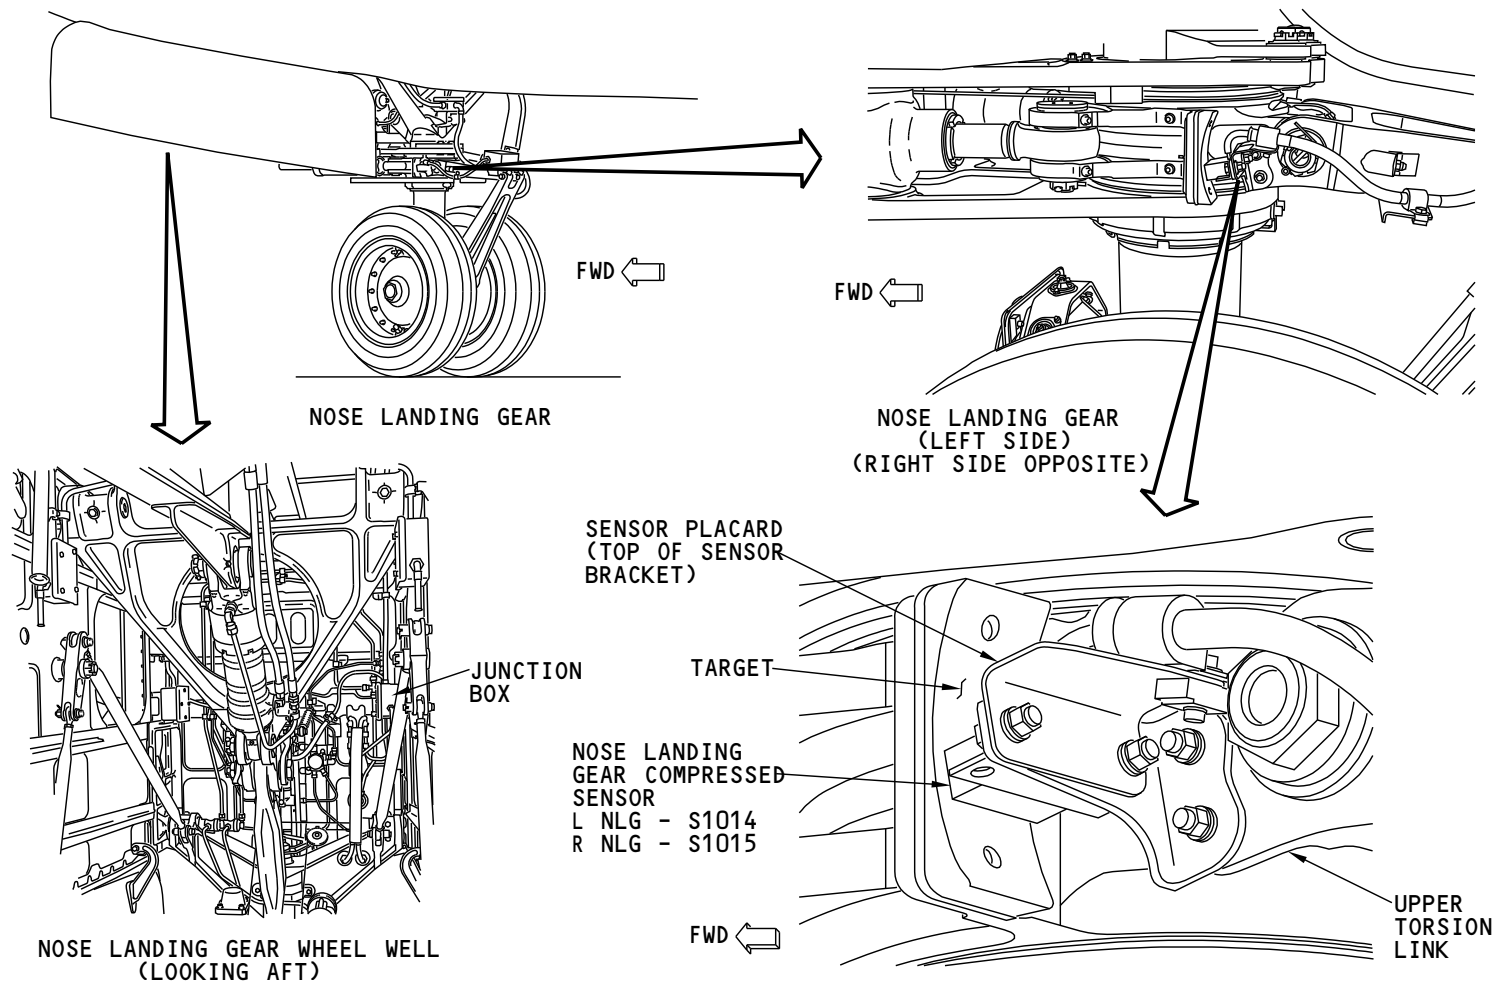

M84924 S0004627746\_V1

## AIR/GROUND SYSTEM - NOSE LANDING GEAR COMPRESSED SENSORS

32-09-00-003

SIA ALL

EFFECTIVITY

32-09-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**AIR/GROUND SYSTEM - AIR/GROUND RELAYS****Purpose**

The air/ground relays supply air/ground signals to airplane systems.

**Physical Description**

The air/ground relays are hermetically sealed units, with a mounting bracket attached.

**Location**

The six system 1 air/ground relays are in the J22 junction box. Five system 2 air/ground relays are in the J20 junction box. One system 2 air/ground relay is in the J24 junction box.

To get access to these junction boxes, go through the access panels on the left and right sides of the nose landing gear wheel well.

**Functional Description**

This table gives you information about the air/ground relays:


| System | Relay | Junction Box | Energized |
|--------|-------|--------------|-----------|
| 1      | R584  | J22          | AIR       |
| 1      | R587  | J22          | GROUND    |
| 1      | R589  | J22          | GROUND    |
| 1      | R592  | J22          | GROUND    |
| 1      | R593  | J22          | AIR       |
| 1      | R594  | J22          | GROUND    |
| 2      | R585  | J24          | AIR       |
| 2      | R588  | J20          | AIR       |
| 2      | R590  | J20          | GROUND    |
| 2      | R591  | J20          | GROUND    |
| 2      | R595  | J20          | GROUND    |
| 2      | R596  | J20          | GROUND    |

**32-09-00****SIA ALL** **EFFECTIVITY**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**AIR/GROUND SYSTEM - AIR/GROUND RELAYS**

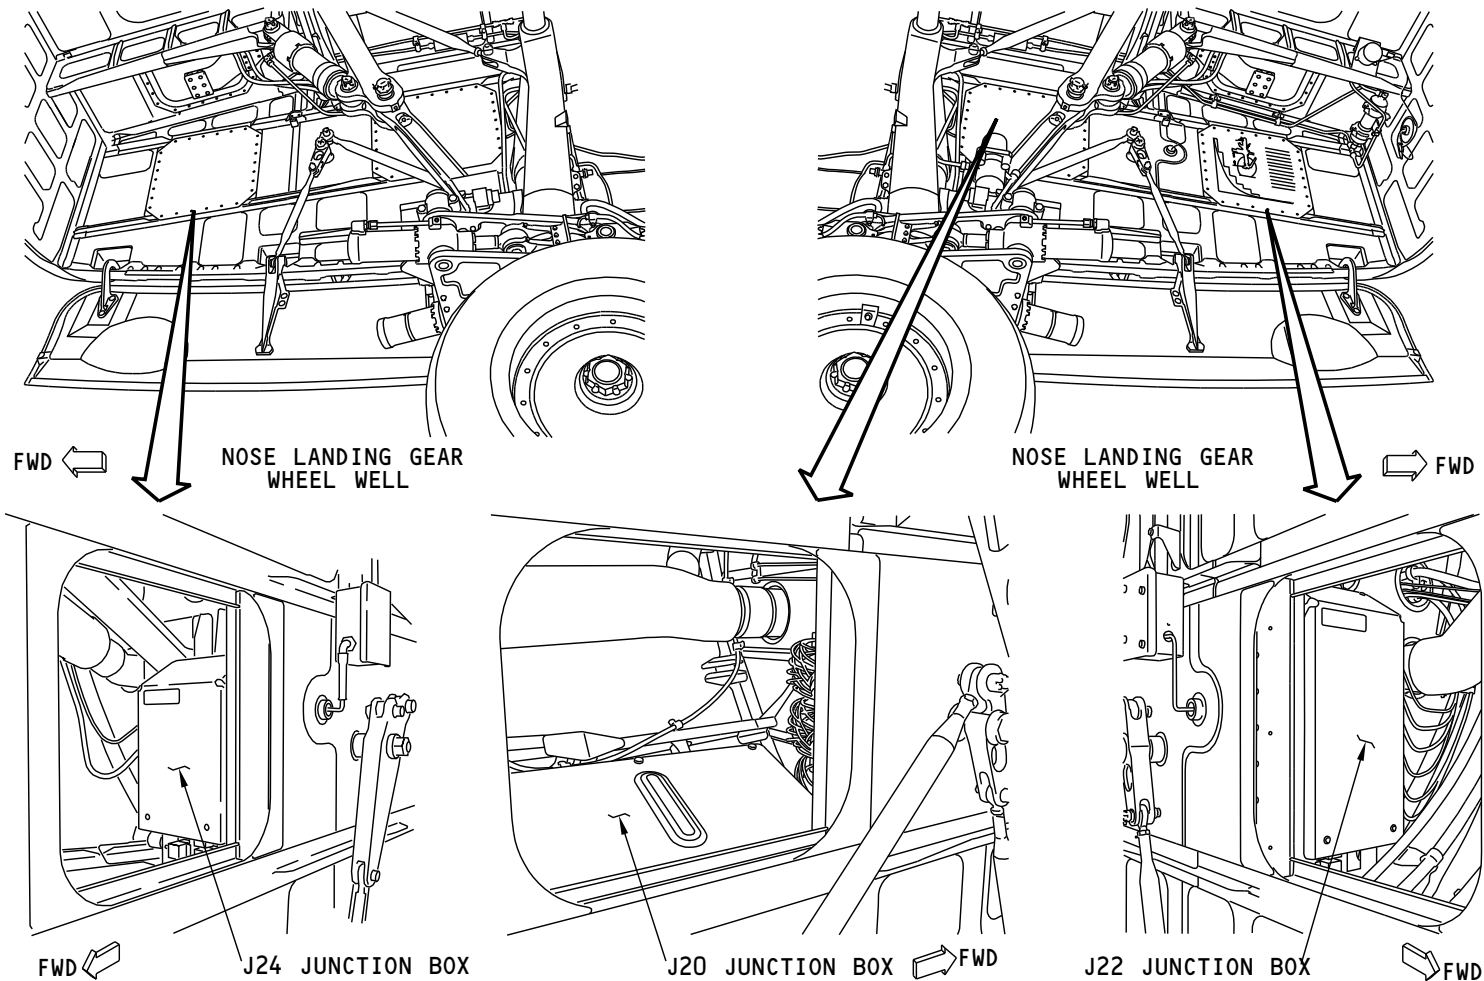

M84940 S0004627748\_V1

**AIR/GROUND SYSTEM - AIR/GROUND RELAYS**

32-09-00-013

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-09-00**

**AIR/GROUND SYSTEM - PROXIMITY SWITCH ELECTRONICS UNIT****Purpose**

The proximity switch electronics unit (PSEU) controls five airplane systems and provides air/ground relay and discrete outputs for multiple airplane systems. The PSEU also provides fault indication and maintenance BITE.

**Location**

The PSEU is in the forward equipment compartment. You get access to the PSEU through the access door on the bottom on the airplane, forward of the nose landing gear wheel well.

**Physical Description**

The PSEU is an LRU with two internal circuit cards and a BITE panel on the front. Two red lights below the BITE panel show if the air/ground systems are in the air mode. A placard on the front of the PSEU has instructions to operate the BITE.

The PSEU has these seven electrical connectors:

- J1-J4 are for system 1
- J5-J7 are for system 2.

**Functional Description**

The PSEU does these functions for the air/ground system:

- Monitors the landing gear compressed sensors
- Operates the air/ground relays
- Sends air/ground discrete signals.

The PSEU processes signals from the air/ground sensors and sends air/ground signals to airplane systems and air/ground relays.

The PSEU also does these functions:

- Landing gear position indication and warning
- Landing gear transfer valve control
- SPEEDBRAKES EXTENDED amber light control

- Takeoff (aural) warning
- Door warning.

For more information about landing gear position indication and warning, see the landing gear position indication and warning system section. (SECTION 32-61)

For more information about the landing gear transfer valve, see the landing gear control system section. (SECTION 32-31)

For more information about the SPEEDBRAKES EXTENDED amber light, see the speedbrake control system section. (SECTION 27-62)

For more information about the door warning, see the door warning system section. (SECTION 52-71)


**32-09-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# AIR/GROUND SYSTEM - PROXIMITY SWITCH ELECTRONICS UNIT

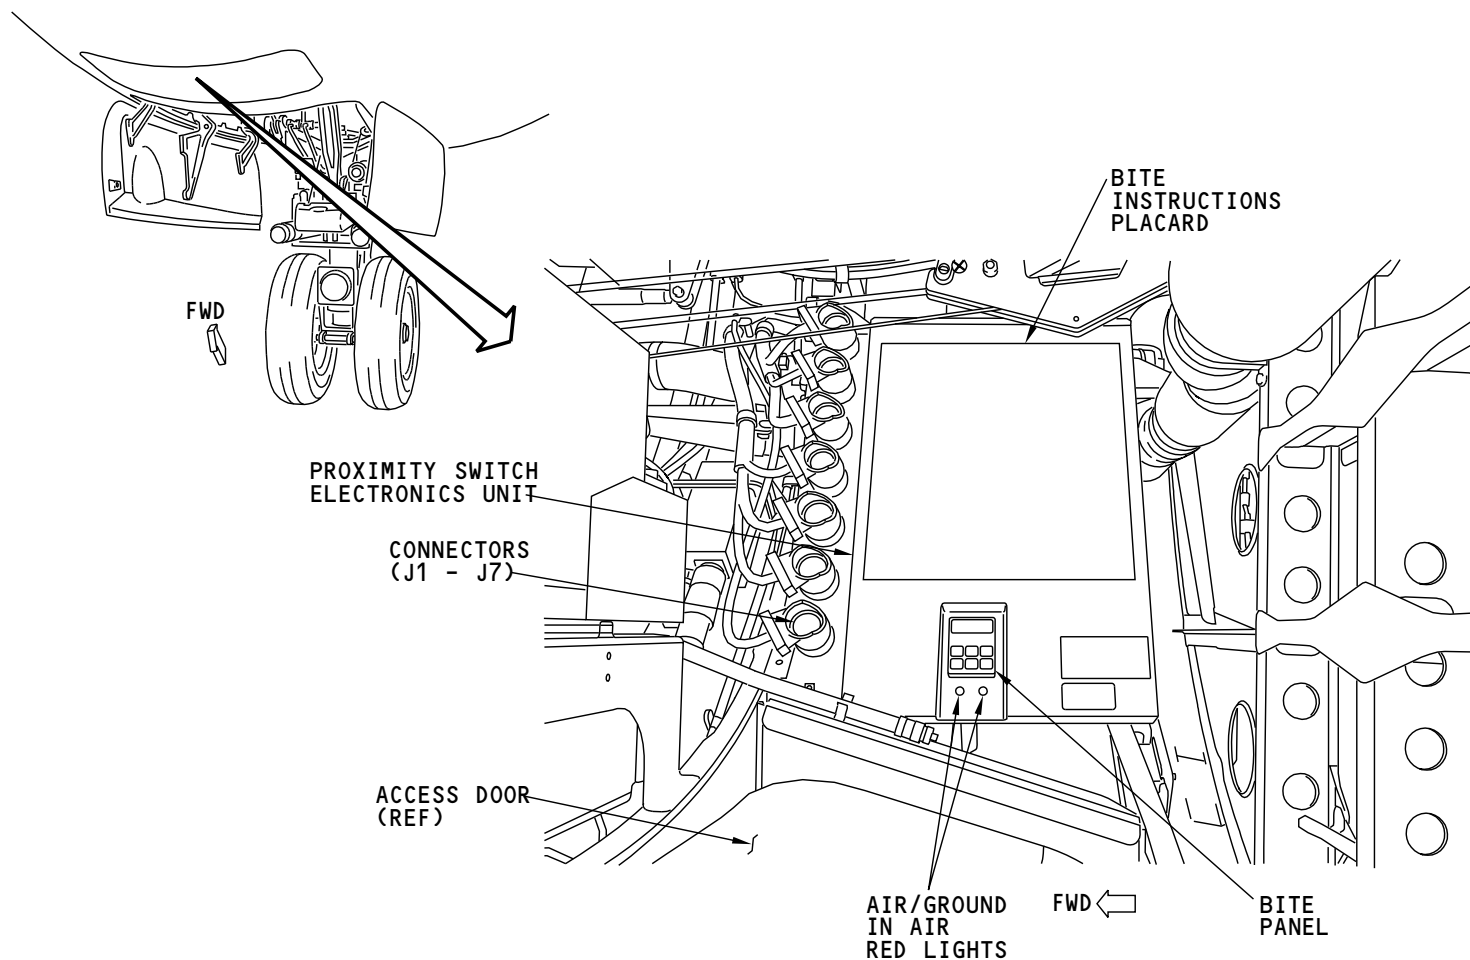

M84925 S0004627750\_V1

## AIR/GROUND SYSTEM - PROXIMITY SWITCH ELECTRONICS UNIT

32-09-00-004

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-09-00

**AIR/GROUND SYSTEM - AIR/GROUND DISCRETES - SYSTEM 1**
**Purpose**

The proximity switch electronics unit (PSEU) provides air/ground discrete signal outputs for multiple airplane systems.

**General Description**

System 1 receives configuration discrete and sensor inputs from airplane components for use when calculating air/ground discrete outputs.


These are the multiple use systems/units that use air/ground discrettes from system 1:

- Antiskid/autobrake control unit (AACU)
- Auto speedbrake module
- Flap/slat electronics unit (FSEU)
- Stall management yaw damper (SMYD)
- AC indication
- Cabin pressurization system
- Ram air door control
- Anti-ice
- Pitot heat
- Bus power control unit (BPCU)
- Generator control unit (GCU)
- Auxiliary power unit (APU) start
- Auxiliary power unit (APU) warning
- Thrust reversers system
- Common display system (CDS)
- VHF communications system
- HF communications system
- Aircraft communications addressing and reporting system (ACARS)
- Voice recorder system
- Flight data recording system
- Air data inertial reference system (ADIRS)

- Integrated flight system accessory unit (IFSAU)
- Radio altimeter system
- Weather radar system
- Instrument landing system (ILS)
- VHF omnidirectional ranging (VOR) system
- Marker beacon system
- Distance measuring equipment (DME) system
- Automatic direction finder (ADF) system
- Air traffic control (ATC) system
- Traffic collision avoidance system (TCAS)
- Ground proximity warning system (GPWS)
- Flight management computer system (FMCS)
- Digital flight control system (DFCS)
- Autothrottle system

Intercommunication between systems 1 and 2 is for internal and external fault monitoring.

## AIR/GROUND SYSTEM - AIR/GROUND DISCRETES - SYSTEM 1

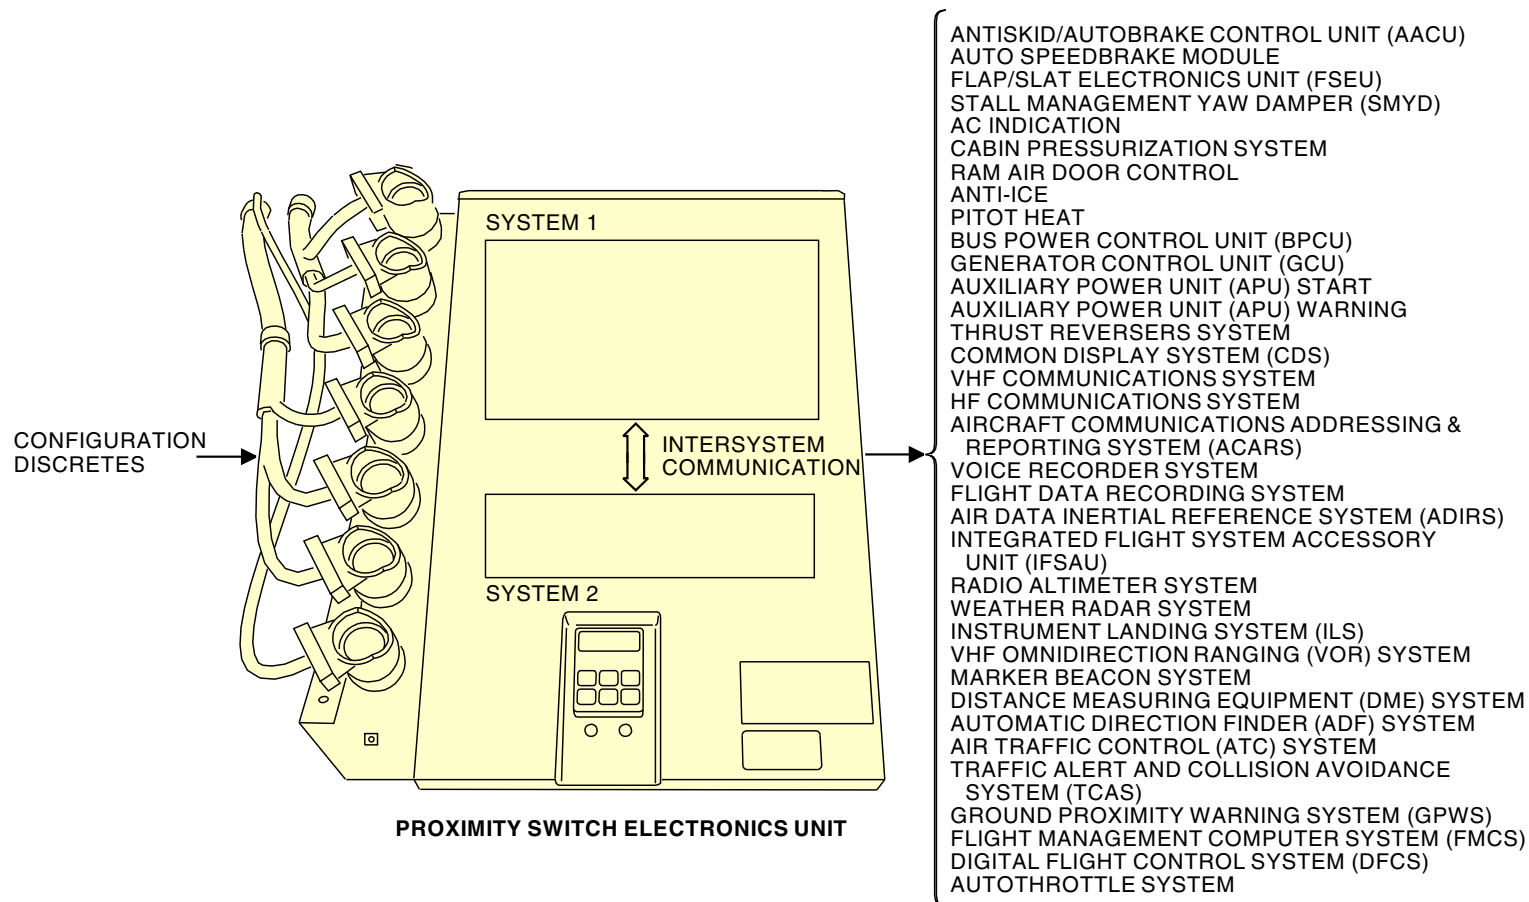

M84942 S0004627754\_V2

## AIR/GROUND SYSTEM - AIR/GROUND DISCRETES - SYSTEM 1

32-09-00

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## AIR/GROUND SYSTEM - AIR/GROUND DISCRETES - SYSTEM 2

**Purpose**

The proximity switch electronics unit (PSEU) provides air/ground discrete signal outputs for multiple airplane systems.

**General Description**

System 2 receives configuration discrete and sensor inputs from airplane components for use when calculating air/ground discrete outputs.

These are the multiple use systems/units that use air/ground discrettes from system 2:

- Flight management computer system (FMCS)
- Digital flight control system (DFCS)

Intercommunication between systems 1 and 2 is for internal and external fault monitoring.


- Antiskid/autobrake control unit (AACU)
- Auto speedbrake control module
- Stall management yaw damper (SMYD)
- Cabin pressurization system
- Ram air door control
- Bus power control unit (BPCU)
- Generator control unit (GCU)
- Auxiliary power unit (APU) start
- Auxiliary power unit (APU) warning
- Common display system (CDS)
- Aircraft communications addressing and reporting system (ACARS)
- Flight data recording system
- Air data inertial reference system (ADIRU)
- Integrated flight system accessory unit (IFSAU)
- Voice recorder system
- Radio altimeter system
- Instrument landing system (ILS)
- VHF omnidirectional ranging (VOR) system
- Distance measuring equipment (DME) system
- Automatic direction finder (ADF) system
- Air traffic control (ATC) system

**32-09-00****EFFECTIVITY**  
**SIA ALL**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# AIR/GROUND SYSTEM - AIR/GROUND DISCRETES - SYSTEM 2

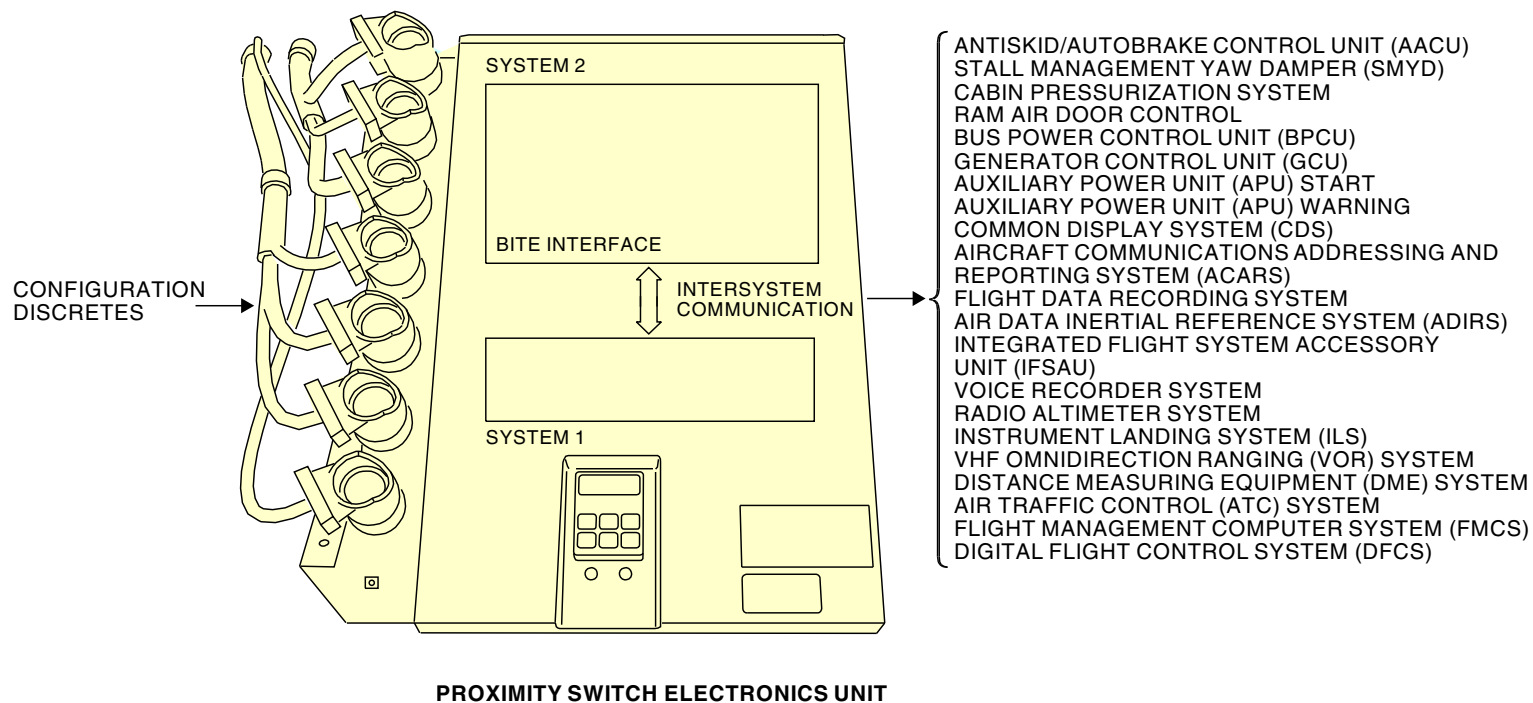

## AIR/GROUND SYSTEM - AIR/GROUND DISCRETES - SYSTEM 2

M84961 S0004627770\_V2

32-09-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - AIR/GROUND RELAYS - SYSTEM 1****Purpose**

The PSEU controls the air/ground relays for multiple airplane systems.

**General Description**

System 1 relays receive configuration signals from the PSEU and electrical power from either BUS 1 or the BAT BUS. The PSEU also provides the electrical ground source to energize the relays in an air or ground mode.

These are the air mode relays:


- R584 for the left thrust reverser and inert gas system
- R593 for the control display unit (CDU) data loader interface, and door area heaters.

These are the ground mode relays:

- R587 for the power transfer unit (PTU)
- R589 for the weather radar system and the cabin air recirculation system
- R592 for the overboard exhaust valve control
- R594 for the forward and aft drain mast heaters, and the cargo compartment fire extinguishers.

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

# AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - AIR/GROUND RELAYS - SYSTEM 1

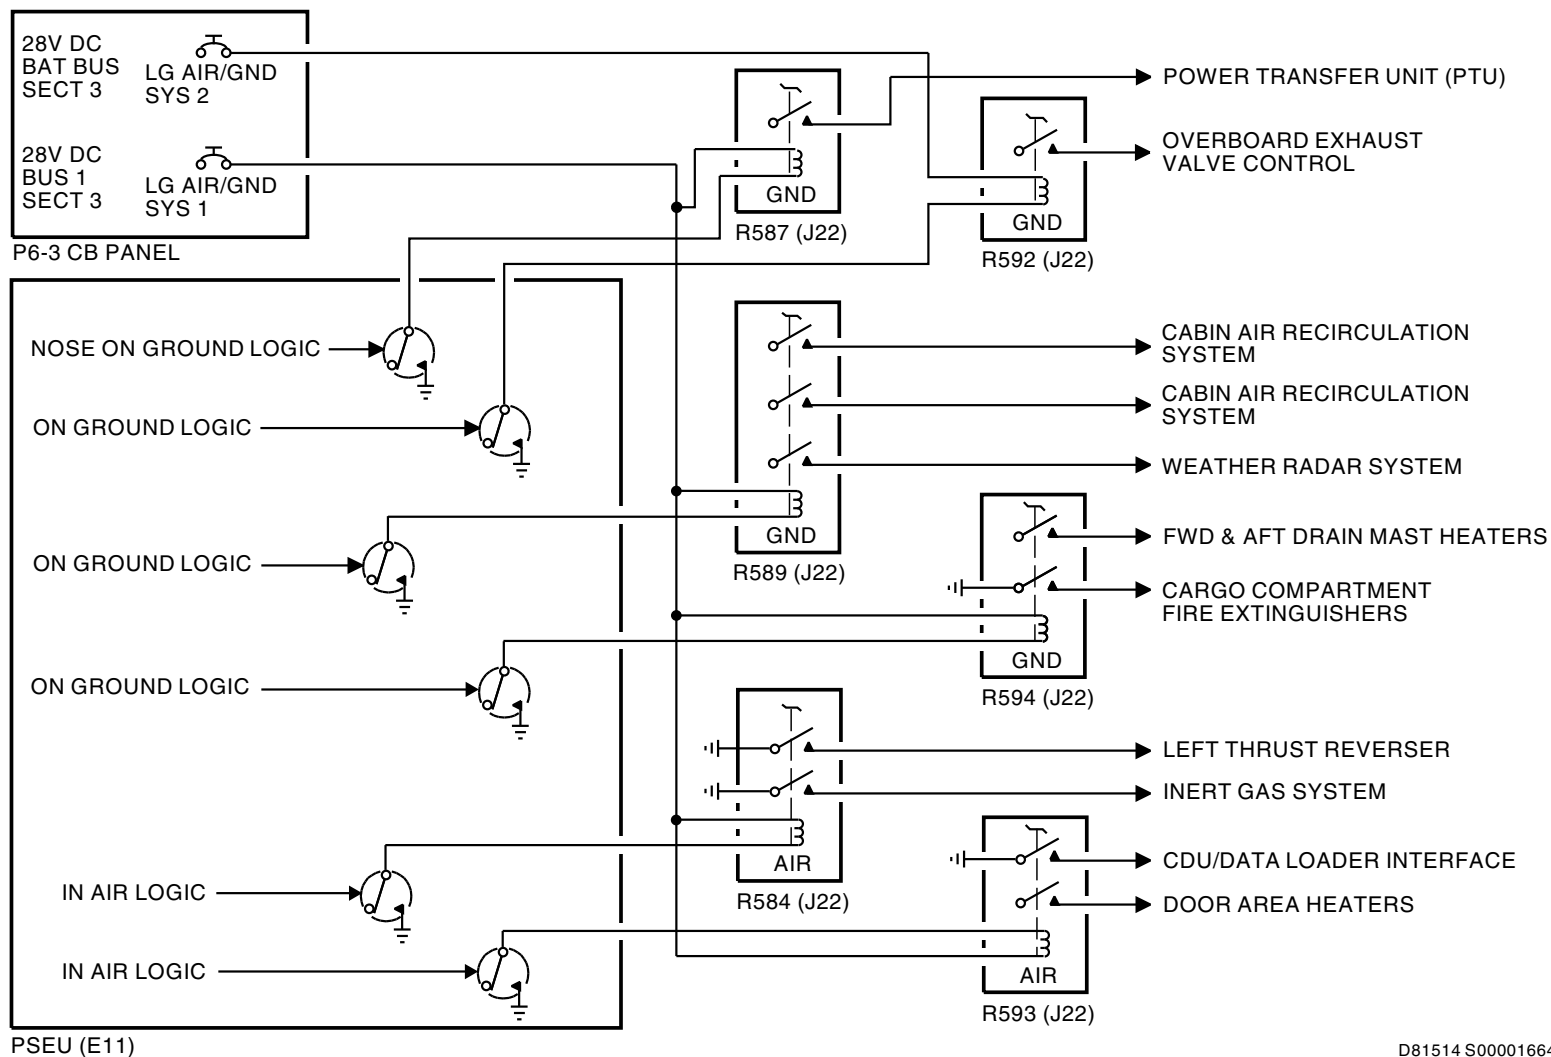

D81514 S0000166408\_V2

## AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - AIR/GROUND RELAYS - SYSTEM 1



## AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - AIR/GROUND RELAYS - SYSTEM 2

**Purpose**

The PSEU controls the air/ground relays for multiple airplane systems.

**General Description**

System 2 relays receive configuration signals from the PSEU and electrical power from either BUS 2 or the BAT BUS. The PSEU also provides the electrical ground source to energize the relays in an air or ground mode.


These are the air mode relays:

- R585 for the right thrust reverser and APU automatic fire extinguisher discharge.
- R588 for standby rudder control, the gray water drain valve, and automatic ground speedbrake control.

These are the ground mode relays:

- R591 for the automatic ground speedbrake control
- R595 for the pitot and probe heaters, the left and right pack valves, and power transfer unit (PTU)
- R596 for the nose wheel steering actuator.

# AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - AIR/GROUND RELAYS - SYSTEM 2

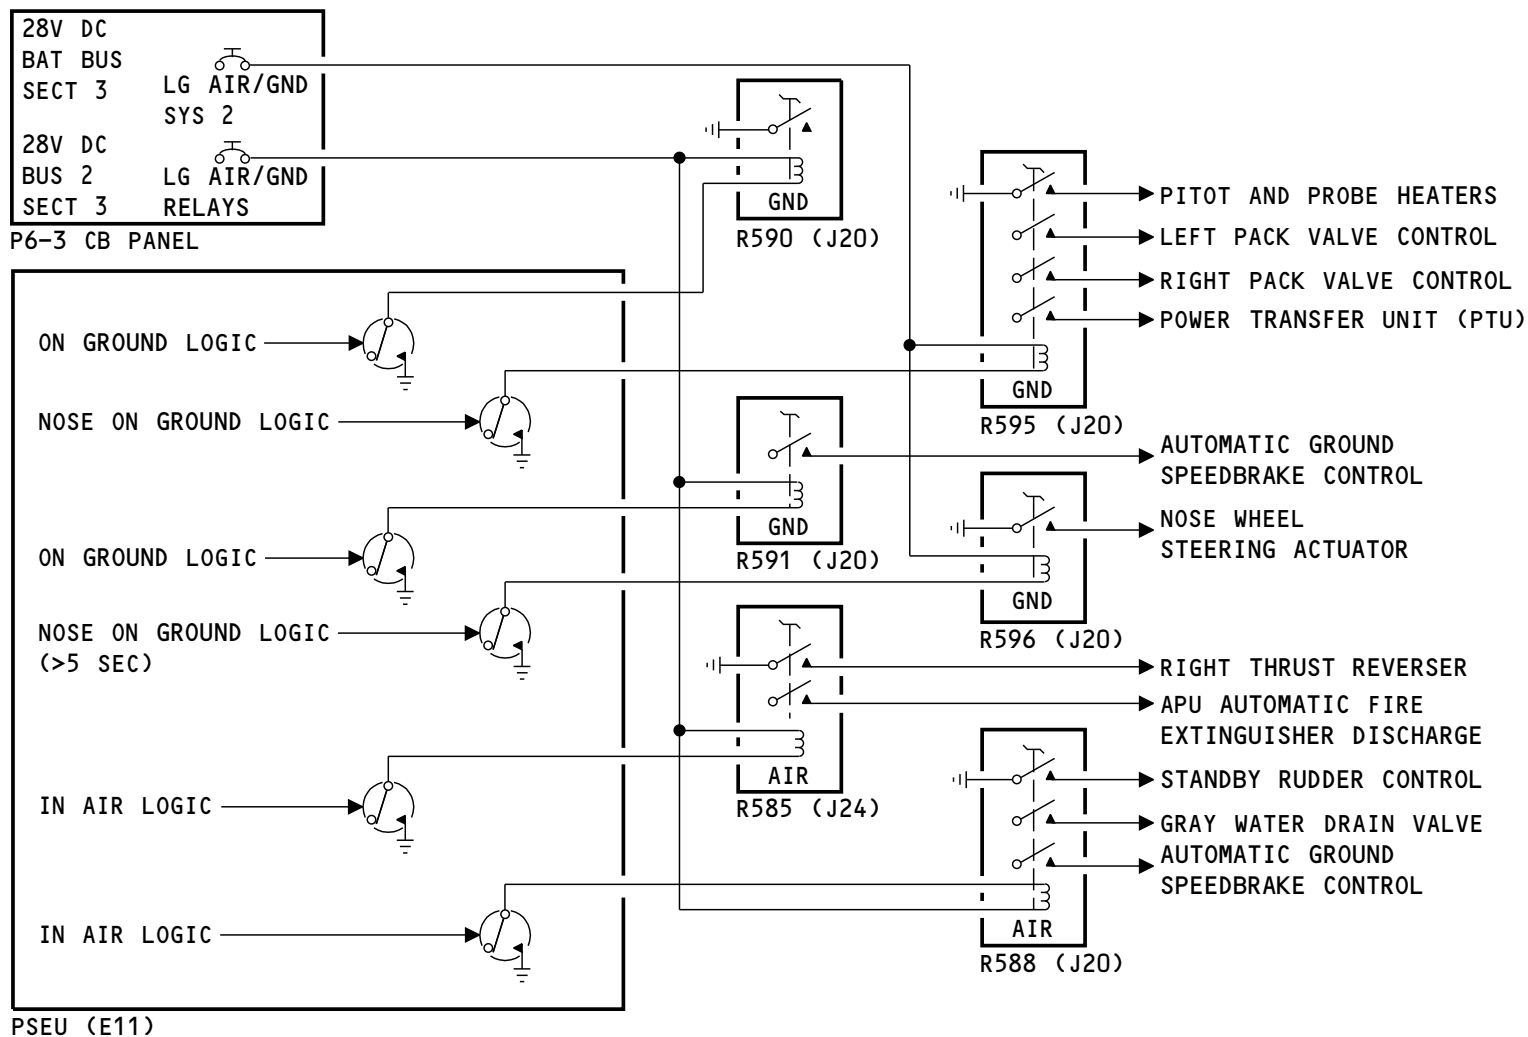

D32467 S0000148209\_V2

## AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - AIR/GROUND RELAYS - SYSTEM 2

32-09-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-09-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - PSEU FAULT LIGHT LOGIC

**General**

The Proximity Switch Electronics Unit (PSEU) continuously monitors system 1 and system 2 for internal and external faults.

**Functional Description**

Power from the PSEU PRI and PSEU ALTN circuit breakers go to system 1 and system 2. Either system monitors for faults using 28V DC BAT BUS and 28V DC BUS 2 power sources. These are the internal type faults:

- Software/hardware faults
- Intersystem communication
- Power supply A/B faults
- Sensor drive 1/2.

These are the external type faults:

- Proximity sensor wiring
- LE flaps external wiring faults
- External input configuration faults
- External input monitoring faults.

**SIA ALL; AIRPLANES WITH PSEU -5 OR -6**

**NOTE:** External faults are recorded in the PSEU fault history only during airplane operation. Internal faults are always recorded in the fault history regardless of whether the airplane is in operation or maintenance.

**SIA ALL**

Thrust lever position is sensed from the autothrottle switch packs. A ground is provided for the PSEU when the autothrottle switch packs are less than 53 degrees.

Landing gear on ground (target near) inputs are sensed from the six air/ground sensors.

**SIA ALL; AIRPLANES WITH PSEU -5 OR -6****No Dispatch Fault**

The fault is annunciated by the PSEU fault light, the system annunciator (OVERHEAD light), and the MASTER CAUTION light turning ON at 30 seconds after landing and when the thrust levers are less than 53 degrees. When the MASTER CAUTION light is pushed on this condition, only the PSEU light remain ON.

A signal is also sent to the MASTER CAUTION card in the Flight Recorder and Mach Airspeed Warning module for a PSEU fault.

Before and after the engines are shutoff, pressing the MASTER CAUTION recall will illuminate the system annunciator (OVERHEAD light) only if the PSEU light is ON.

The PSEU fault light goes OFF when the fault is corrected.

The fault can be seen on the PSEU BITE display with the airplane on ground and engines are shutdown

**Dispatch Fault**

The fault is annunciated by the PSEU fault light, the system annunciator (OVERHEAD light), and the MASTER CAUTION light turning ON at 30 seconds after landing and when the thrust levers are less than 53 degrees. When the MASTER CAUTION light is pushed on this condition, only the PSEU light remain ON.

Before the engines are shutoff, pressing the MASTER CAUTION recall will illuminate the system annunciator (OVERHEAD light) only if the PSEU light is ON.

The PSEU fault light goes OFF when the engines are shutdown or the parking brake is set, even though the dispatchable fault may still be present.

**NOTE:** If a fault still exist all three lights will come ON again at next landing.

**32-09-00****EFFECTIVITY**  
**SIA ALL**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - PSEU FAULT LIGHT LOGIC


## SIA ALL; AIRPLANES WITH PSEU -5 OR -6 (Continued)

PSEU BITE display must be checked for the existing fault. The fault can be seen on the PSEU BITE display with the airplane on ground and engines are shutdown.

SIA ALL

| SIA ALL      | EFFECTIVITY |
|--------------|-------------|
| D633A101-SIA |             |

## AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - PSEU FAULT LIGHT LOGIC

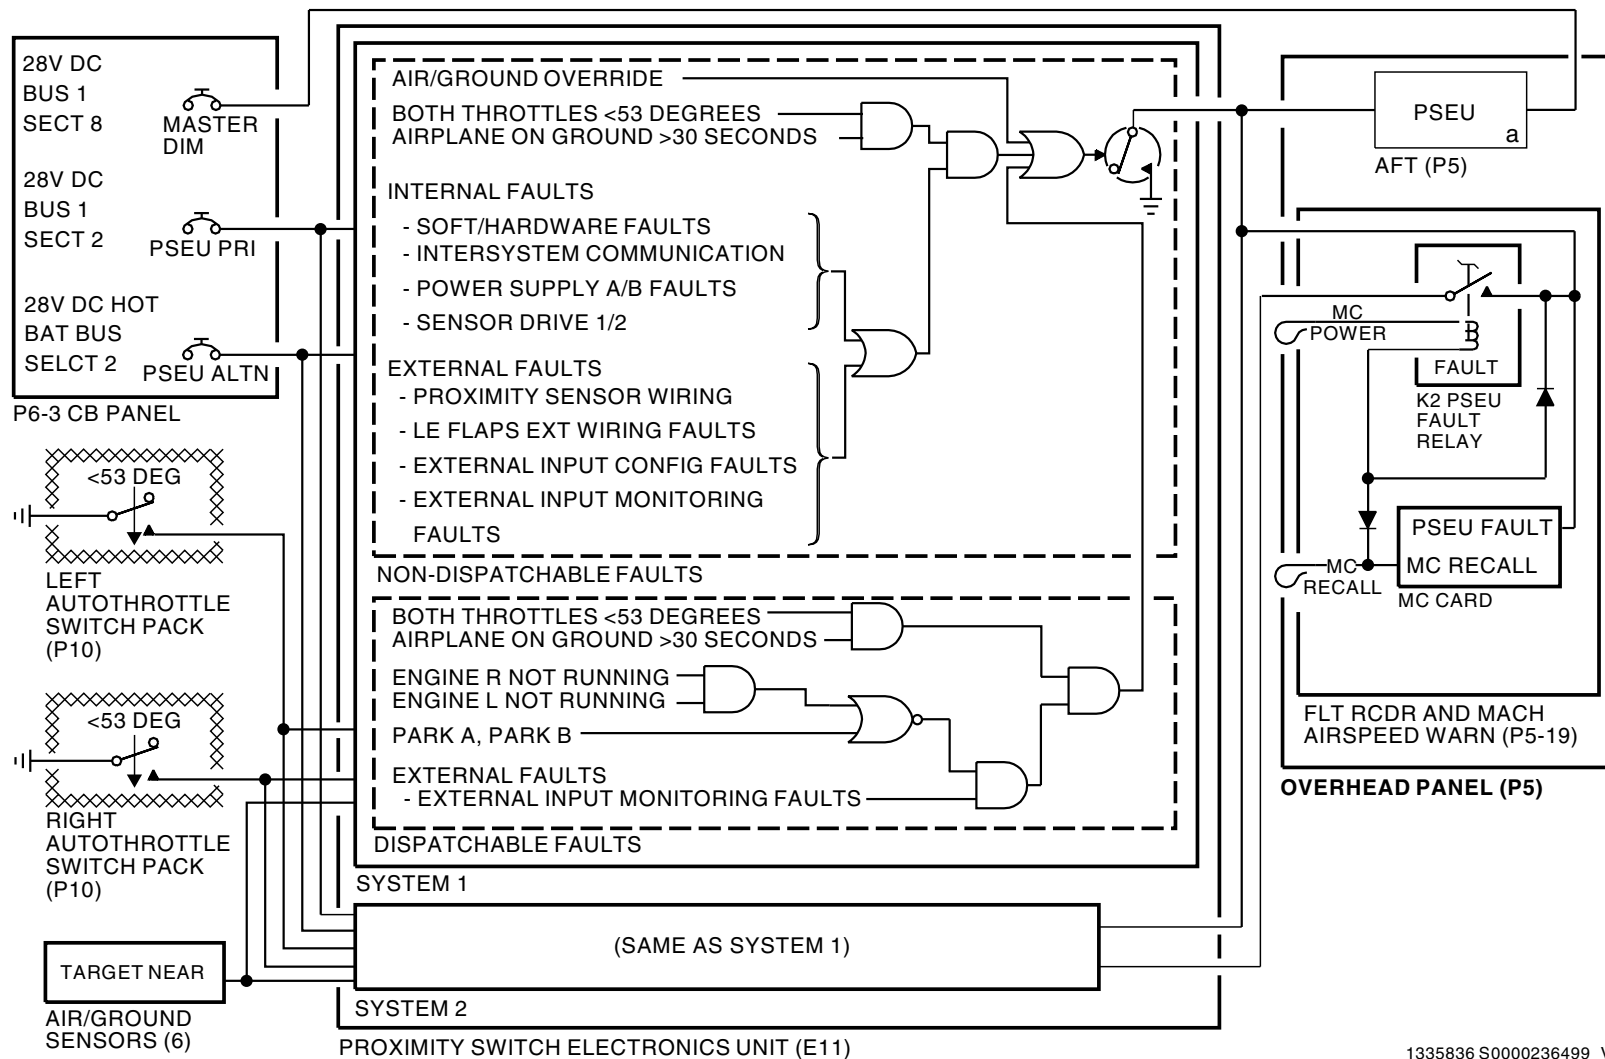

1335836 S0000236499\_V4

## AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION - PSEU FAULT LIGHT LOGIC

32-09-00

EFFECTIVITY  
SIA ALL; AIRPLANES WITH PSEU -5 OR -6

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION

**Purpose**

The air/ground system supplies air/ground data to airplane systems.

**Functional Description**

Inputs from the system 1 sensors go to system 1 in the proximity switch electronics unit (PSEU), and inputs from system 2 sensors go to system 2 in the PSEU. Both systems within the PSEU share information through a common bus.

Two landing gear compressed sensors on each landing gear send air/ground position to the PSEU. The PSEU processes the signals from the compressed sensors, operates the air/ground relays, and sends these outputs to airplane systems:

- Ground mode
- Air mode
- Left gear on ground mode (system 1 only)
- Right gear on ground mode (system 2 only)
- Nose gear on ground mode
- Parking brake set on ground (system 1 only).

System 1 sends ground mode signals to the system 1 air/ground relays and airplane systems when targets move near any two or more of the system 1 and system 2 MLG compressed sensors.

System 1 sends air mode signals to the system 1 air/ground relays and airplane systems when targets move far from any three of the system 1 and system 2 MLG compressed sensors.

System 1 sends nose gear on ground mode signals to airplane systems when targets move near any two or more MLG compressed sensors and one or both NLG compressed sensors.

System 1 only sends a left gear on ground mode signal to the flight data acquisition unit (FDAU) when targets move near one or both left main landing gear compressed sensors.

System 1 also sends a nose gear on ground mode signals to the flight data acquisition unit (FDAU) when targets move near one or both nose landing gear compressed sensors.

See the flight data recorder system (FDRS) section for more information about the FDAU. (SECTION 31-31)

System 1 only sends parking brake set, and on ground signals to the voice recorder. This lets you erase the voice recorder when the parking brake is set and the airplane is on the ground.

See the voice recorder system section for more information about the voice recorder. (SECTION 23-71)


Signals for system 2 are the same as system 1 except:

- System 2 sends a right gear on ground mode signal to the FDAU when targets move near one or both right main landing gear compressed sensors
- System 2 sends nose on ground mode signals to the FDAU in addition to other airplane systems
- System 2 does not send parking brake set on ground signals.

You can change the output of each air/ground system with the AIR/GND OVRD function on the PSEU BITE. The air/ground system in air red lights and PSEU amber light come on when the system is in the air mode.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

# AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION

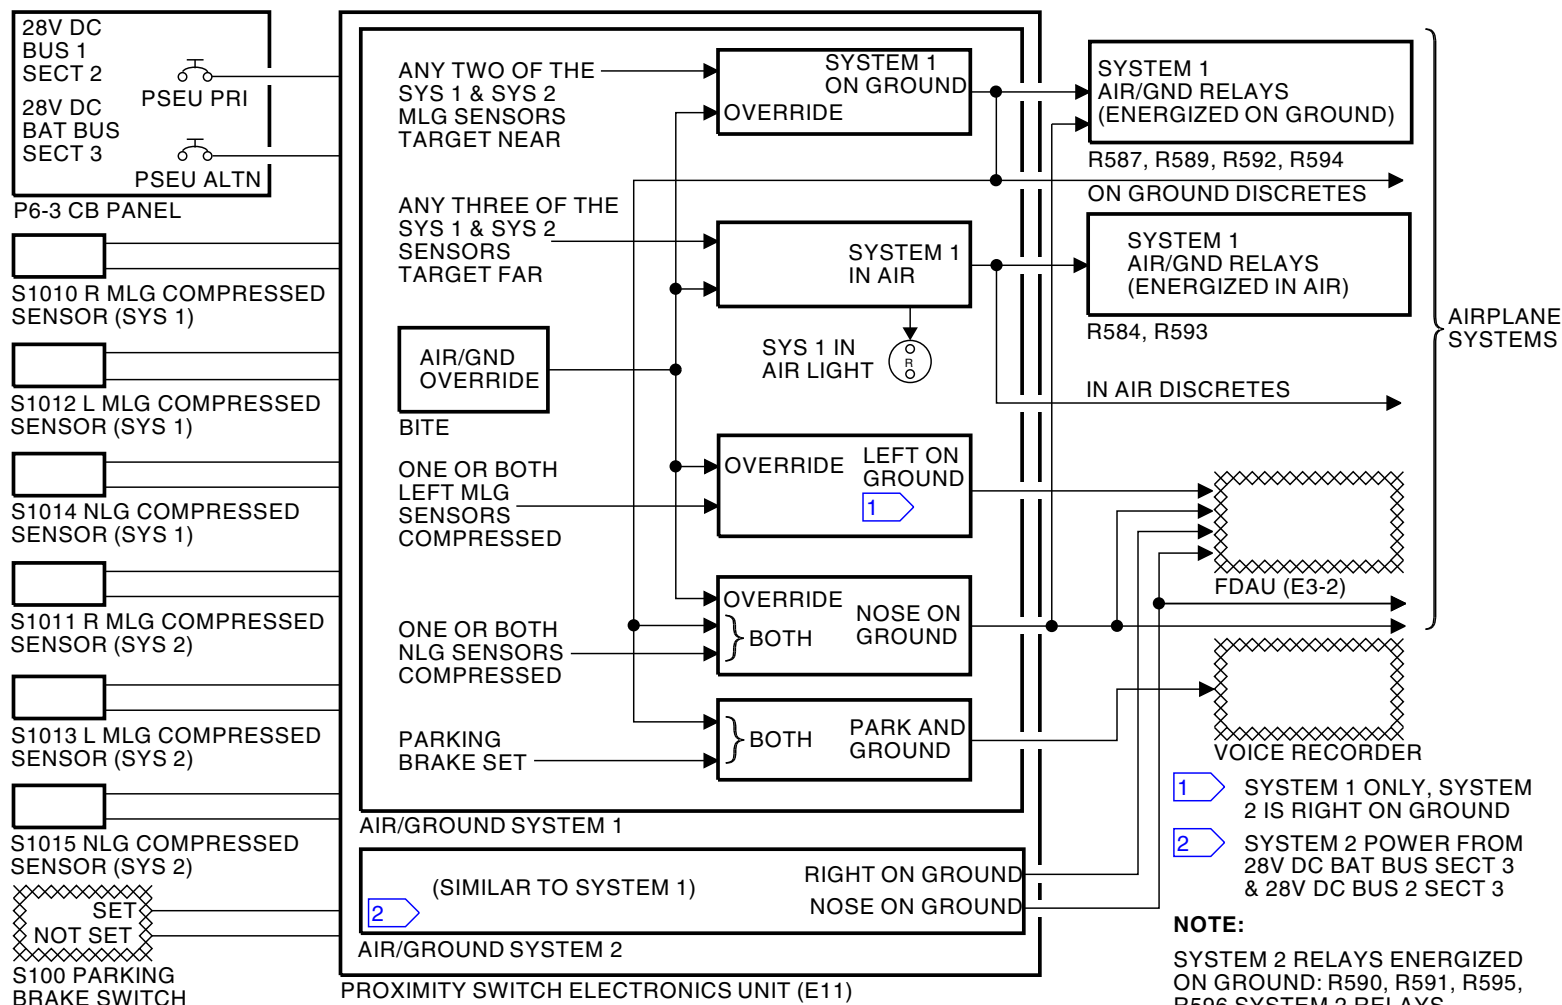

## AIR/GROUND SYSTEM - FUNCTIONAL DESCRIPTION

32-09-00

| 32-09-00-005 | SIA ALL | EFFECTIVITY |
|--------------|---------|-------------|
|              |         |             |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - PSEU BITE INSTRUCTION PLACARD

**General**

The PSEU BITE instruction placard has this information:

- Sensor rigging aid
- Instructions
- BITE menu tree
- Warning
- Replace test input cycling sequence.

**Sensor Rigging Aid**

The sensor rigging aid shows the information for each sensor when you select SENSOR RIGGING in the OTHER FUNCTNS menu selection. The rigging aid tells you how to read the display to see the sensor-to-target gap.

**Instructions**

The instructions tells you how to operate the switches on the BITE panel.

**BITE Menu Tree**

The BITE menu tree shows a list of the first and second levels in the PSEU BITE menu.

**Warning**

The warning tells you that these tests in the PSEU BITE can cause operation of airplane systems:

- LRU replacement test
- Self-test
- Landing gear transfer valve test
- Air/ground override.


**Replacement Test Input Cycling Sequence**

The replacement test input cycling sequence provides directions on how to operate these airplane controls and systems during the replacement test:

- Engine 1 running relay
- Engine 2 running relay
- Nose wheel steering switch
- Speed brake lever
- Right thrust lever
- Left thrust lever
- Parking brake
- Landing gear control lever
- Horn cutout reset switch
- Takeoff warning cutoff circuit breaker
- Forward cargo door warning switch
- Aft cargo door warning switch
- Elect access door warning switch.

**NOTE:** The replacement test uses signals from the above systems to test the PSEU. The PSEU looks for a change in these inputs and these inputs can be changed in any sequence.

AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - PSEU BITE INSTRUCTION PLACARD

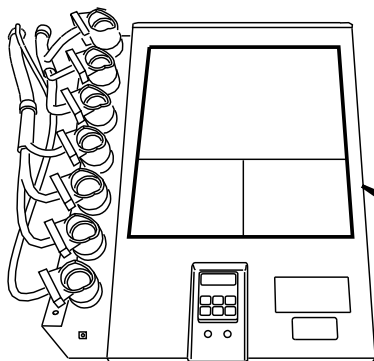

PSEU

### HOW TO USE SENSOR RIGGING AID

SELECTED SENSOR NUMBER

IF < IS DISPLAYED  
GAP MOVE VALUE = +XXX MILS

IF > IS DISPLAYED  
GAP MOVE VALUE = -XXX MILS

CLOSEST PERMITTED GAP

OPTIMUM GAP

GAP GRAPH

GAP OF SELECTED SENSOR

FARTHEST PERMITTED GAP

NOTE

GAP GRAPH SHOWS ONE OF:

- SENSOR GAP
- < OFF SCALE = SMALLER GAP
- > OFF SCALE = WIDER GAP

GAP MOVE VALUE SHOWS ONE OF:

- + INCREASE GAP
- DECREASE GAP

IF SENSOR IS TARGET FAR, ALL DISPLAYS WILL READ TGT FAR.

GAP VALUE

|   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|
| S | x | x | x | x |   |   |
| x | x | x | M | I | L | S |

GAP MOVE VALUE

|   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|
| S | x | x | x | x |   |   |
| + | x | x | x | M | I | L |

+ MEANS INCREASE GAP  
- MEANS DECREASE GAP

### INSTRUCTIONS

PUSH ON/OFF TO START OR STOP THE BITE DISPLAY  
NOTE: THE PSEU MUST HAVE POWER AND THE P5 EQUIPMENT WARNING LIGHT MUST BE ON.  
PUSH YES OR NO IN REPLY TO QUESTIONS (?)  
PUSH TO MOVE DOWN IN LIST  
PUSH TO MOVE UP IN LIST  
PUSH MENU TO RETURN TO PREVIOUS MENU

### BITE MENU TREE

|                   |                                                                          |
|-------------------|--------------------------------------------------------------------------|
| EXISTING FAULTS?  | DISPLAY SHOWS EXISTING FAULTS                                            |
| FAULT HISTORY?    | DISPLAY SHOWS RECORDED FAULTS BY FLIGHT LEG                              |
| GROUND TESTS?     | DISPLAY SHOWS GROUND TESTS                                               |
| REPLACE TEST?     | LRU REPLACEMENT TEST: <span>SEE WARNING</span>                           |
| SELF TEST?        | PSEU TEST: <span>SEE WARNING</span>                                      |
| LGTV TEST?        | LANDING GEAR TRANSFER VALVE TEST: <span>SEE WARNING</span>               |
| SPDBRK TEST?      | SPEEDBRAKE EXTENDED WARNING TEST                                         |
| T/O WARN TEST?    | TAKEOFF WARNING TEST                                                     |
| DISPLAY TEST?     | BITE DISPLAY BY VISUAL INSPECTION                                        |
| AIR/GND OVERRIDE? | CHANGE STATE OF AIR/GROUND OUTPUTS: <span>SEE WARNING</span>             |
| OTHER FUNCTIONS?  | DISPLAY SHOWS OTHER FUNCTIONS                                            |
| T/O WARN REPORT?  | DISPLAY SHOWS CAUSE OF THE LAST TAKEOFF WARNING                          |
| LGTV REPORT?      | DISPLAY SHOWS CAUSE OF THE LAST LANDING GEAR TRANSFER VALVE STATE CHANGE |
| SENSOR RIGGING?   | DISPLAY SHOWS SENSOR RIGGING AID                                         |
| I/O MONITOR?      | DISPLAY SHOWS MONITOR STATUS OF INPUTS OR OUTPUTS                        |
| LRU CONFIG?       | DISPLAY SHOWS LRU CONFIGURATION DATA                                     |

### WARNING

SYSTEMS CAN OPERATE DURING TESTS.

OBEY THE WARNINGS, CAUTIONS, AND INSTRUCTIONS IN THE BITE AND AIRCRAFT MAINTENANCE MANUAL. FAILURE TO DO SO CAN CAUSE SERIOUS INJURY, DEATH OR DAMAGE TO EQUIPMENT.

THE FOLLOWING TESTS WILL CAUSE SOME OUTPUTS TO CHANGE STATE:

- LRU REPLACEMENT TEST
- SELF TEST
- LANDING GEAR TRANSFER VALVE TEST
- AIR/GROUND OVERRIDE

### REPLACEMENT TEST INPUT CYCLING SEQUENCE

|                                                                              |                                     |
|------------------------------------------------------------------------------|-------------------------------------|
| • ENGINE 1 RUNNING RELAY                                                     | • ENGINE 2 RUNNING RELAY            |
| • NOSE WHEEL STEERING SWITCH                                                 | • SPEED BRAKE HANDLE                |
| • LEFT THRUST LEVER                                                          | • RIGHT THRUST LEVER                |
| • PARKING BRAKE                                                              | • TAKEOFF WARNING CUTOFF CB         |
| • HORN CUTOFF RESET SWITCH                                                   | • LANDING GEAR LEVER                |
| • AURAL WARNING DISABLE (MAIN DECK CARGO DOOR CONTROL PANEL, IF SO EQUIPPED) | • FORWARD CARGO DOOR WARNING SWITCH |
|                                                                              | • AFT CARGO DOOR WARNING SWITCH     |
|                                                                              | • ELECT ACCESS DOOR WARN SWITCH     |

PSEU BITE INSTRUCTION PLACARD

M84938 S0004627787\_V1

AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - PSEU BITE INSTRUCTION PLACARD

32-09-00-011

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-09-00



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-09-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - PSEU BITE

**General**

The PSEU can help you find and isolate a fault in the systems that the PSEU monitors and controls. Front panel BITE on the PSEU lets you interface with the BITE functions in the PSEU.

The BITE does not operate when the forward access door is closed.

**SIA ALL; AIRPLANES WITH PSEU -5 OR -6**

**NOTE:** The PSEU senses the airplane is in operation as opposed to maintenance when all the eight entry, access, service and cargo doors are closed or either engine is running.

**SIA ALL****Fault Indication**

The PSEU amber light on the P5 aft overhead panel comes on when a no-dispatch type of fault is stored in the memory of the PSEU. The light comes on when these occur:

- Airplane on the ground
- Both thrust levers less than 53 degrees
- More than 30 seconds after landing.

**SIA ALL; AIRPLANES WITH PSEU -5 OR -6**

The OVERHEAD light on the right master caution system annunciator and the MASTER CAUTION lights come ON when the PSEU light comes ON.

The PSEU light also comes ON if a dispatchable fault is stored in the memory of the PSEU. The PSEU light will automatically go OFF when either the parking brake is set or both engines are turned OFF.

**SIA ALL****PSEU BITE Menu**

These are the items in the main menu of the PSEU BITE:

- EXISTING FAULTS

- FAULT HISTORY
- GROUND TESTS
- AIR/GND OVRD
- OTHER FUNCTIONS.

If the access door to the forward equipment compartment is closed when you push the ON/OFF switch, the PSEU BITE does not come on.

**EXISTING FAULTS**

The EXISTING FAULTS selection does a check of the interfaces to the PSEU and the inside of the PSEU. It also lets you reset latches in the PSEU.

**FAULT HISTORY**

The FAULT HISTORY selection shows fault information that is in the non-volatile memory (NVM) in the PSEU.

**GROUND TESTS**

The GROUND TESTS selection lets you do these tests:

- LRU replacement test
- PSEU self test
- Landing gear transfer valve test
- SPEEDBRAKES EXTENDED light operation test
- Takeoff warning test
- PSEU BITE display test.

**AIR/GND OVRD**

The AIR/GND OVRD selection lets you change the air/ground outputs from the PSEU.

**32-09-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - PSEU BITE


OTHER FUNCTIONS

The OTHER FUNCTIONS selection lets you do these functions:

- Takeoff warning report
- Landing gear transfer valve report
- See sensor information
- Monitor PSEU inputs and outputs
- See PSEU configuration.

| SIA ALL      | EFFECTIVITY |
|--------------|-------------|
| D633A101-SIA |             |

### AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - PSEU BITE

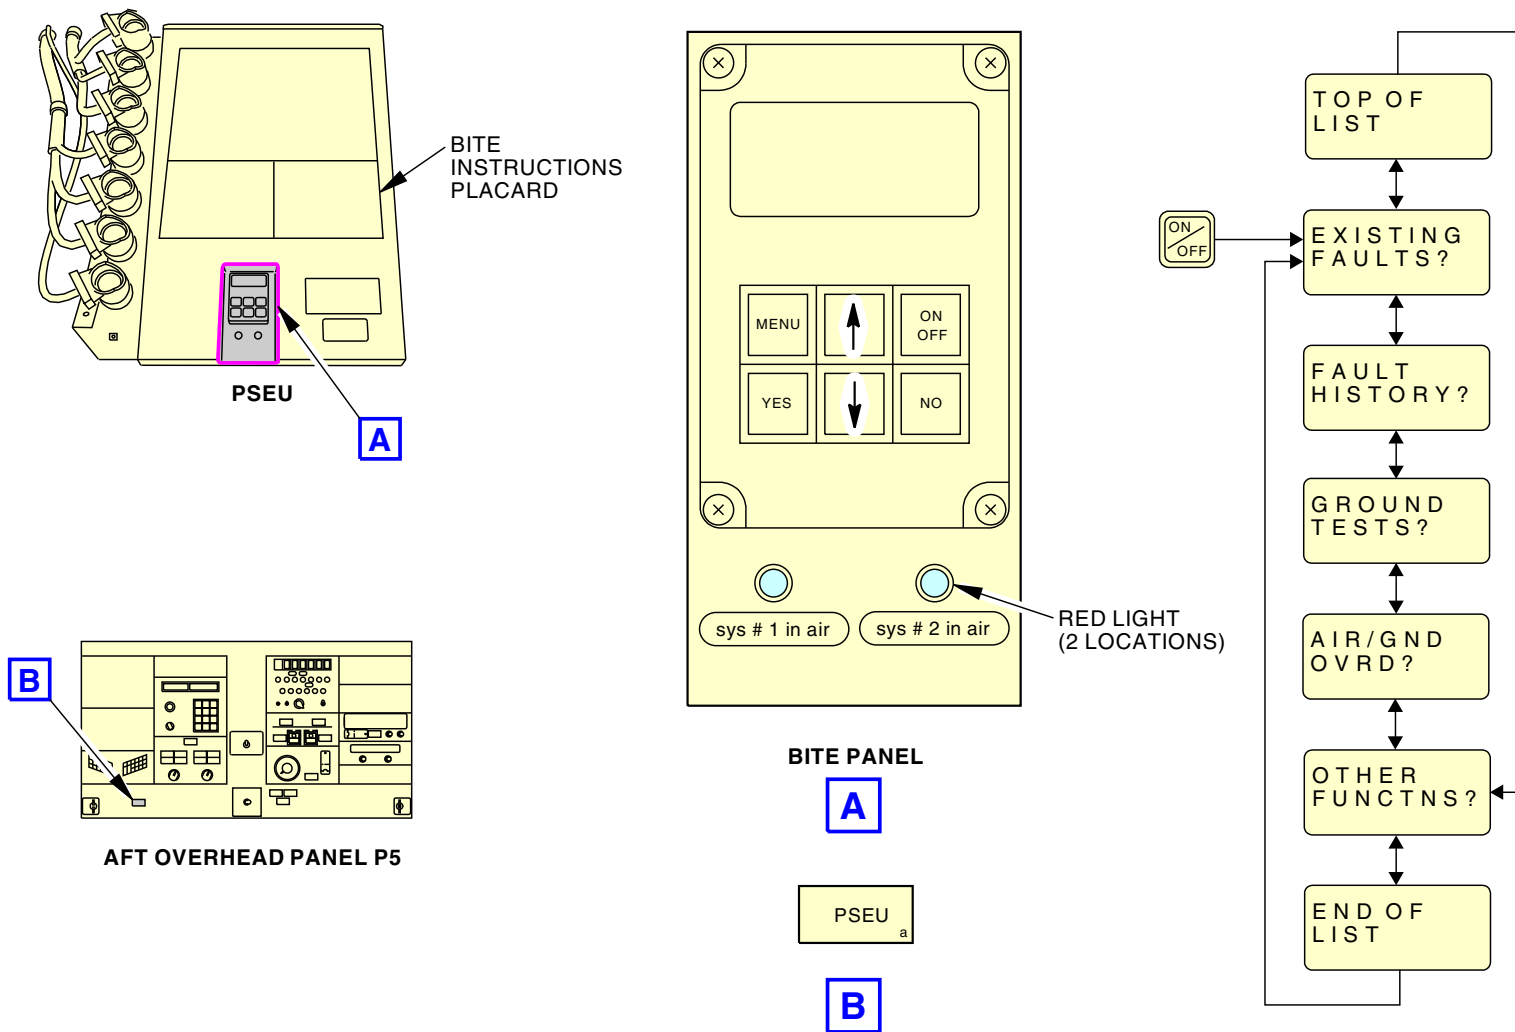

1335392 S0000236691\_V3

### AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - PSEU BITE

32-09-00

EFFECTIVITY  
SIA ALL; AIRPLANES WITH PSEU -5 OR -6

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-09-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - EXISTING FAULTS

**PSEU Existing Faults**

The existing faults report shows a list of all active or latched faults in the PSEU.

To do the existing faults report, do these steps:

- Go to the main menu
- Use the up or down arrow switches until you see EXISTING FAULTS? in the BITE display
- Push the YES switch.

If the test passes, the display shows NO FAULTS. If the test fails, the display shows a fault message. You can use the switches on the BITE panel to see more information about the fault message. You can also see if there are other fault messages.

If there is one or more existing fault, the first message shows the dispatch status of the airplane. The messages NO DISP FAULT or DO NOT DISPATCH are for one or more non-dispatchable faults. The message DISPATCH PER MEL is for one or more dispatchable faults.

**PSEU Fault Messages**

Each PSEU fault message has a single maintenance action. The fault message has a BITE message number. This is the format for the BITE message numbers:

- Eight characters in length
- The first two characters are the ATA chapter number of the system
- The third character is a hyphen (-)
- The fourth character is the first number of the ATA section number of the faulted sub-system.

The last four digits show the fault:

- 0XXX - power faults
- 1XXX - sensor faults
- 2XXX - discrete input faults

- 3XXX - report faults
- 4XXX - others
- 5XXX - inputs that have no cycles (TOW and SPDBRK tests)
- 6XXX - field programmable gate array (FPGA) output load faults.

**PSEU Status Messages**

The PSEU shows these status messages for these conditions:

- Message 32-04001 - AIR/GND OVERRIDE shows that the PSEU outputs are in the override condition (this is not a fault).
- Message 32-64001 - INTERNAL FAULT shows that there is a fault internal to the PSEU.
- Message 32-64002 - TEST NOT COMPLETE shows that a test on the PSEU was interrupted.
- Message 32-64003 - DISPATCH PER MEL shows that there is an existing dispatch type fault and the PSEU light can be turned off.
- Message 32-64004 - DO NOT DISPATCH shows that there is an existing no dispatch type fault and the fault must be corrected to turn off the PSEU light.
- Message 32-66007 - DISPATCH 1 FAULT shows that there is an existing dispatch type fault.
- Message 32-66010 - NO DISP 1 FAULT shows that there is an existing no dispatch 1 type fault.
- Message 32-66017 - DISPATCH 2 FAULT shows that there is an existing dispatch 2 type fault.
- Message 32-66020 - NO DISP 2 FAULT shows that there is an existing no dispatch 2 type fault.

The PSEU shows these status messages when a problem exists with the flight recorder and the mach airspeed warning module for these conditions:

- Message 32-66007 - DISPATCH 1 FAULT shows that the PSEU does not sense the expected load on the DISPATCH FAULT A output.
- Message 32-66010 - NO DISP 1 FAULT shows that the PSEU does not sense the expected load on the NO DISPATCH FAULT A output.

**32-09-00**

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - EXISTING FAULTS**

- Message 32-66017 - DISPATCH 2 FAULT shows that the PSEU does not sense the expected load on the DISPATCH FAULT B output.
- Message 32-66020 - NO DISP 2 FAULT shows that the PSEU does not sense the expected load on the NO DISPATCH FAULT B output.

**More Details**

MORE DETAILS? shows this information for the fault message:


- LATCHED YES or NO
- Connector and pin number.

LATCHED shows if the fault is latched. Faults that only occur when the airplane is in the air are latched so you can see them when you do the EXISTING FAULTS test on the ground. The connector and pin number message shows that information related to the fault.

The existing faults test also lets you reset latches in the PSEU when the fault is corrected.

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - EXISTING FAULTS

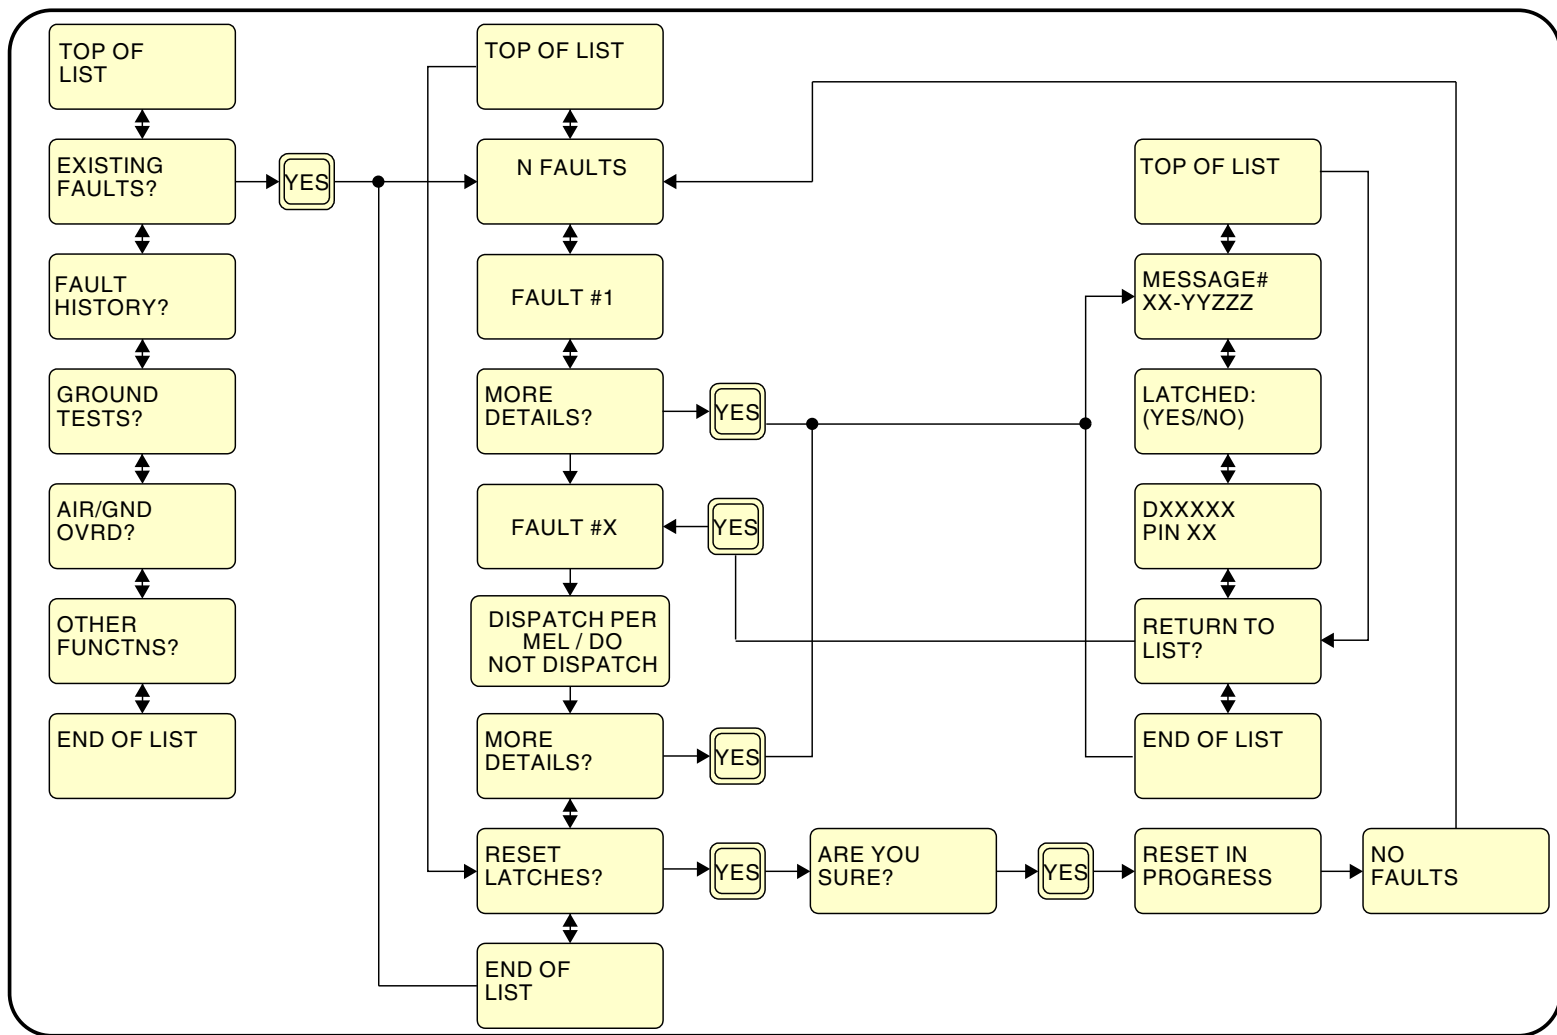

M84932 S0004627792\_V2

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - EXISTING FAULTS



## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - FAULT HISTORY

**Fault History**

The fault history selection shows fault information that is in the non-volatile memory (NVM) in the PSEU. Monitors in the PSEU put data in the NVM during these conditions:

- System tests with the PSEU BITE
- Continuous monitoring
- Power up tests.

The NVM keeps data for the last 64 flight legs or a maximum of 256 failures. Flight leg 0 is the current flight leg. Flight leg 63 is the last leg. Faults in flight leg 0 are faults that occurred during the most recent flight and the faults that occurred on the ground after the most recent flight. The flight leg starts when the airplane goes from the ground to the air and the N2 engine speed signal shows engine number one operates.

To find fault information from a specific flight leg, do these steps:

- Go to the main menu
- Use the up or down arrow switches until you see FAULT HISTORY? in the BITE display
- Push the YES switch
- Use the up or down arrow switches until you see the flight leg that you want
- Push the YES switch.


The information for MORE DETAILS shows the phase when the fault occurred (air or ground), and the type of the fault.

The fault types are HARD, INTRMTNT, or REPEATnn:

- HARD faults are faults not cleared prior to the end of last flight leg
- INTRMTNT faults are faults cleared prior to the end of the last flight leg
- REPEATnn faults are intermittent faults that occurred nn times during the last flight leg.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - FAULT HISTORY

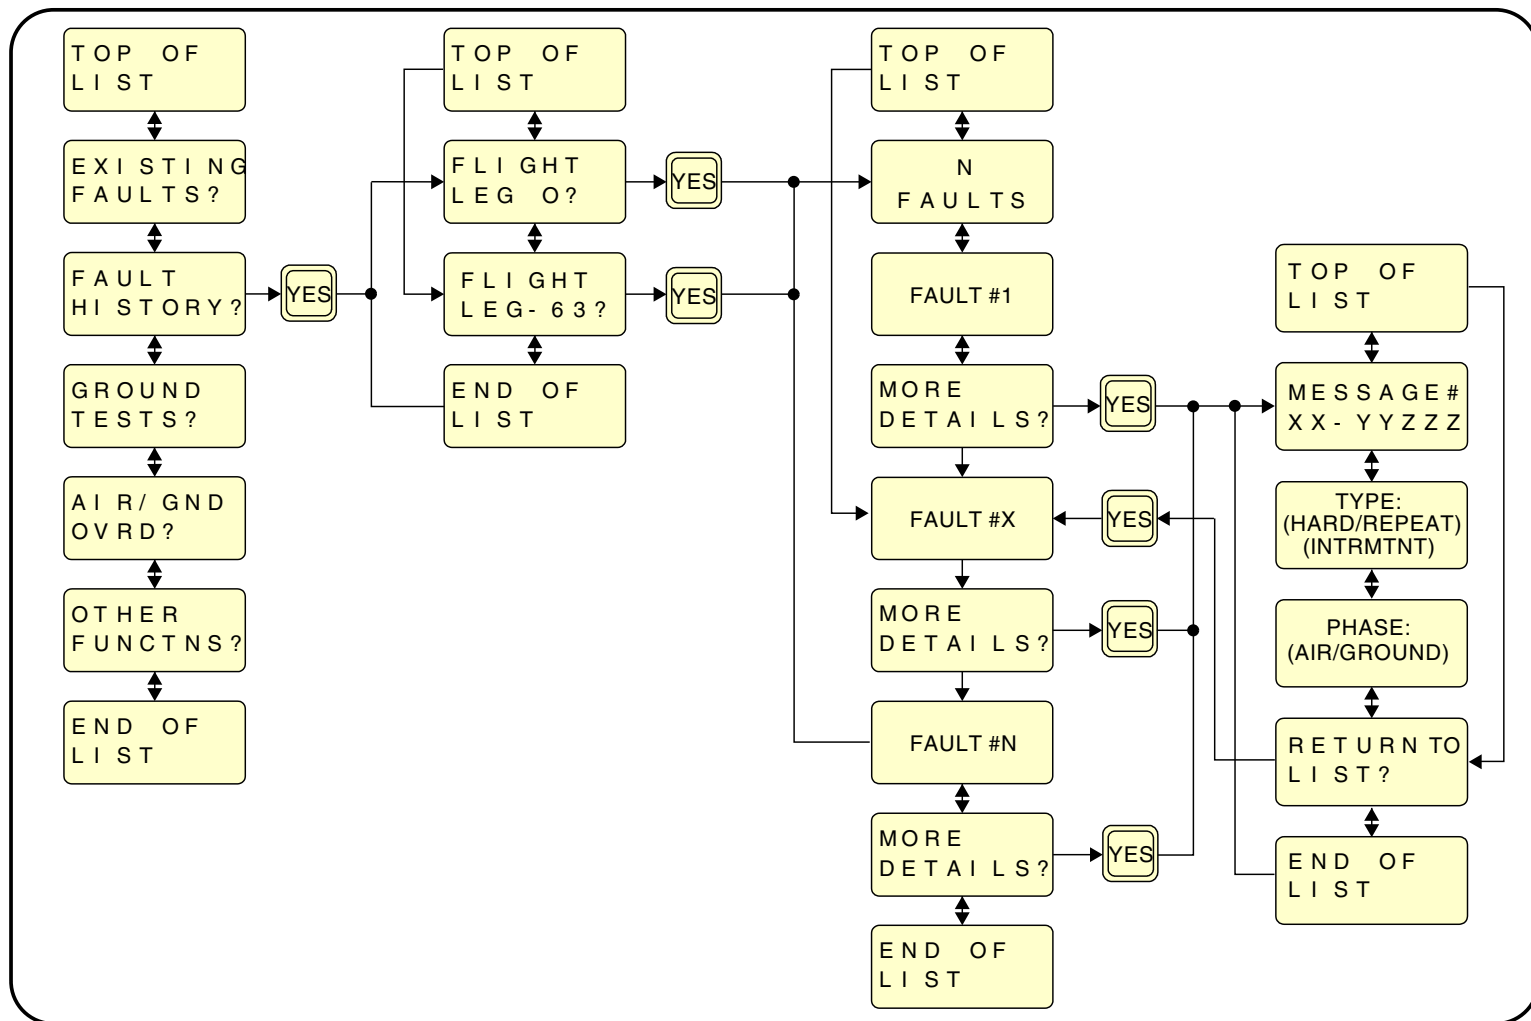

M84934 S0004627795\_V2

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - FAULT HISTORY



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-09-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - GROUND TESTS

### Ground Tests

These are the ground tests in the PSEU BITE:

- REPLACE TEST
- SELF TEST
- LGTV TEST
- SBRK TEST
- T/O WARN TEST
- DISPLAY TEST.

To start one of these tests, do these steps:

- Go to the main menu
- Use the up or down arrow switches until you see GROUND TESTS? in the BITE display
- Push the YES switch
- Use the up or down arrow switches until you see the test that you want
- Push the YES switch.

During the test, the display shows TEST IN PROGRESS. If the test passes, the display shows TEST PASSED. If the test fails, the display shows a fault message. The information for MORE DETAILS? is the same as for the existing faults test.

During the REPLACE TEST and SELF TEST, some outputs from the PSEU change. Airplane systems may operate automatically because the air/ground systems send air mode signals during the tests. Obey these warnings when you do the REPLACE TEST and SELF TEST:



**WARNING** OBEY THE PROCEDURE THAT PREPARES TO PUT THE AIRPLANE IN THE AIR MODE. IN THE AIR MODE, MANY OF THE AIRPLANE SYSTEMS CAN OPERATE. THIS CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.



**WARNING** KEEP PERSONS AND EQUIPMENT CLEAR OF THE FLIGHT CONTROL SURFACES. THESE COMPONENTS CAN MOVE SUDDENLY WHEN YOU PUT THE AIRPLANE IN THE AIR MODE. THIS CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT.

### REPLACE TEST

The REPLACE TEST does a self-test of the PSEU and a sequence check of the connections to the PSEU. If the test does not pass, fault information shows in EXISTING FAULTS.

You may operate controls and systems on the airplane in any sequence during this test.

The BITE instruction placard shows a list of the controls and systems that you operate during the test.

### SELF TEST

The SELF TEST does a check of the PSEU. If the test does not pass, fault information shows in EXISTING FAULTS.

### LGTV TEST

The LGTV TEST does a check of the landing gear transfer valve operation. The test operates the valve for the primary and secondary circuits in the PSEU and valve. If the inputs are functioning normally, the fault does not show and the test passes. If the test fails, the fault message shows in the EXISTING FAULTS menu.

### SPDBRK TEST

The SPDBRK TEST shows the inputs used to operate the SPEEDBRAKES EXTENDED amber light in the flight compartment (except for the air/ground input) that have not changed during the current flight. To remove the fault, cycle the input and rerun the test. If the input functions normally, the fault does not show. If the INTERNAL FAULTS message shows, the PSEU needs to be replaced.

# 32-09-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - GROUND TESTS

**T/O WARN TEST**


The T/O WARN TEST shows takeoff warning system inputs (except for stabilizer trim) that have not changed during the current flight. To remove the fault, cycle the input and rerun the test. If the input functions normally, the fault does not show. If the INTERNAL FAULTS message shows, the PSEU needs to be replaced.

**DISPLAY TEST**

The DISPLAY TEST shows the BITE display characters in sequence. This test is not interactive. When the test is complete, the BITE display shows DISPLAY TEST? again.

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - GROUND TESTS

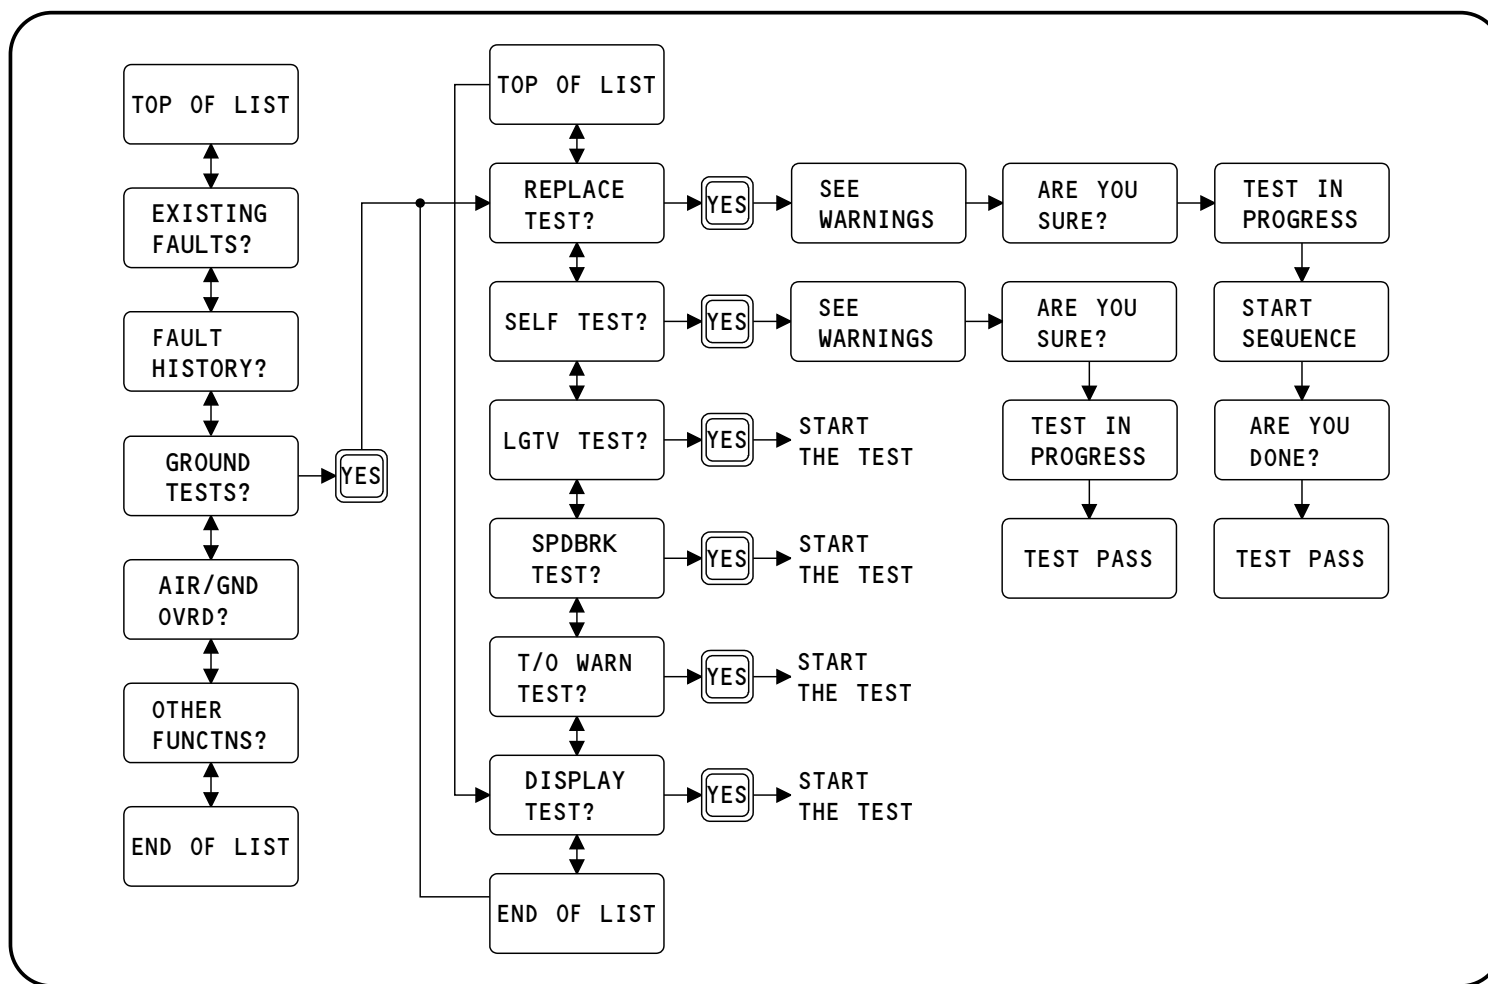

M84935 S0004627797\_V2

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - GROUND TESTS

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - AIR/GND OVRD

### Air/Ground Override

The air/ground override lets you change the output of the air/ground systems.

To override the output of the air/ground systems, do these steps:

- Go to the main menu
- Use the up or down arrow switches until you see AIR/GND OVRD? in the BITE display
- Push the YES switch
- Use the up or down arrow switches until you see the air/ground system(s) you want to override
- Push the YES switch.

The display shows ARE YOU SURE? Airplane systems may operate automatically when the air/ground systems change their output. Obey these warnings when you change the output of the air/ground systems:



OBEY THE PROCEDURE THAT PREPARES TO PUT THE AIRPLANE IN THE AIR MODE. IN THE AIR MODE, MANY OF THE AIRPLANE SYSTEMS CAN OPERATE. THIS CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.



MAKE SURE THAT YOU INSTALL CHOCKS AT THE WHEELS. THE BRAKES WILL RELEASE WHEN YOU PUT THE AIRPLANE IN AIR MODE. THIS CAN CAUSE THE AIRPLANE TO MOVE SUDDENLY. IF YOU DO NOT INSTALL THE CHOCKS, INJURY TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.



KEEP PERSON AND EQUIPMENT CLEAR OF THE FLIGHT CONTROL SURFACES. THESE COMPONENTS CAN MOVE SUDDENLY WHEN YOU PUT THE AIRPLANE IN THE AIR MODE. THIS CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT.


When you push the YES switch while the ARE YOU SURE? message shows, the chosen air/ground system changes output. The PSEU amber light in the flight compartment comes on when an air/ground system is in the override mode.

The air/ground override does not send a signal to operate the landing gear lever latch solenoid.

The air/ground system does not change output again until you override the air/ground system again, or the system changes from inputs from the compressed sensors.

The RESET OVRD? selection of the air/ground override menu lets you put all air/ground outputs to their normal mode.

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - AIR/GND OVRD

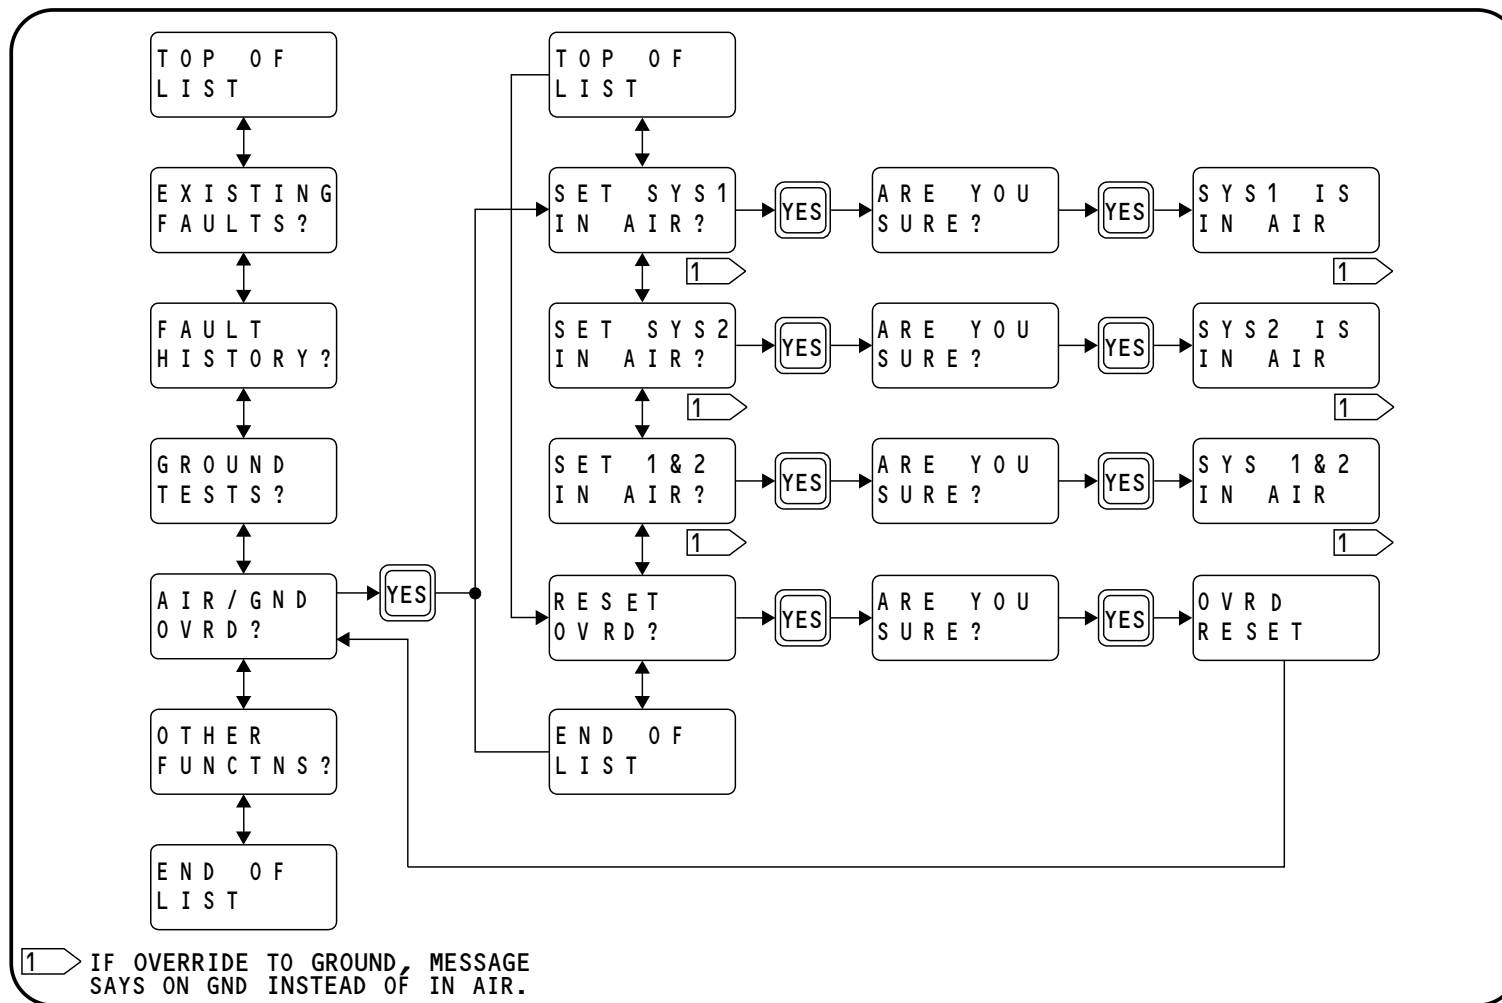

M84939 S0004627799\_V1

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - AIR/GND OVRD

32-09-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - OTHER FUNCTIONS

**OTHER FUNCTNS**

These are the other functions in the Proximity Switch Electronic Unit (PSEU) Built-In-Test Equipment (BITE):

- T/O WARN REPORT
- LGTV REPORT
- SENSOR RIGGING
- I/O MONITOR
- LRU CONFIG.

To go to one of the PSEU BITE functions, do these steps:

- Go to the main menu
- Use the up or down arrow switches until you see OTHER FUNCTNS? in the BITE display
- Push the YES switch
- Use the up or down arrow switches until you see the function that you want
- Push the YES switch.

**LRU CONFIG**

The LRU CONFIG function lets you see this data about the PSEU:

- Hardware part number
- Software part number
- Hours of operation
- Cycles of operation

**T/O WARN REPORT**

The T/O WARN REPORT does not show PSEU or airplane faults.

The T/O WARN REPORT function lets you see which conditions caused the most recent takeoff warning.

**LGTV REPORT**

The LGTV REPORT function lets you see which conditions caused the most recent movement of the landing gear transfer valve to the alternate position.

**SENSOR RIGGING**

The SENSOR RIGGING function lets you see the sensor-to-target gap for these proximity sensors:


- Landing gear
- Door
- Ground spoiler interlock valve

**I/O MONITOR**

The I/O MONITOR function lets you see sensor-to-target status (NEAR, FAR, or FAILSAFE) and if there is voltage, ground, or no ground at each of the pins on all of the connectors to the PSEU. When the analog input sensor signal is out of range, the I/O MONITOR function shows FAILSAFE sensor-to-target status.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - OTHER FUNCTIONS

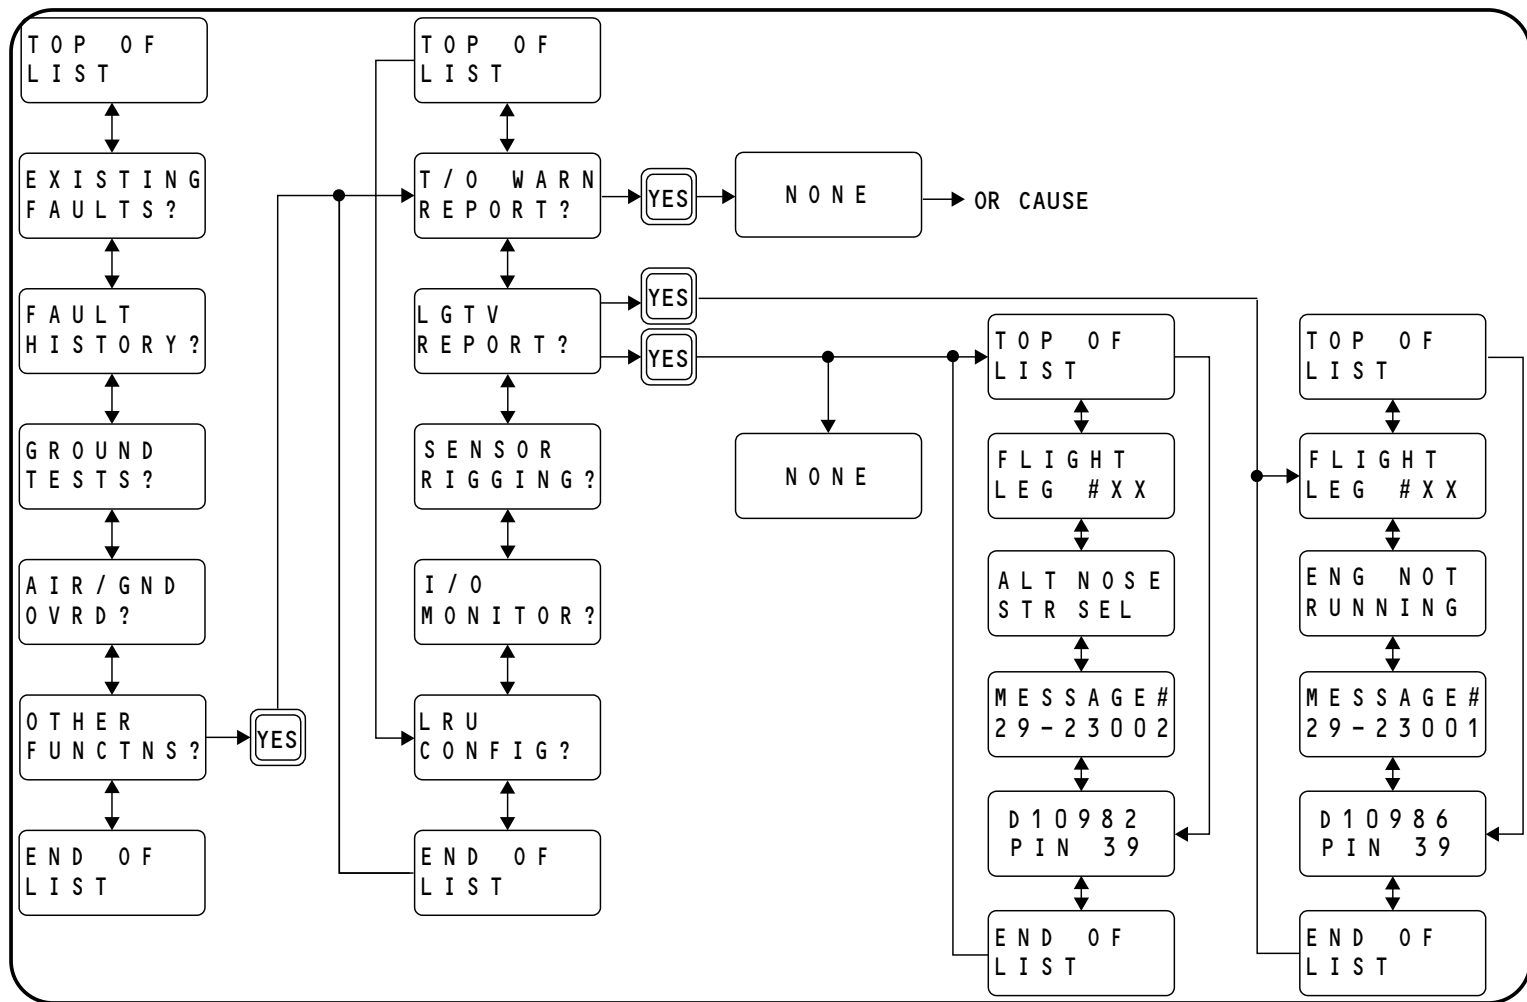

M84936 S0004627801\_V1

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - OTHER FUNCTIONS 1


32-09-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - OTHER FUNCTIONS

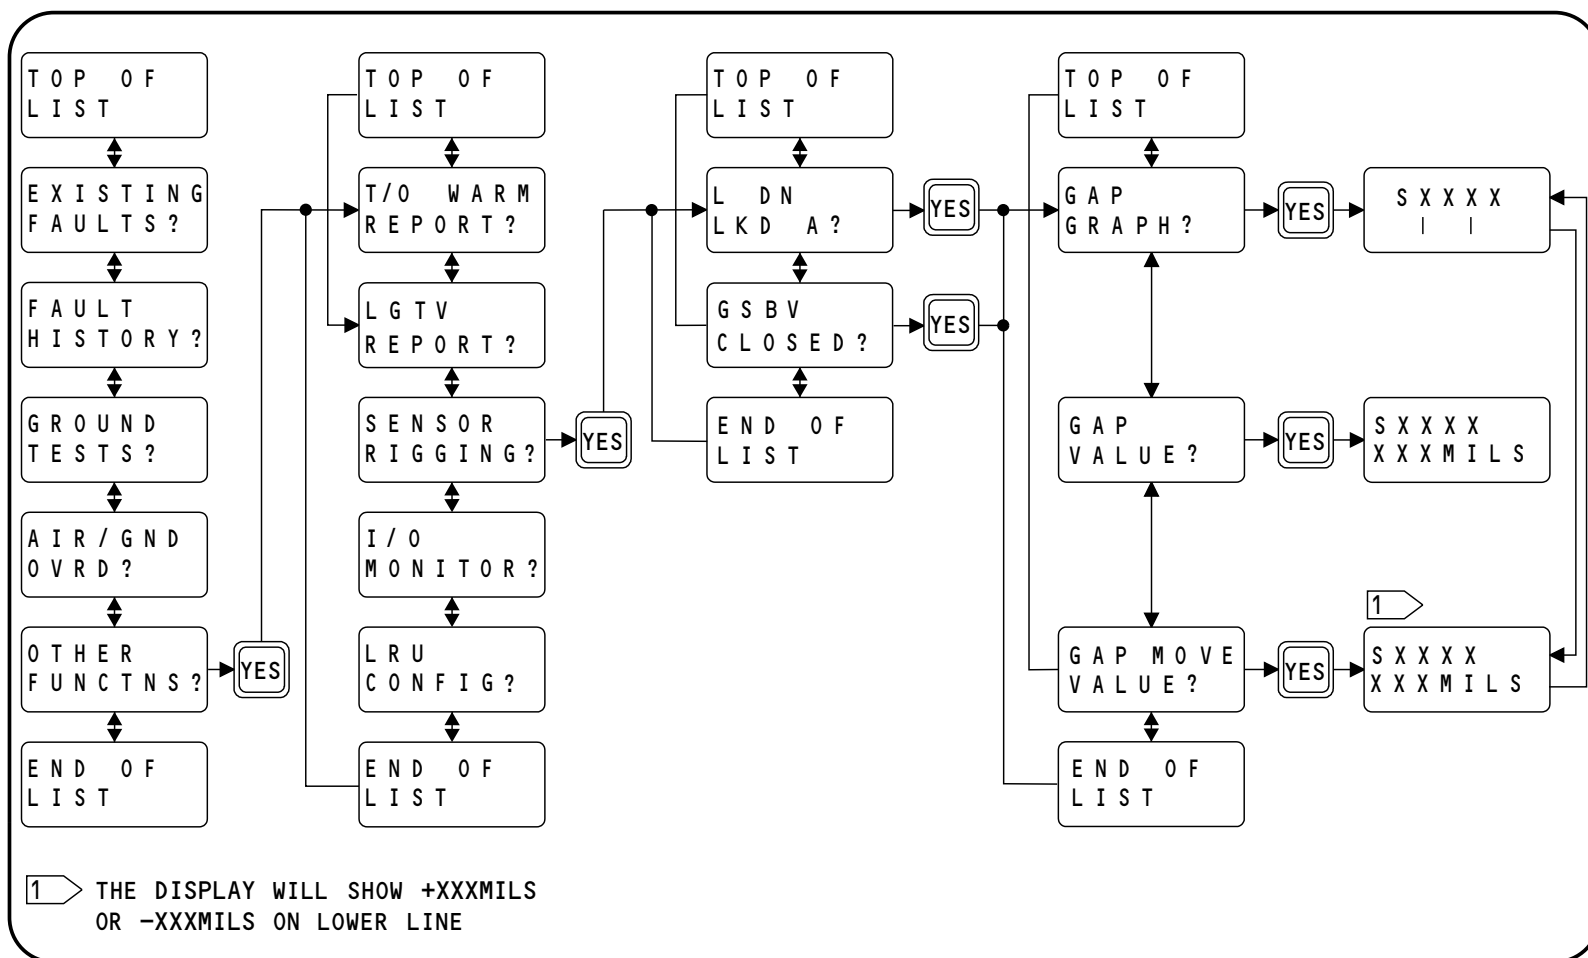

2077970 S0000435781\_V1

LANDING GEAR - AIR/GROUND SYSTEM - PSEU BITE - OTHER FUNCTIONS 2


32-09-00-010

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

32-09-00

D633A101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

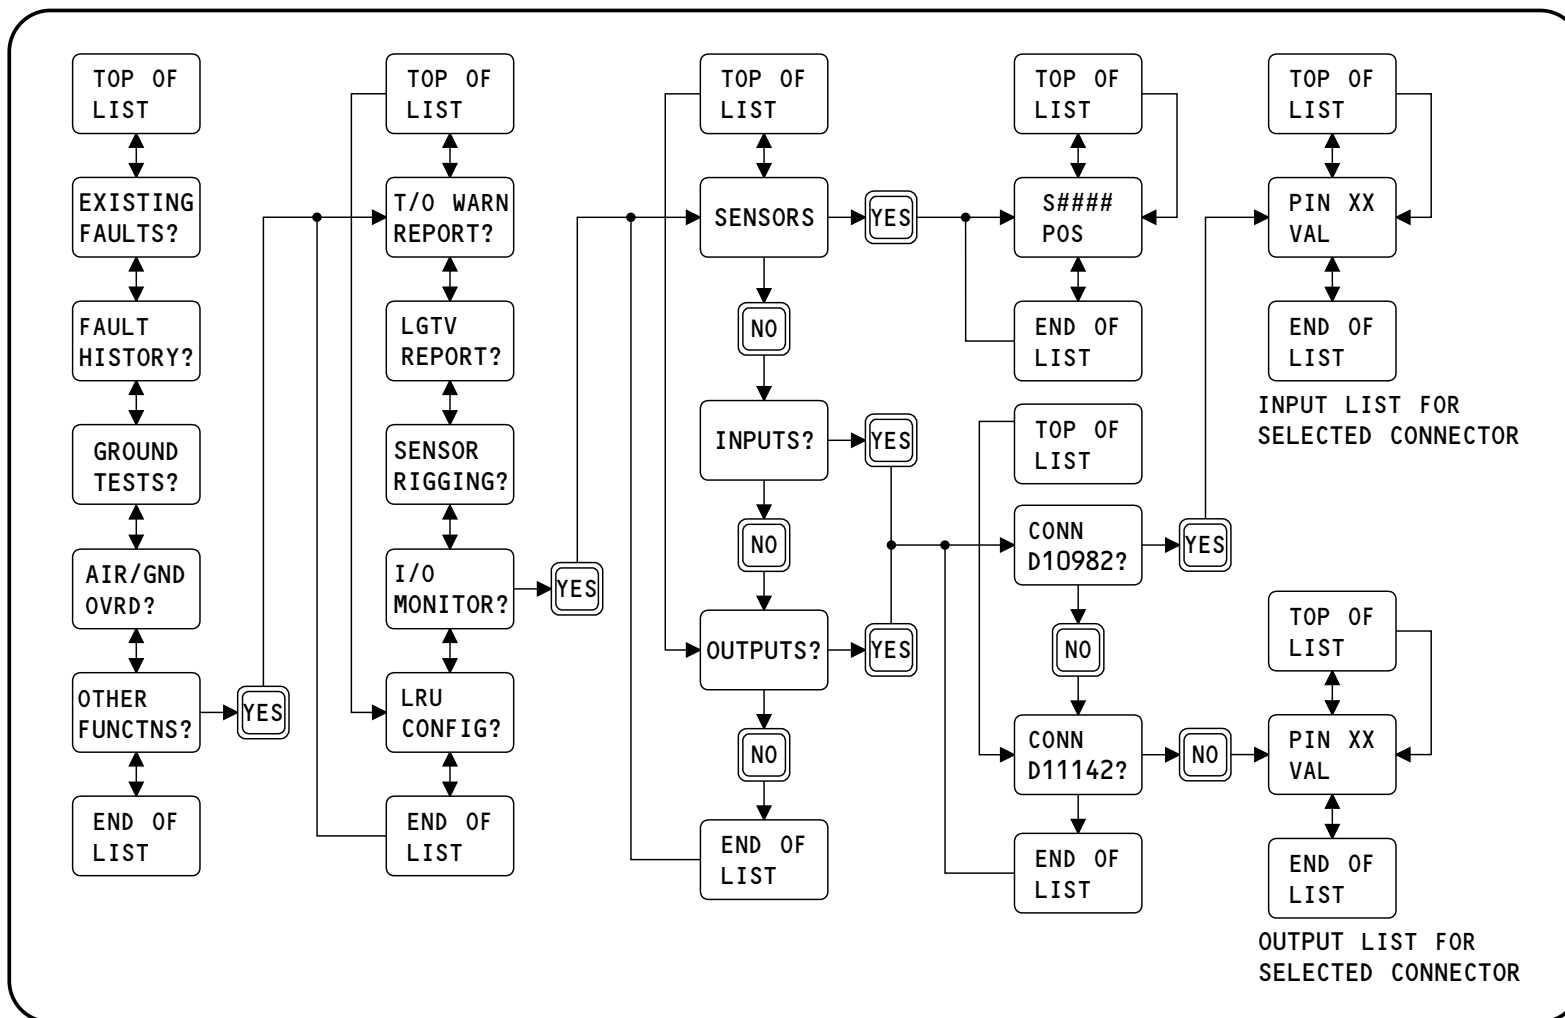

### LANDING GEAR - AIR/GROUND SYSTEM - PSEU BITE - OTHER FUNCTIONS 3

Page 49  
Oct 15/2021

## AIR/GROUND SYSTEM - TRAINING INFORMATION POINT - OTHER FUNCTIONS

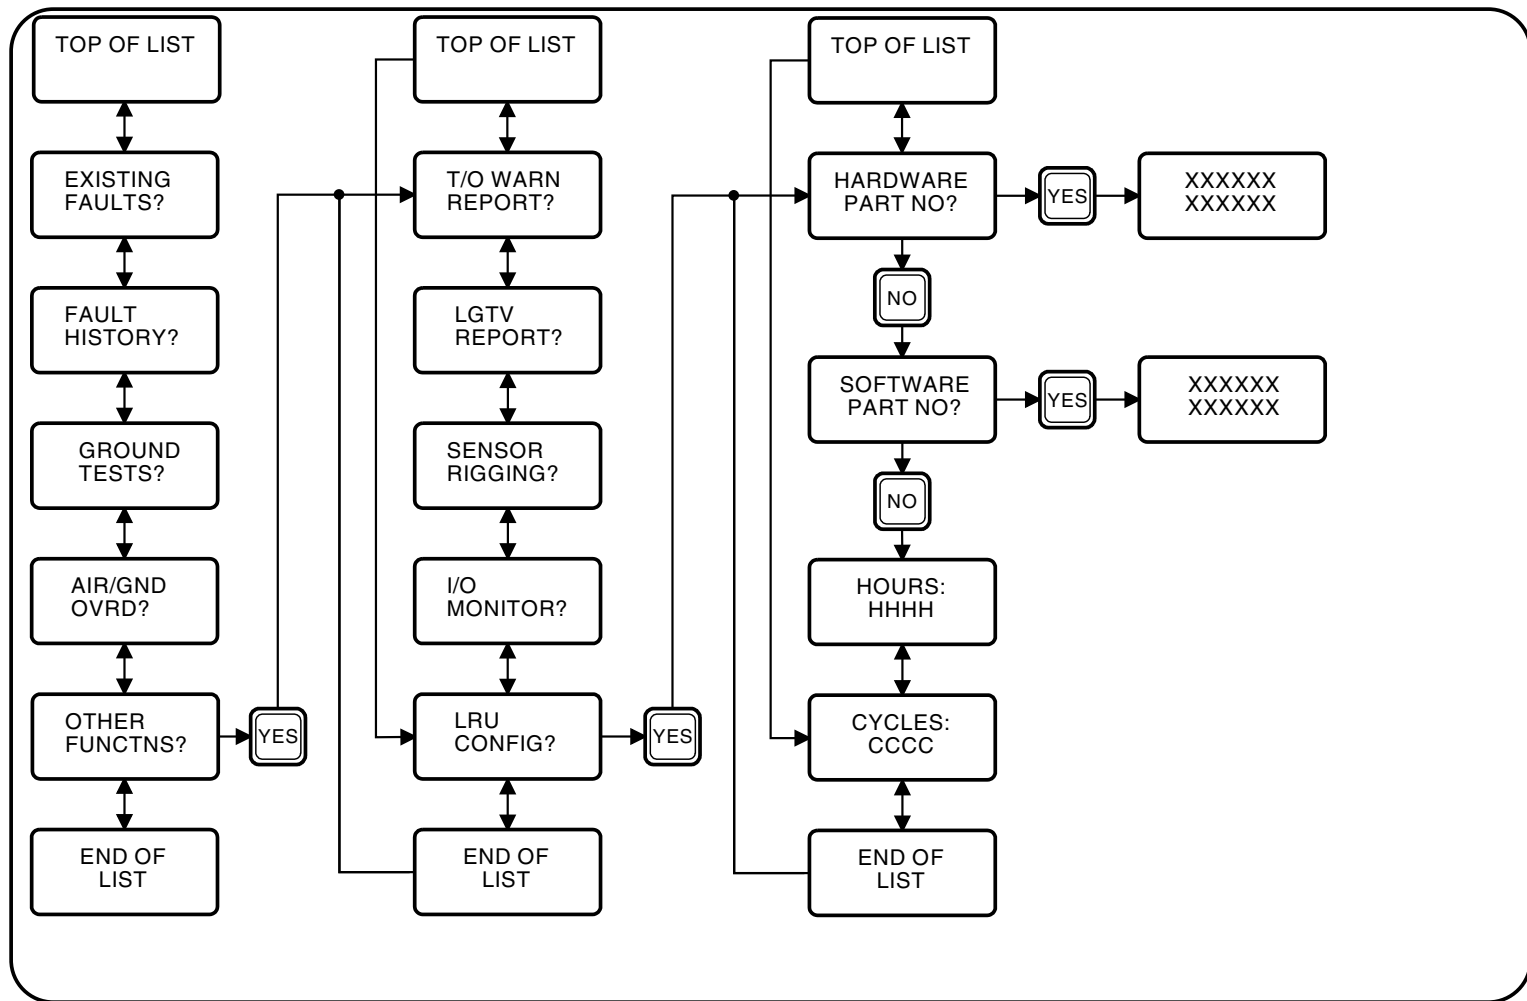

2089289 S0000440725\_V2

## LANDING GEAR - AIR/GROUND SYSTEM - PSEU BITE - OTHER FUNCTIONS 4

32-09-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## MAIN LANDING GEAR AND DOORS - GENERAL DESCRIPTION

### General

The two main landing gear (MLG) absorbs landing forces and holds most of the airplane weight when the airplane is on the ground. The main landing gear also transmits the braking forces to the airplane structure.

The main landing gear doors open to permit gear operation. They close to aerodynamically seal the main landing gear wheel well.

### Main Landing Gear Components

Each main landing gear has two wheel assemblies.

Each main landing gear has these components:

- Shock strut
- Drag strut
- Side strut
- Gas and oil charging valves
- Walking beam
- Reaction link
- Torsion links
- Shimmy damper
- Axle assembly
- Jack pad
- MLG doors
- MLG wheel well seals.

### Shock Strut

The main gear shock strut is the primary supporting member of the landing gear. The shock strut consist of an integral drag strut, and an outer and inner cylinder. When the shock strut retracts or extends it rotates about two trunnion bearings and pins at the top of the outer shock strut. Each pin extends through a trunnion bearing and support in the wing and beam assembly. Trunnion bolts keep the trunnion pins from backing out during landing gear operation.

### Drag Strut

The drag strut stabilizes the shock strut in a fore and aft direction. The drag strut is an integral part of the shock strut.

### Side Strut

The side strut holds the main landing gear in the extended position.

The side strut consists of an upper and lower side strut, hinged near the center. The lower end of the lower side strut connects to the shock strut. The upper end of the upper side strut connects to the reaction link. The side strut folds about the hinge when the gear retracts.

### Gas and Oil Charging Valves

The shock strut uses hydraulic fluid and compressed dry air or nitrogen to control the shock strut action. The gas charging valve allows for pressurization of the shock strut. The oil charging valve allows for hydraulic servicing of the shock strut.

### Walking Beam

The walking beam decreases the forces that go to the structure during actuator operations.

### Reaction Link

The reaction link transfers most of the side loads from the landing gear to the upper end of the shock strut.

The reaction link is the upper member of a space frame that consists of these components:

- Shock strut
- Side strut
- Reaction link.

The outboard end of the reaction link connects to the shock strut. The inboard end connects to the structure at the main gear uplock brackets.

# 32-10-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## MAIN LANDING GEAR AND DOORS - GENERAL DESCRIPTION

### Torsion Links

The torsion links prevent the inner shock strut from rotation in the outer shock strut. This also permits movement up and down of the inner shock strut in the outer shock strut.

The torsion links consist of two parts, an upper and lower link connected in the center. The upper end of the upper link connects to the outer shock strut. The lower end of connects to the inner shock strut. A shimmy damper connects to the lower link.

### Shimmy Damper

The main gear shimmy damper decreases vibration between the inner and outer cylinders during high speed taxi and heavy brake use.

### Axle Assembly

The main landing gear axle attaches to the bottom of the inner cylinder. You can remove and replace the axle and brake sleeve if they are damaged.

### Jack Pad

A jack pad on the bottom of the shock strut lets you move the inner cylinder up for wheel and tire replacement.

### MLG Doors

These are the three doors for each main landing gear:

- Outer door
- Center door
- Inner door.


The main landing gear doors cover the opening in the wing for the shock strut when the main landing gear retracts.

### MLG Wheel Well Seals (Not Shown)

There are no wheel well doors. The blade-type seals around the openings in the bottom of the main landing gear wheel well (not shown) make an aerodynamic seal around the outboard tire when the main landing gear retracts.

The outboard surface of the outboard wheels operate as aerodynamic covers for the main gear wheel when the main landing gear retracts.

# MAIN LANDING GEAR AND DOORS - GENERAL DESCRIPTION

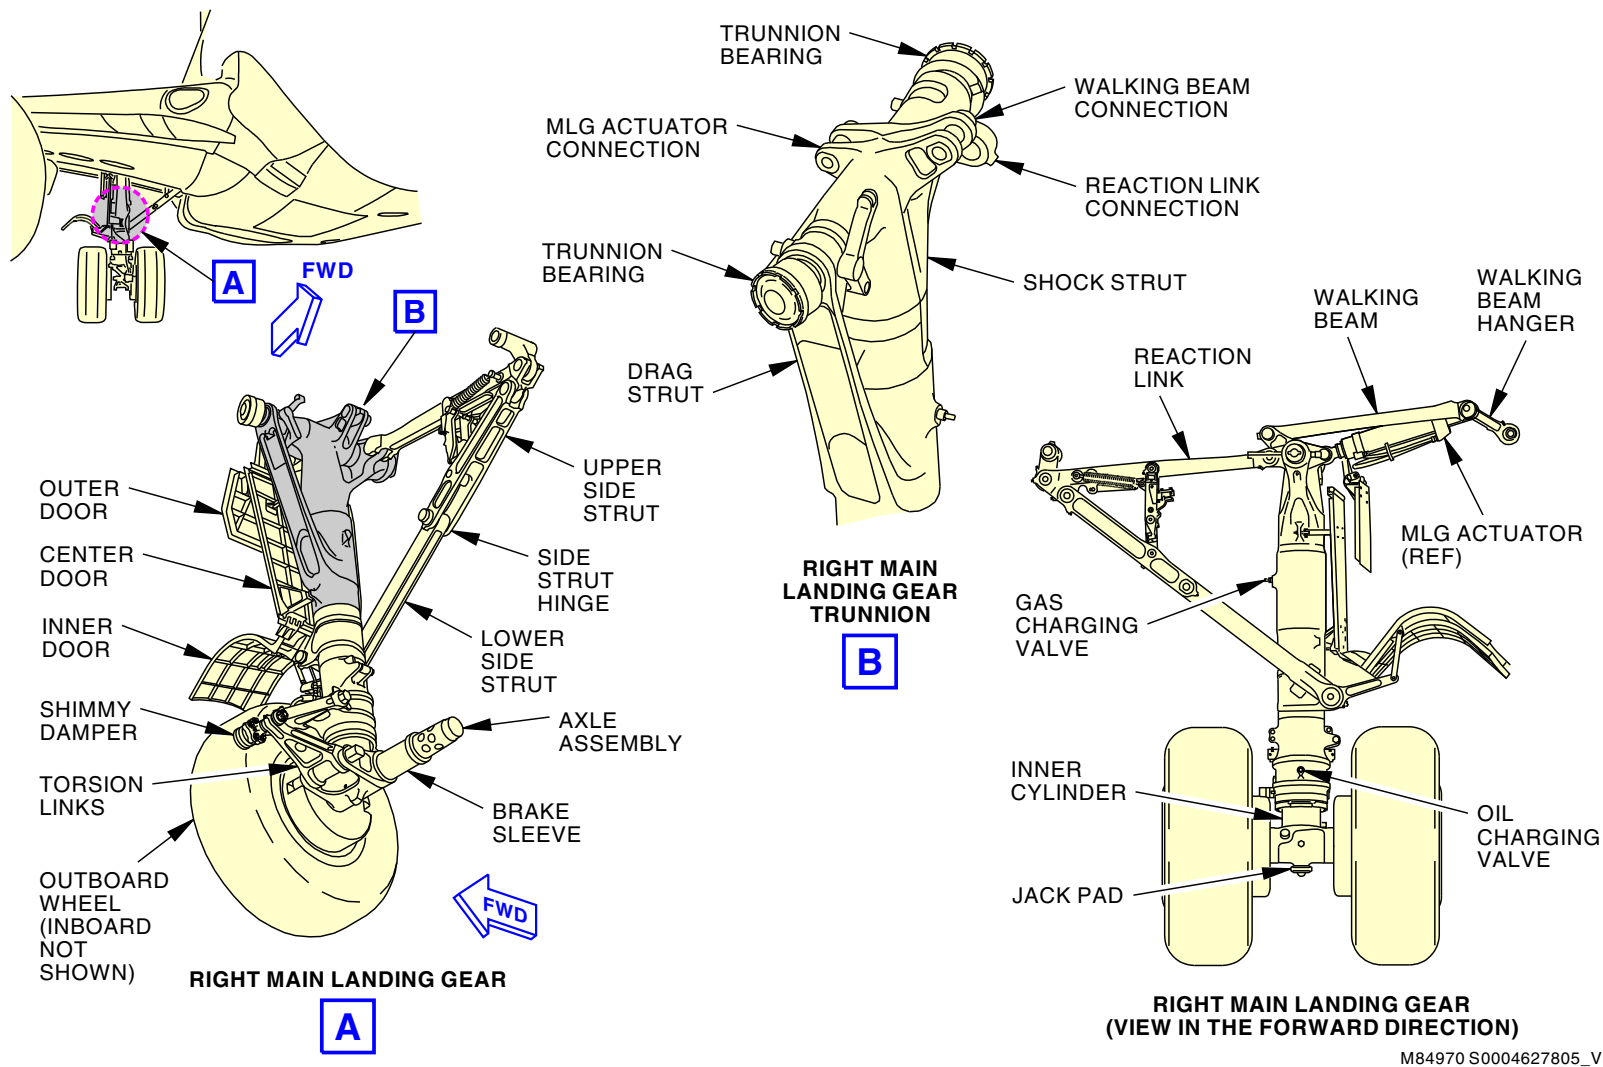

M84970 S0004627805\_V3

## MAIN LANDING GEAR AND DOORS - GENERAL DESCRIPTION

32-10-00



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-10-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## MAIN LANDING GEAR AND DOORS - SHOCK STRUT SEALS

### Purpose

The main landing gear shock struts are air-oil shock absorbers. They have an inner cylinder that moves in an outer cylinder. The seals provide an air-oil seal between the two cylinders.

### Location

A static and a dynamic seal between the inner and outer cylinders keep the mixture of nitrogen and hydraulic fluid in the shock strut.

### Physical Description

The seals are an elastomer type seal.

### Functional Description

There are two spare static seals and two spare dynamic seals in the shock strut. These let you remove and replace defective seals without removal of the inner cylinder.

The upper bearing carrier (not shown) and the lower bearing carrier hold the active and spare seals.

The excluder ring protects the spare seals from external contamination and ozone damage.

The scraper ring protects the inner and outer strut components from unwanted material.

The gland nut and retainer bolt hold the lower bearing carrier in-place.

### Training Information Point

Use plastic tools when you remove and install the shock strut seals to prevent damage to the inner cylinder.

Measure the distance the gland nut extends below the outer cylinder before and after you remove and install the gland nut. If the distance is larger after installation than it was before, there is an obstruction that prevents proper gland nut installation.



**WARNING**

DO NOT LOOSEN THE VALVE BODY UNLESS YOU DEFLATE THE SHOCK STRUT FULLY. AIR PRESSURE CAN BLOW THE VALVE BODY OUT AND CAUSE INJURY TO PERSONNEL.



**WARNING**

YOU MUST KEEP THE CHARGING VALVE OPEN. PRESSURE INSIDE THE STRUT CAN CAUSE A LOOSE GLAND NUT TO BLOW OFF AND CAUSE INJURY TO PERSONNEL.



**WARNING**

WHEN AN AIRPLANE LOWERS RAPIDLY, IT CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.



**CAUTION**

YOU MUST BE VERY CAREFUL NOT TO CAUSE DAMAGE TO THE INNER CYLINDER. NICKS OR SCRATCHES ON THE INNER CYLINDER WILL CAUSE DAMAGE TO THE CENTERING CAM AND THE SEALS. THIS DAMAGE WILL OCCUR AS THE SEALS MOVE OVER THE DAMAGED SURFACE OF THE INNER CYLINDER.



**CAUTION**

HAVE EQUIPMENT OR PERSONNEL READY TO SUPPORT THE WEIGHT OF THE INNER CYLINDER AS THE CYLINDER COMES OUT. THE INNER CYLINDER CAN BE DAMAGED IF YOU DROP IT.



**CAUTION**

THE GLAND NUT AND THE OUTER CYLINDER MAY HAVE BEEN REWORKED (OVERSIZE). MAKE SURE YOU IDENTIFY THEM AS REWORKED (OVERSIZE) AND KEPT AS A SET.

# 32-10-00

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details


## MAIN LANDING GEAR AND DOORS - SHOCK STRUT SEALS

**CAUTION**




DO NOT APPLY VASELINE OR PETROLATUM TO THE SEALS. THIS CAN CAUSE THE SEAL MATERIAL TO BECOME LARGER. DAMAGE TO THE SEALS CAN OCCUR.

**NOTE:** Make sure your hands are clean when you handle the elastomer seals. Some greases can cause the elastomer seals to swell too much. This can cause the seals to leak.

MAIN LANDING GEAR AND DOORS - SHOCK STRUT SEALS

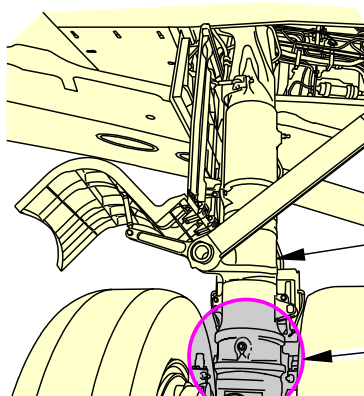

LEFT MAIN LANDING GEAR  
(LOOKING FORWARD)

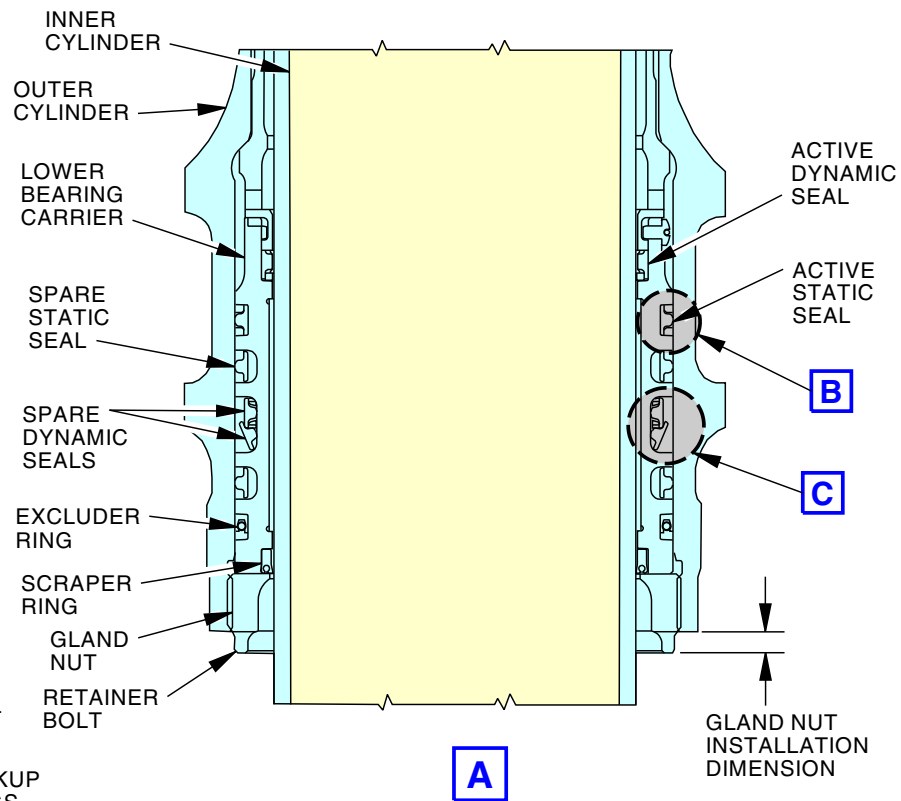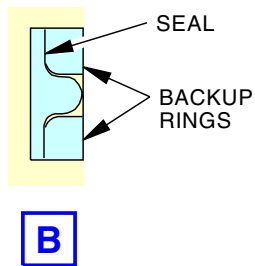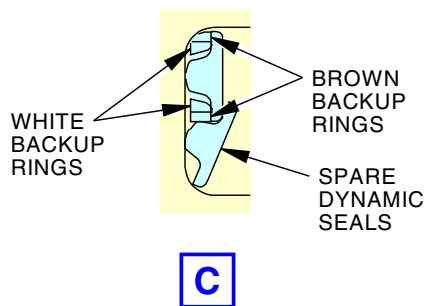

M84971 S0004627807\_V2

MAIN LANDING GEAR AND DOORS - SHOCK STRUT SEALS

**32-10-00**

32-10-00-002

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## MAIN LANDING GEAR AND DOORS - MAIN LANDING GEAR DOORS

### General

The MLG shock strut doors open to let the main landing gear extend and they aerodynamically seal the opening in the lower surface of the wing and the wing-to-body fairing when the main landing gear retracts.

The main landing gear doors have these components:

- Outer door
- Center door
- Inner door.

### Location

The outer door connects by a hinge to the airplane wing structure along the upper edge of the door.

The center door connects to the shock strut by two adjustable tie rods at the top and brackets at the bottom.

The inner door connects by a hinge to the bottom of the center door.

### Physical Description

The main landing gear doors are made of aluminum alloy materials.

### Functional Description

The outer door connects to an adjustable pushrod that also connects to the shock strut trunnion. As the gear retracts (or extends), the trunnion pulls (or pushes) the pushrod and seals the outer door against the wing opening.

The center door connects to the shock strut and does not move. Tie rods at the top allow for adjustment.

The inner door connects to an adjustable pushrod that also connects to the lower side strut. As the gear retracts (or extends), the side strut pulls (or pushes) the pushrod and seals the inner door against the wheel well opening and main landing gear tire.

### Training Information Point

Be careful when you operate the landing gear during door adjustments.



**WARNING** MAKE SURE THAT PERSONS AND EQUIPMENT ARE CLEAR OF THE RETRACTION PATH FOR THE APPLICABLE MAIN LANDING GEAR. INJURY TO PERSONS OR DAMAGE TO EQUIPMENT CAN OCCUR IF THE AREA IS NOT CLEAR.



**NOTE:** A change in the adjustment of the center door can have an effect on the adjustment of the outer door.

Be careful when you move around the inner door. The sharp point on the inner door can cause injury to persons.



**CAUTION** MAKE SURE THAT THE STRUT DOORS ARE CLEAR OF THE WING PANELS BEFORE YOU FULLY RETRACT THE GEAR. THE STRUT DOORS CAN CAUSE DAMAGE TO THE WING PANELS IF THE DOORS ARE NOT CLEAR.

# MAIN LANDING GEAR AND DOORS - MAIN LANDING GEAR DOORS

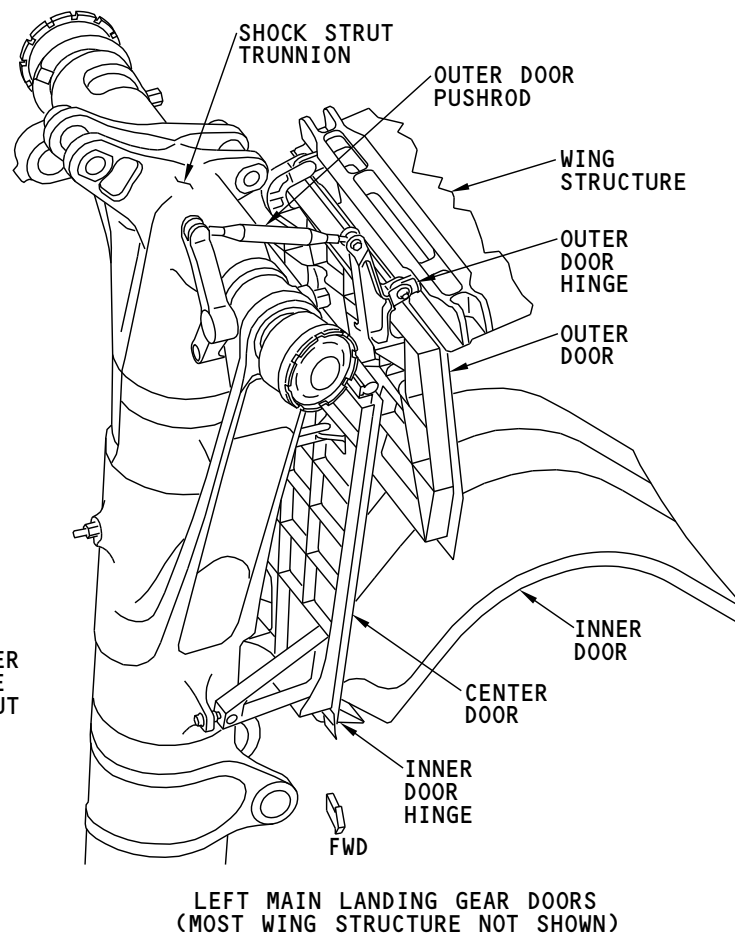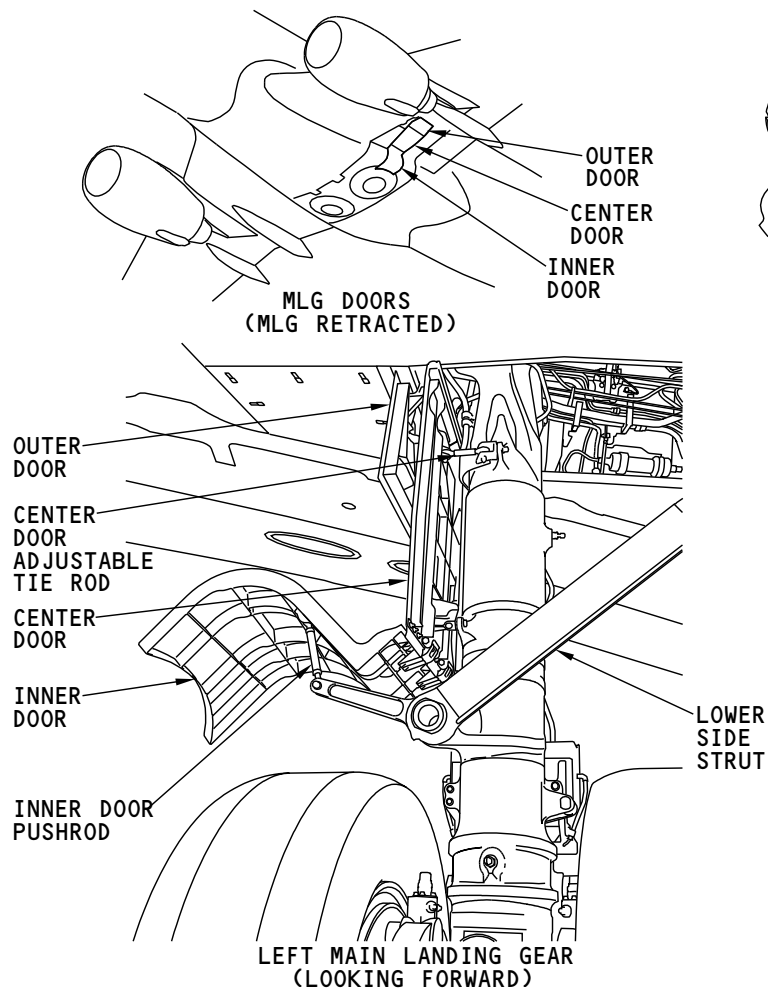

M84972 S0004627809\_V1

# MAIN LANDING GEAR AND DOORS - MAIN LANDING GEAR DOORS

32-10-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**MAIN LANDING GEAR AND DOORS - WHEEL WELL BLADE SEALS****Purpose**

There are no wheel well doors. The outboard surface of the outboard wheels have aerodynamic covers over the main landing gear wheel well.

**Location**

The wheel well blade seals attach around the wheel openings in the bottom of the main landing gear wheel well. The seals attach to the airplane structure with bolts.

**Physical Description**




The wheel well blade seals consist of series of rubber blade-type segments. The segments are held in place by a series of seal retainers.

**Functional Description**

The wheel well blade seal system supplies an aerodynamic seal around the outboard tire when the main landing gear retracts.

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

MAIN LANDING GEAR AND DOORS - WHEEL WELL BLADE SEALS

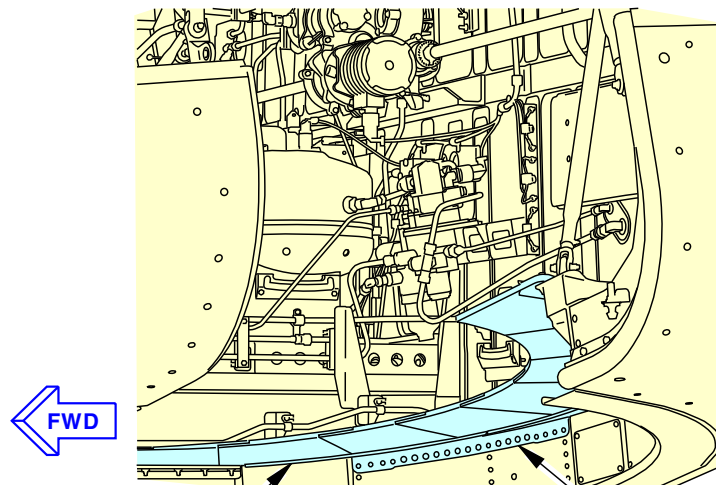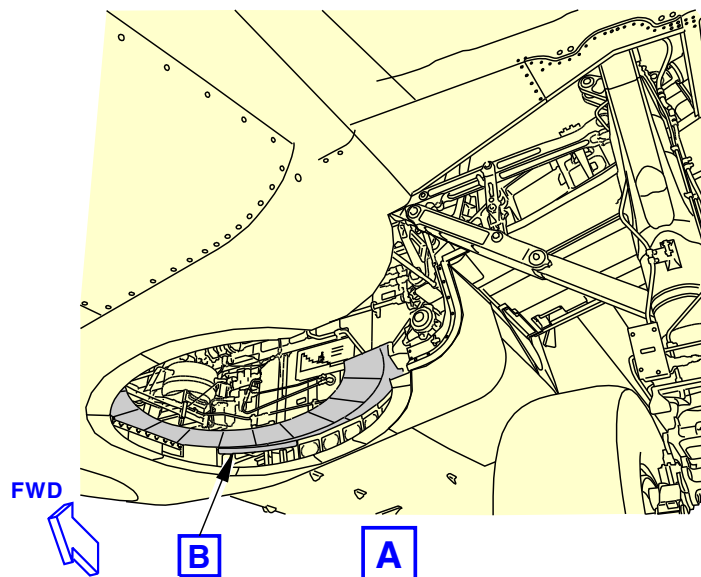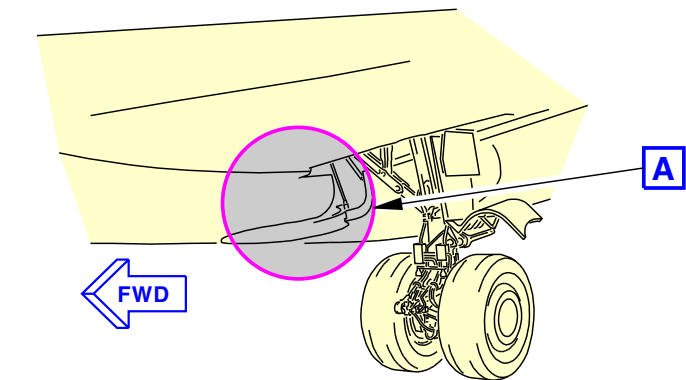


WHEEL WELL  
BLADE SEALS  
(16 LOCATIONS)

B

SEAL RETAINER  
(LOWER)

WHEEL WELL  
BLADE SEAL

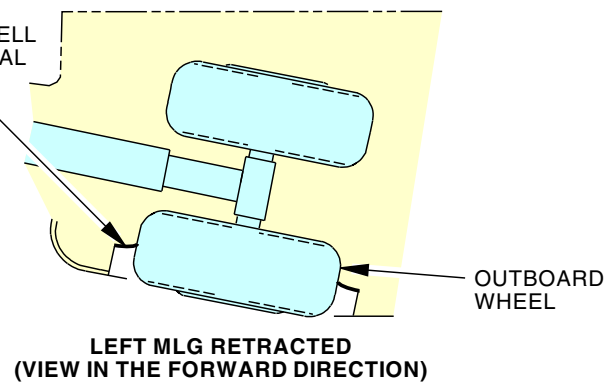

M84973 S0004627811\_V2

MAIN LANDING GEAR AND DOORS - WHEEL WELL BLADE SEALS

## MAIN LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 1

**General**

The main landing gear shock strut uses hydraulic fluid and compressed dry air or nitrogen to control the shock strut action. The gas charging valve lets you pressurize the shock strut. The oil charging valve permits hydraulic servicing of the shock strut.

The gas charging valve is on the inboard side of the main landing gear shock strut.

The oil charging valve is on the aft side of the main landing gear shock strut.

See the maintenance manual, servicing, for more information about servicing the main landing gear shock strut.

**Training Information Point**

Obey this warning when you deflate the shock strut:

**WARNING**

CLEAR THE AREA BELOW THE WING BEFORE YOU DEFLATE THE SHOCK STRUT. IF YOU DEFLATE THE SHOCK STRUT, THE WING TIP CAN MOVE DOWN AND CAN CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.


**NOTE:** Fluid in the shock strut will have bubbles when you release the pressure. Deflate the shock strut slowly to prevent the leakage of the fluid through the gas valve.

Obey this warning when you remove the air valve body on the shock strut:

**WARNING**

DO NOT REMOVE THE VALVE BODY UNLESS YOU DEFLATE THE SHOCK STRUT FULLY. THE AIR PRESSURE CAN BLOW THE VALVE BODY OUT AND CAUSE INJURY TO PERSONS.

MAIN LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 1

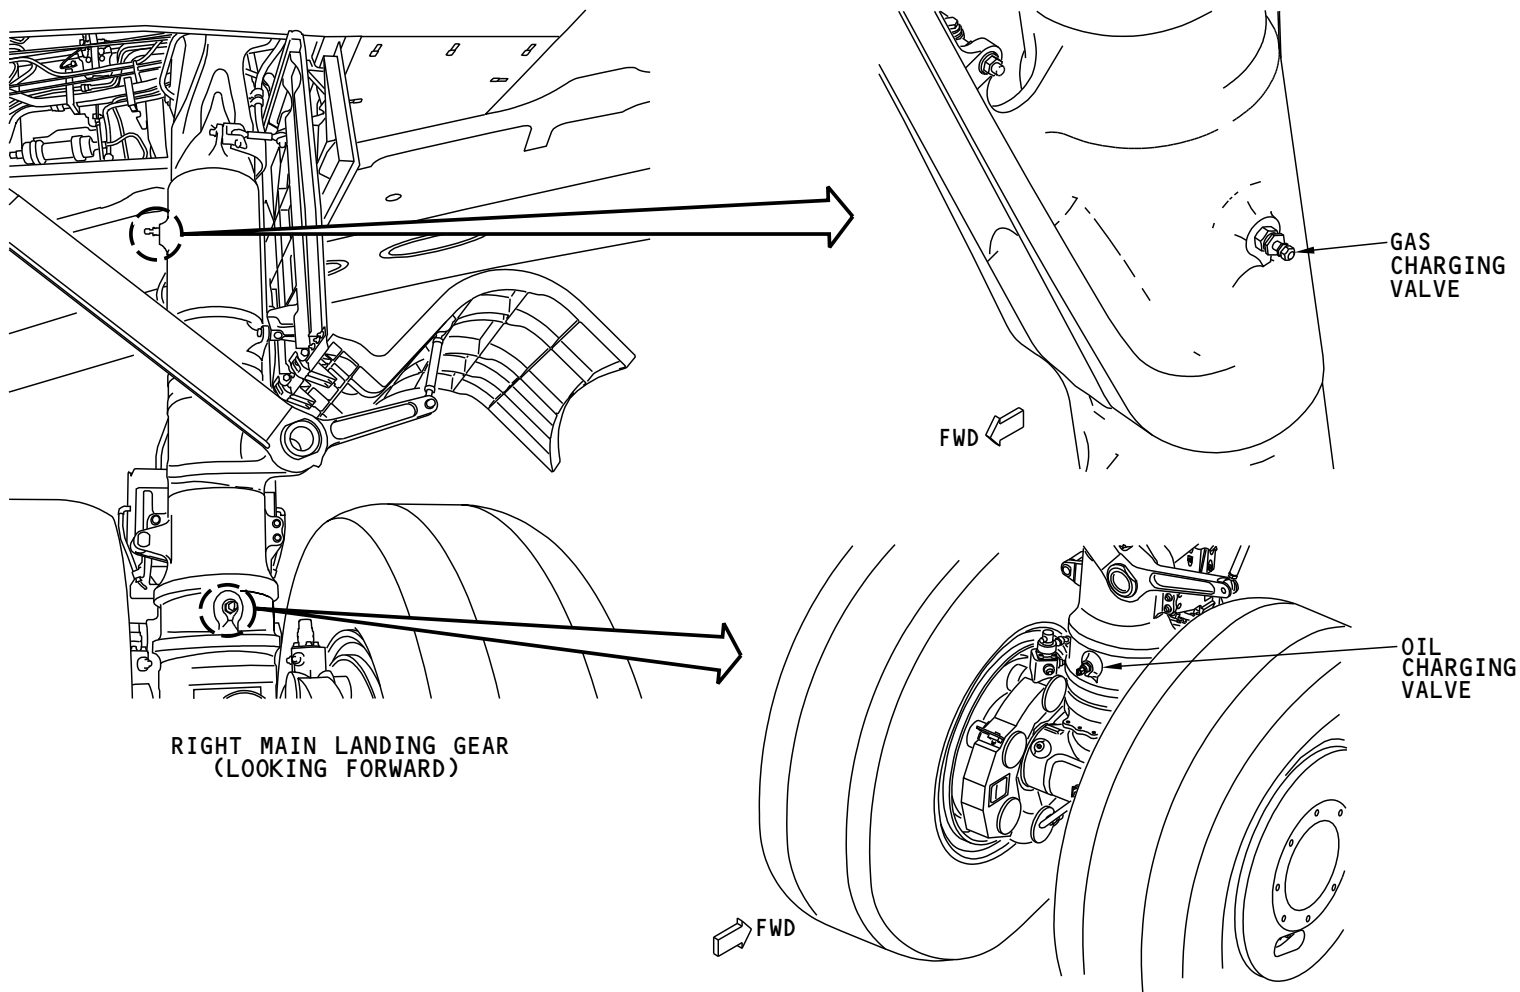

M84974 S0004627813\_V1

MAIN LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 1

32-10-00-005

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

**32-10-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## MAIN LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 2

### General

The servicing chart is on the left side of the aft bulkhead in the main landing gear wheel well.

Use BMS 3-32 Type II landing gear shock strut fluid when you add fluid to the shock strut. BMS 3-32 Type II fluid is a mixture of MIL-PRF-5606 hydraulic fluid and additives.

You measure shock strut X dimension from the bottom face of the outer cylinder to a rectangular raised pad on the upper surface of the axle.

See the maintenance manual, servicing, for more information about servicing the main landing gear shock strut.

### Training Information Point

Release all air from the shock strut before you add shock strut fluid.



USE ONLY THE TYPE OF FLUID WHICH IS SPECIFIED IN THE TASK TO FILL THE SHOCK STRUT. IF AN INCORRECT FLUID IS USED, IT CAN CAUSE DAMAGE TO THE SEALS.

**NOTE:** It is optional to use fluid, MIL-PRF-5606 or fluid, MIL-PRF-6083 (NATO C-635) and add lubricant, lubrizol 1395 in a ratio of 41:1.



CLEAN ALL THE LEAKED HYDRAULIC FLUID FROM THE TIRES IMMEDIATELY. THE FLUID CAN CAUSE DAMAGE TO THE TIRES.



DO NOT DEFLATE THE SHOCK STRUTS IF YOU DO A GEAR RETRACTION TEST. THE SHOCK STRUTS MUST BE FILLED CORRECTLY AND NOT INFLATED ABOVE THE CORRECT PRESSURE. IF YOU DO NOT OBEY THESE INSTRUCTIONS, DAMAGE TO THE WHEEL WELL AND THE SHOCK STRUTS WILL OCCUR.



# 32-10-00

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# MAIN LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 2

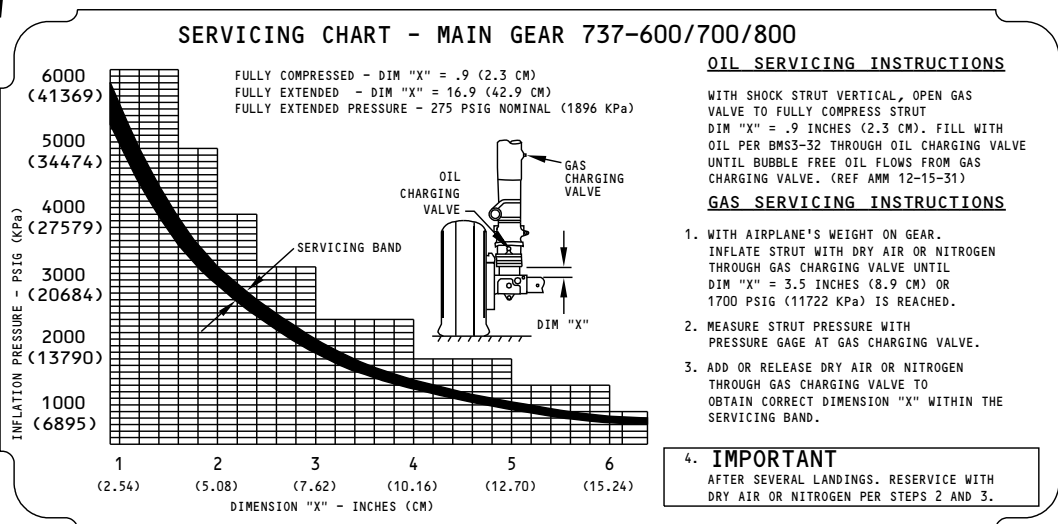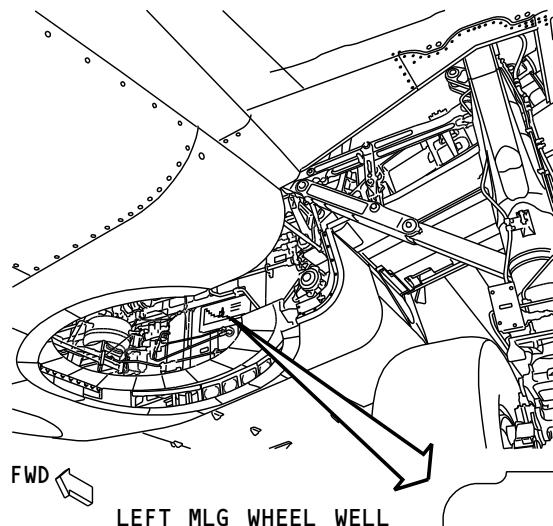

M84975 S0004627815\_V1

# MAIN LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 2

32-10-00-006

| EFFECTIVITY |
|-------------|
| SIA ALL     |

32-10-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## MAIN LANDING GEAR AND DOORS - MAIN GEAR SHIMMY DAMPER

### Purpose

The main gear shimmy damper decreases vibration between the inner and outer cylinders during high speed taxi and heavy brake use.

### Location

The body of the main gear shimmy damper attaches to the forward end of the upper torsion link.

### Physical Description

The main gear shimmy damper contains these components:

- Housing assembly
- Piston
- Bleed plugs
- Manifold assembly
- Inlet check valve
- Relief valve
- Compensator.

### Functional Description

Vibration between the inner and outer cylinders causes the inner cylinder to turn inside the outer cylinder. This causes the main gear shimmy damper piston to move from side to side inside the housing assembly.

When the piston moves, hydraulic fluid moves through the damping orifices. This decreases piston movement. The damper connects to the return line of the main landing gear actuator.

The compensator maintains system pressure between 18 and 33 psi.

The inlet check valve controls the hydraulic fluid flow rate into the damper to 70 cu in/min at 50 psi. It also controls the fluid that leaves the damper to 14 cu in/min at 3750 psi.

The relief valve protects the compensator if the pressure increases to more than 240 psi.

### Training Information Point

Use the two bleed plugs on the main gear shimmy damper to remove trapped air when you install a new damper.

**NOTE:** Hydraulic return pressure that remains after you have depressurized system A will force fluid out the bleed port when you remove the bleed plug.



**WARNING**

KEEP PERSONS AND EQUIPMENT CLEAR OF THE FLIGHT CONTROL SURFACES, THE THRUST REVERSERS, AND THE LANDING GEAR. THESE COMPONENTS CAN MOVE SUDDENLY WHEN YOU SUPPLY HYDRAULIC POWER. THIS CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.


# 32-10-00

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# MAIN LANDING GEAR AND DOORS - MAIN GEAR SHIMMY DAMPER

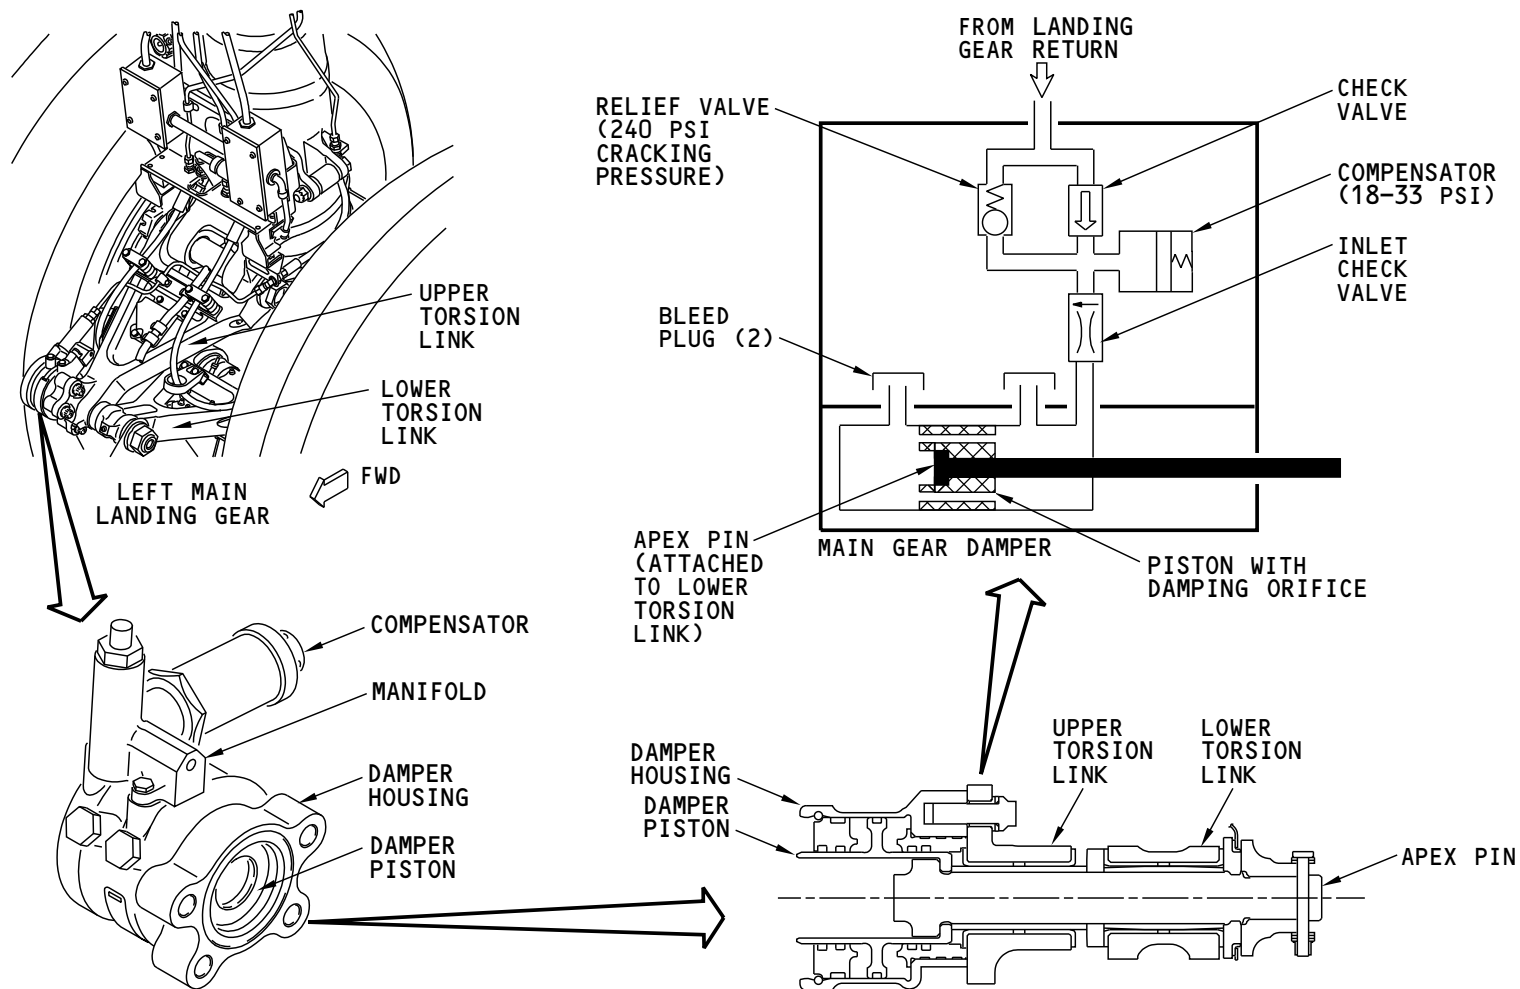

M84891 S0004627817\_V1

# MAIN LANDING GEAR AND DOORS - MAIN GEAR SHIMMY DAMPER

32-10-00

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## NOSE LANDING GEAR AND DOORS - GENERAL DESCRIPTION

### General

The nose landing gear absorbs landing forces and holds the forward part of the airplane weight when the airplane makes a landing.

The nose landing gear doors open to permit gear operation. They close to aerodynamically seal the nose landing gear wheel well.

### Nose Landing Gear Components

The nose landing gear has two wheel assemblies.

The nose landing gear has these components:

- Shock strut
- Drag strut
- Lock link
- Gas and oil charging valves
- Torsion links
- Integral axle
- Tow fitting
- Jack pad
- NLG doors.

### Shock Strut

The nose gear shock strut supports the nose of the airplane. The shock strut consists of an outer and inner cylinder. The shock strut also has two centering cams, one in the outer cylinder and one in the inner cylinder. The center cams hold the nose wheels in a straight line position for gear extension or retraction.

When the shock strut retracts or extends, it rotates around two trunnion bearing and pins at the top of the outer drag strut. Each pin extends through a trunnion bearing and support in the nose wheel well aft lower side wall structure. Trunnion bolts keep the trunnion pins from backing out during landing gear operation.

The right trunnion pin also has a hydraulic swivel assembly connected. This permits the use of rigid hydraulic lines.

The left trunnion pin is hollow. Two nose wheel steering cables go through the pin and the left nose wheel aft lower side wall structure for nose wheel steering control.

### Training Information Point

Obey this caution when you operate the nose gear steering:

|                                                                                                       |                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br><b>CAUTION</b> | <p>THE NOSE GEAR SHOCK STRUT MUST BE COMPRESSED AT LEAST 2.1 INCHES BEFORE YOU OPERATE THE NOSE WHEEL STEERING. IF THE SHOCK STRUT IS NOT COMPRESSED, THE CENTERING CAMS CAN BE DAMAGED.</p> |
|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### Drag Strut

A drag strut holds the nose gear in the extended or retracted position.

The drag strut consists of an upper and lower link, hinged in the center. The drag strut folds about the hinge during landing gear operation. The lower end of the lower drag strut connects to the shock strut outer cylinder. The upper end of the upper drag strut connects to the nose wheel well forward upper side wall structure.

When the landing gear operates, the drag strut rotates around two trunnion pins at the top of the upper drag strut. Each pin extends through a trunnion bearing and support in the nose wheel well forward upper side wall structure. Trunnion bolts keep the trunnion pins from backing out during landing gear operation.

### Lock Mechanism

A lock mechanism moves to an over-center position to lock the drag strut in the up and the down positions. The lock mechanism also stabilizes the drag strut in the fore and aft direction. The lock mechanism consists of two lock links, two springs, and a lock actuator.



## NOSE LANDING GEAR AND DOORS - GENERAL DESCRIPTION

### Lock actuator

The lock actuator moves the lock mechanism to the locked position when the nose landing gear is up or down.

### Nose Landing Gear Actuator

The nose landing gear actuator supplies the force to retract and extend the nose landing gear.

### Gas and Oil Charging Valves

The shock strut uses hydraulic fluid and compressed dry air or nitrogen to control the shock strut action. The gas charging valve lets you pressurize the shock strut. The oil charging valve permits hydraulic servicing of the shock strut.

### Torsion Links

The torsion links prevent the inner shock strut from rotation in the outer shock strut except when a steering force is applied. The torsion links also permit movement up and down of the inner shock strut in the outer shock strut.

The torsion links consist of an upper and lower link connected at the aft ends. The forward end of the upper link connects to a steering collar on the outer shock strut. The forward end of the lower link connects to the inner shock strut. Steering forces applied to the upper torsion link by the steering system are transmitted to the inner cylinder by the lower link.

You can disconnect the torsion links to let the nose landing gear move more than the normal steering limits of 78 degrees.

### Integral Axle

The nose landing gear axle attaches to the bottom of the inner cylinder. You can not remove the axle if it gets damaged.

### Jack Pad

A jack pad on the bottom of the shock strut lets you move the inner cylinder up for wheel and tire replacement.

### Tow Fitting

A tow fitting is between the nose landing gear tires.

### NLG Doors

Two doors aerodynamically seal the nose landing gear wheel well to decrease drag. The doors attach to the outboard edges of the nose landing gear wheel well. The doors connect to the shock strut and move mechanically when the nose landing gear extends or retracts.


**32-20-00**

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# NOSE LANDING GEAR AND DOORS - GENERAL DESCRIPTION

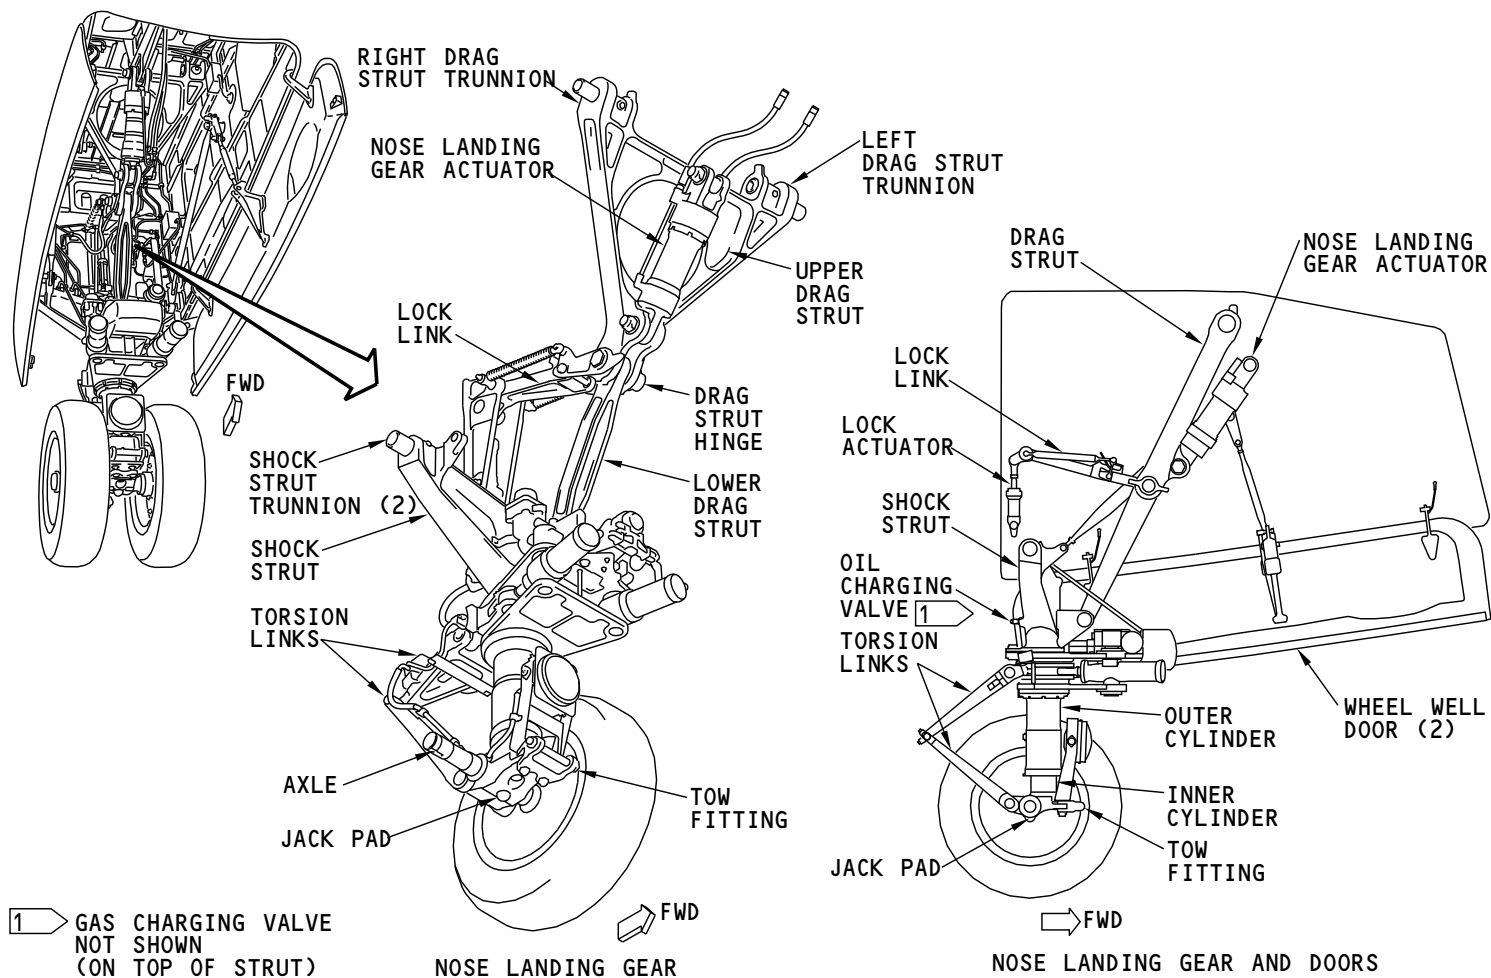

M84976 S0004627821\_V1

## NOSE LANDING GEAR AND DOORS - GENERAL DESCRIPTION

32-20-00

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-20-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## NOSE LANDING GEAR AND DOORS - SHOCK STRUT SEALS

### Purpose

The nose landing gear shock strut is an air-oil shock absorber. It has an inner cylinder that moves in an outer cylinder. The seals provide an air-oil seal between the two cylinders.

### Location

A static and a dynamic seal between the inner and outer cylinders keep the mixture of nitrogen and hydraulic fluid in the shock strut.

### Physical Description

The seals are an elastomer type seal.

### Functional Description

There are spare static and dynamic seals in the shock strut. These spare seals let you remove and replace defective seals without removal of the inner cylinder.

The upper bearing carrier (not shown) and the lower bearing carrier hold the active and spare seals.

The excluder ring (O-ring) seal protects the spare seals from external contamination and ozone damage.

The scraper ring protects the inner and outer strut components from unwanted material.

The gland nut and retainer bolt hold the lower bearing carrier.

### Training Information Point

Use plastic tools when you remove or install the shock strut seals to prevent damage to the inner cylinder.

Measure the distance the gland nut extends below the outer cylinder before and after you remove and install the gland nut. If the distance is larger after installation than it was before, there is an obstruction that prevents proper gland nut installation.



DO NOT LOOSEN THE VALVE BODY UNLESS THE SHOCK STRUT IS FULLY DEFLATED. AIR PRESSURE CAN BLOW THE VALVE BODY OUT, AND CAN CAUSE INJURY TO PERSONS.



THE CHARGING VALVE MUST STAY OPEN. INTERNAL PRESSURE CAN BLOW OUT THE GLAND NUT AND CAN CAUSE INJURY TO PERSONS.



WHEN AN AIRPLANE LOWERS RAPIDLY, IT CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.



YOU MUST BE VERY CAREFUL NOT TO CAUSE DAMAGE TO THE INNER CYLINDER. NICKS OR SCRATCHES ON THE INNER CYLINDER WILL CAUSE DAMAGE TO THE CENTERING CAM AND THE SEALS. THIS DAMAGE WILL OCCUR AS THE SEALS MOVE OVER THE DAMAGED SURFACE OF THE INNER CYLINDER.



HAVE EQUIPMENT OR PERSONNEL READY TO SUPPORT THE WEIGHT OF THE INNER CYLINDER AS THE CYLINDER COMES OUT. THE INNER CYLINDER CAN BE DAMAGED IF YOU DROP IT.



THE GLAND NUT AND THE OUTER CYLINDER MAY HAVE BEEN REWORKED (OVERSIZE). MAKE SURE YOU IDENTIFY THEM AS REWORKED (OVERSIZE) AND KEPT AS A SET.

# 32-20-00

EFFECTIVITY  
SIA ALL

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details


## NOSE LANDING GEAR AND DOORS - SHOCK STRUT SEALS

**CAUTION**

DO NOT APPLY VASELINE OR PETROLATUM TO THE SEALS BECAUSE THIS CAN CAUSE TOO MUCH SWELLING OF THE SEAL MATERIAL.

**NOTE:** Make sure your hands are clean when you handle the elastomer seals. Some greases can cause the elastomer seals to swell too much. This can cause the seals to leak.

**NOSE LANDING GEAR AND DOORS - SHOCK STRUT SEALS**

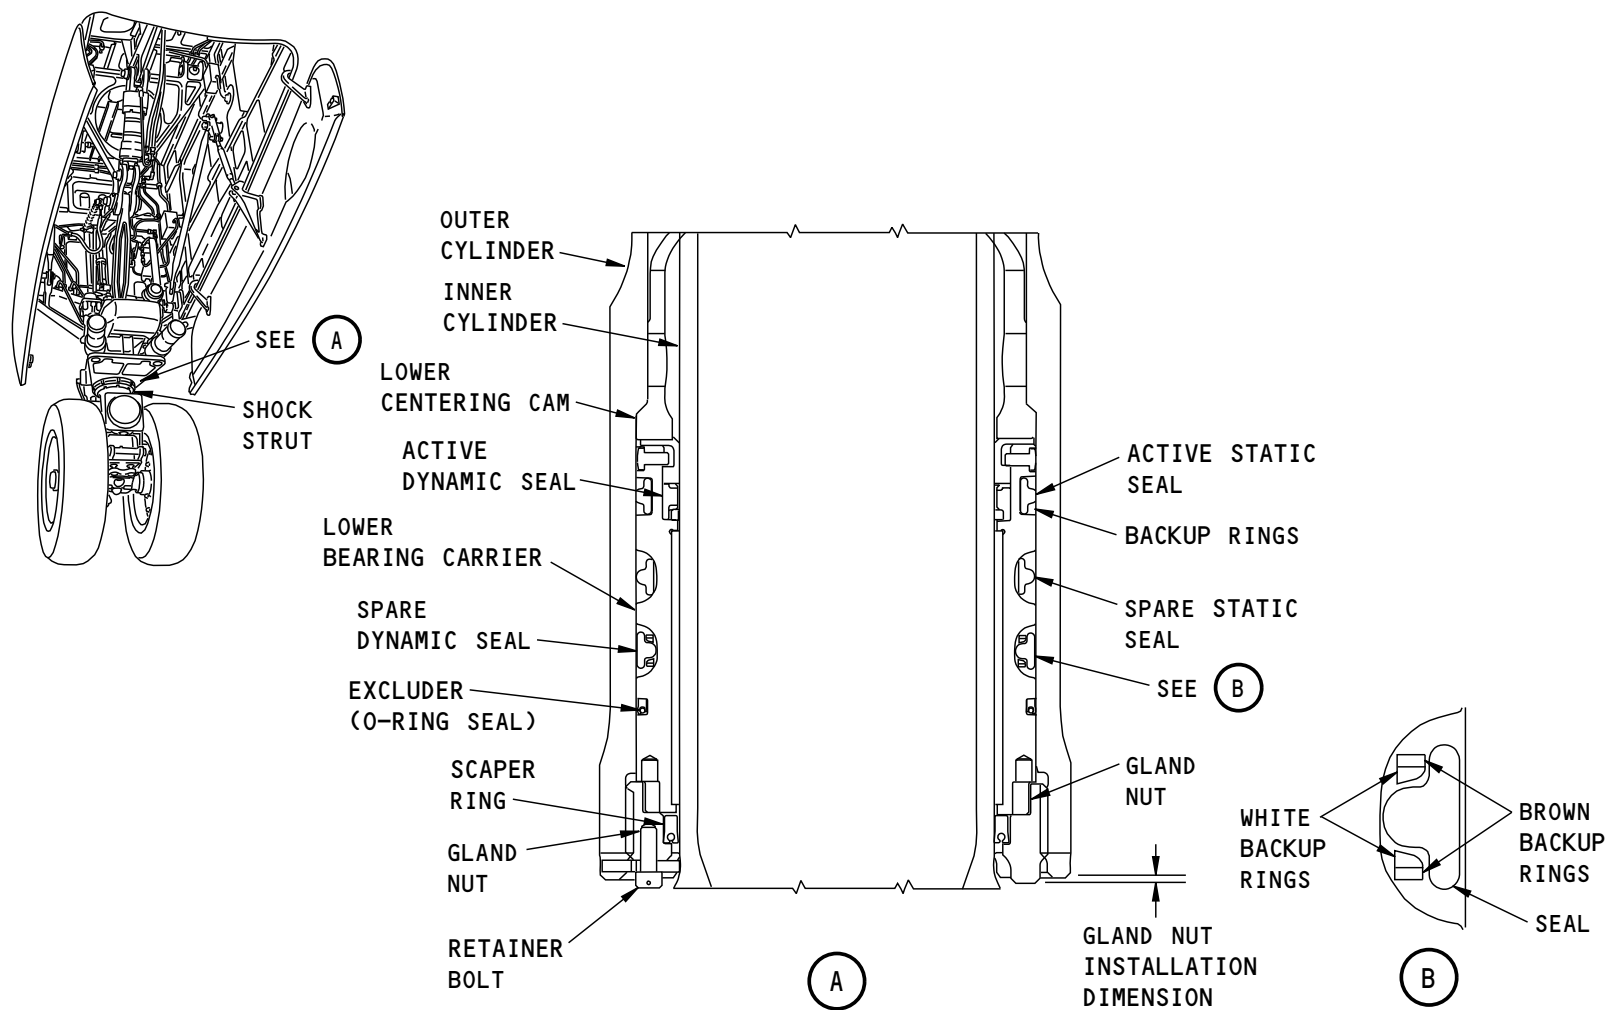

M84977 S0004627823\_V2

**NOSE LANDING GEAR AND DOORS - SHOCK STRUT SEALS**

32-20-00-002

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-20-00**

**NOSE LANDING GEAR AND DOORS - NOSE LANDING GEAR DOORS****Purpose**

Two nose landing gear doors aerodynamically seal the nose gear wheel well to decrease drag.

**Location**

The doors attach to the outboard edges of the nose landing gear wheel well with hinges.

**Physical Description**

The nose landing gear doors are made of composite materials.

**Functional Description**

Control rods and bellcranks connected to the top of the shock strut move the doors mechanically with the nose landing gear during extension and retraction. When the gear extends, the doors open. When the gear retracts, the doors close.


**Training Information Point**

The NLG doors are rigged in the door closed position with a pre-load on the forward door operating rod. The pre-load prevents door movement away from the door stops due to dynamic pressures in flight.

**CAUTION**

MAKE SURE THAT THE WHEEL WELL DOORS DO NOT TOUCH THE STEERING ACTUATORS ON THE NOSE GEAR WHILE THE GEAR EXTENDS AND RETRACTS. THIS CAN OCCUR IF THE DOORS ARE NOT ADJUSTED CORRECTLY AND CAN CAUSE DAMAGE TO THE DOORS.

## NOSE LANDING GEAR AND DOORS - NOSE LANDING GEAR DOORS

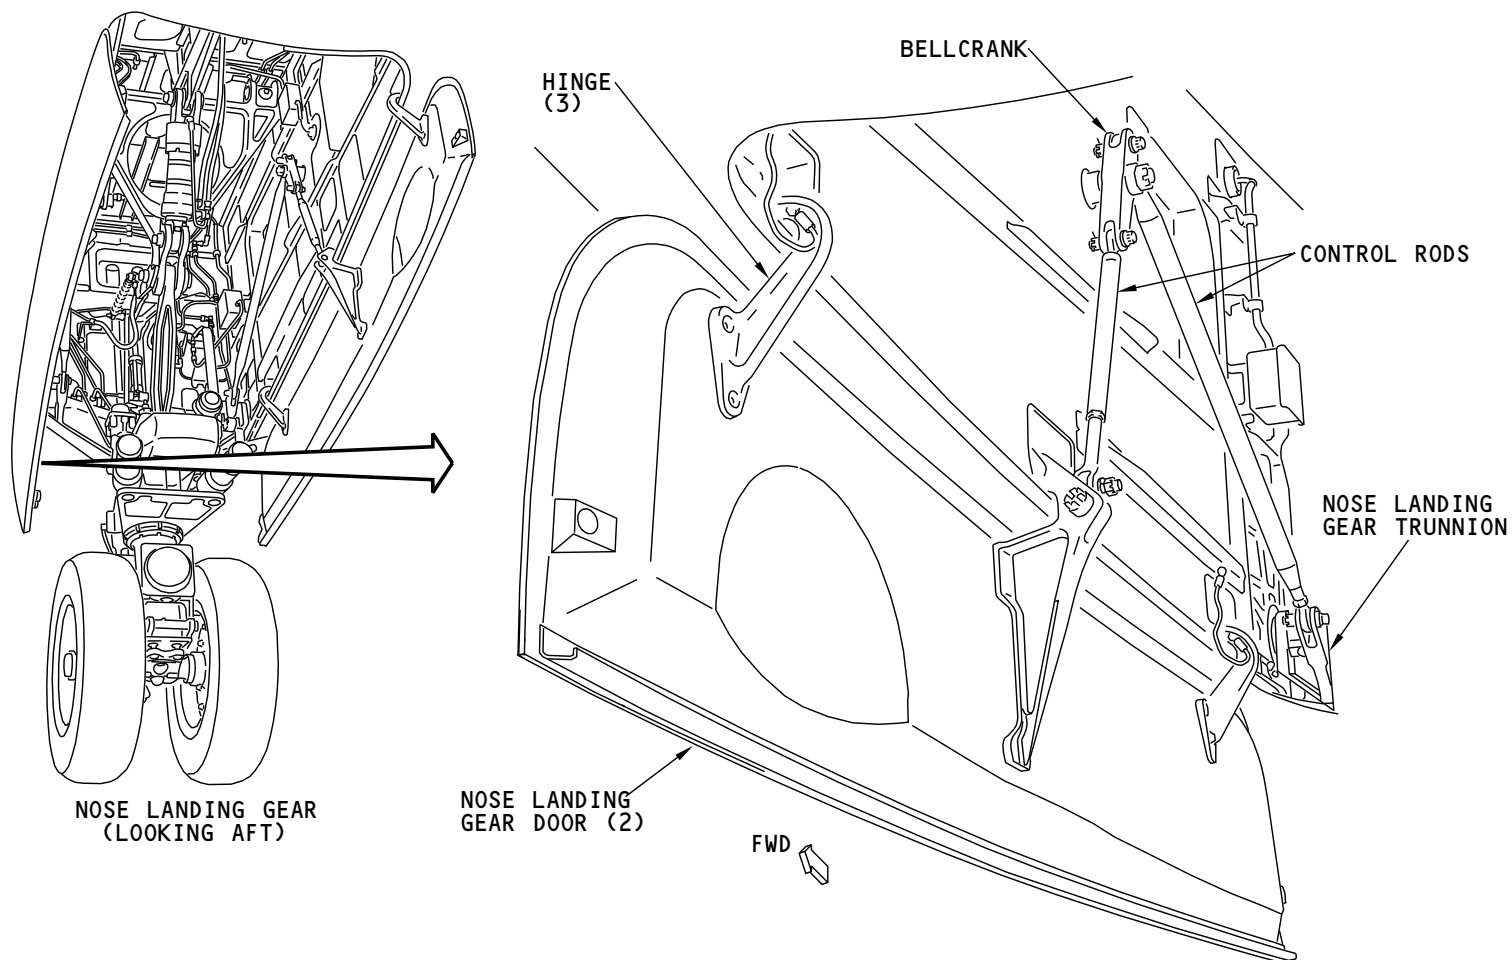

M84978 S0004627825\_V1

## NOSE LANDING GEAR AND DOORS - NOSE LANDING GEAR DOORS

**32-20-00**

32-20-00-003

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## NOSE LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 1

**General**

The nose landing gear shock strut uses hydraulic fluid and compressed dry air or nitrogen to control the shock strut action. The gas charging valve lets you pressurize the shock strut. The oil charging valve permits hydraulic servicing of the shock strut.

The gas charging valve is on the top of the nose landing gear shock strut.

The oil charging valve is on the aft side of the nose landing gear shock strut.

See the maintenance manual, servicing, for more information about servicing the main landing gear shock strut.

**Training Information Point**

Obey this warning when you deflate the shock strut:



CLEAR THE AREA BELOW THE WING BEFORE YOU DEFLATE THE SHOCK STRUT. IF YOU DEFLATE THE SHOCK STRUT, THE WING TIP CAN MOVE DOWN AND CAN CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.


**NOTE:** Fluid in the shock strut will have bubbles when you release the pressure. Deflate the shock strut slowly to prevent the leakage of the fluid through the gas valve.

Obey this warning when you remove the air valve body on the shock strut:



DO NOT REMOVE THE VALVE BODY UNLESS YOU DEFLATE THE SHOCK STRUT FULLY. THE AIR PRESSURE CAN BLOW THE VALVE BODY OUT AND CAUSE INJURY TO PERSONS.

NOSE LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 1

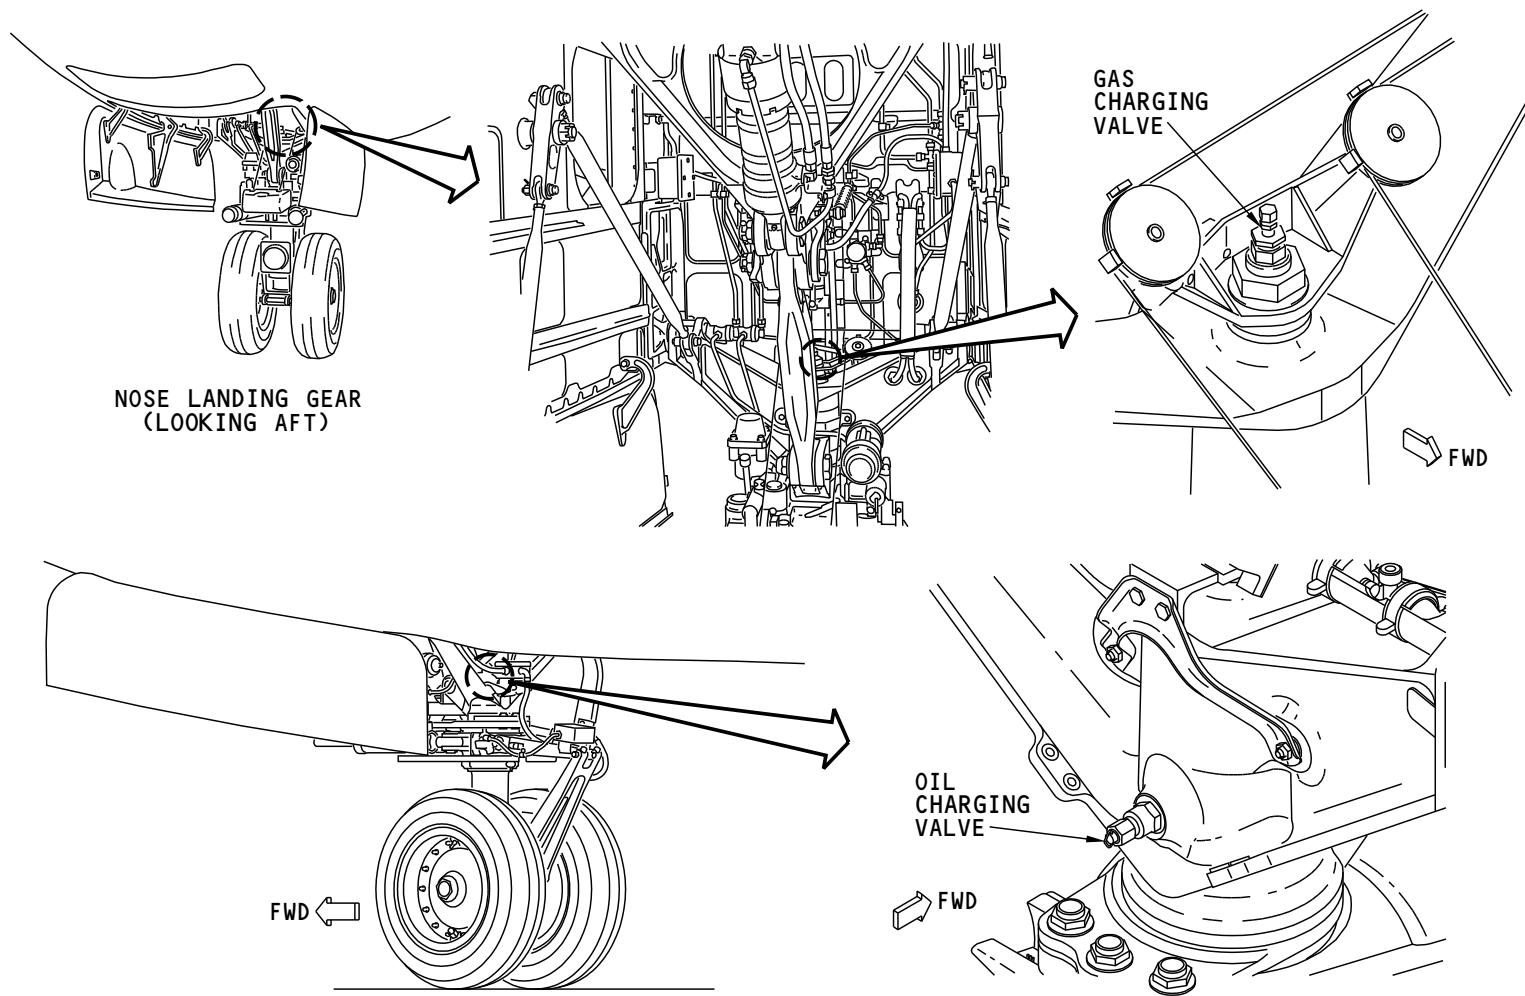

M84979 S0004627827\_V1

NOSE LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT - 1

32-20-00-004

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-20-00**

## NOSE LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT 2

**General**

The servicing chart is on the left side wall of the nose landing gear wheel well.

Use BMS 3-32 Type II landing gear shock strut fluid when you add fluid to the shock strut. BMS 3-32 Type II fluid is a mixture of MIL-H-5606 hydraulic fluid and additives.

You measure dimension X from the top of the nose landing gear tow fitting to the bottom of the lower steering plate.

See the maintenance manual, servicing, for more information about servicing the nose landing gear shock strut.

**Training Information Point**

Release all air from the shock strut before you add shock strut fluid.



USE ONLY THE TYPE OF FLUID THAT IS SPECIFIED IN THIS TASK TO FILL THE SHOCK STRUT. IF YOU USE AN INCORRECT FLUID, IT CAN CAUSE DAMAGE TO THE SEALS.

**NOTE:** It is optional to use fluid, MIL-H-5606 or fluid, MIL-PRF-6083 (NATO C-635) and add lubricant, lubrizol 1395 in a ratio of 41:1.



CLEAN ALL THE LEAKED HYDRAULIC FLUID FROM THE TIRES IMMEDIATELY. THE FLUID CAN CAUSE DAMAGE TO THE TIRES.



DO NOT DEFLATE THE SHOCK STRUTS IF YOU DO A LANDING GEAR RETRACTION TEST. FILL THE SHOCK STRUTS CORRECTLY. DO NOT INFLATE THEM ABOVE THE CORRECT PRESSURE. IF NOT, DAMAGE TO THE WHEEL WELL AND SHOCK STRUT WILL OCCUR.


**32-20-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

NOSE LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT 2

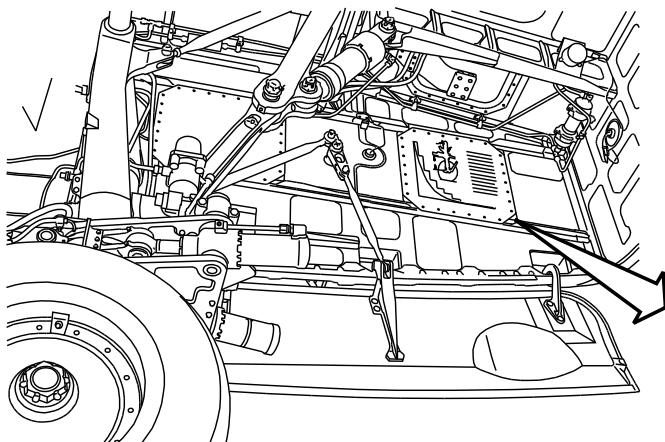

NOSE LANDING GEAR WHEEL WELL

FWD

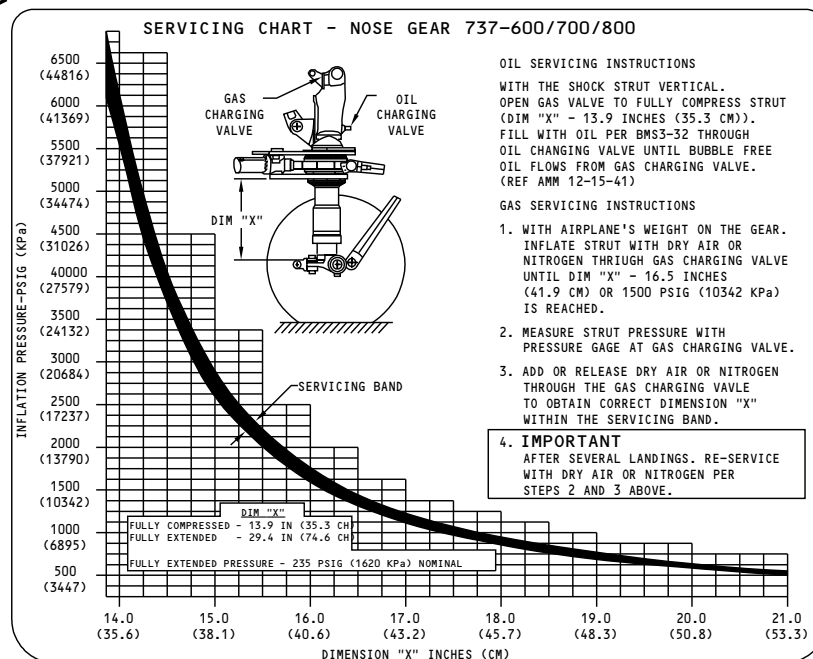

M84980 S0004627829\_V1

NOSE LANDING GEAR AND DOORS - SHOCK STRUT - TRAINING INFORMATION POINT 2





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-30-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LANDING GEAR EXTENSION AND RETRACTION - GENERAL DESCRIPTION****General**

These are the sub-systems of the landing gear extension and retraction system:

- Landing gear control system
- Main landing gear extension and retraction
- Nose landing gear extension and retraction
- Main landing gear manual extension system
- Nose landing gear manual extension system.

The landing gear control system controls the main and nose landing gear extension and retraction. The landing gear control system also provides normal or alternate hydraulic pressure to these systems:

- Main landing gear shimmy damper
- Gear retract brake system.

The main landing gear extension and retraction system controls both main landing gear.


The nose landing gear extension and retraction system controls the nose landing gear and provides normal and alternate hydraulic pressure to the nose wheel steering system.

The main landing gear manual extension system controls the manual extension of the main landing gear when hydraulic pressure is not available.


The nose landing gear manual extension system controls the manual extension of the nose landing gear when hydraulic pressure is not available.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## LANDING GEAR EXTENSION AND RETRACTION - GENERAL DESCRIPTION

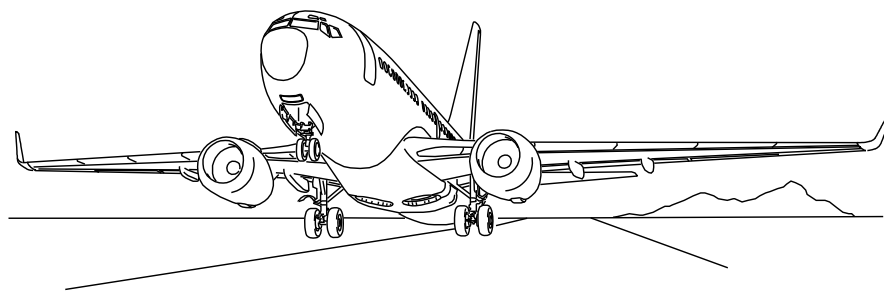

LANDING GEAR  
EXTENSION AND RETRACTION

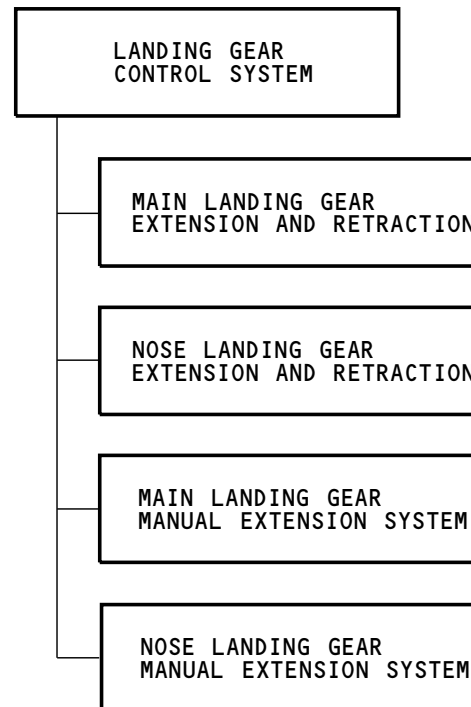

M84982 S0004627834\_V1

## LANDING GEAR EXTENSION AND RETRACTION - GENERAL DESCRIPTION

**32-30-00**

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-31-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## LANDING GEAR CONTROL SYSTEM - GENERAL DESCRIPTION

### Purpose

The landing gear control system controls the extension and retraction of the main and nose landing gears.

The landing gear control system also provides normal or alternate hydraulic pressure to these systems:

- Main landing gear shimmy damper
- Gear retract brake system.

See the Main Landing Gear and Doors section for more information about the main landing gear shimmy damper. (SECTION 32-10)

See the Wheels and Brakes section for more information about the gear retract brake system. (SECTION 32-41)

### Components

The landing gear control system has these components:

- Control lever assembly
- Control lever forward quadrant (not shown)
- Selector valve
- Selector valve quadrant assembly (not shown)
- Transfer valve.

### General Description

Hydraulic system A usually supplies pressure to the landing gear extension and retraction. Hydraulic system B supplies pressure for retraction only through the landing gear transfer valve. The landing gear transfer valve receives electrical signals from the proximity switch electronics unit (PSEU). The landing gear transfer valve changes the pressure source of the landing gear from hydraulic system A to hydraulic system B when these conditions occur:

- Airplane in the air
- Landing gear lever not down

- One main landing gear not up
- Left engine N2 speed less than 50%
- Hydraulic system B pressure supplied to valve.

You move the landing gear control lever to control landing gear extension and retraction. The control lever moves the selector valve through cables.

The selector valve also gets an electrical input from the manual extension system. This operates a bypass valve in the selector valve to connect the landing gear retraction to the hydraulic system return. This lets the manual extension system extend the landing gear.

See the Air/Ground System section for more information about the proximity switch electronics unit (PSEU). (SECTION 32-09)

### Nose Wheel Steering

The pressure for nose wheel steering comes from the nose landing gear extension pressure only. Hydraulic system A normally supplies pressure to the nose gear steering through the landing gear control system.

When you move the alternate nose wheel steering switch to the alternate position, the landing gear transfer valve moves to the alternate position. The landing gear transfer valve moves the pressure source, for the landing gear retraction and the nose wheel steering, from hydraulic system A to hydraulic system B.

See the Nose Wheel Steering section for more information about the nose wheel steering. (SECTION 32-51)


# 32-31-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## LANDING GEAR CONTROL SYSTEM - GENERAL DESCRIPTION

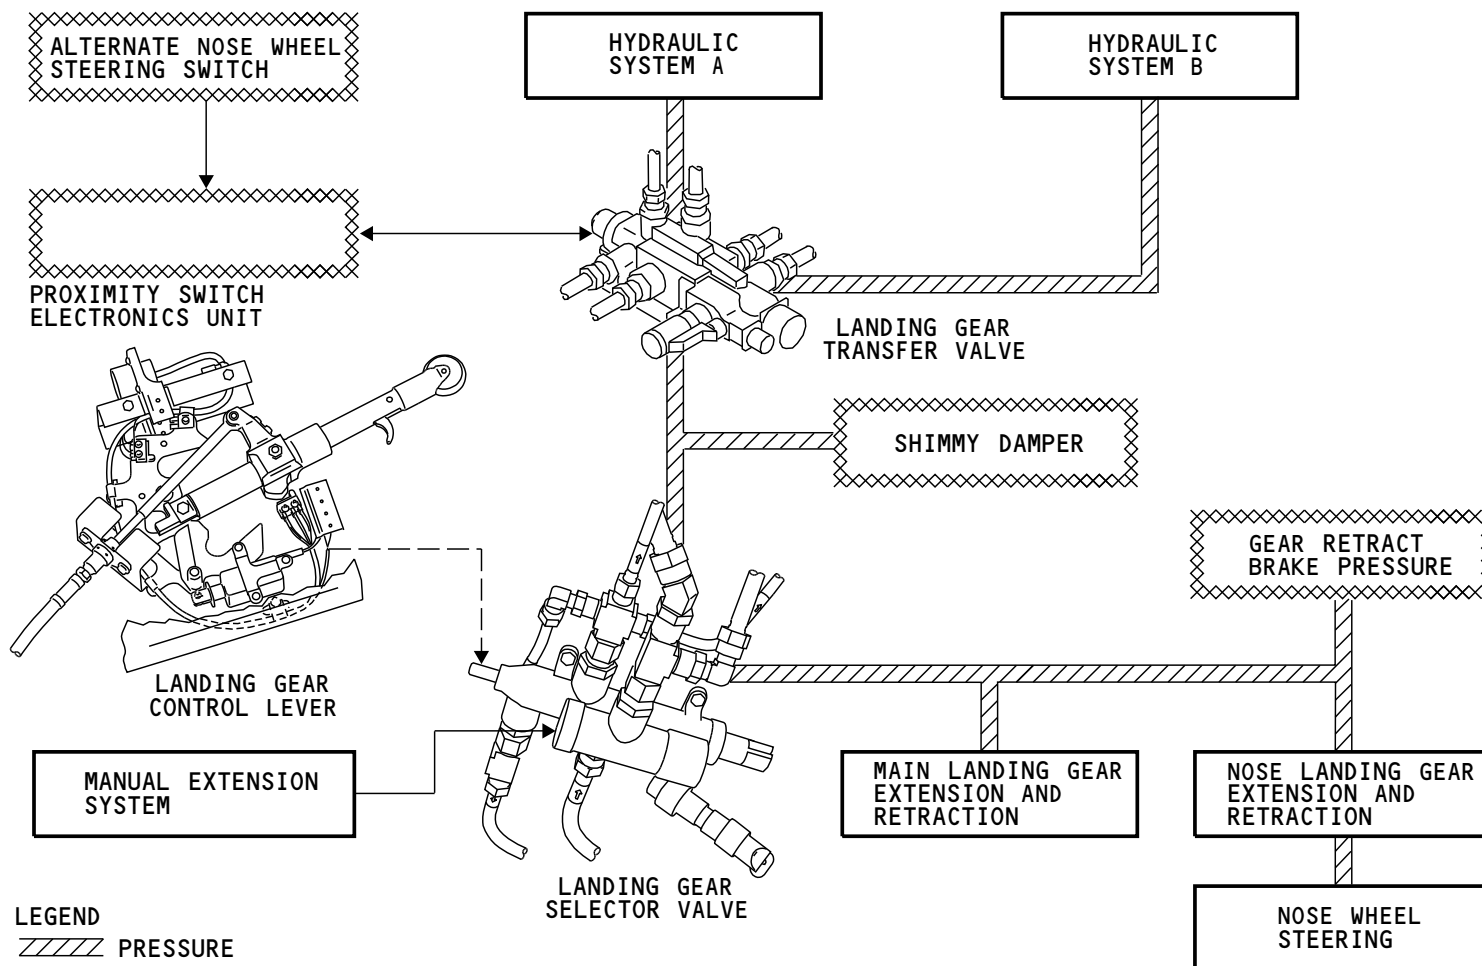

M84983 S0004627838\_V1

## LANDING GEAR CONTROL SYSTEM - GENERAL DESCRIPTION

32-31-00

32-31-00-001

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LANDING GEAR CONTROL SYSTEM - LEVER ASSEMBLY****Purpose**

The landing gear control lever assembly operates the landing gear selector valve through the landing gear control cables.

**Location**

The landing gear control lever is on the P2 center forward panel in the flight compartment.

**Physical Description**

The control lever assembly has these components:

- Control lever
- Position switch (4)
- Lock mechanism
- Lever lock solenoid.

**Functional Description**

The landing gear control lever has these three positions with detents:

- UP
- OFF
- DOWN.

You must first pull the control lever out before you can move the lever. The lever operates a push-pull cable which moves the forward quadrant. You do not adjust the push-pull cable. The forward quadrant is below the flight compartment floor.

The control lever assembly has a lever lock mechanism operated by a lever lock solenoid. The lever lock prevents accidental movement of the landing gear lever to the up position when the airplane is on the ground. When the airplane takes off, the solenoid gets electrical power and retracts. This turns the lever lock mechanism to the unlocked position.

The landing gear control lever assembly has four control lever position switches. Two down position switches send signals when the lever moves to the down position. Two up position switches send signals when the lever moves to the up position.

When you put the landing gear lever in the down position, the down position switches move to the closed position. This sends signals to the landing gear position indication and warning system. The position indication system uses these signals to operate the red landing gear position lights.

When you put the landing gear lever in the up position, the up position switches move to the closed position. This sends signals to the antiskid system. The antiskid system uses these signals to inhibit antiskid operation during gear retract braking.

See the Landing Gear Position Indicating And Warning System Section for more information. (SECTION 32-61)


See the antiskid/autobrake system section for more information about the antiskid system. (SECTION 32-42)

**Training Information Point**

If the lever lock solenoid fails in the locked position, you can move the landing gear control lever to the up position with the lever lock override trigger. The trigger retracts the forward part of the control lever so it clears the lever lock mechanism.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## LANDING GEAR CONTROL SYSTEM - LEVER ASSEMBLY

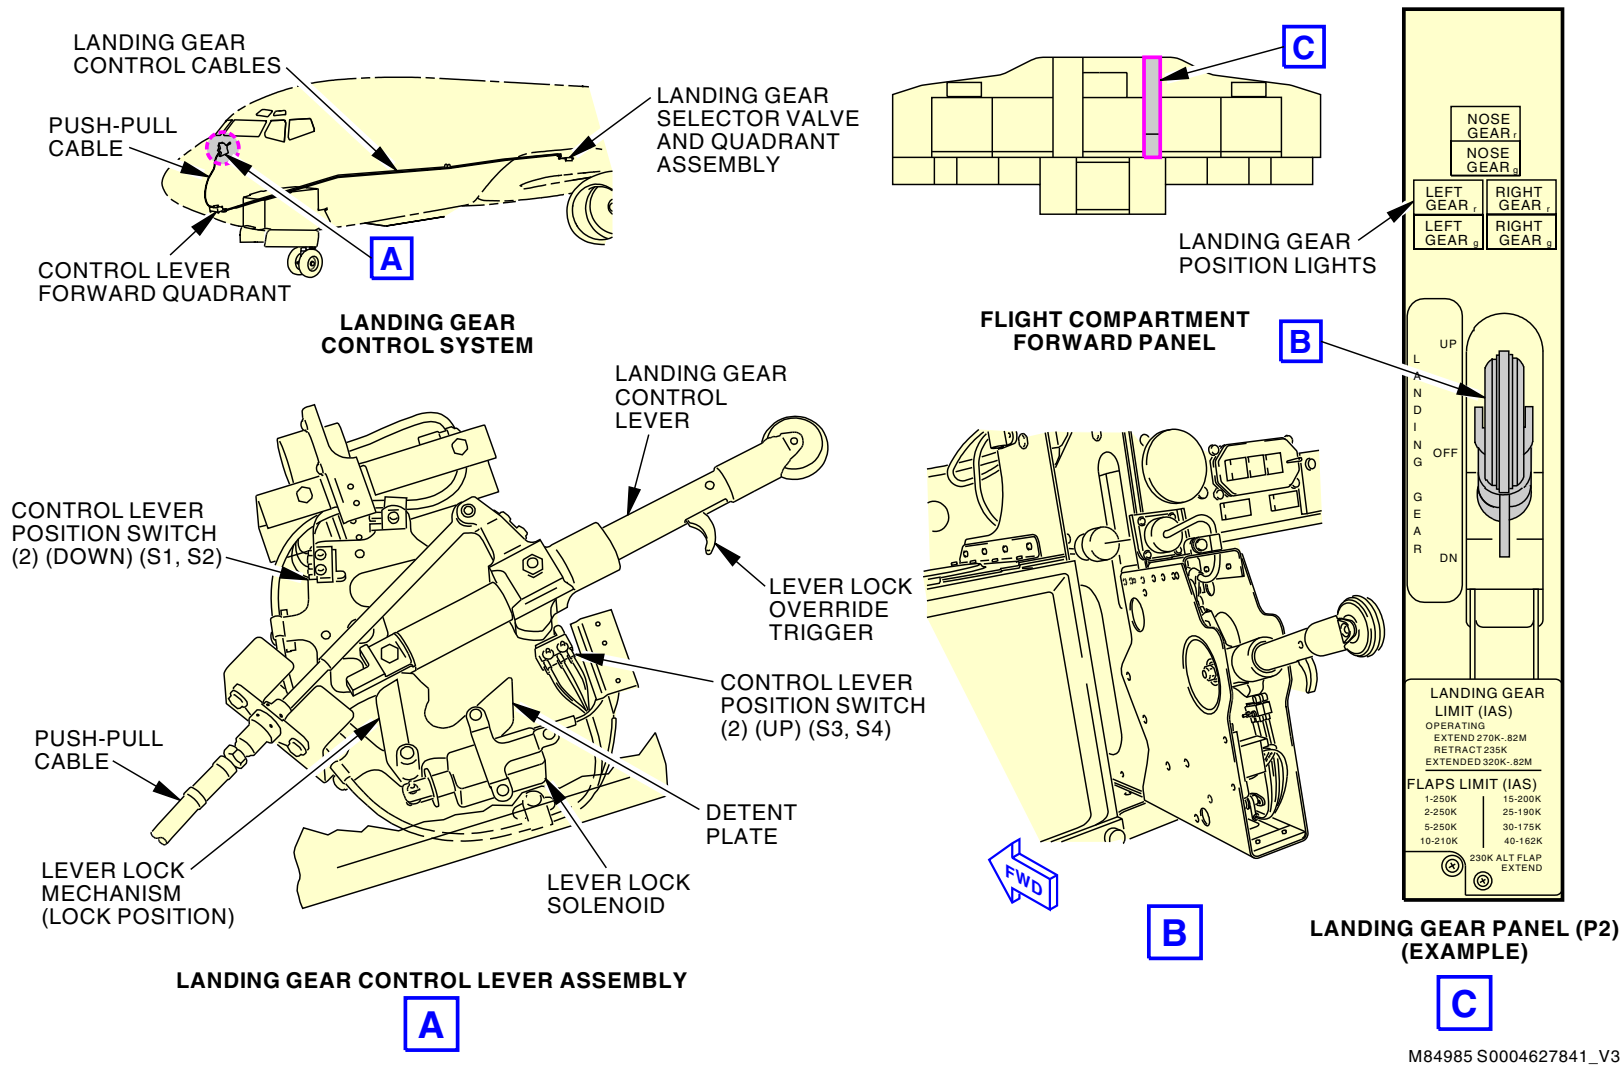

M84985 S0004627841\_V3

## LANDING GEAR CONTROL SYSTEM - LEVER ASSEMBLY

32-31-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LANDING GEAR CONTROL SYSTEM - FORWARD QUADRANT****Purpose**

The forward quadrant of the landing gear control system moves the landing gear selector valve through control cables.

**Location**

The forward quadrant is on the aft side of the forward pressure bulkhead in the forward equipment compartment. The forward equipment compartment access door gives access to the forward quadrant.

**Physical Description**

The forward quadrant has these components:


- Push-pull cable
- Push-pull gearbox
- Forward quadrant.

**Functional Description**

When the landing gear lever moves, the push-pull cable moves. The push-pull cable moves the forward quadrant through the push-pull gear box. When the forward quadrant moves, the control cables to the landing gear selector valve move.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

LANDING GEAR CONTROL SYSTEM - FORWARD QUADRANT

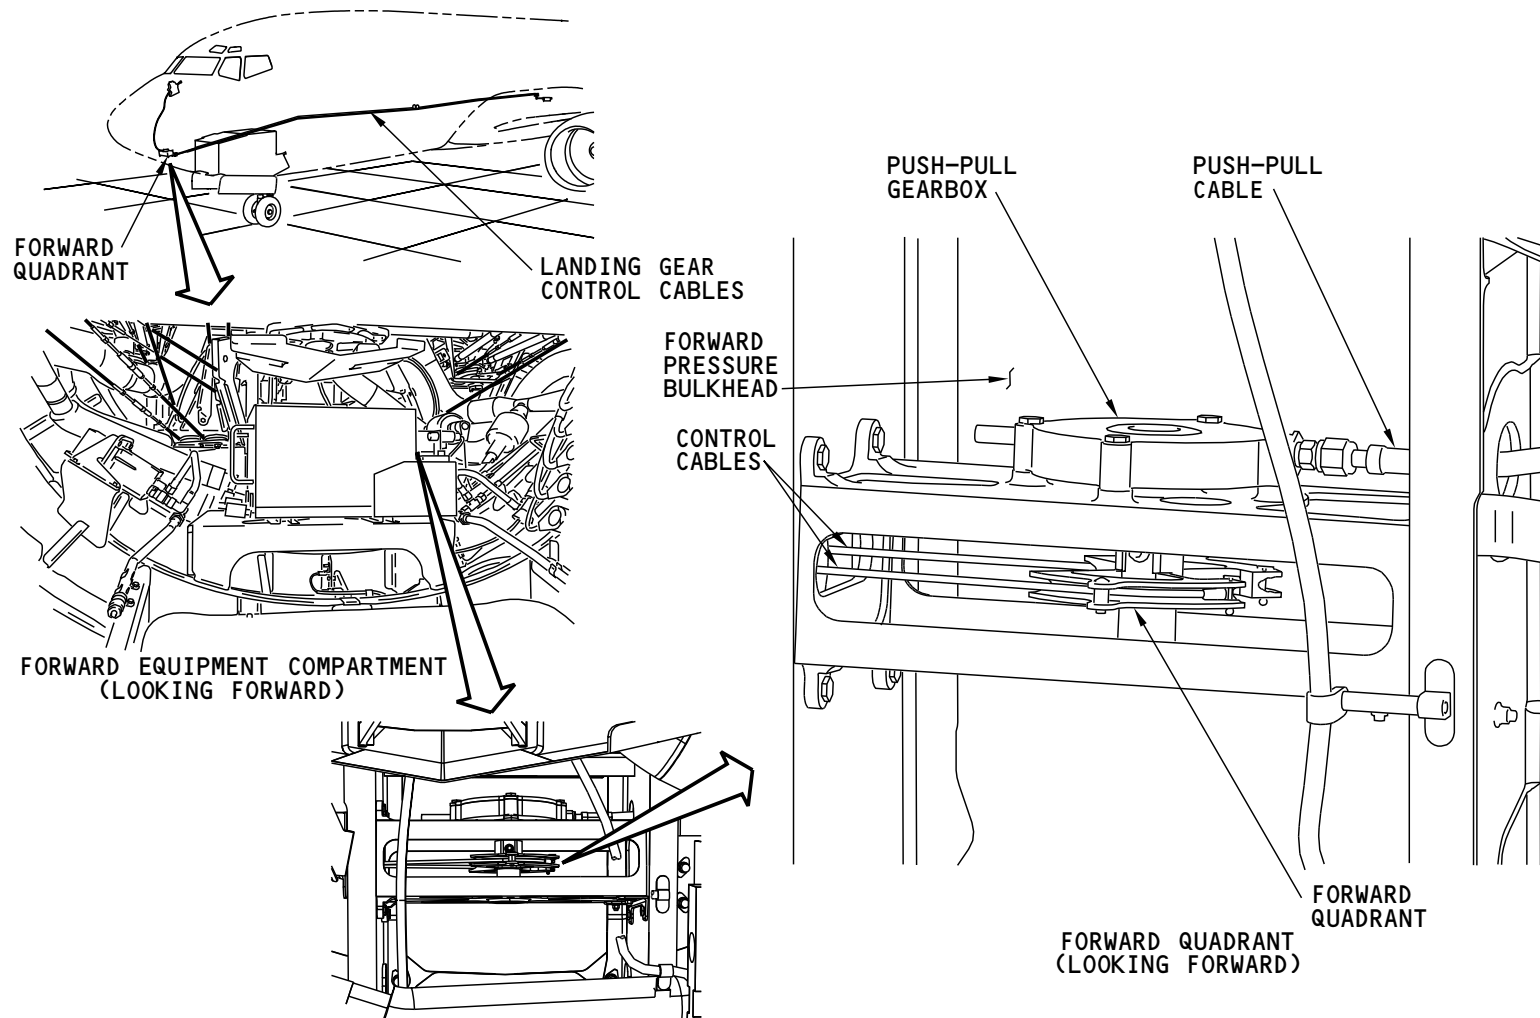

M84986 S0004627843\_V1

LANDING GEAR CONTROL SYSTEM - FORWARD QUADRANT

32-31-00-003

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-31-00**

**LANDING GEAR CONTROL SYSTEM - SELECTOR VALVE****Purpose**

The landing gear selector valve directs hydraulic pressure from the transfer valve to extend and retract the main landing gear and the nose landing gear.

**Location**

The selector valve is on the ceiling in the main landing gear wheel well.

**Physical Description**

The landing gear selector valve is a three-position valve and has these components:

- Slide valve
- Manual extend solenoid valve
- Bypass valve.


**Functional Description**

The landing gear control lever controls the position of the selector valve through control cables to a control rod that is connected to the selector valve.

The manual extension system supplies electrical signals to a solenoid valve in the selector valve. The solenoid valve controls hydraulic pressure to a pressure operated bypass valve. When the bypass valve is in the bypass position, landing gear up pressure is ported around the slide valve to return. This prevents a hydraulic lock in the landing gear system if the slide valve jams.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## LANDING GEAR CONTROL SYSTEM - SELECTOR VALVE

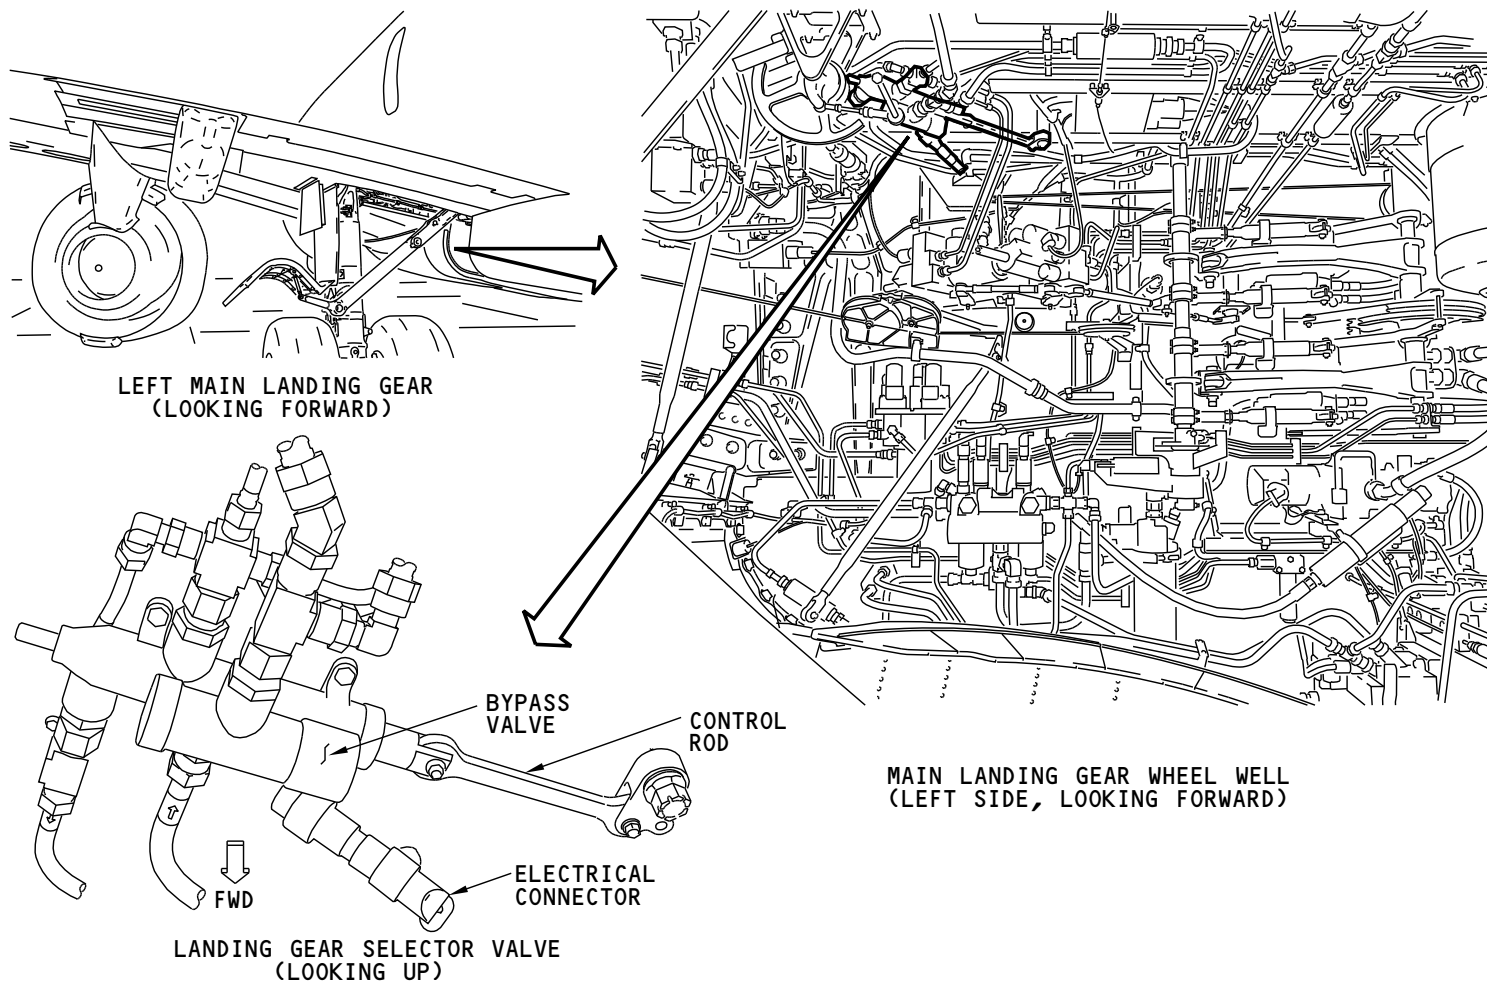

M84989 S0004627845\_V1

## LANDING GEAR CONTROL SYSTEM - SELECTOR VALVE

**32-31-00**

**LANDING GEAR CONTROL SYSTEM - TRANSFER VALVE****Purpose**

The landing gear transfer valve changes the pressure supply for landing gear retraction from hydraulic system A to hydraulic system B.

**Location**

The landing gear transfer valve is in the main landing gear wheel well on the forward end of the keel beam.

**Physical Description**

The transfer valve is a two-position, hydraulic or solenoid operated valve and has these components:

- Slide valve
- Solenoid valve
- Position switch.

**Functional Description**

The landing gear transfer valve gets signals from the PSEU for automatic and manual operation.

The landing gear transfer valve moves automatically to the alternate position when all of these conditions occur:

- Airplane in the air
- Landing gear lever not down
- One main landing gear not up
- Left engine N2 speed less than 50%
- Hydraulic system B pressure supplied to valve.

The landing gear transfer valve operates manually when all of these conditions occur:

- Alternate nose wheel steering switch is moved to the alternate position
- Normal quantity in system B reservoir
- Nose air/ground system in ground mode.

You can also manually operate the landing gear transfer valve with the BITE of the proximity switch electronics unit (PSEU).

The position switch on the landing gear transfer valve sends a signal to the PSEU when the valve moves to the alternate position.

See the Air/Ground System for more information about the PSEU. (SECTION 32-09)


**32-31-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

LANDING GEAR CONTROL SYSTEM - TRANSFER VALVE

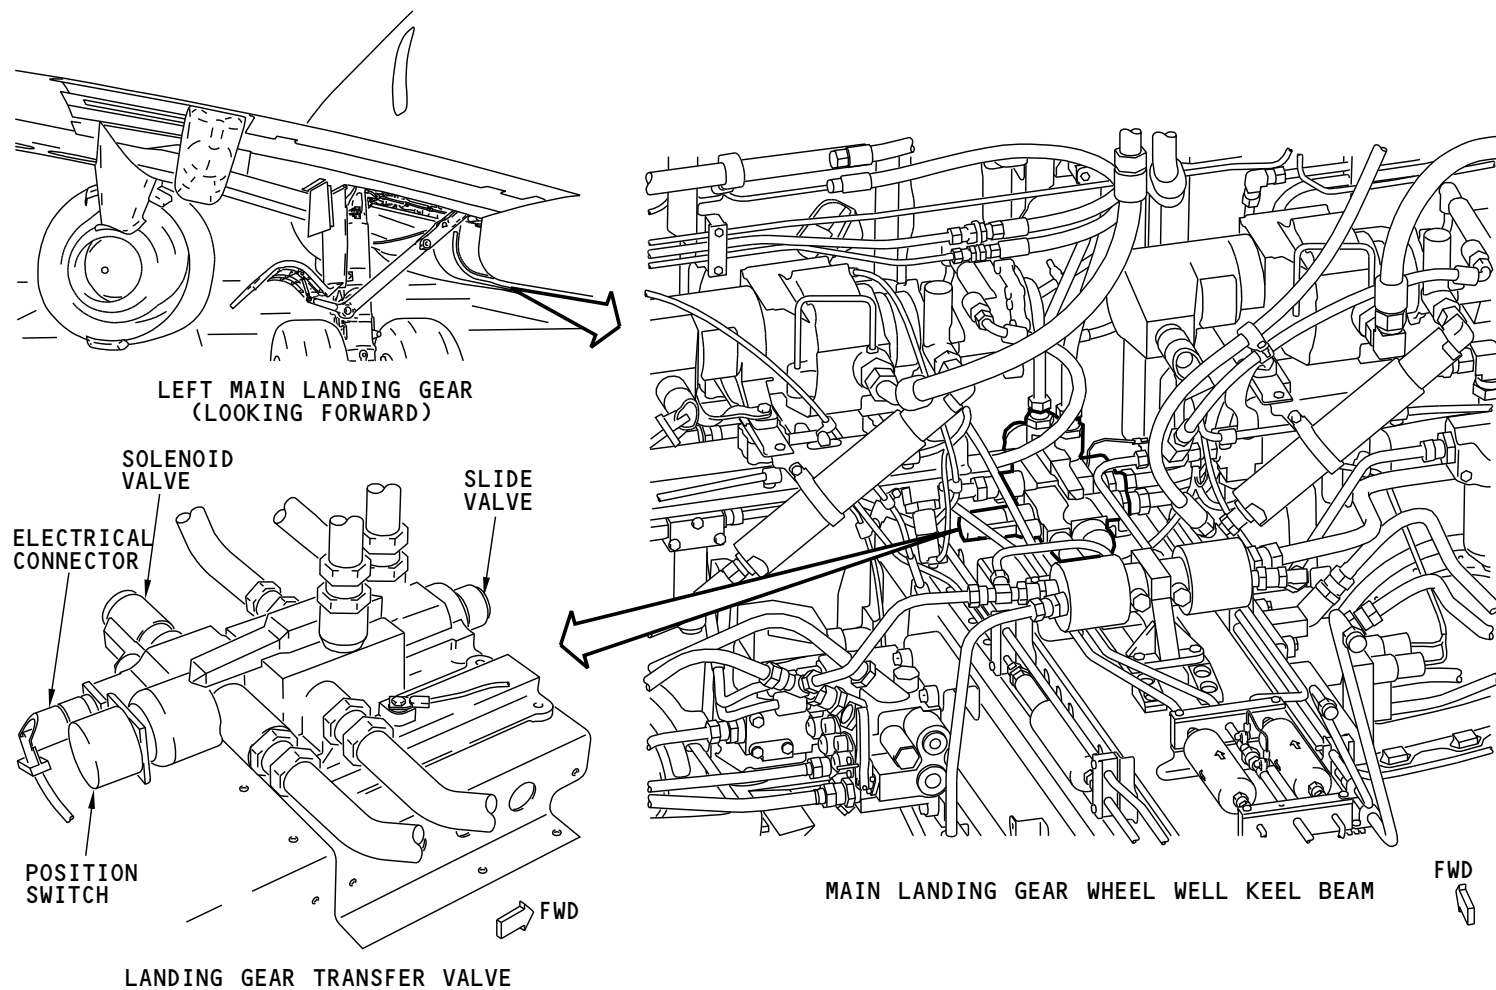

M84988 S0004627847\_V1

LANDING GEAR CONTROL SYSTEM - TRANSFER VALVE

**32-31-00**



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-31-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## LANDING GEAR CONTROL SYSTEM - LEVER LOCK - FUNCTIONAL DESCRIPTION - ELECTRICAL

### General

The lever lock solenoid prevents accidental movement of the landing gear control lever to the UP position when the airplane is on the ground. It also shows that the ground spoiler interlock valve may be open when the airplane is in the air.

### Functional Description

The landing gear control lever is locked out of the UP position by a mechanical lever lock. 28v dc power from the battery bus goes through the lever lock solenoid and completes a ground at the proximity switch electronics unit when these conditions are true:

- Ground spoiler interlock valve closed
- Air/ground system 1 in air mode
- Air/ground system 1 not override to air (from PSEU BITE).

When the lever lock solenoid energizes, it retracts. This moves the lever lock to the not locked position. This lets the pilot move the landing gear control lever to the UP position.

If the solenoid fails to unlock the lever after takeoff, the pilot pulls the lever lock override trigger on the control lever and moves the control lever to the UP position.

### Training Information Point

During the landing gear control system test, you operate the lever lock override trigger and move the control lever to the UP position. You also try to move the control lever to the UP position without the override trigger to make sure that the lever lock solenoid operates correctly.

Obey these warnings when you put the airplane in the air mode:

 **WARNING** MAKE SURE THE DOWNLOCK PINS ARE INSTALLED ON ALL THE LANDING GEAR. WITHOUT THE DOWNLOCK PINS, THE LANDING GEAR COULD RETRACT AND CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.



MAKE SURE THAT PERSONS AND EQUIPMENT ARE CLEAR OF RUDDER, THRUST REVERSERS, AND LEADING EDGE SLATS BEFORE YOU SUPPLY HYDRAULIC POWER. RUDDER, THRUST REVERSERS, AND LEADING EDGE SLATS CAN MOVE QUICKLY WHEN YOU SUPPLY HYDRAULIC POWER. THIS CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.



KEEP PERSONS AND EQUIPMENT CLEAR OF THE FLIGHT CONTROL SURFACES. THESE COMPONENTS CAN MOVE SUDDENLY WHEN YOU PUT THE AIRPLANE IN AIR MODE. THIS CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.



OBEY THE PROCEDURE THAT PREPARES TO PUT THE AIRPLANE IN THE AIR MODE. IN THE AIR MODE, MANY OF THE AIRPLANE SYSTEMS CAN OPERATE. THIS CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.



DO THE DEACTIVATION PROCEDURE TO PREVENT THE OPERATION OF THE THRUST REVERSER. THE ACCIDENTAL OPERATION OF THE THRUST REVERSER CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT.

**NOTE:** If you put the airplane in the air mode, you need to make sure that the takeoff warning horn will not operate.

**NOTE:** If you put the airplane in the air mode, you need to make sure that the weather radar will not operate.

**NOTE:** If you put the airplane in the air mode for more than one minute, you need to deactivate the drain mast heat.

# 32-31-00

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

**LANDING GEAR CONTROL SYSTEM - LEVER LOCK - FUNCTIONAL DESCRIPTION - ELECTRICAL**

During the landing gear control system test, you put the airplane in the air mode by one of these three ways:

- Put deactuators on the nose and main landing gear to put the airplane in the air mode
- Lift the airplane on jacks.
- With the BITE in the Proximity Switch Electronics Unit (PSEU).

See the Air/Ground section for more information about the PSEU. (SECTION 32-09)


See the Takeoff/Landing Warning section for more information about the takeoff warning horn. (SECTION 31-51)

See the Weather Radar section for more information about the weather radar. (SECTION 34-43)

See the Pitot And Static section for more information about the drain mast heat. (SECTION 30-30)

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

## LANDING GEAR CONTROL SYSTEM - LEVER LOCK - FUNCTIONAL DESCRIPTION - ELECTRICAL

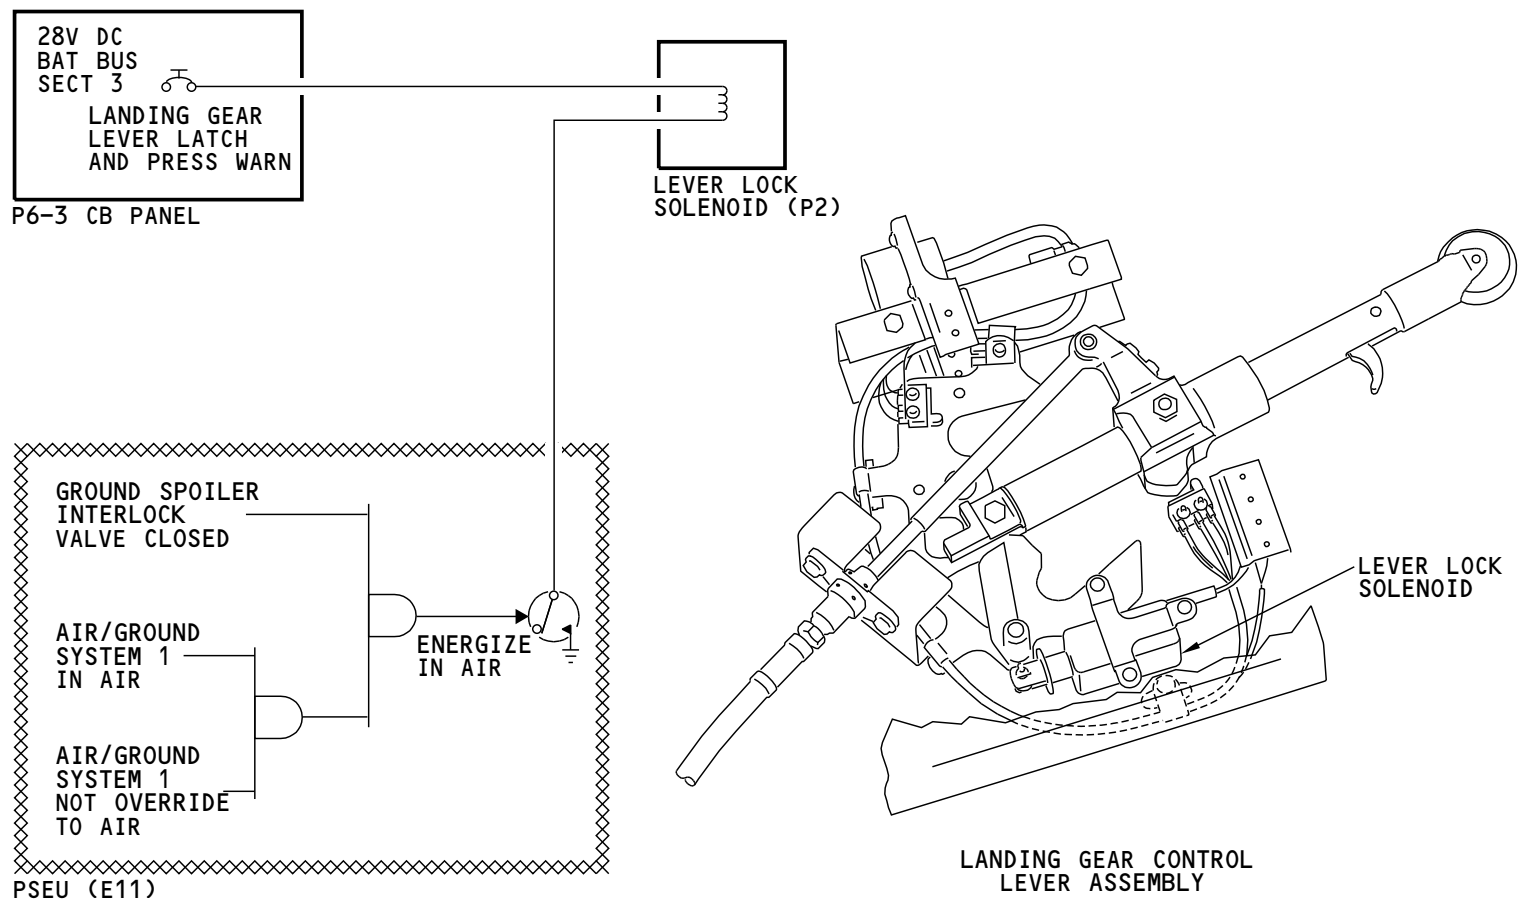

M84990 S0004627849\_V1

## LANDING GEAR CONTROL SYSTEM - LEVER LOCK - FUNCTIONAL DESCRIPTION - ELECTRICAL

32-31-00

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LANDING GEAR CONTROL SYSTEM - LANDING GEAR TRANSFER VALVE - FUNCTIONAL DESCRIPTION - ELECTRICAL****General**

The landing gear transfer valve changes the landing gear pressure supply from system A to system B automatically or manually.

**Automatic Operation**

The landing gear transfer valve automatically moves to the alternate position when all of these conditions occur:

- Airplane in the air
- Landing gear lever not down
- One main landing gear not up
- Left engine N2 speed less than 50%
- Hydraulic system B pressure to valve.

The air/ground systems in the proximity switch electronics unit (PSEU) supply air/ground information. The landing gear indication function of the PSEU supplies main landing gear position and landing gear control lever position. The left engine running relay supplies a signal when the engine speed decreases to less than 50%. Two circuit breakers supply 28v dc power.

The PSEU processes the inputs and supplies two signals to the coils on the solenoid valve on the landing gear transfer valve.

The position switch on the transfer valve sends a ground to the PSEU.

**Manual Operation**

When the airplane is on the ground and with normal quantity in the hydraulic system B reservoir, the landing gear transfer valve moves to the alternate position when you move the alternate nose wheel steering switch on the P1 panel to the ALT position.

The system B low quantity latch prevents operation of the landing gear transfer valve when the alternate nose wheel steering switch is in the alternate position, and the system B hydraulic quantity momentarily decreases to less than 21 percent. The transfer valve moves to the normal position if the latch sets during alternate operation.

The low quantity latch stops intermittent operation of the transfer valve if the system B quantity increases more than and decreases less than 21 percent again and again. The latch sets when the nose air/ground system is in the ground mode and the system B quantity is low. The latch resets when the alternate nose wheel steering switch is in the normal position.

**Training Information Point**

You can use the BITE on the PSEU to do an operation test of the landing gear transfer valve.


See the Air/ground System section for more information about the PSEU. (SECTION 32-09)

**32-31-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

## LANDING GEAR CONTROL SYSTEM - LANDING GEAR TRANSFER VALVE - FUNCTIONAL DESCRIPTION - ELECTRICAL

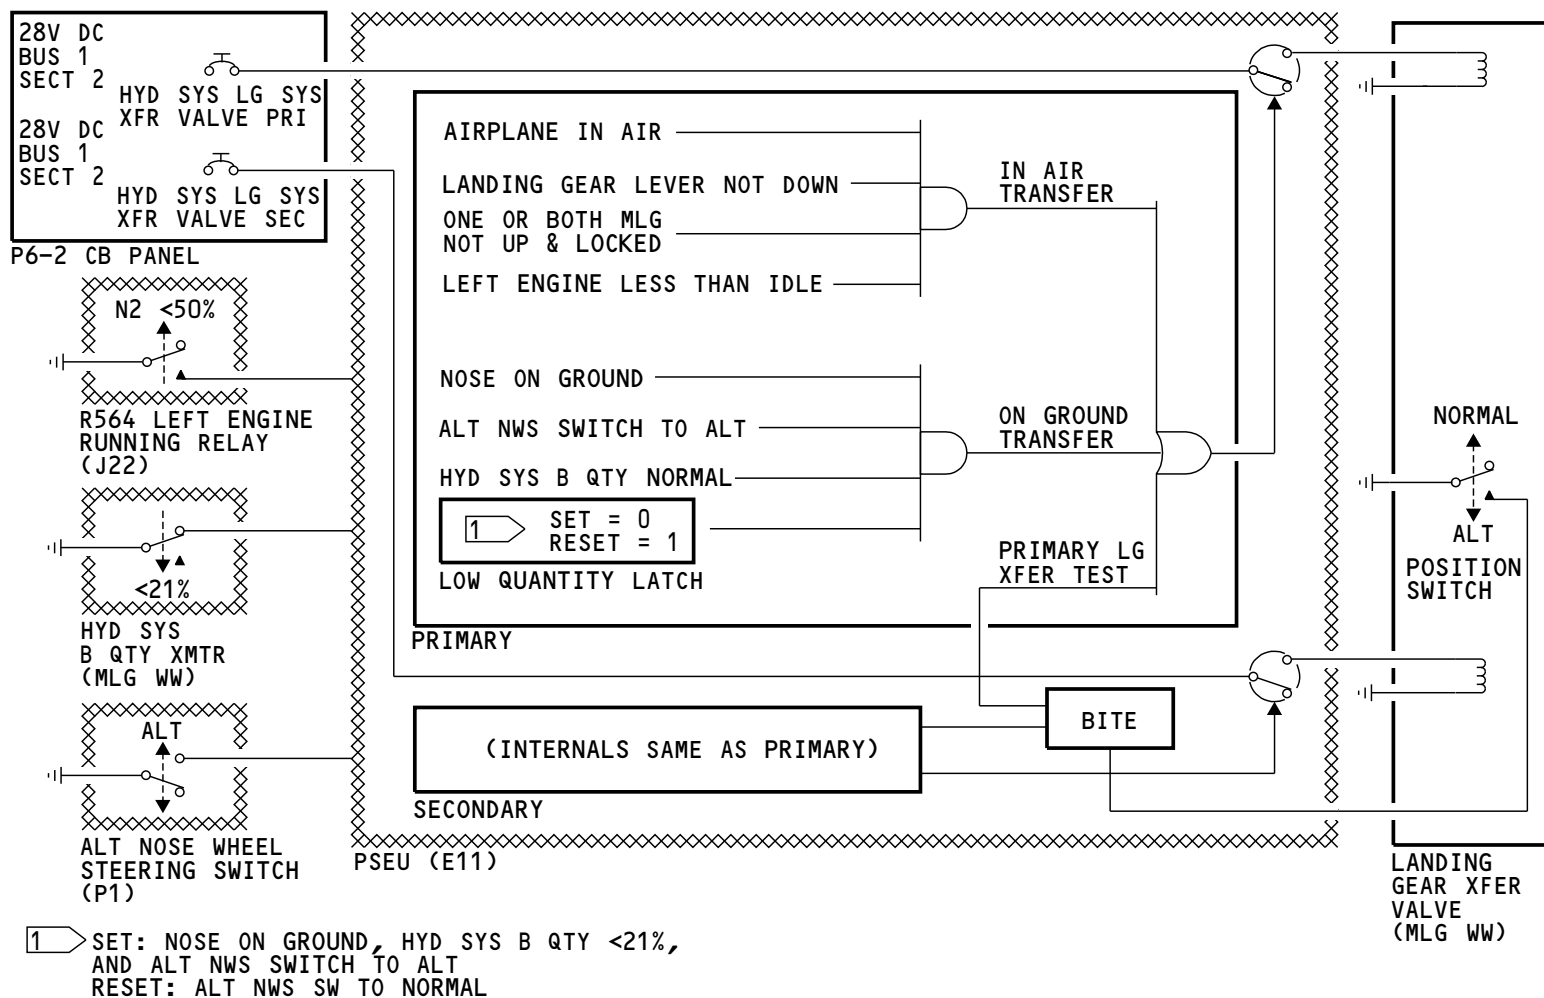

M84991 S0004627851\_V1

## LANDING GEAR CONTROL SYSTEM - LANDING GEAR TRANSFER VALVE - FUNCTIONAL DESCRIPTION - ELECTRICAL

32-31-00

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-31-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LANDING GEAR CONTROL SYSTEM - FUNCTIONAL DESCRIPTION - HYDRAULIC****General**

Hydraulic system A normally supplies pressure for landing gear extension and retraction. Hydraulic system B supplies pressure for retraction only, through the landing gear transfer valve.

**Landing Gear Transfer Valve**

The landing gear transfer valve has these components:

- Solenoid valve
- Slide valve
- Position switch.

When the solenoid valve does not receive a signal, pressure from hydraulic system A moves the slide valve to the normal position. In the normal position, the landing gear transfer valve sends hydraulic system A pressure to the landing gear selector valve.

When the solenoid valve receives a signal from the proximity switch electronics unit (PSEU), the solenoid valve opens. This sends hydraulic system B pressure to move the slide valve to the alternate position. In the alternate position, the landing gear transfer valve sends hydraulic system B pressure to the landing gear selector valve.

When the slide valve moves to the alternate position, the position switch on the landing gear transfer valve closes. This sends a ground to the built-in-test equipment (BITE) of the PSEU.

See the Air/Ground System Section for more information about the PSEU. (SECTION 32-09)

**Landing Gear Selector Valve**

The landing gear lever operates the landing gear selector valve. These are the three positions of the landing gear selector valve:

- UP (retract)
- OFF
- DOWN (extend).

The landing gear selector valve has these components:

- Slide valve
- Manual extend solenoid valve
- Bypass valve.

When you move the landing gear control lever to the OFF position, the selector valve moves to the off position. Extension and retraction components do not pressurize.

When the landing gear control lever moves to the DOWN position, the selector valve moves to the down position. Down pressure goes to the landing gear components for landing gear extension. Down pressure also moves the bypass valve to the normal position.

When the landing gear control lever moves to the UP position, the selector valve moves to the up position. Up pressure goes through the bypass valve to the landing gear components for landing gear retraction.

The manual extend solenoid valve has a normal position and an alternate position. When the coil on the manual extend solenoid valve does not receive a signal, a spring moves the manual extend solenoid valve to the normal position.

The bypass valve has a normal and a bypass position. Pressure from the slide valve or the manual extend solenoid valve operates the bypass valve. During normal landing gear operation, the bypass valve moves to the normal position.

When you open the manual extension access door, the manual extend solenoid valve energizes. The manual extend solenoid valve moves to the alternate position. When the manual extend solenoid valve moves to the alternate position, pressure goes to move the bypass valve to the bypass position.

When the bypass valve moves to the bypass position, up pressure does not go to the landing gear. Also, the bypass valve connects the landing gear retraction up pressure lines to the hydraulic system return. This lets the manual extension system extend the gear if the slide valve of the selector valve jams in the up position.

**32-31-00**

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



LANDING GEAR CONTROL SYSTEM - FUNCTIONAL DESCRIPTION - HYDRAULIC

Nose Wheel Steering

The pressure for nose wheel steering comes from the nose landing gear extension pressure only. Hydraulic system A normally supplies pressure to the nose wheel steering system.

When you move the alternate nose wheel steering switch on the P1 panel to the ALT position, the landing gear transfer valve moves to the alternate position. When you operate the alternate nose wheel steering switch, the airplane must be on the ground and there must be normal quantity in the hydraulic system B reservoir.

See the nose wheel steering system section for more information about the alternate nose wheel steering switch. (SECTION 32-51)

32-31-00-010


| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-31-00

## LANDING GEAR CONTROL SYSTEM - FUNCTIONAL DESCRIPTION - HYDRAULIC

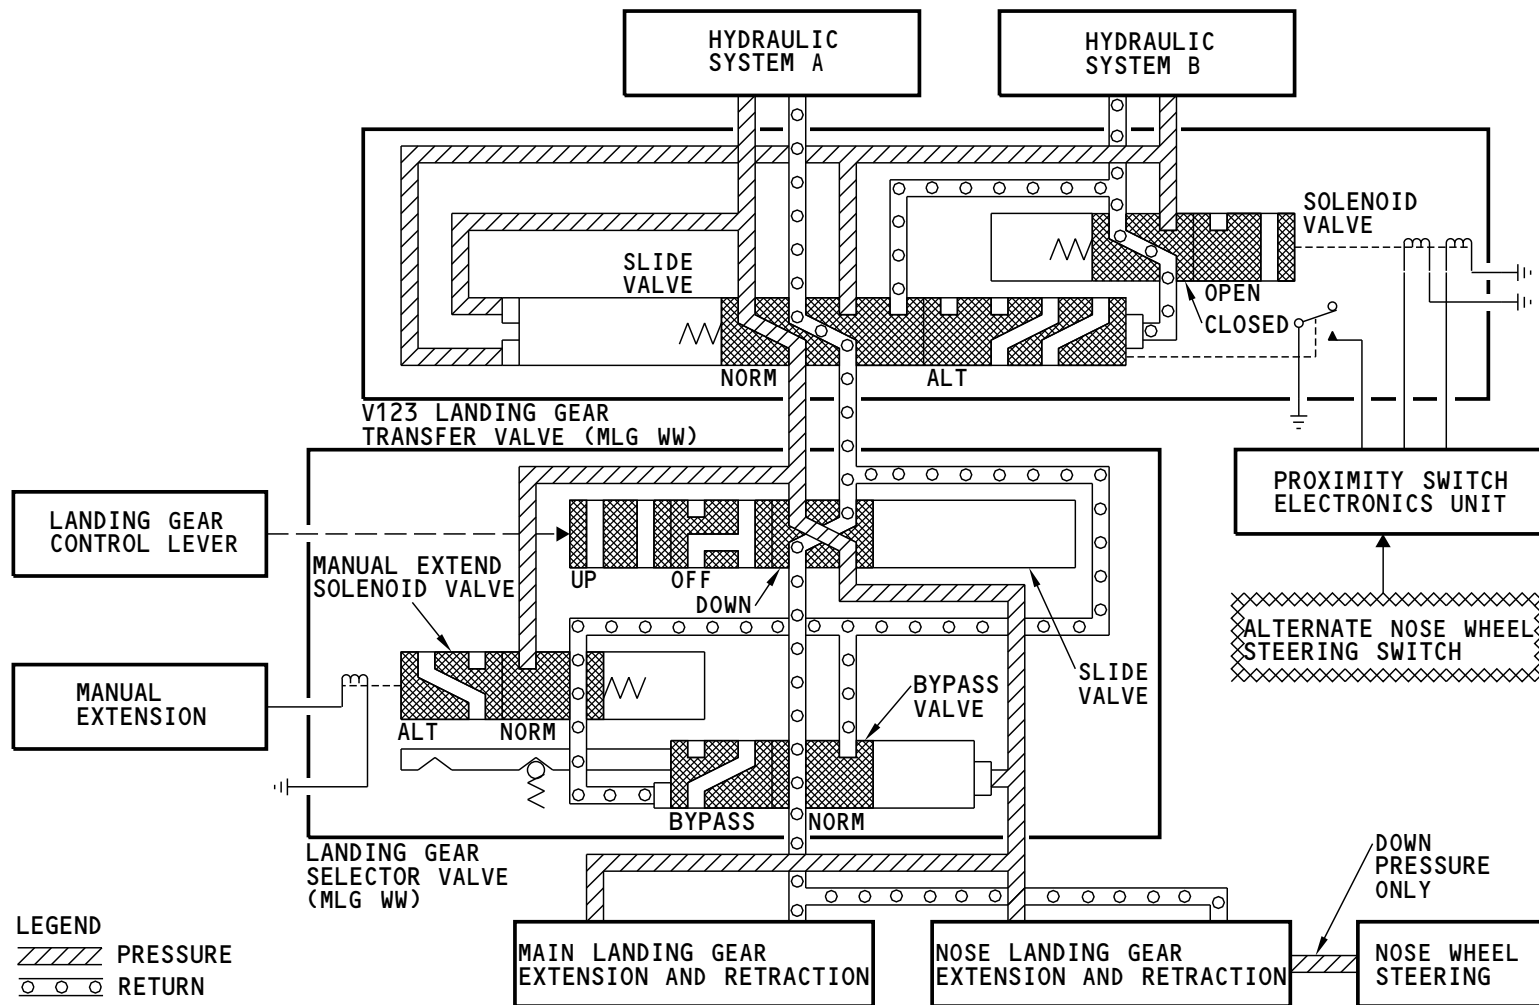

M84892 S0004627853\_V1

## LANDING GEAR CONTROL SYSTEM - FUNCTIONAL DESCRIPTION - HYDRAULIC

32-31-00





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-32-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## MLG EXTENSION AND RETRACTION - GENERAL DESCRIPTION

### General

Hydraulic system A normally supplies pressure to extend and retract the main landing gear. Hydraulic system B supplies alternate pressure for retraction only. The landing gear transfer valve controls the pressure source (hydraulic system A or hydraulic system B) to supply the main landing gear.

The shimmy damper decreases main landing gear shimmy. The shimmy damper is connected to the return line between the landing gear selector valve and the landing gear transfer valve.

See the MLG and Doors section for more information about the shimmy damper. (SECTION 32-10)

The landing gear selector valve supplies up or down pressure to retract or extend the main landing gear. The landing gear lever controls the landing gear selector valve.



#### **WARNING**

MAKE SURE ALL PERSONS AND EQUIPMENT ARE CLEAR OF THE MAIN LANDING GEAR. FAST MOVEMENT OF THE MAIN LANDING GEAR CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

Up pressure goes to the alternate and gear retract brake system. This stops wheel rotation during main landing gear retraction.

See the Wheels and Brakes section for more information about the gear retract brake system. (SECTION 32-41)

### Components

These are the main landing gear extension and retraction components:

- Main landing gear actuator (2)
- Uplock mechanism (2) and uplock actuator (2)
- Downlock actuator (2)
- Transfer cylinder (2)
- Frangible fitting (2)
- Fuse (2).

### MLG Actuator

The main landing gear actuator moves the gear up and down.

### Uplock Mechanism and Actuator

The uplock actuator unlocks the uplock mechanism during extension.

### Downlock Mechanism and Actuator

The downlock actuator locks the main landing gear during extension and unlocks the main landing gear during retraction.

### Transfer Cylinder

The transfer cylinder gives a time delay to permit the main landing gear to unlock before the main gear actuator moves the gear.

### Frangible Fitting

The frangible fitting removes up pressure from the main landing gear actuator when a damaged, spinning tire moves into the main landing gear wheel well. This prevents damage to components in the wheel well.

### Fuse

The fuse prevents hydraulic system fluid loss when the frangible fitting operates.


# 32-32-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

### MLG EXTENSION AND RETRACTION - GENERAL DESCRIPTION

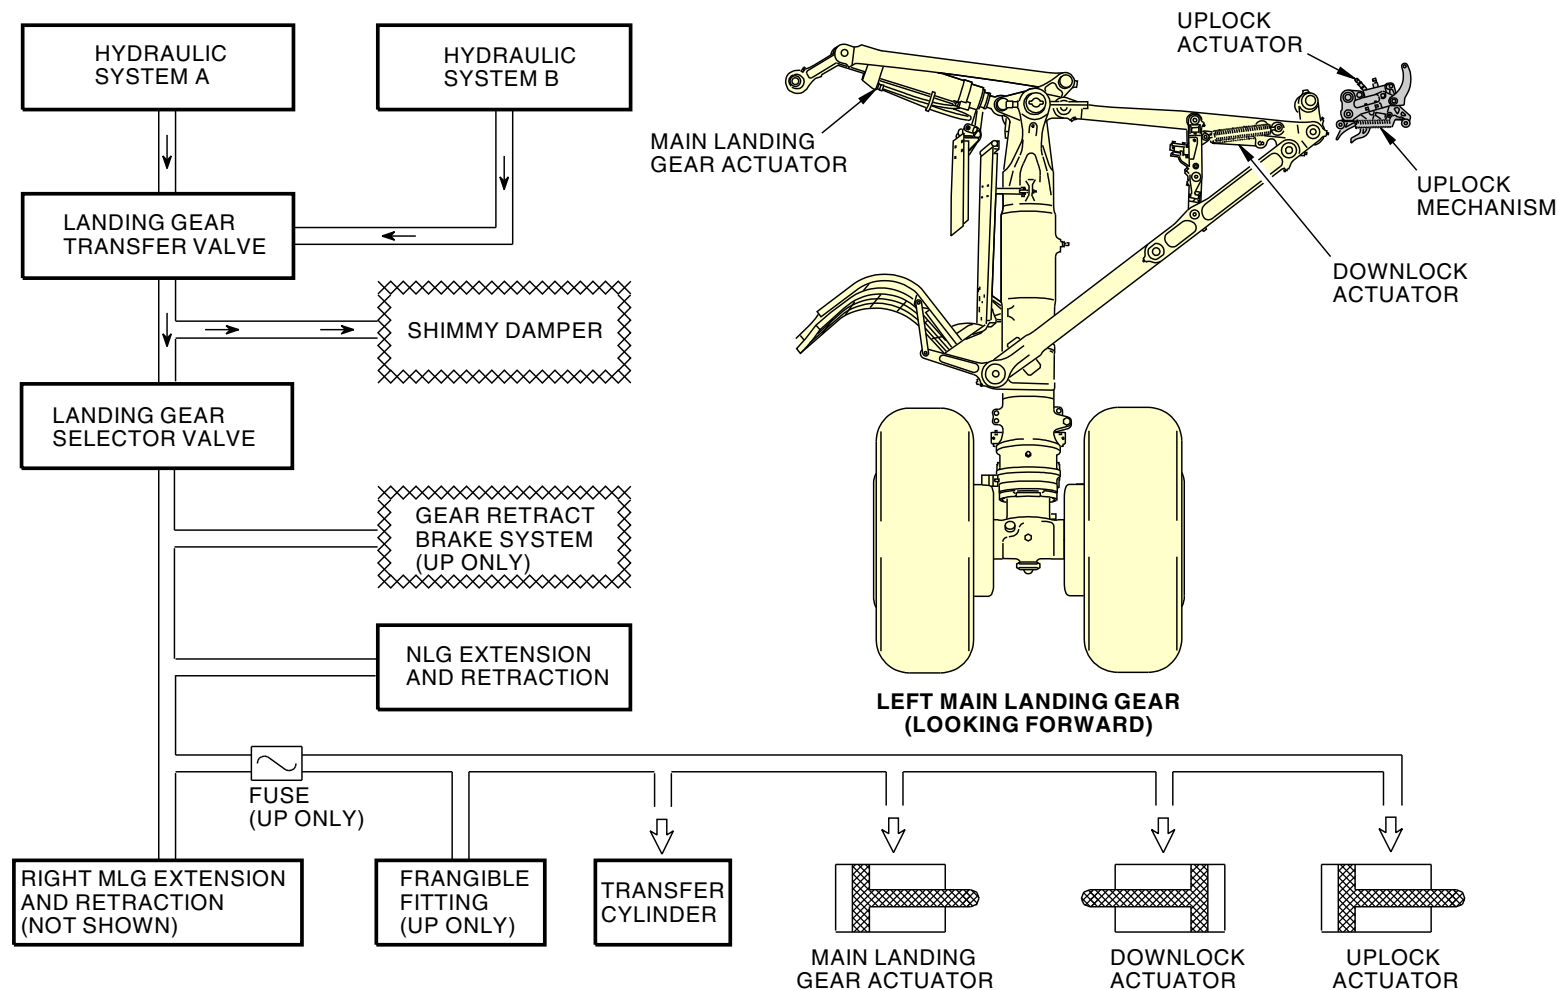

M84893 S0004627857\_V2

### MLG EXTENSION AND RETRACTION - GENERAL DESCRIPTION

32-32-00-001

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-32-00

## MLG EXTENSION AND RETRACTION - OPERATION

### Retraction

This is the retraction sequence for the main landing gear:

- Landing gear control lever moved to UP
- Transfer cylinder strokes
- Downlock actuator extends
- Downlock mechanism unlocks
- Main landing gear actuator extends
- Main landing gear retracts
- Uplock roller moves into uplock mechanism
- Uplock mechanism locks
- Landing gear control lever moved to OFF.

When the landing gear control lever is in the UP position, hydraulic pressure pressurizes the MLG up lines through the selector valve to the MLG transfer cylinders and MLG downlock actuators. The transfer cylinders stroke. This delays full pressurization to the MLG actuators until the downlock actuators unlock the downlock mechanism. After the downlocks unlock, pressure increases in the head end of the MLG actuators and they extend to retract the landing gear.

As the landing gear gets to the up position, the restrictor decreases the flow of fluid that goes into the head end of the MLG actuators. The roller on the MLG strut touches the uplock hook and turns the hook and uplock mechanism to the locked position. This locks the MLG in the retracted position.

The landing gear lever is moved to the OFF position and the normal landing gear hydraulic system is depressurized.

- Main landing gear actuator retracts
- Main landing gear extends
- Downlock actuator retracts
- Downlock mechanism locks.

When the landing gear control lever is in the DOWN position, hydraulic pressure pressurizes the MLG down lines through the selector valve to the MLG transfer cylinders and MLG downlock actuators. The transfer cylinders stroke. This delays full pressurization to the MLG actuators until the uplock actuators unlock the uplock mechanism. After the uplocks unlock, pressure increases in the rod-end of the MLG actuators and they retract. The landing gear extends by actuator force, landing gear weight, and airloads.

As the landing gear gets to the down position, the restrictor decreases the flow of fluid that leaves the head-end of the MLG actuators. The downlock actuators and downlock springs move the downlock mechanism to the locked position to lock the MLG in the extended position.

When the landing gear lever is in the DOWN position, the downlock actuators, MLG actuators, uplock actuators, and transfer cylinders remain pressurized.

### Extension




This is the extension sequence for the main landing gear:

- Landing gear control lever moved to DOWN
- Uplock actuator retracts
- Uplock mechanism unlocks

# 32-32-00

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

MLG EXTENSION AND RETRACTION - OPERATION

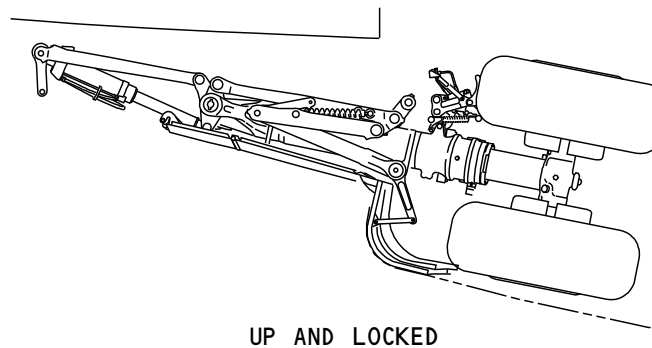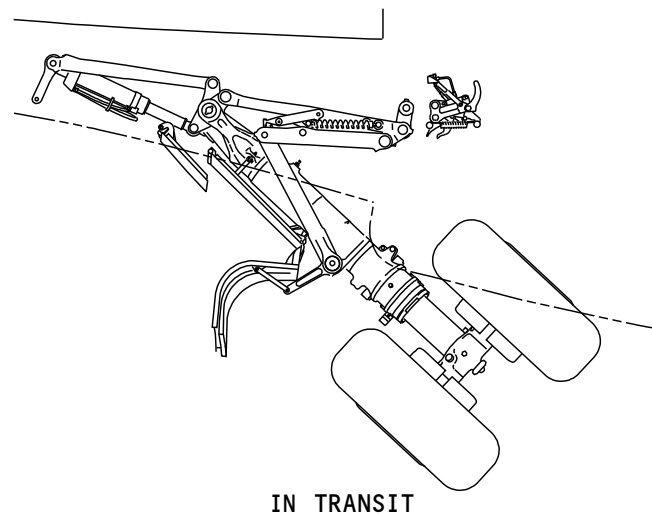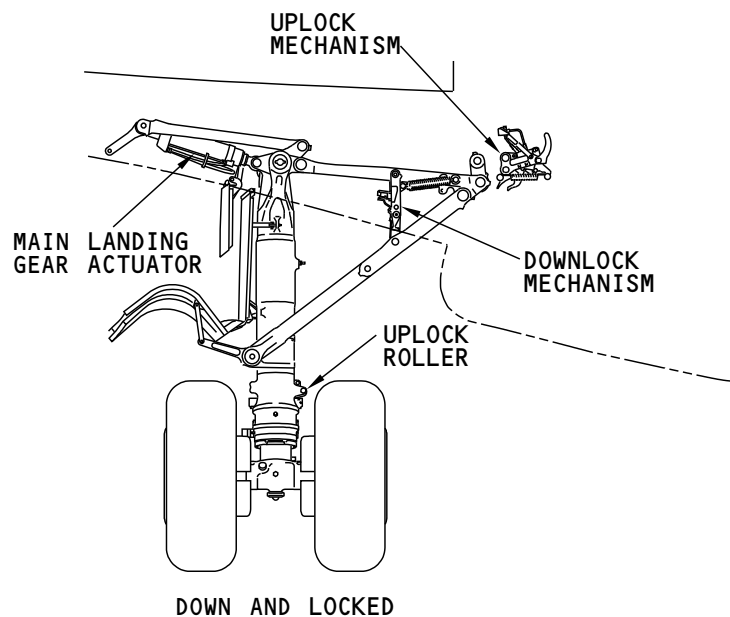

M84992 S0004627859\_V1

MLG EXTENSION AND RETRACTION - OPERATION

32-32-00-002

SIA ALL

EFFECTIVITY

**32-32-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**MLG EXTENSION AND RETRACTION - MAIN LANDING GEAR ACTUATOR****Purpose**

The main landing gear actuator with a walking beam applies a force to the landing gear trunnion to retract and extend the main landing gear.

**Location**

The main landing gear actuator is outboard of the main landing gear shock strut. The head end attaches to a beam hanger and walking beam pivot on the wing structure outboard of the shock strut. The rod end attaches to a fitting on the main landing gear shock strut at the trunnion.

**Physical Description**

The main landing gear actuator is a double-acting, unbalanced-type actuator. It contains an internal, variable orifice slide/sleeve snubber in the head-end to control the rate of the gear.

The hydraulic connections to the actuator are different sizes. This prevents incorrect connection of the hydraulic hoses when you remove and replace the actuator.

The actuator weighs 42 pounds (19 kg).

**Functional Description**

The actuator and walking beam work together to raise and lower the main landing gear. The walking beam decreases the force that goes to the structure during actuator operations.

When the main gear retracts, the inboard force from the actuator rod end is applied directly to the gear. The outboard reaction force from the cylinder of the actuator is transmitted to the shock strut through the walking beam. Action and reaction forces combine together and provide the power to raise the gear. The reaction force that results rotates the gear around its trunnion axis. Forces caused by the rotation are transmitted to the structure through the beam hanger.

During extension, the forces operate in the opposite direction to extend the gear.


The restrictor on the up pressure port of the actuator decreases the flow of fluid from the actuator to 8 gpm (30 lpm) during gear extension. This prevents an uncontrolled main landing gear extension when a hydraulic hose or tube fails. The check valve permits full flow into the actuator during landing gear retraction.

**Training Information Point**

Remove the outer door when you remove and install the main landing gear actuator. This makes access to the actuator easier.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

**MLG EXTENSION AND RETRACTION - MAIN LANDING GEAR ACTUATOR**

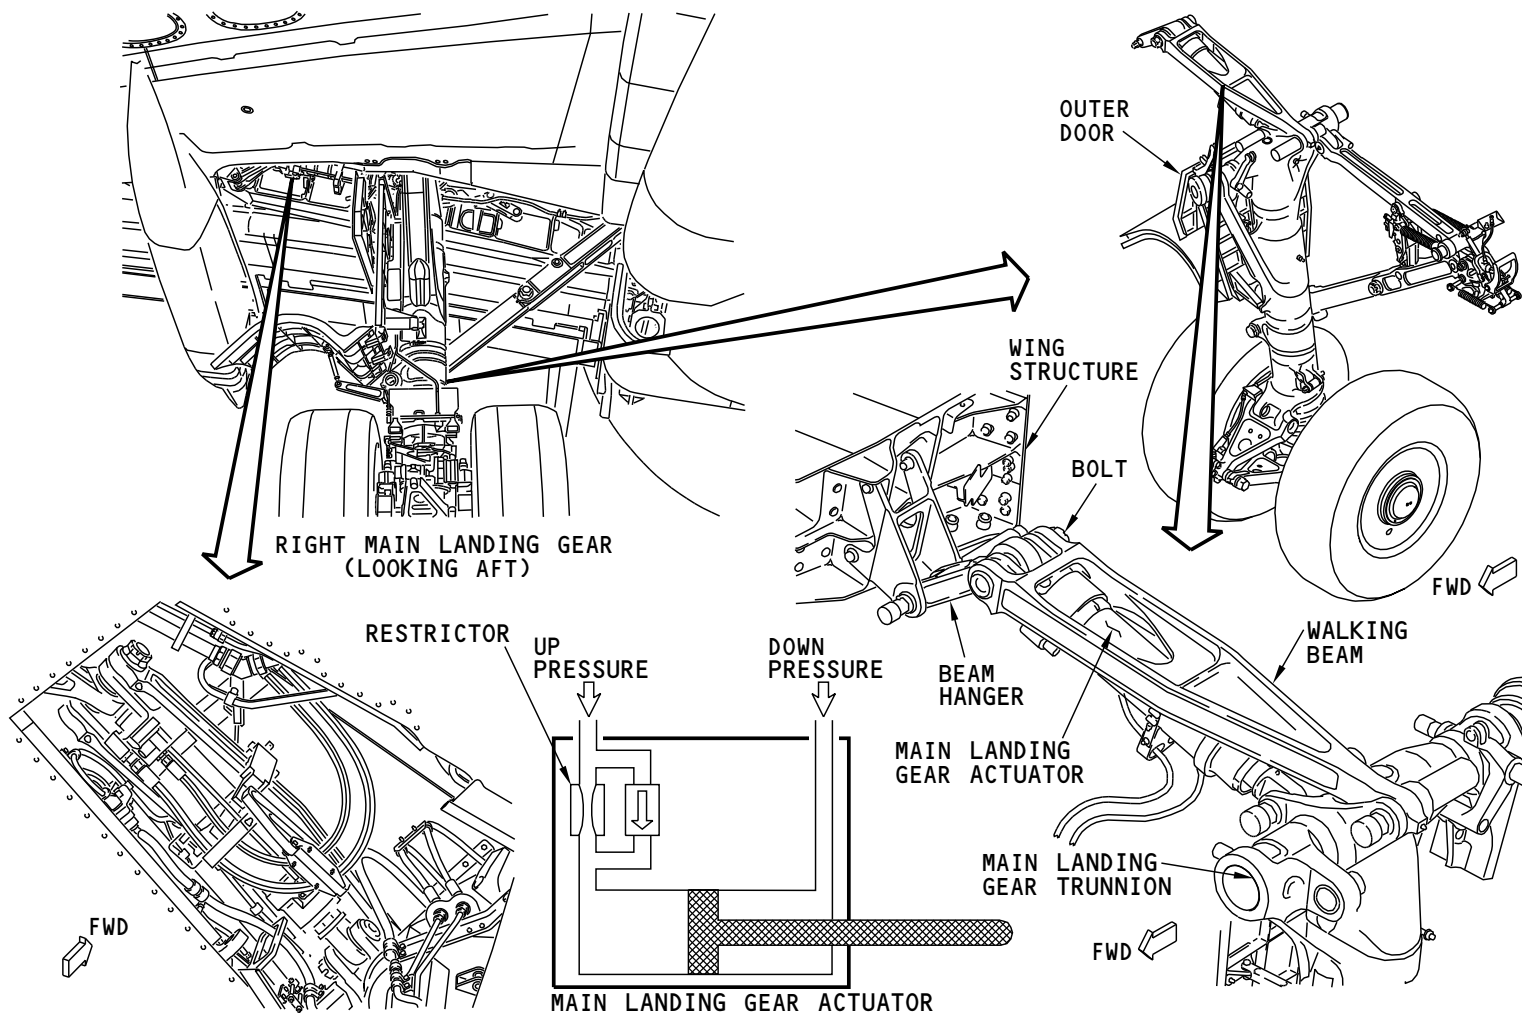

M84894 S0004627861\_V1

**MLG EXTENSION AND RETRACTION - MAIN LANDING GEAR ACTUATOR**

32-32-00-003

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-32-00**

**MLG EXTENSION AND RETRACTION - UPLOCK MECHANISM AND ACTUATOR****Purpose**

The MLG uplock mechanism holds the main landing gear in the up and locked position.

The MLG uplock actuator unlocks the MLG uplock mechanism during main landing gear extension.

**Location**

There are two MLG uplock mechanisms, one for each MLG, on the ceiling on the outboard edges of the main landing gear wheel well.

The MLG uplock actuators attach horizontally above the MLG uplock mechanisms.

**Physical Description**

The MLG uplock actuator is a two-position, piston-type, single-acting, unbalanced-type actuator.

The main landing gear uplock mechanism has these main components:

- Uplock hook
- Springs (2)
- Uplock actuator.

**Functional Description**

Hydraulic pressure retracts the MLG uplock actuator. This controls movement of the MLG uplock mechanism to the unlocked position.

The MLG uplock actuator does not receive up pressure during landing gear retraction.


The MLG uplock mechanism uses over-center locking to keep the main landing gear up and locked. Two springs hold the uplock hook in the up and locked position.

**Training Information Point**

After removal and installation of the uplock actuator, you must extend and retract the main landing gear several times. This operation will bleed the air from the uplock actuator and the lines. Examine for correct gear operation.

|         |             |
|---------|-------------|
| SIA ALL | EFFECTIVITY |
|---------|-------------|

## MLG EXTENSION AND RETRACTION - UPLOCK MECHANISM AND ACTUATOR

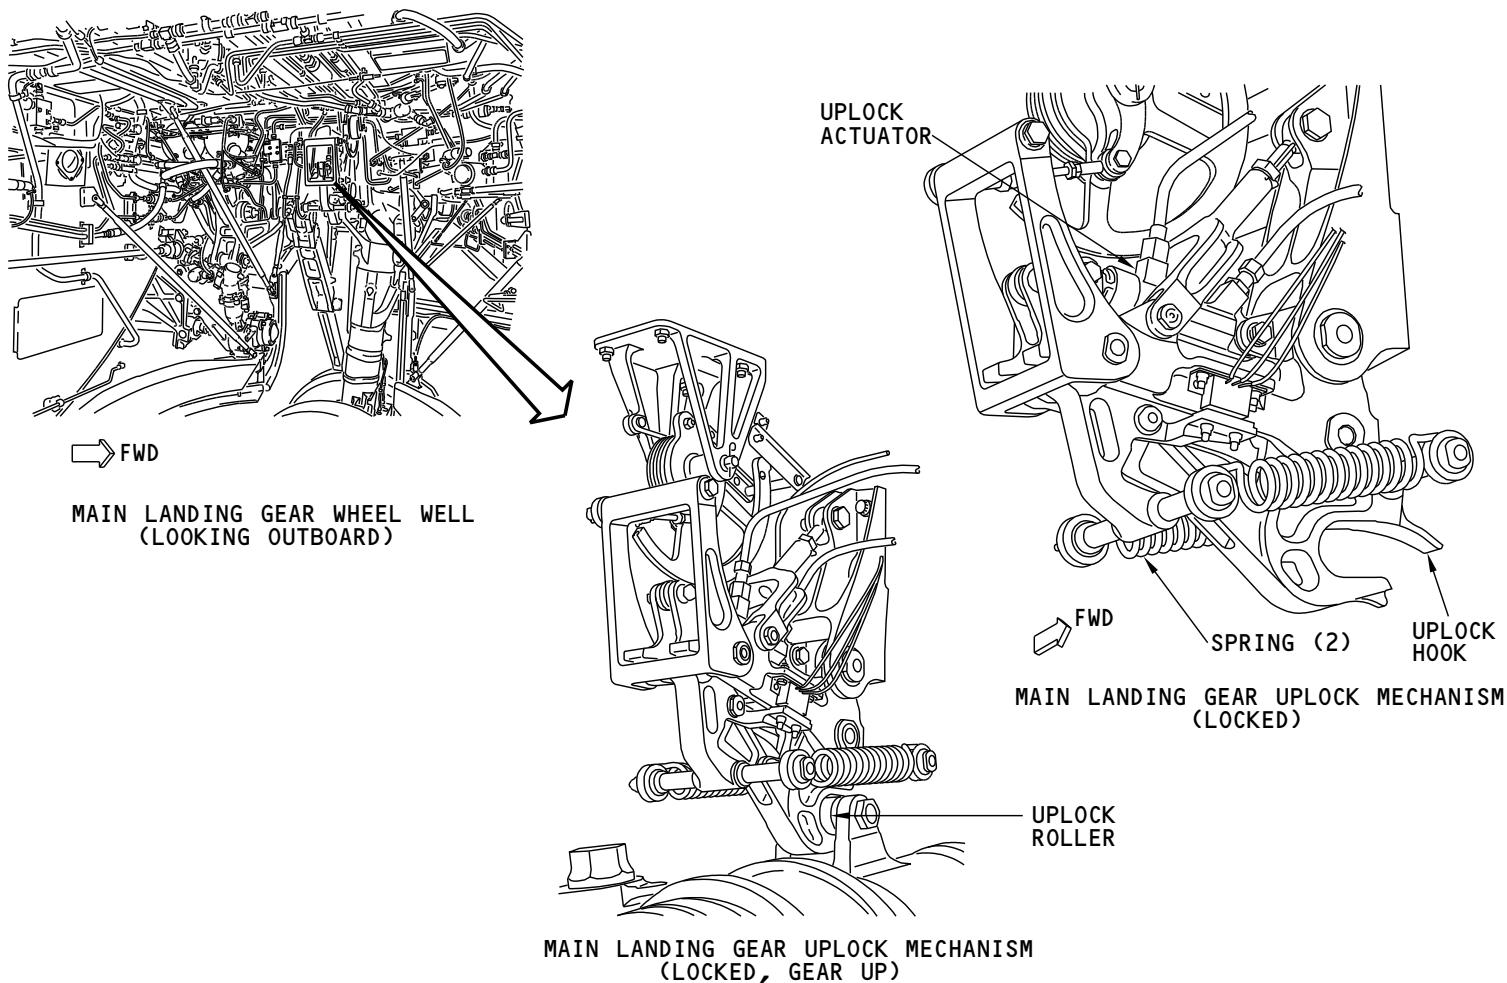

M84993 S0004627863\_V1

## MLG EXTENSION AND RETRACTION - UPLOCK MECHANISM AND ACTUATOR

32-32-00



**MLG EXTENSION AND RETRACTION - UPLOCK MECHANISM AND ACTUATOR - FUNCTIONAL DESCRIPTION**

**General Description**

The MLG uplock mechanism uses over-center locks to keep the main landing gear up and locked.

The MLG uplock actuator retracts to unlock the main landing gear.

**Main Landing Gear Extension**

During main landing gear extension, the MLG uplock actuator receives down pressure to retract. The actuator moves the uplock mechanism to the unlocked position.

**Main Landing Gear Retraction**

During main landing gear retraction, the roller on the MLG shock strut engages the uplock hook, this moves the uplock mechanism to the over-center and locked position. Lock springs hold the mechanism in the up and locked position.

The restrictor in the down port of the actuator slows the movement of the uplock mechanism when the roller moves into the uplock hook. The restrictor reduces flow to .41 gpm at 3000 psi.

32-32-00-005


| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-32-00**

## MLG EXTENSION AND RETRACTION - UPLOCK MECHANISM AND ACTUATOR - FUNCTIONAL DESCRIPTION

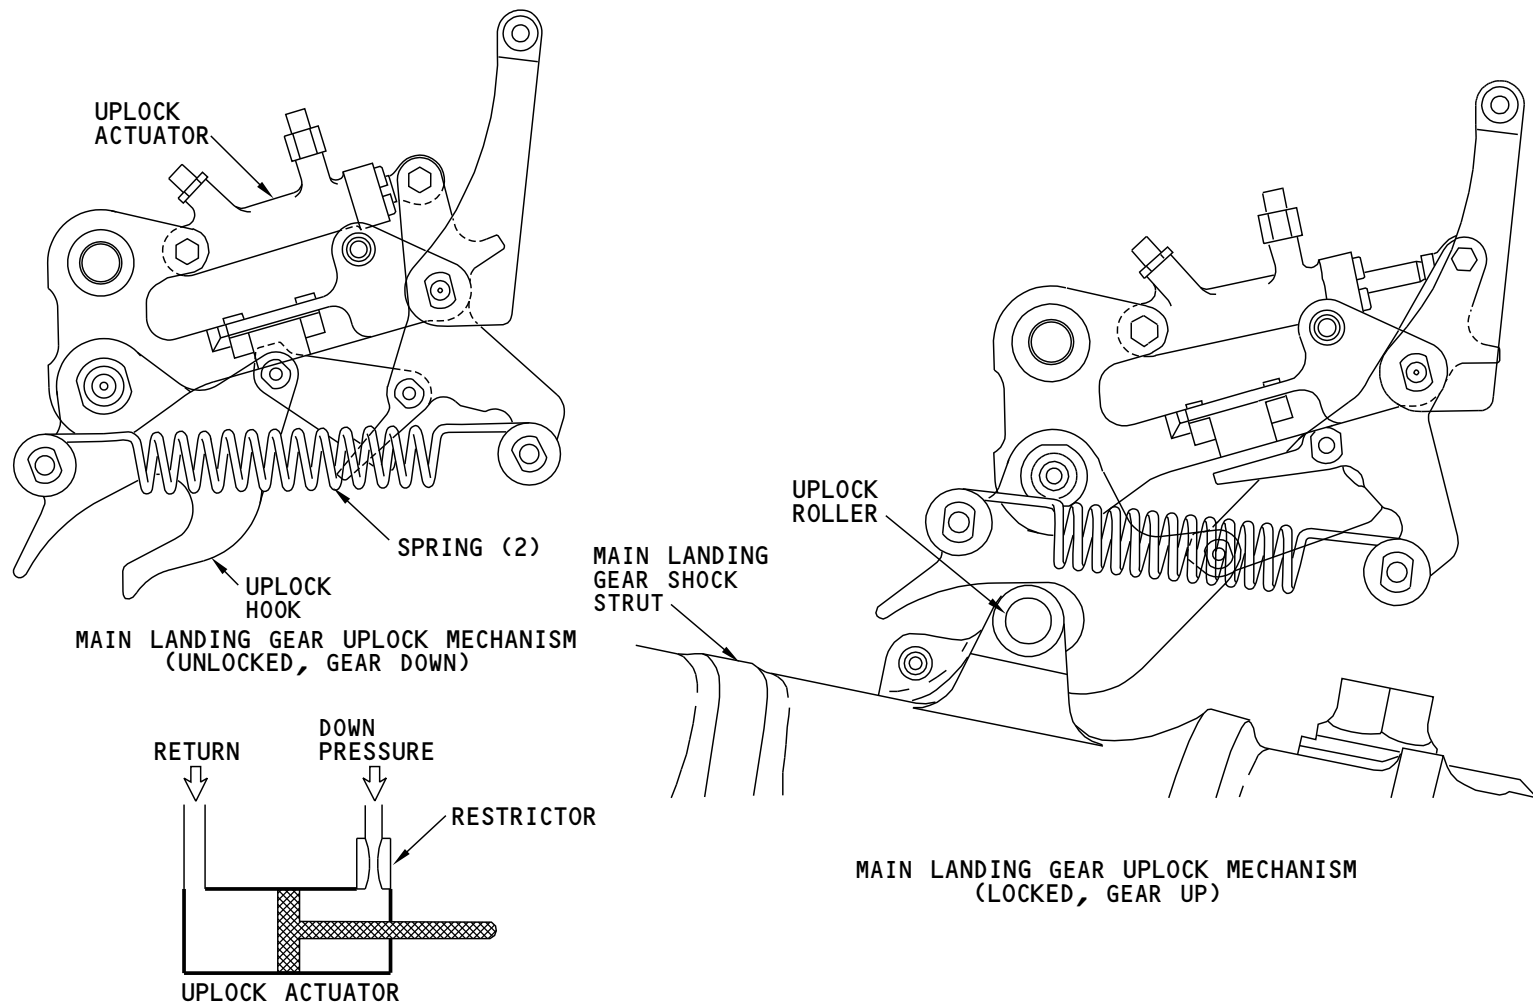

M84895 S0004627865\_V1

## MLG EXTENSION AND RETRACTION - UPLOCK MECHANISM AND ACTUATOR - FUNCTIONAL DESCRIPTION

32-32-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



MLG EXTENSION AND RETRACTION - DOWNLOCK MECHANISM AND ACTUATOR

General

The MLG downlock mechanism holds the main landing gear in the down and locked position.

The downlock springs hold the downlock mechanism in an over-center locked position when the main landing gear moves to the down and locked position.

The downlock actuator locks and unlocks the downlock mechanism during main landing gear extension and retraction.

Location

The main landing gear downlock mechanism and downlock actuator are between the reaction link and upper side strut.

Physical Description

The downlock springs attach to the inboard side of the reaction link and to the downlock mechanism.

The downlock actuator is a piston-type, double-acting, unbalanced actuator. The body of the downlock actuator attaches to the inboard side of the reaction link. The rod end of the downlock actuator attaches to the downlock mechanism.

The downlock actuator has a restrictor relief valve at the body end of the actuator that decreases the flow to 0.26 gpm at 2550 psi. The relief valve opens at 2800 - 3100 psi.

The downlock actuator has a restrictor check valve at the rod end of the actuator that decreases the flow to 0.29 gpm at 3000 psi.

Functional Description

During main landing gear extension, the downlock actuator receives down pressure to retract. The actuator retracts to lock the downlock mechanism during main landing gear extension.

During main landing gear retraction, the downlock actuator receives up pressure to extend. The actuator extends to unlock the downlock mechanism during main landing gear retraction.

Training Information Point

After removal and installation of the uplock actuator, you must extend and retract the main landing gear several times. This will bleed the air from the uplock actuator and the lines. Examine for correct gear operation.


| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

32-32-00

32-32-00-006

**MLG EXTENSION AND RETRACTION - DOWNLOCK MECHANISM AND ACTUATOR**

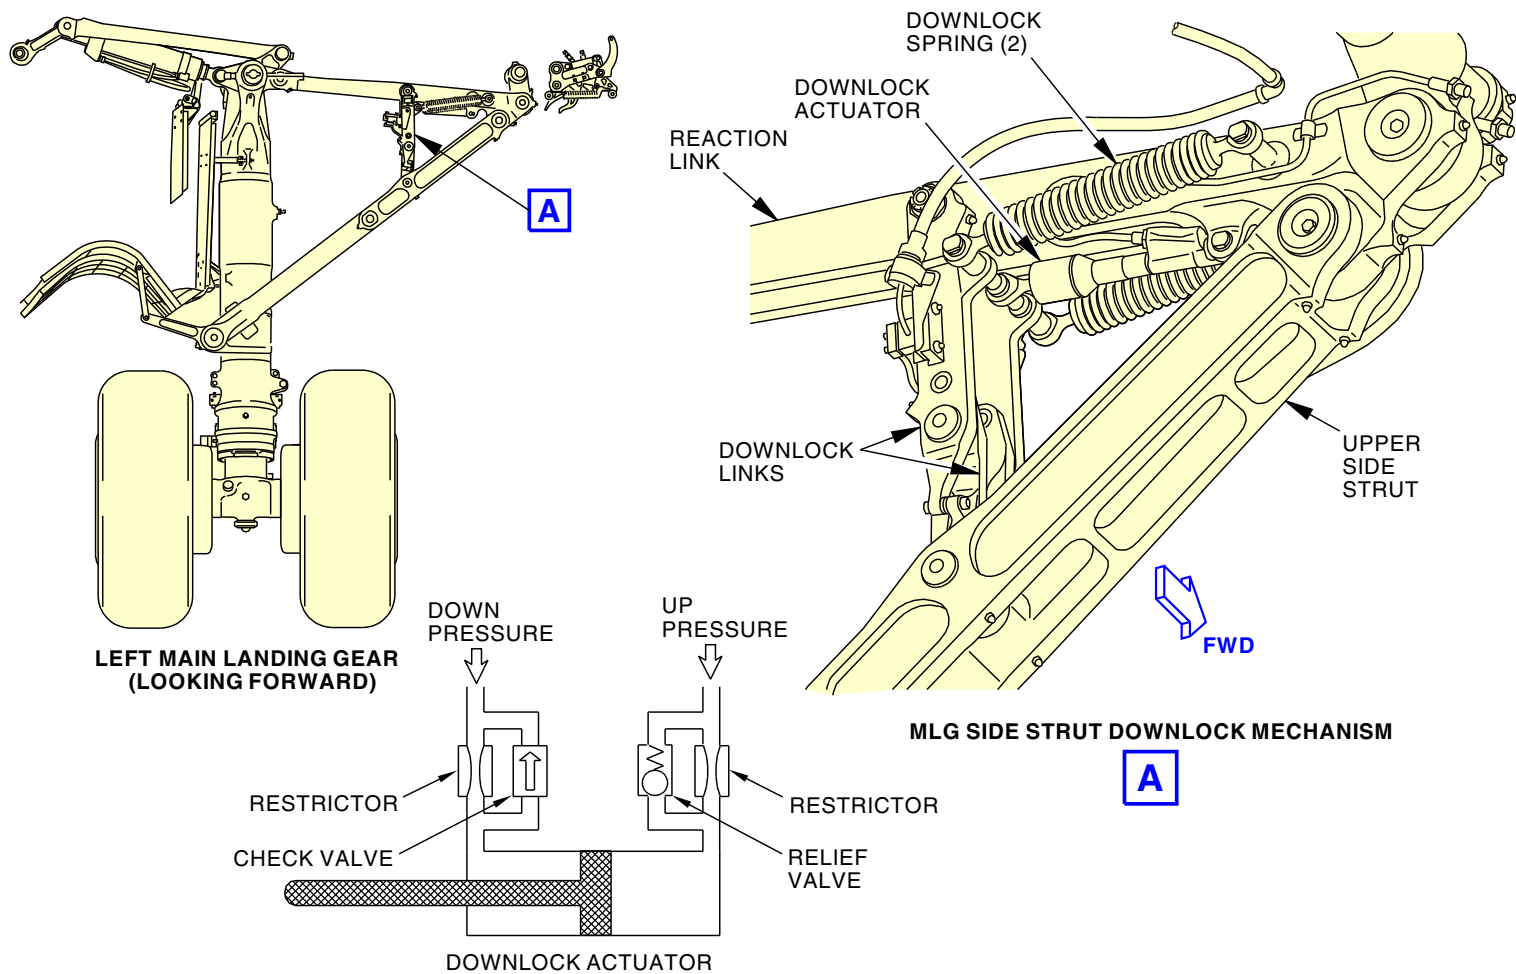

M84896 S0004627867\_V2

**MLG EXTENSION AND RETRACTION - DOWNLOCK MECHANISM AND ACTUATOR**

**MLG EXTENSION AND RETRACTION - TRANSFER CYLINDER****Purpose**

During the extension and retraction sequences, the transfer cylinder gives a time delay. This lets the main landing gear downlock or uplock actuators unlock before the main gear actuator receives pressure.

**Location**

The transfer cylinder is on the rear spar of the left and right wings.

**Physical Description**


The transfer cylinder has a piston that moves freely in the cylinder. One side of the piston connects to the down pressure. The other side connects to the up pressure.

**Functional Description**

The piston moves when up or down pressure goes to the transfer cylinder. When the piston moves, it pushes fluid on the side that does not have pressure. This gives a time delay to the extend or retract side of the main gear actuator and the downlock actuator.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

**MLG EXTENSION AND RETRACTION - TRANSFER CYLINDER**

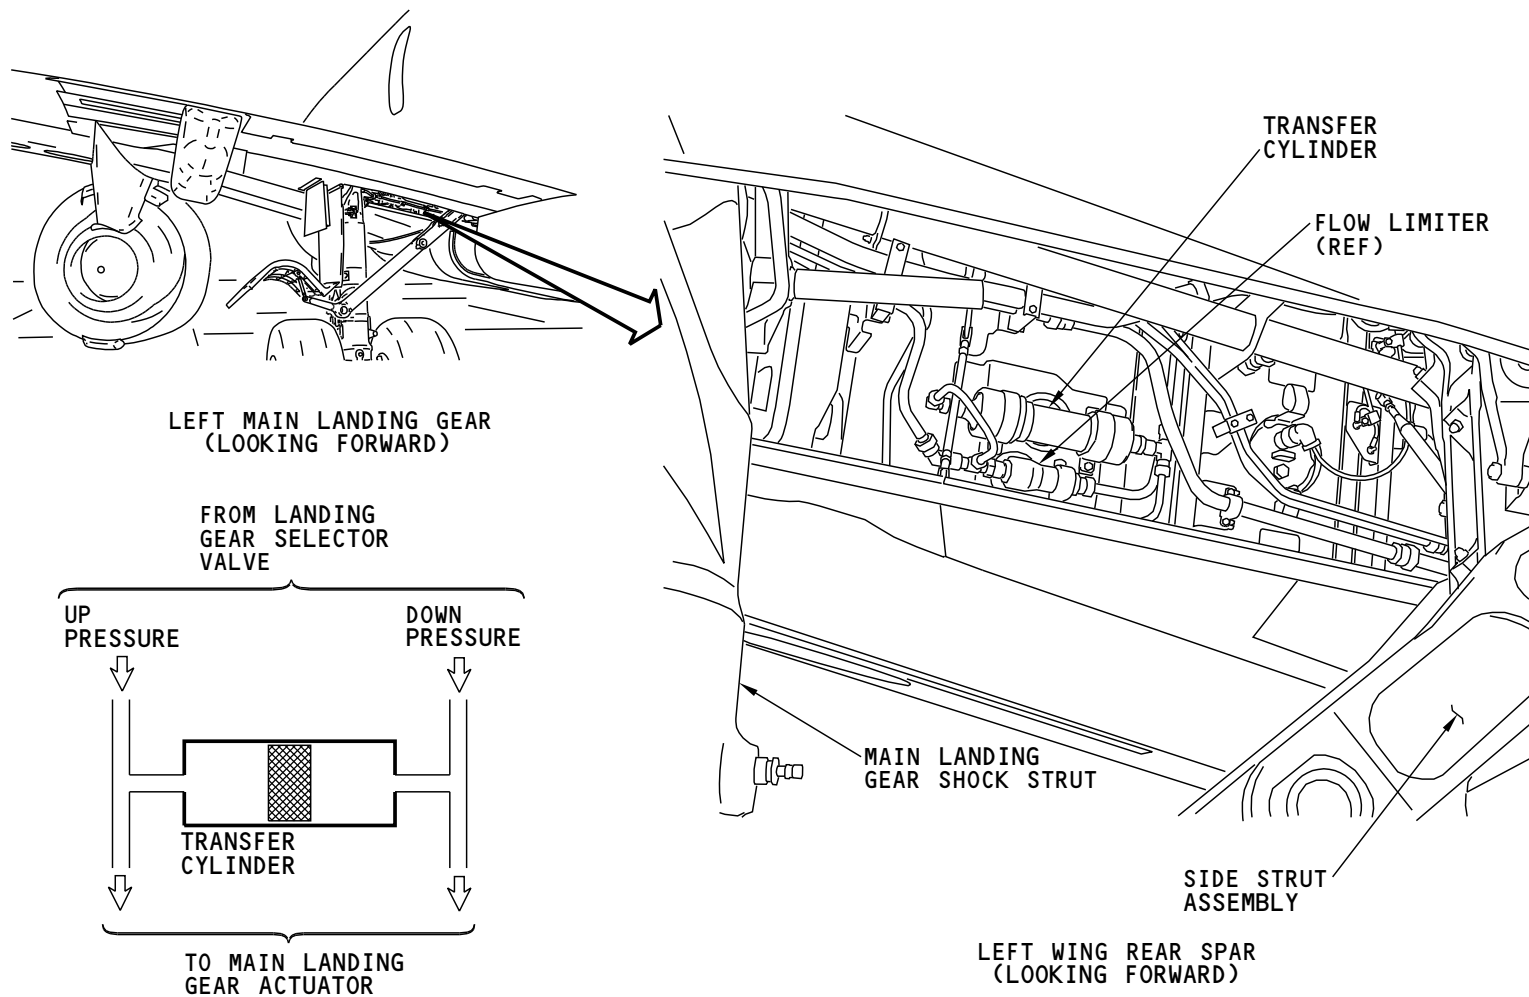

M84897 S0004627869\_V1

**MLG EXTENSION AND RETRACTION - TRANSFER CYLINDER**

**MLG EXTENSION AND RETRACTION - FRANGIBLE FITTING****Purpose**

The frangible fitting removes up pressure from the main landing gear actuator when a damaged, spinning tire moves into the main landing gear wheel well. This prevents damage to components in the wheel well.

**Location**

There is a frangible fitting on the outboard side of both wheel well rings in the main landing gear wheel well.

**Physical Description**

The frangible fitting is a normally closed valve. It opens when a force removes the lever from the fitting.


**Functional Description**

The frangible fitting operates during this sequence of events:

- A section of tread partially separates from a main landing gear tire
- Landing gear starts to retract
- Gear retract braking has a fault and does not stop the wheel before it moves into the wheel well
- The section of tread removes the lever from the frangible fitting
- Frangible fitting opens
- Up pressure is removed from the main landing gear actuator
- Main landing gear that has the damaged tire stops retraction and moves towards the extended position
- Flow limiter in the up pressure line limits the flow to 8 gpm (30 lpm) from the volume fuse to the frangible fitting and MLG actuator
- Volume fuse in the up pressure line closes when the hydraulic flow through the frangible fitting increases to 180-250 cubic inches (3-4 liters). This stops the loss of fluid from the hydraulic system.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

**MLG EXTENSION AND RETRACTION - FRANGIBLE FITTING**

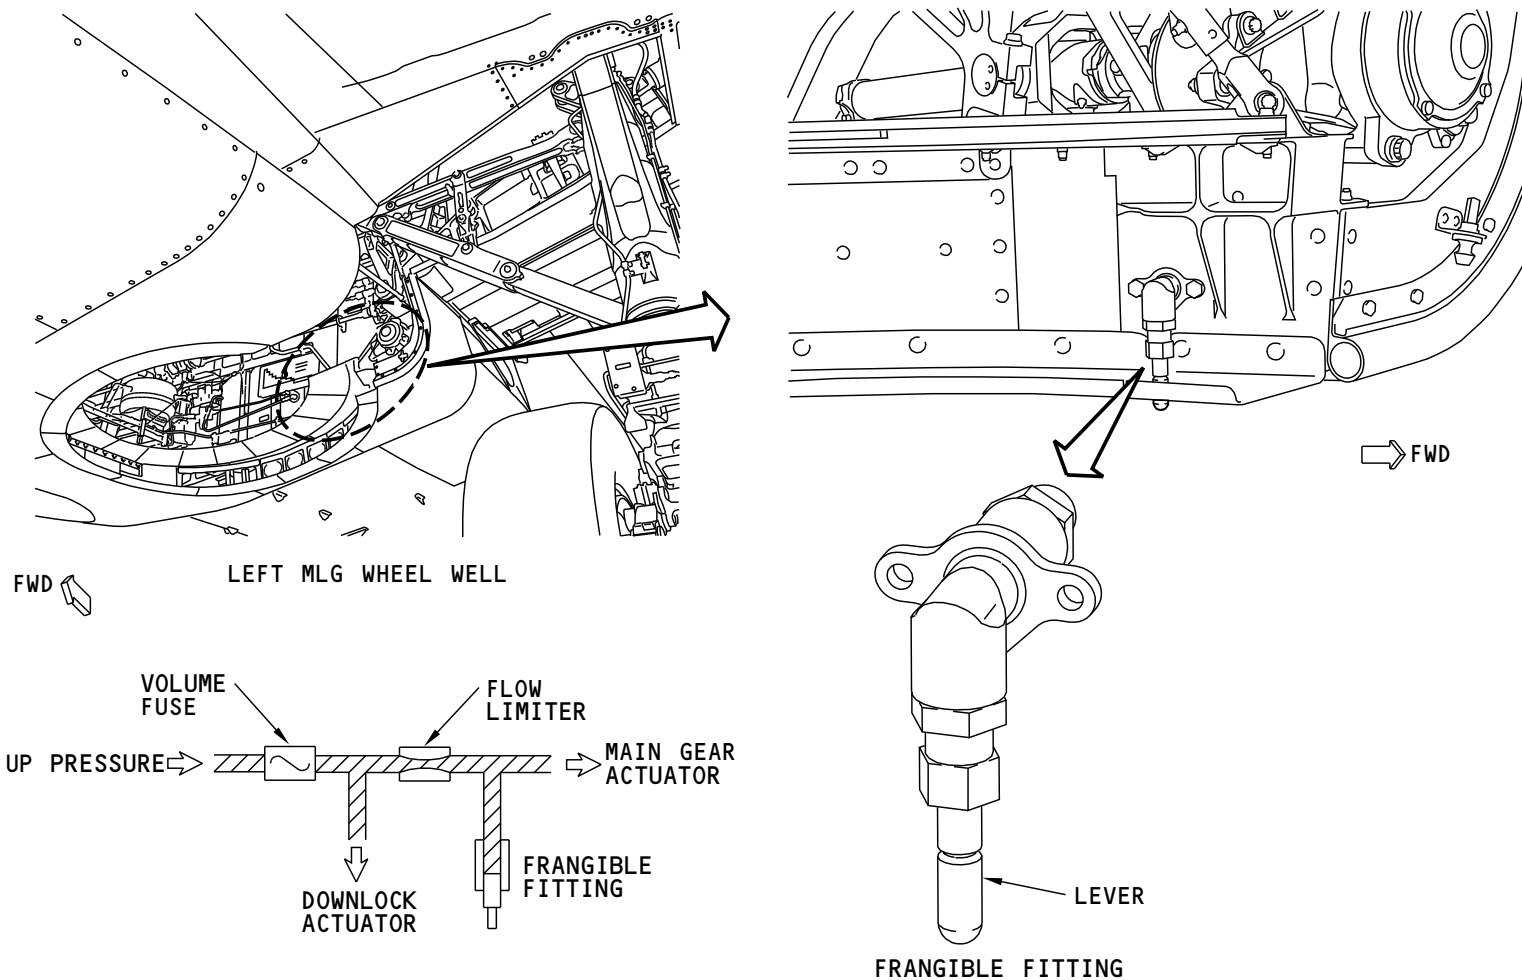

M84994 S0004627871\_V1

**MLG EXTENSION AND RETRACTION - FRANGIBLE FITTING**

**32-32-00**

## MLG EXTENSION AND RETRACTION - FUNCTIONAL DESCRIPTION

### General

The extension and retraction sequence is the same for the left and the right main landing gear.

The MLG extension and retraction system includes these hydraulic components:

- Main landing gear actuator
- Downlock actuator
- Uplock actuator
- Transfer cylinder
- Frangible fitting.

### Extension

The landing gear selector valve supplies down pressure when the landing gear lever moves to the down position.

Down pressure goes to the transfer cylinder. This sets the piston in the transfer cylinder to move to the up side. This gives a time delay to let the uplock actuator unlock the uplock mechanism. The restrictor/check valve controls the transfer cylinder rate.

Down pressure also goes to the uplock actuator. The uplock actuator retracts and this unlocks the uplock mechanism.

The shimmy damper decreases main landing gear shimmy. The shimmy damper connects to the return line between the landing gear selector valve and the landing gear transfer valve.

See the MLG and doors section for more information about the shimmy damper. (SECTION 32-10)

When the transfer cylinder piston comes to the end of the up side, down pressure goes to the down side of the gear actuator. The gear actuator applies an extension force on the main landing gear and moves it down.

Down pressure goes to retract the downlock actuator. The downlock actuator moves the downlock strut to the locked position as the main landing gear extends.

### Retraction

The landing gear selector valve supplies up pressure when the landing gear lever moves to the up position.

A flow limiter in the up pressure line limits the flow to the main landing gear actuator to 8 gpm (30 lpm). The flow limiter makes sure hydraulic system pressure stays normal for other airplane systems that also use hydraulic pressure. The flow limiter also controls the transfer cylinder rate and the main landing gear extension and retraction rate.

Up pressure goes to the transfer cylinder. This sets the piston in the transfer cylinder to move to the down side. This gives a time delay to let the downlock actuator extend to unlock the downlock strut.

Up pressure goes to the downlock actuator. The downlock actuator extends and unlocks the downlock strut.

When the transfer cylinder piston comes to the end of the down side, up pressure goes to the up side of the gear actuator. The gear actuator applies a retraction force on the main landing gear and moves it up.

As the gear uplock roller moves into the hook of the uplock mechanism, the uplock mechanism moves to the locked position. The uplock actuator does not get up pressure.

The frangible fitting removes up pressure from the main landing gear actuator if a damaged, spinning tire moves into the main landing gear wheel well. This prevents damage to components in the wheel well. A volume fuse in the up pressure line closes when the hydraulic flow from the frangible fitting increases to 180-250 cubic inches (3-4 liters). This prevents hydraulic fluid loss if there is a leak in the system.


Up pressure also goes to the alternate and gear retract brake system. This stops wheel rotation during main landing gear retraction.

See the Wheels and Brakes section for more information about the gear retract brake system. (SECTION 32-41)

**32-32-00**

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

### MLG EXTENSION AND RETRACTION - FUNCTIONAL DESCRIPTION

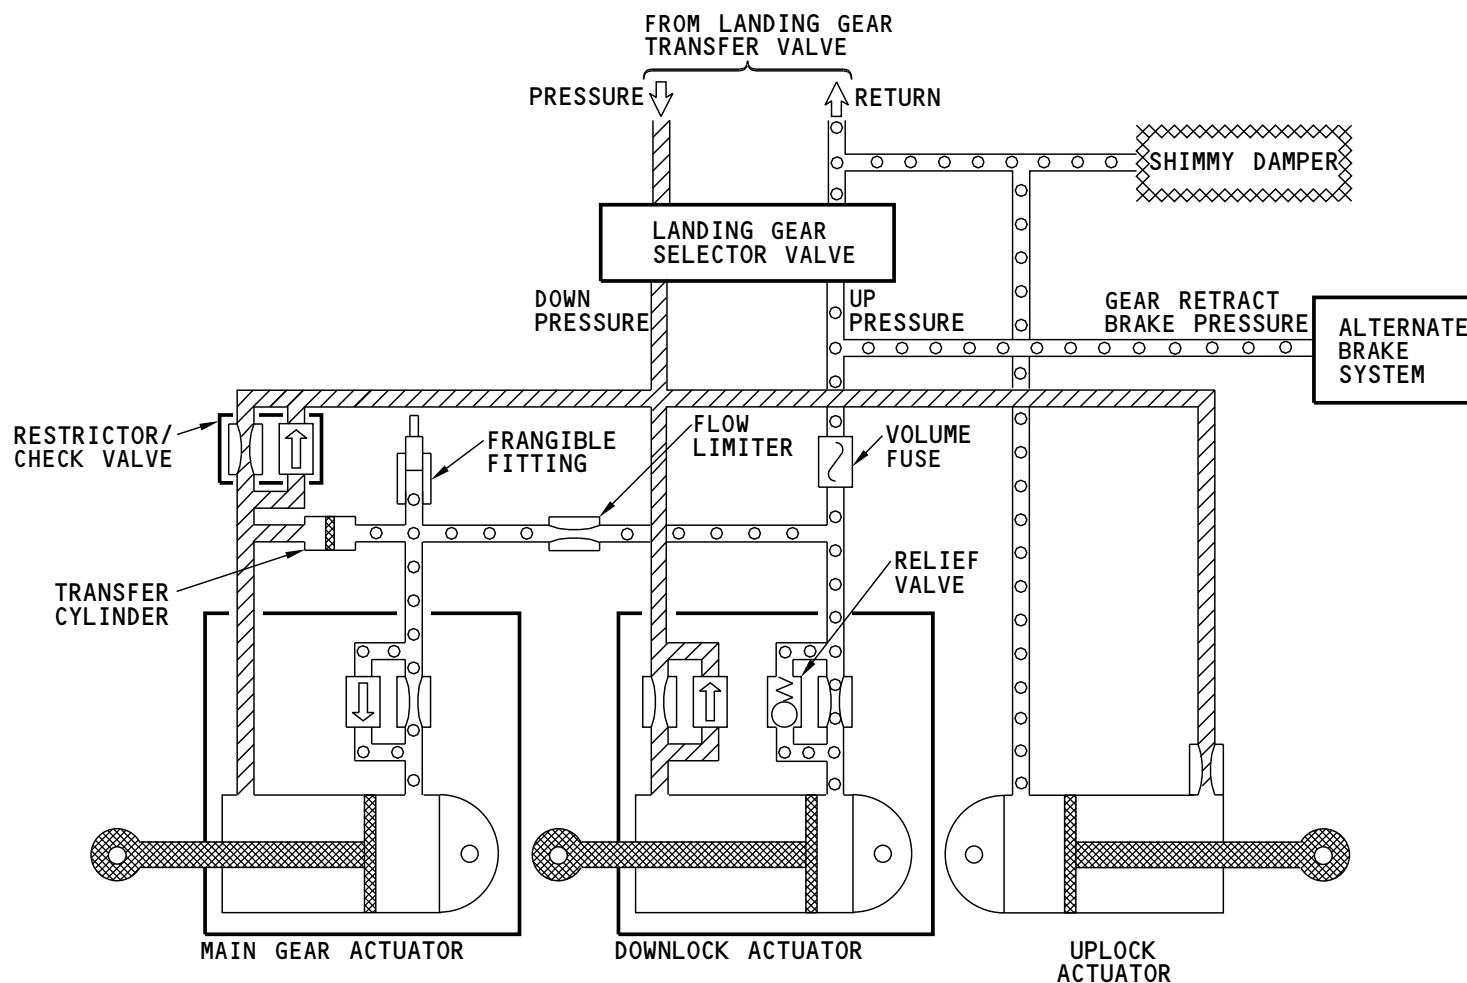

M84898 S0004627873\_V1

### MLG EXTENSION AND RETRACTION - FUNCTIONAL DESCRIPTION

32-32-00-008

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

32-32-00





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-33-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## NLG EXTENSION AND RETRACTION - GENERAL DESCRIPTION

### General

Hydraulic system A usually supplies pressure to extend and retract the nose landing gear. Hydraulic system B supplies alternate pressure for retraction only. The landing gear transfer valve controls the pressure source of hydraulic system A or hydraulic system B to supply the nose landing gear.

The landing gear selector valve supplies down or up pressure to extend or retract the nose landing gear. The landing gear control lever operates the landing gear selector valve.



**WARNING** MAKE SURE ALL PERSONS AND EQUIPMENT ARE CLEAR OF THE NOSE LANDING GEAR. FAST MOVEMENT OF THE NOSE LANDING GEAR CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.



**CAUTION** DO NOT TURN THE STEERING WHEEL WHEN THE SHOCK STRUT OF THE NOSE LANDING GEAR IS FULLY EXTENDED. YOU CAN CAUSE DAMAGE TO THE CENTERING CAMS IN THE SHOCK STRUT IF YOU DO THIS.

Pressure also goes to the nose wheel steering system. This allows for nose wheel steering rotation.

See the Nose Wheel Steering section for more information about nose wheel steering. (SECTION 32-51)

### Components

These are the components of the nose landing gear extension and retraction system:

- Nose landing gear actuator
- Lock actuator
- Lock mechanism
- Bungee spring
- Valve manifold
- Transfer cylinder

- Fuse (2).

### NLG Actuator

The nose landing gear actuator supplies the force to retract and extend the nose landing gear.

### Lock Mechanism and Lock Actuator

The NLG lock mechanism locks the NLG in the extended or the retracted position. Two bungee springs keep the lock links in this positions.

The lock actuator unlocks and locks the gear during extension and retraction.

### Valve Manifold

The valve manifold controls extension and retraction hydraulic fluid to the lock actuator.

### Transfer Cylinder

The transfer cylinder gives a time delay to let the nose landing gear unlock before the nose gear actuator moves the gear.


# 32-33-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

### NLG EXTENSION AND RETRACTION - GENERAL DESCRIPTION

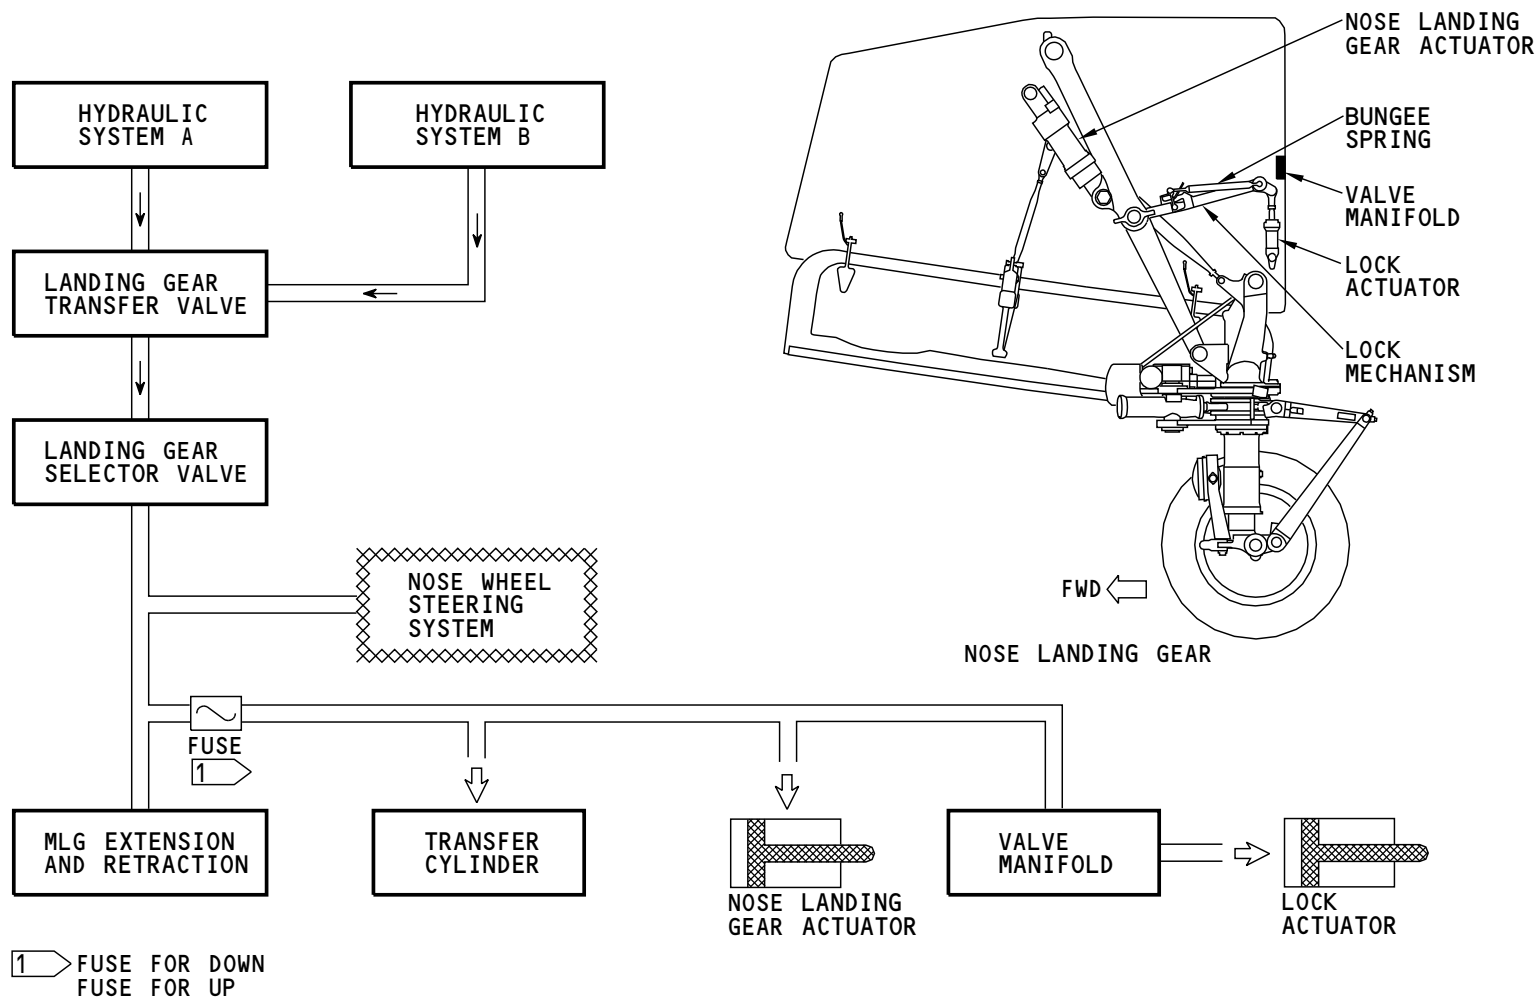

M84899 S0004627877\_V1

### NLG EXTENSION AND RETRACTION - GENERAL DESCRIPTION

32-33-00

## NLG EXTENSION AND RETRACTION - OPERATION

### Retraction

This is the retraction sequence for the nose landing gear (NLG) :

- Landing gear control lever moved to UP
- Lock actuator retracts
- Lock mechanism unlocks
- NLG actuator extends
- NLG retracts
- Lock actuator continues to retract
- Lock mechanism locks
- Landing gear control lever moved to OFF.

When the landing gear control lever is in the UP position, hydraulic pressure pressurizes the NLG up lines through the selector valve to the NLG transfer cylinder and NLG lock actuator. The transfer cylinder stroke delays full pressurization to the NLG actuator until the lock actuator unlocks the NLG lock links. After the lock links are unlocked, pressure increases in the head-end of the NLG actuator and it extends. This retracts the NLG.

As the NLG gets the up position, the restrictor decreases the flow of fluid that goes to the head-end of the NLG actuator. The NLG lock actuator and lock springs move the NLG lock links overcenter to the locked position. This locks the NLG in the retracted position.

The landing gear lever is moved to the OFF position and the normal landing gear hydraulic system is depressurized.

### Extension

This is the extension sequence for the NLG:

- Landing gear control lever moved to DOWN
- Lock actuator extends
- Lock mechanism unlocks
- NLG actuator retracts
- NLG extends

- Lock actuator continues to extend
- Lock mechanism locks.

When the landing gear control lever is in the DOWN position, hydraulic pressure pressurizes the NLG down lines through the selector valve to the NLG transfer cylinder and NLG lock actuator. The transfer cylinder stroke delays full pressurization to the NLG actuator until the lock actuator unlocks the lock links. After the lock links unlock, pressure increases in the rod-end of the NLG actuator and it retracts. The landing gear extends by actuator force, landing gear weight, and airloads.

As the NLG gets to the down position, the restrictor decreases the flow of fluid out of the head-end of the NLG actuator. The lock actuator and lock springs move the lock links to the locked position. This locks the NLG in the extended position.

When the landing gear lever is in the down position, the lock actuator, NLG actuator, and transfer cylinder remain pressurized.


**32-33-00**

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

NLG EXTENSION AND RETRACTION - OPERATION

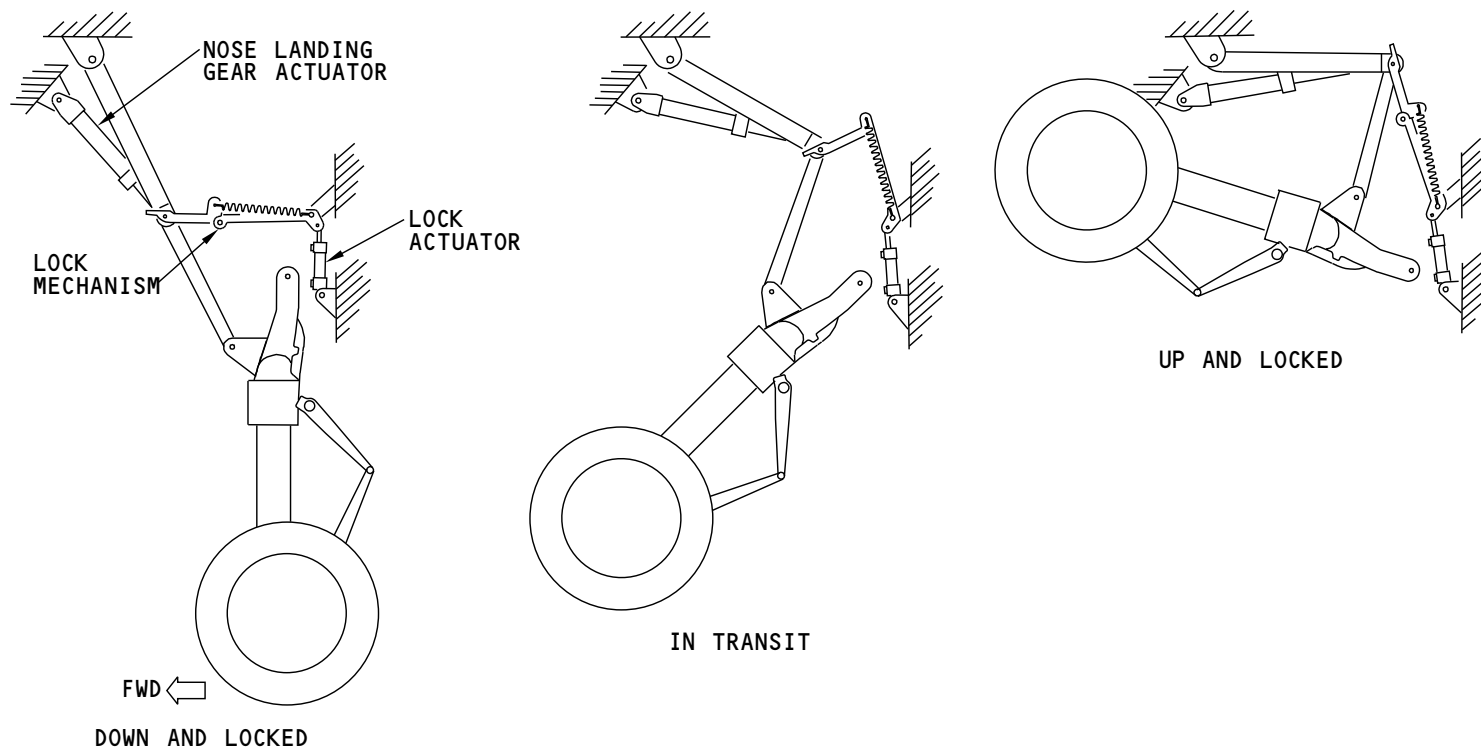

M84995 S0004627879\_V1

NLG EXTENSION AND RETRACTION - OPERATION

**32-33-00**

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details



NLG EXTENSION AND RETRACTION - NOSE LANDING GEAR ACTUATOR

Purpose

The nose landing gear actuator supplies the force to retract and extend the nose landing gear.

Location

The nose landing gear actuator is in the nose landing gear wheel well, forward of the upper drag brace. The head end attaches to a fitting on the upper bulkhead of the wheel well. The rod end attaches to a fitting on the upper drag brace.

Physical Description

The nose landing gear actuator is a two-position piston-type actuator.  
The actuator weighs 31 pounds (14 kg).

Functional Description

The actuator retracts to extend the nose landing gear. The actuator extends to retract the nose landing gear.  
The flow restrictor on the up pressure port of the actuator decreases the flow of fluid from the actuator to 3 gpm (11 lpm) during gear extension. This prevents an uncontrolled nose landing gear extension if a hydraulic hose or tube fails.

32-33-00-003


| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-33-00

NLG EXTENSION AND RETRACTION - NOSE LANDING GEAR ACTUATOR

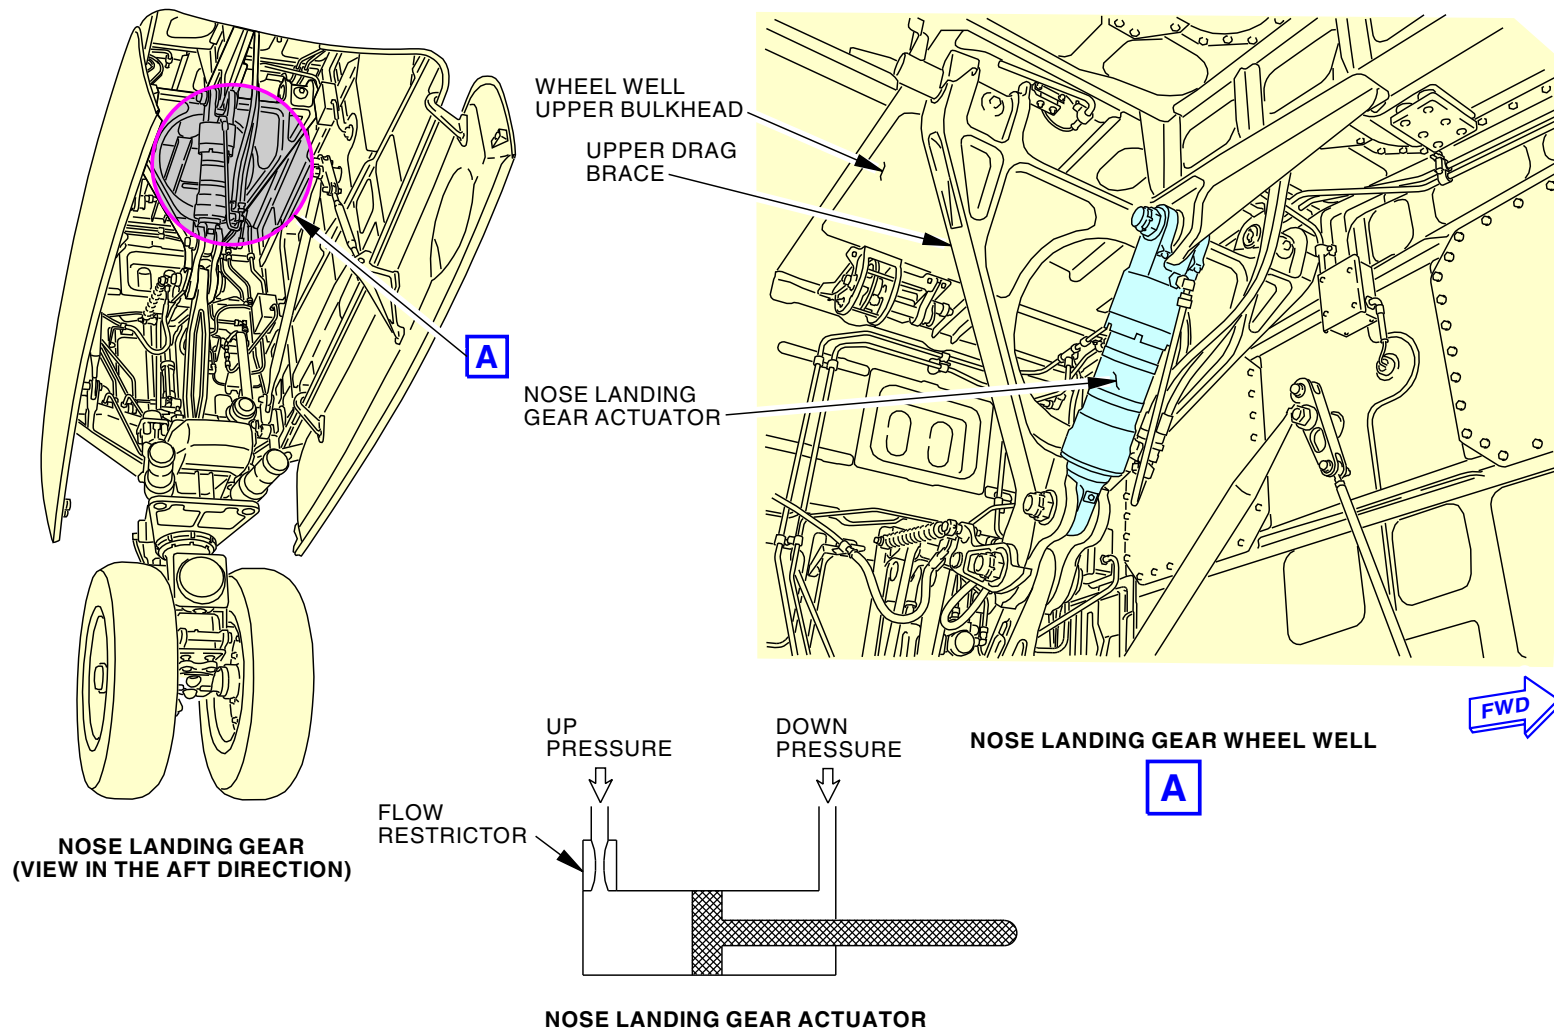

M84900 S0004627881\_V2

NLG EXTENSION AND RETRACTION - NOSE LANDING GEAR ACTUATOR

**NLG EXTENSION AND RETRACTION - LOCK MECHANISM AND LOCK ACTUATOR****Purpose**

The NLG lock mechanism uses an over-center device to lock the NLG in the extended or the retracted position. Two bungee springs keep the lock links in these positions.

The nose landing gear (NLG) lock actuator unlocks the NLG lock mechanism at the start of an extension or retraction sequence. The lock actuator also locks the lock mechanism when the NLG moves to the fully extended or retracted positions.

**Location**

The NLG lock mechanism connects to the upper and lower NLG drag brace joint and to the aft bulkhead of the NLG wheel well.

The NLG lock actuator is on the aft bulkhead of the nose landing gear wheel well, near the valve manifold.

**Physical Description**

The NLG lock mechanism has these components:

- Forward lock link
- Aft lock link
- Bungee springs (2).

The NLG lock actuator is a two-position hydraulic actuator.

**Retraction**

Before gear retraction, the NLG lock actuator retracts. This unlocks the NLG lock mechanism and lets the NLG retract.

The hydraulic pressure stays on the retract side of the NLG lock actuator while the gear moves up.

The NLG lock actuator moves the NLG lock mechanism to the lock position when the NLG moves to the retracted position.

The bungee springs hold the lock links in the over-center locked position. This holds the NLG in the retracted position.

**Extension**

Before gear extension, the NLG lock actuator extends. This unlocks the NLG lock mechanism and lets the NLG extend.

Hydraulic pressure stays on the extend side of the NLG lock actuator while the gear moves down.

The NLG lock actuator moves the NLG lock mechanism to the lock position when the NLG moves to the extended position.

The bungee springs hold the lock links in the over-center locked position. This holds the NLG in the extended position.


**32-33-00**

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

NLG EXTENSION AND RETRACTION - LOCK MECHANISM AND LOCK ACTUATOR

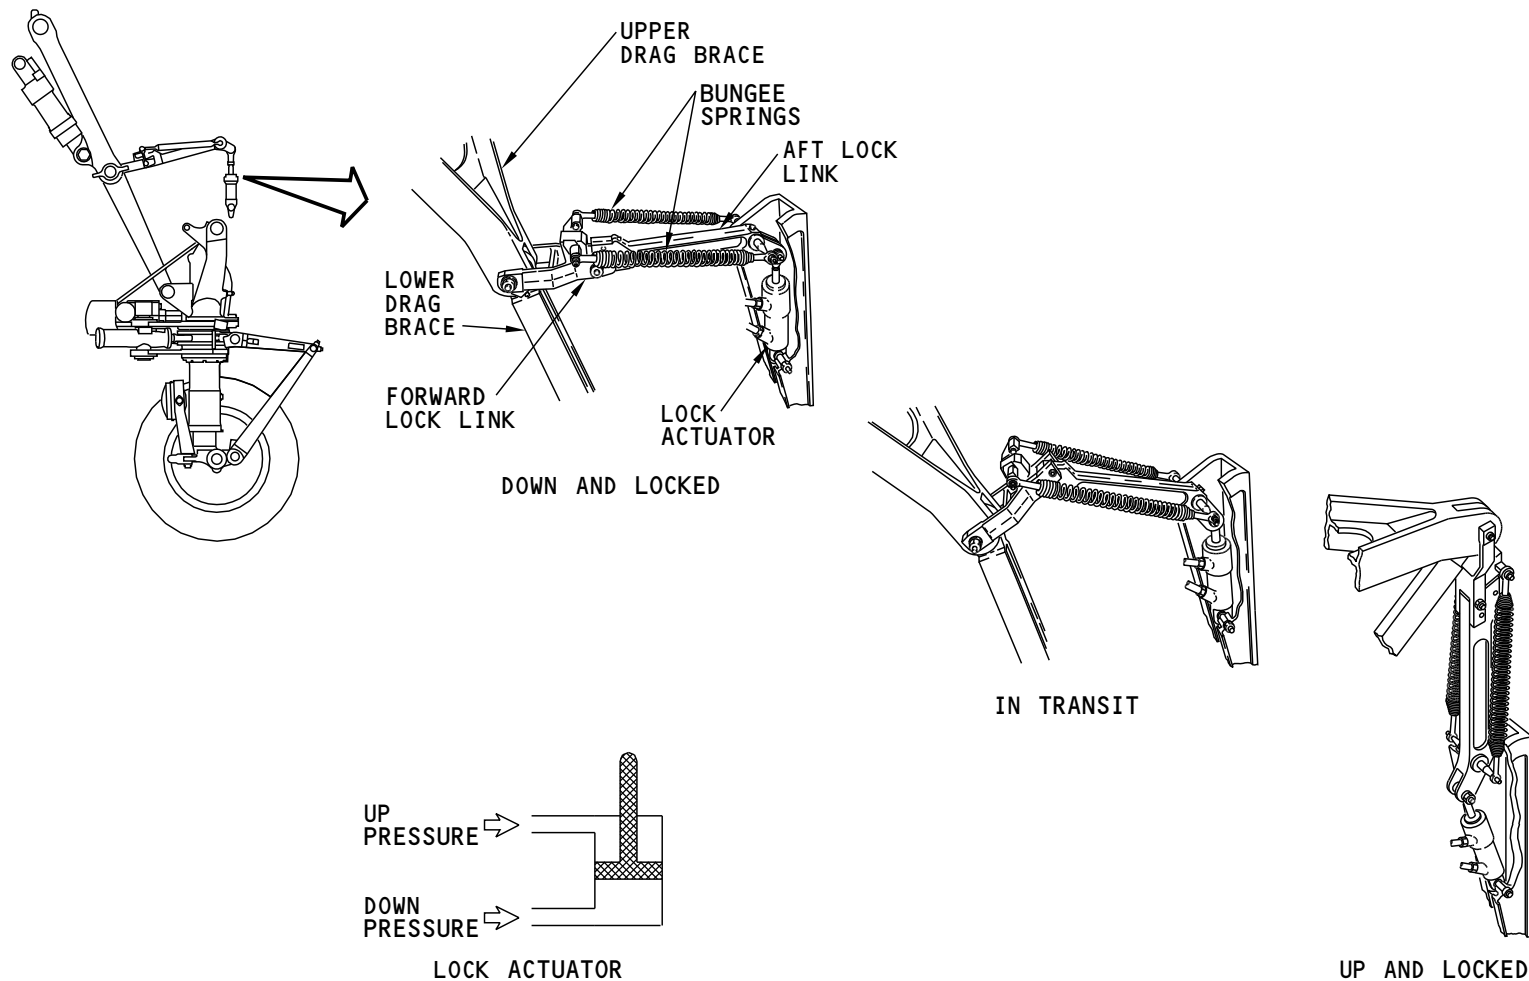

M84901 S0004627883\_V1

NLG EXTENSION AND RETRACTION - LOCK MECHANISM AND LOCK ACTUATOR

**32-33-00**

32-33-00-004

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**NLG EXTENSION AND RETRACTION - VALVE MANIFOLD****Purpose**

The valve manifold controls extension and retraction hydraulic fluid to the lock actuator.

**Location**

The valve manifold is on the aft bulkhead of the nose landing gear wheel well, near the lock actuator.

**Physical Description**

The valve manifold has two restrictors and two pressure relief valves.

**Functional Description**


The valve manifold controls hydraulic fluid flow to and from the lock actuator. The valve manifold also limits hydraulic pressure in the lock actuator.

The restrictors decrease the force the lock actuator applies on the lock links. The restrictors limit the hydraulic flow to 0.4 gpm (1.5 lpm).


The pressure relief valves release excess pressure that results from the movement of the nose landing gear backdrives the lock actuator. The valves open at 3150 psi.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

**NLG EXTENSION AND RETRACTION - VALVE MANIFOLD**

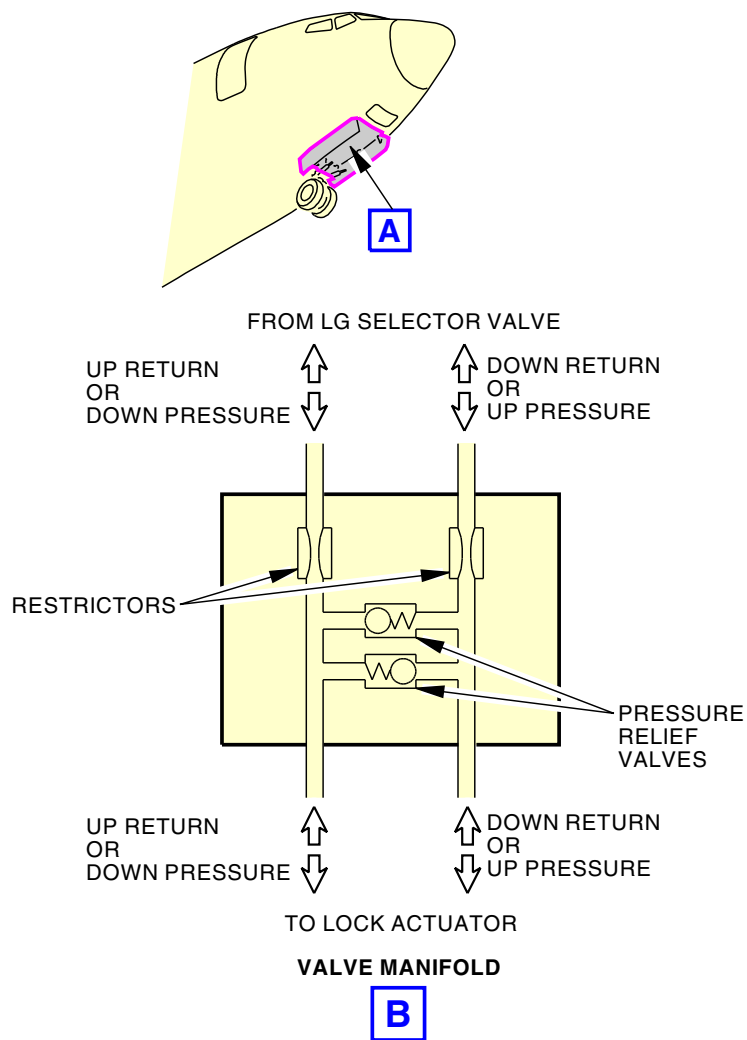

**NLG EXTENSION AND RETRACTION - VALVE MANIFOLD**

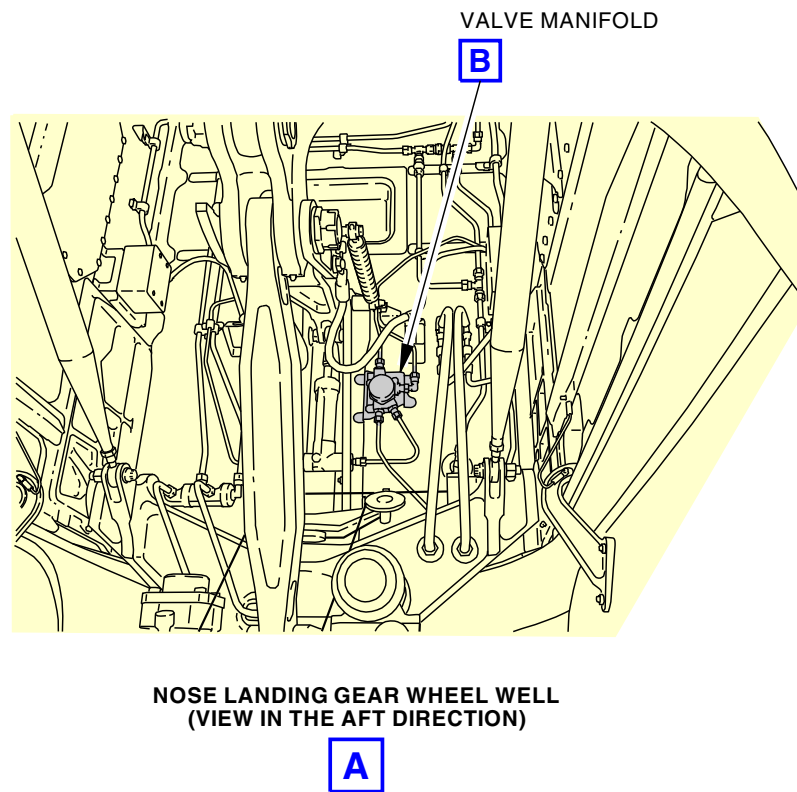

M84996 S0004627885\_V2

**NLG EXTENSION AND RETRACTION - TRANSFER CYLINDER****Purpose**

During the extension and retraction sequence, the transfer cylinder gives a time delay to let the nose landing gear unlock before the nose landing gear actuator receives pressure.

**Location**

The transfer cylinder is on the forward bulkhead of the nose landing gear wheel well.

**Physical Description**



The transfer cylinder has a piston that moves freely in the cylinder. One side of the piston connects to the down pressure. The other side connects to the up pressure.

**Functional Description**

The piston moves when up or down pressure goes to the transfer cylinder. When the piston moves, it pushes fluid out of the transfer cylinder on the side that does not have pressure. This gives a time delay to the extend or retract side of the nose landing gear actuator and the lock actuator.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## NLG EXTENSION AND RETRACTION - TRANSFER CYLINDER

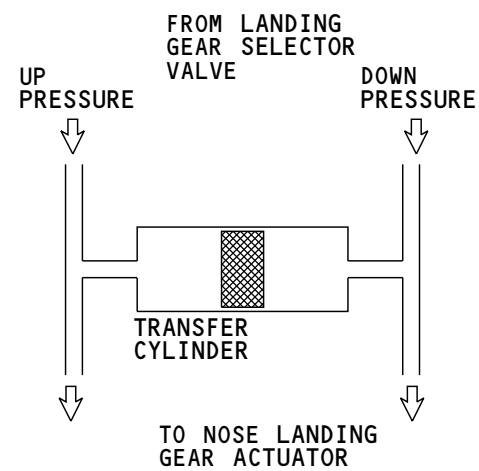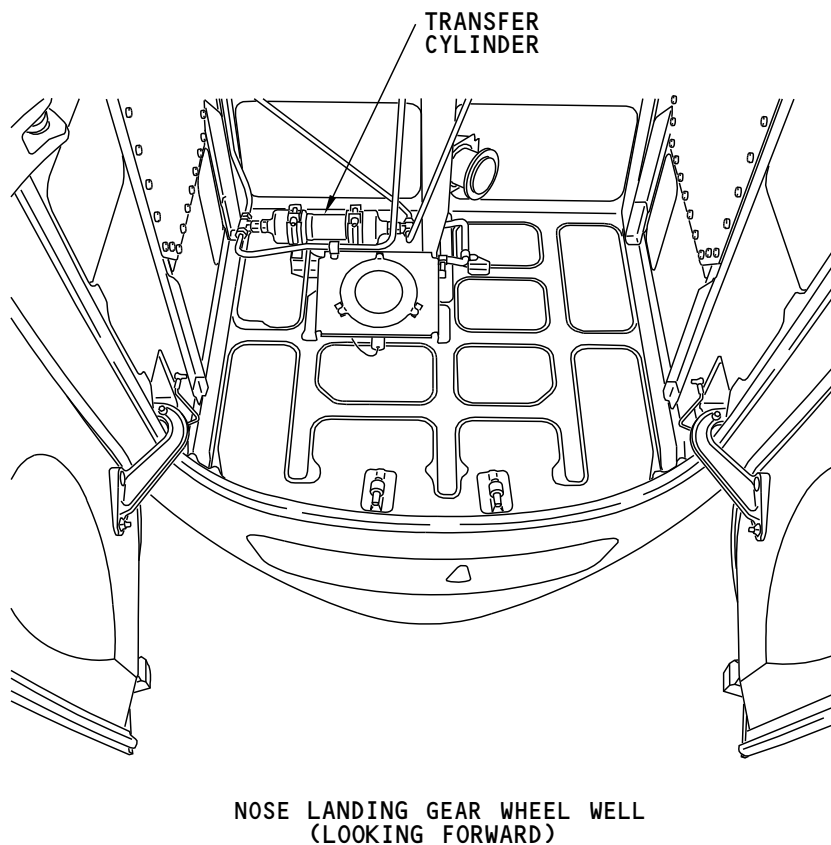

M84902 S0004627887\_V1

## NLG EXTENSION AND RETRACTION - TRANSFER CYLINDER

32-33-00-006

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-33-00**



## NLG EXTENSION AND RETRACTION - FUNCTIONAL DESCRIPTION

### General

The NLG extension and retraction system includes these hydraulic components:

- Gear actuator
- Lock actuator
- Transfer cylinder
- Valve manifold.

### Extension

The landing gear selector valve supplies down pressure when the landing gear lever is in the down position. A rate fuse (in the MLG wheel well forward bulkhead) in the down pressure line closes when the hydraulic flow increases to 10 gpm (38 lpm). This prevents hydraulic fluid loss if there is a leak in the system. This rate fuse in the down pressure line permits a variable amount of fluid for nose wheel steering.

Down pressure goes to the transfer cylinder. This sets the piston in the transfer cylinder to move to the up side. This gives a time delay to let the lock actuator unlock the lock mechanism.

Down pressure also goes to the lock actuator. The lock actuator extends to unlock the lock mechanism.

When the transfer cylinder piston gets to the end of the up side, down pressure goes to the down side of the gear actuator. The gear actuator applies an extension force on the nose landing gear and moves it down.

As the nose landing gear moves to the down and locked position, the lock actuator again extends with down pressure to lock the lock mechanism.

### Retraction

The landing gear selector valve supplies up pressure when the landing gear lever is in the up position. A volume fuse (in the MLG wheel well) in the up pressure line closes when the hydraulic flow increases to 100-140 cubic inches (1.6-2.3 liters). This prevents hydraulic fluid loss if there is a leak in the system.

A flow limiter in the up pressure line limits the flow to the nose landing gear actuator to 3 gpm (11 lpm). The flow limiter makes sure hydraulic system pressure stays normal for other airplane systems that also use hydraulic pressure. The flow limiter also controls the transfer cylinder rate and the nose landing gear extension and retraction rate.

Up pressure goes to the transfer cylinder. This moves the piston in the transfer cylinder to the down side. This gives a time delay to let the lock actuator unlock the lock mechanism.

Up pressure also goes to the lock actuator. The lock actuator retracts to unlock the lock mechanism.

When the transfer cylinder piston gets to the end of the down side, up pressure goes to the up side of the gear actuator. The gear actuator applies a retraction force on the nose landing gear and moves it up.

As the nose landing gear moves to the up and locked position, the lock actuator again retracts. This occurs with up pressure to lock the lock mechanism.

### Nose Wheel Steering

The nose wheel steering system receives pressure when the landing gear selector valve moves to the down position.

See the Nose Wheel Steering section for more information about nose wheel steering. (SECTION 32-51)

**32-33-00**


EFFECTIVITY

SIA ALL

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## NLG EXTENSION AND RETRACTION - FUNCTIONAL DESCRIPTION

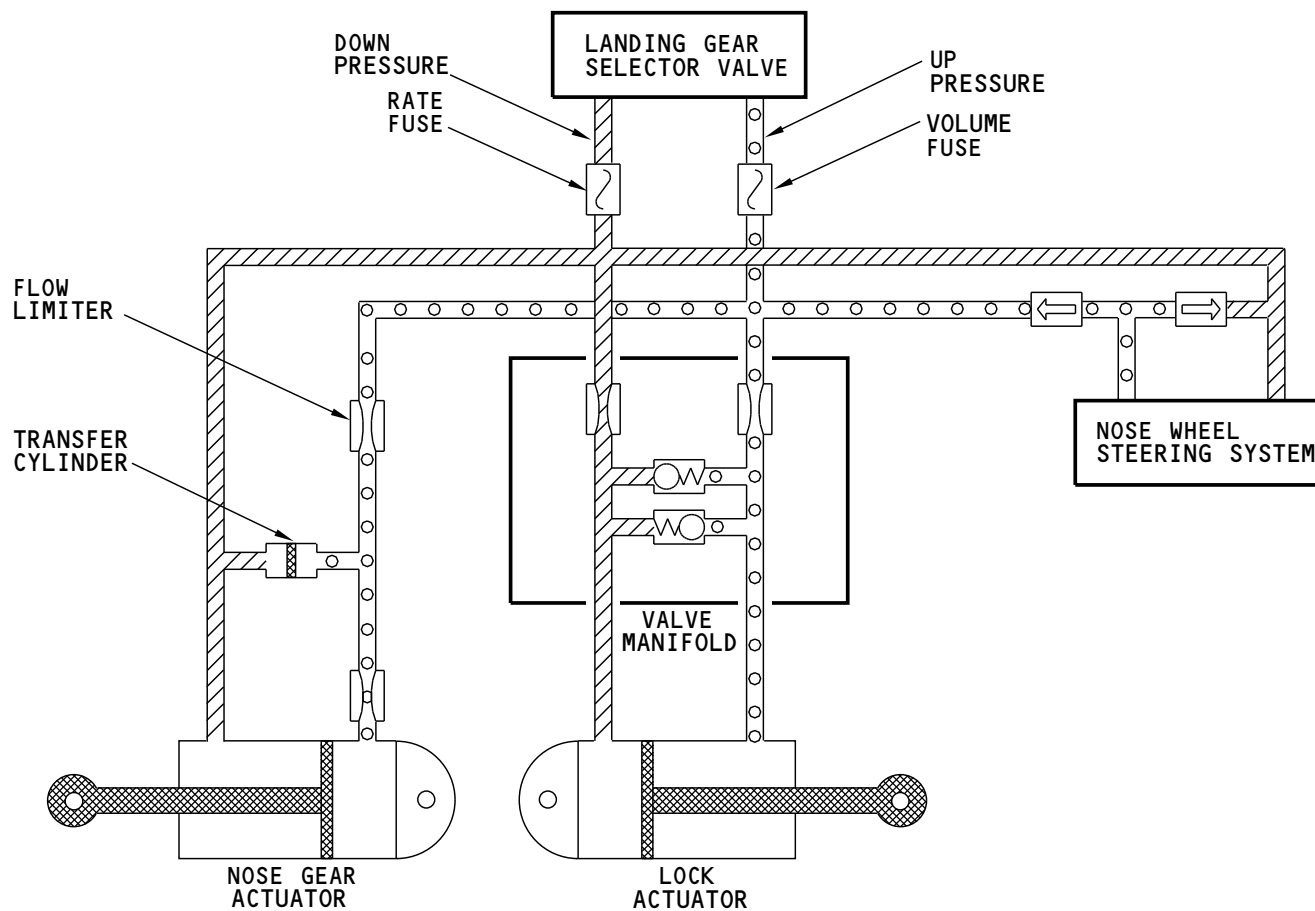

M84903 S0004627889\_V1

## NLG EXTENSION AND RETRACTION - FUNCTIONAL DESCRIPTION

32-33-00-007

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-33-00**





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-34-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**MLG MANUAL EXTENSION SYSTEM - GENERAL DESCRIPTION****Purpose**

The main landing gear manual extension system lets you lower the left and right main landing gear from the up and locked position. You use the MLG manual extension system when hydraulic system A pressure fails or if normal extension fails.

**Components**

These are the main landing gear manual extension system components:

- Control mechanism
- Extension linkage
- Control cables (not shown).

**General Description**

The main landing gear manual extension system operates independently of the normal extension and retraction system.

Pull on either the right main or left main gear manual extension handles in the manual extension control mechanism to operate the system. The handles pull on the right or left MLG manual extension system control cable which goes to the right or left MLG manual extension linkage.

Each MLG manual extension linkage moves the uplock mechanism for that main landing gear to the unlocked position. The main landing gears extend by airloads and their own weight.

When you open the access door to the manual extension control mechanism, an access door position switch sends a signal to the manual extend solenoid valve in the landing gear selector valve. This moves the bypass valve in the landing gear selector valve to connect all the hydraulic components in the normal landing gear extension and retraction system to the hydraulic system return.


**32-34-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## MLG MANUAL EXTENSION SYSTEM - GENERAL DESCRIPTION

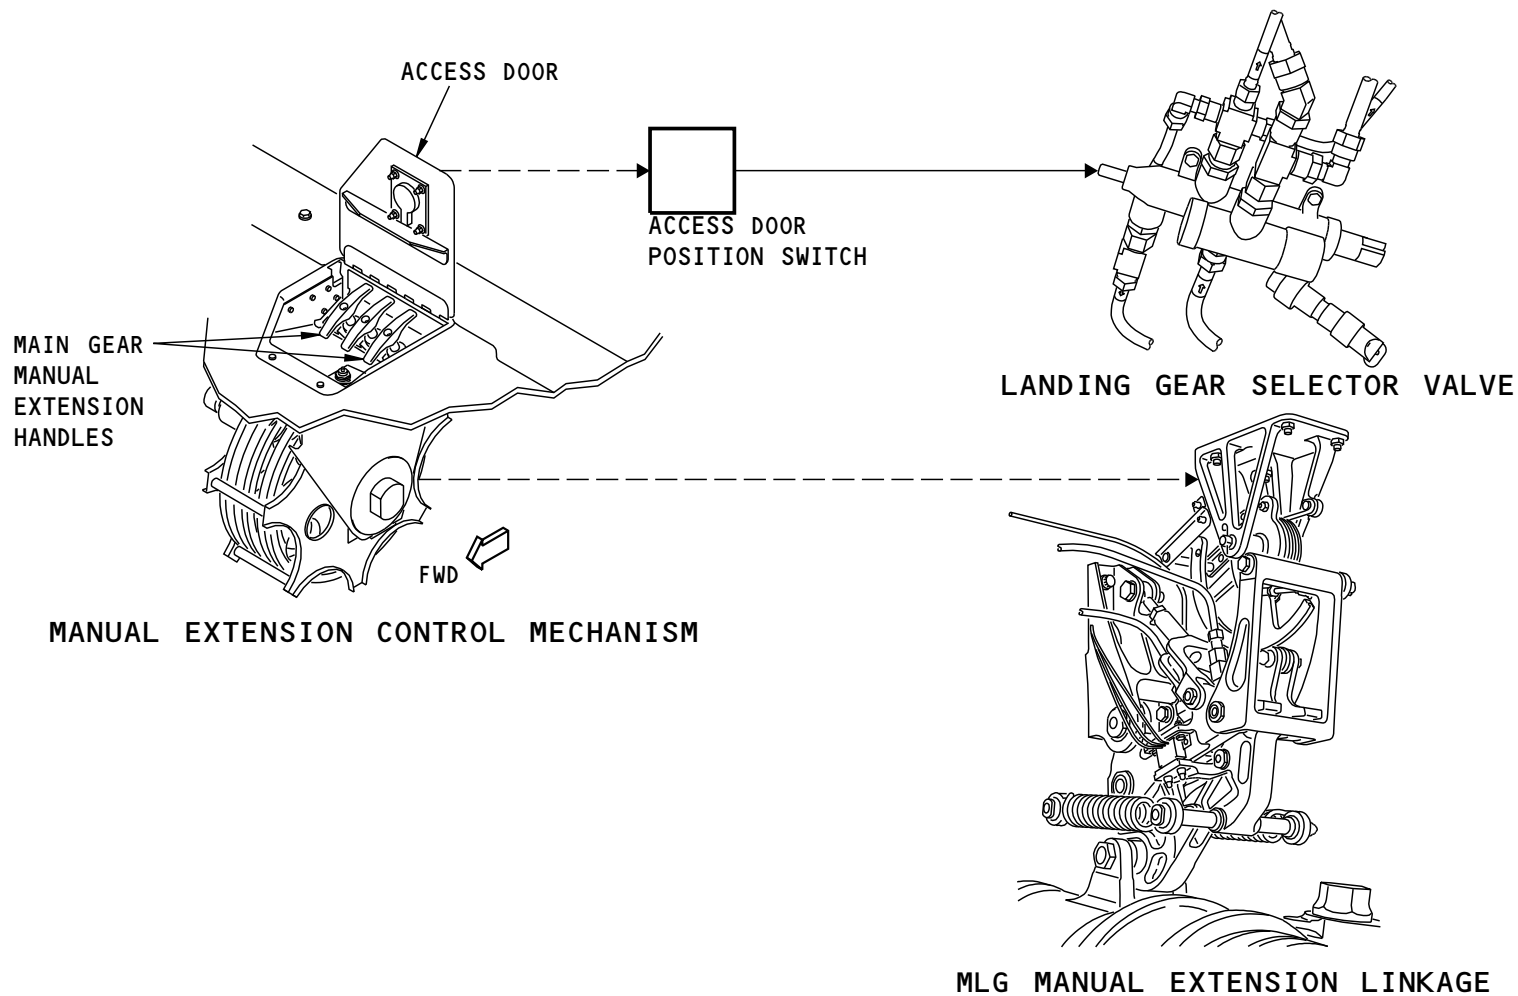

2016186 S0000390482\_V1

## MLG MANUAL EXTENSION SYSTEM - GENERAL DESCRIPTION

**32-34-00**

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## MLG MANUAL EXTENSION SYSTEM - CONTROL MECHANISM

### Purpose

The manual extension control mechanism transmits inputs from the flight compartment to the release mechanism of the nose landing gear and extension linkages of the main landing gears.

### Location

The manual extension control mechanism is below the flight compartment floor. You get access to the manual extension control mechanism handles through an access door in the floor of the flight compartment aft of the control stand.

### Physical Description

There are three manual extension handles. One is for the nose landing gear and one for each main landing gear. They let you operate the manual extension system for each gear. The handles connect to cables that go to cable quadrants.

### Functional Description

Manual extension control cables go from each cable quadrant to the release mechanism of the nose landing gear and the extension linkages of the right and left main landing gear.

When you open the access door to the manual extension control mechanism, an access door position switch sends a signal to the bypass valve on the landing gear selector valve. The bypass valve moves to the bypass position. This makes sure the landing gear hydraulic components are connected to the hydraulic system return. This prevents a hydraulic lock which may not permit manual extension of the landing gear.

### Operation

Pull the right or the left main gear manual extension handles in the manual extension control mechanism to operate the system. This pulls the right or left MLG manual extension cables which go to the right or the left MLG manual extension linkages.




**CAUTION**

DO NOT HOLD THE MANUAL EXTENSION HANDLE IN ANY EXTENDED POSITION DURING HYDRAULIC OPERATION OF THE LANDING GEAR.

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

# MLG MANUAL EXTENSION SYSTEM - CONTROL MECHANISM

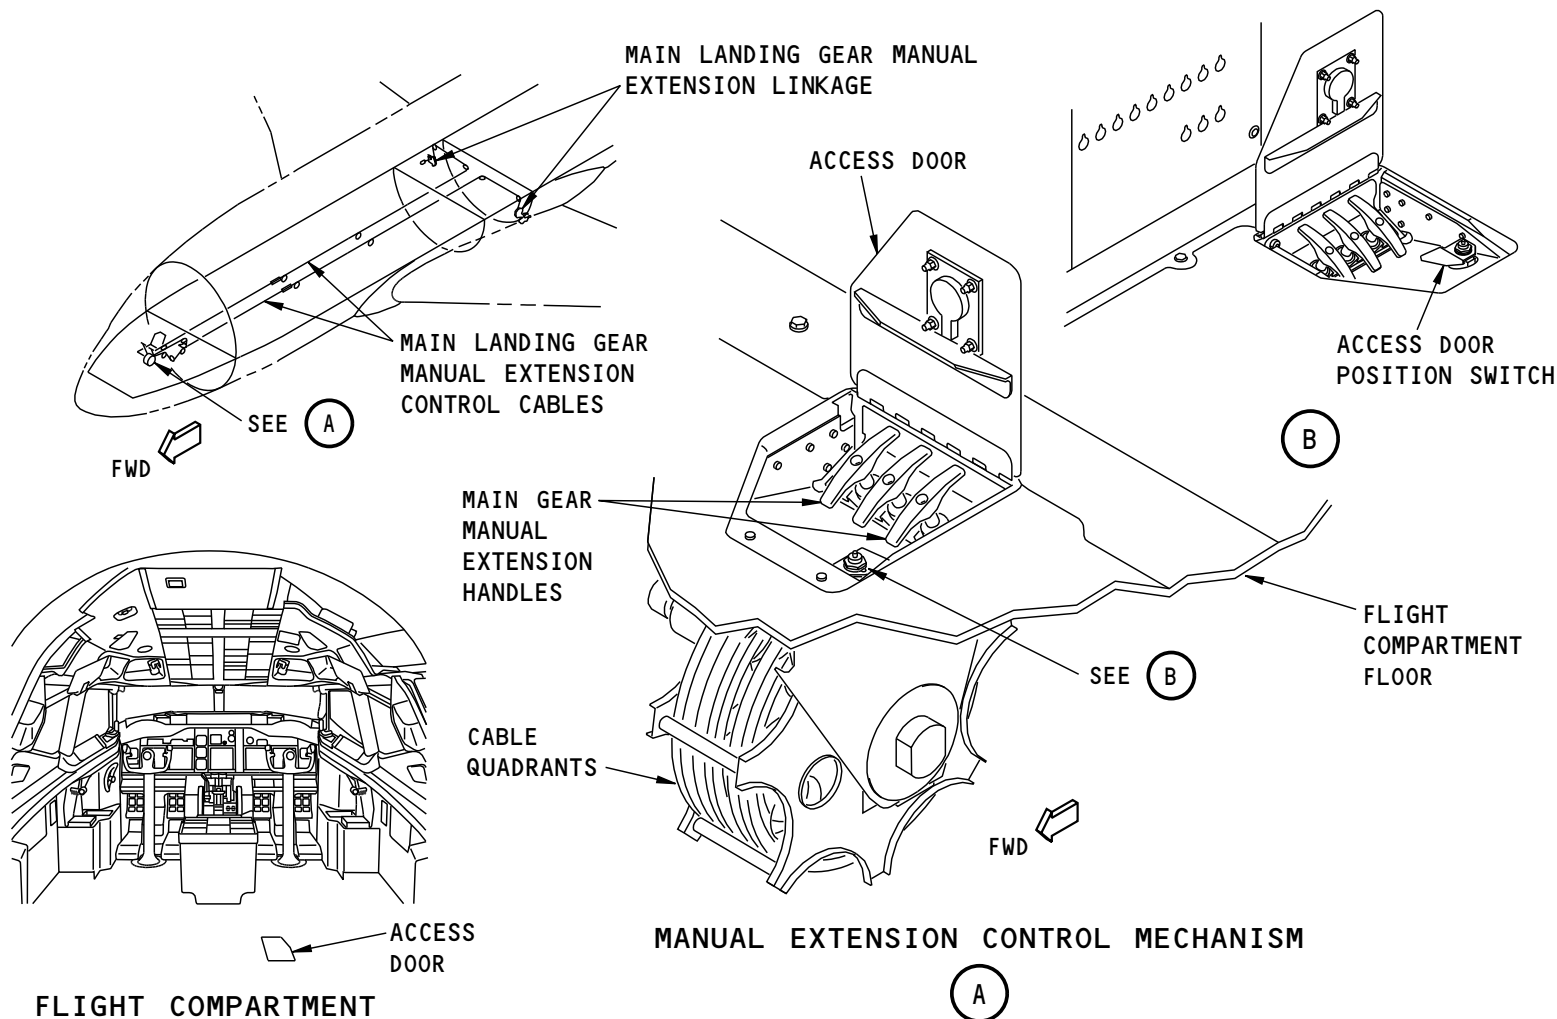

2016249 S0000390489\_V1

## MLG MANUAL EXTENSION SYSTEM - CONTROL MECHANISM

32-34-00

32-34-00-002

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**MLG MANUAL EXTENSION SYSTEM - MLG EXTENSION LINKAGE****Purpose**

The MLG manual extension linkage moves the uplock mechanism to the unlocked position. This lets the MLG extend by gravity during manual extension.

One MLG manual extension linkage operates for each main landing gear.

**Location**

The MLG manual extension linkage is on the upper bulkhead of the main landing gear wheel well above the uplock mechanism.

**Physical Description**

The MLG manual extension linkage includes these components:

- Quadrant
- Return spring
- Control rod
- Lever
- Upper lock link and tabs
- Lower lock link.

**Functional Description**

When you pull the main landing gear manual extension handle in the flight compartment, the control cable turns the quadrant in the extension linkage. This pulls the control rod and turns the lever. The lever moves the uplock mechanism (upper and lower lock links) by the upper lock link tabs to the unlocked position.


When you release the manual extension handle, the return spring moves the extension linkage to the normal position.

**32-34-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

## MLG MANUAL EXTENSION SYSTEM - MLG EXTENSION LINKAGE

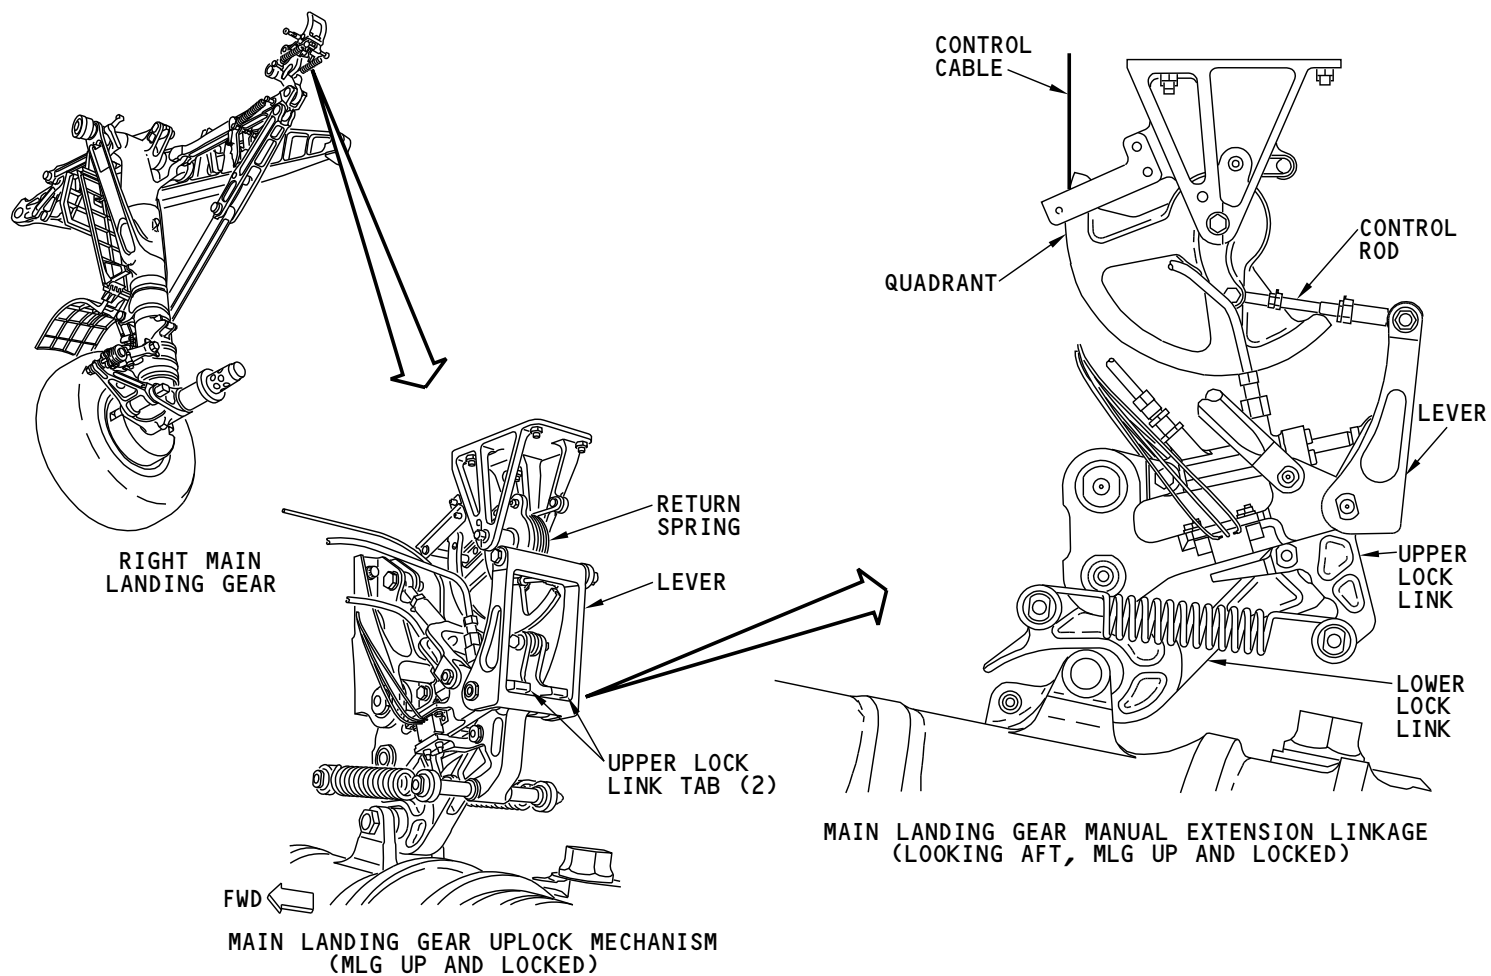

M84999 S0004627897\_V1

## MLG MANUAL EXTENSION SYSTEM - MLG EXTENSION LINKAGE

32-34-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



MLG MANUAL EXTENSION SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL

General

The access door position switch in the manual extension control mechanism sends a signal to the manual extend solenoid valve in the landing gear selector valve. This moves the bypass valve in the landing gear selector valve to connect all hydraulic components in the landing gear system to the hydraulic system return.

Functional Description

When you open the access door to the manual extension control mechanism, an access door position switch closes. The position switch sends 28v dc from the battery bus to the manual extend solenoid valve in the landing gear selector valve. The manual extend solenoid valve commands the bypass valve in the selector valve to move to the bypass position.

See the main landing gear extension and retraction section for more information about the landing gear selector valve. (SECTION 32-32)

32-34-00-004


| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-34-00

# MLG MANUAL EXTENSION SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL

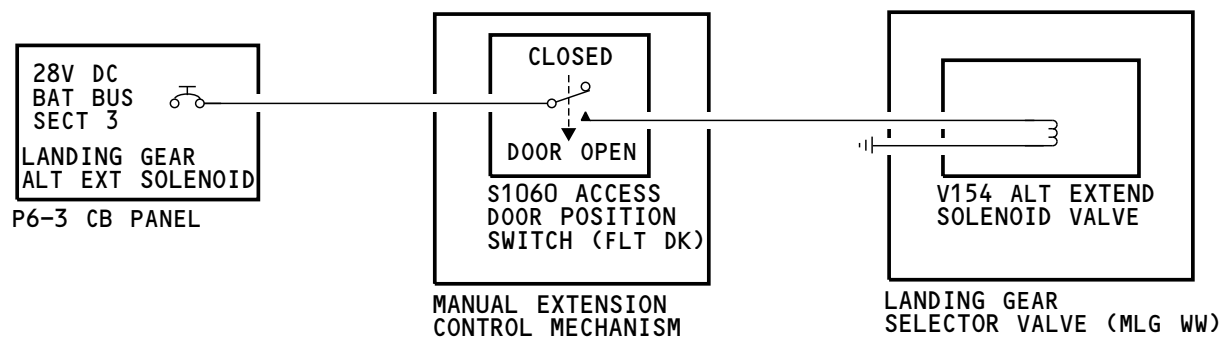

M85000 S0004627899\_V1

## MLG MANUAL EXTENSION SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL

32-34-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-35-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**NLG MANUAL EXTENSION SYSTEM - GENERAL DESCRIPTION****Purpose**

The nose landing gear manual extension system lets you lower the nose landing gear from the up and locked position. You use the NLG manual extension system when hydraulic system A pressure fails or if normal extension fails.

**Components**

These are the nose landing gear manual extension system components:

- Release mechanism
- Control cable (not shown).

**General Description**

The nose gear manual extension system operates independently of the normal extension and retraction system.

Pull on the nose gear manual extension handle in the manual extension control mechanism to operate the system. This pulls the control cable and turns the release mechanism.

When the release mechanism turns, it moves the nose landing gear lock link to the released position. The nose landing gear extends by airloads and its own weight.

When you open the access door to the manual extension control mechanism, an access door position switch sends a signal to the manual extend solenoid valve in the landing gear selector valve. This moves the bypass valve in the landing gear selector valve to connect all the hydraulic components in the normal landing gear extension and retraction system to the hydraulic system return.


**32-35-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## NLG MANUAL EXTENSION SYSTEM - GENERAL DESCRIPTION

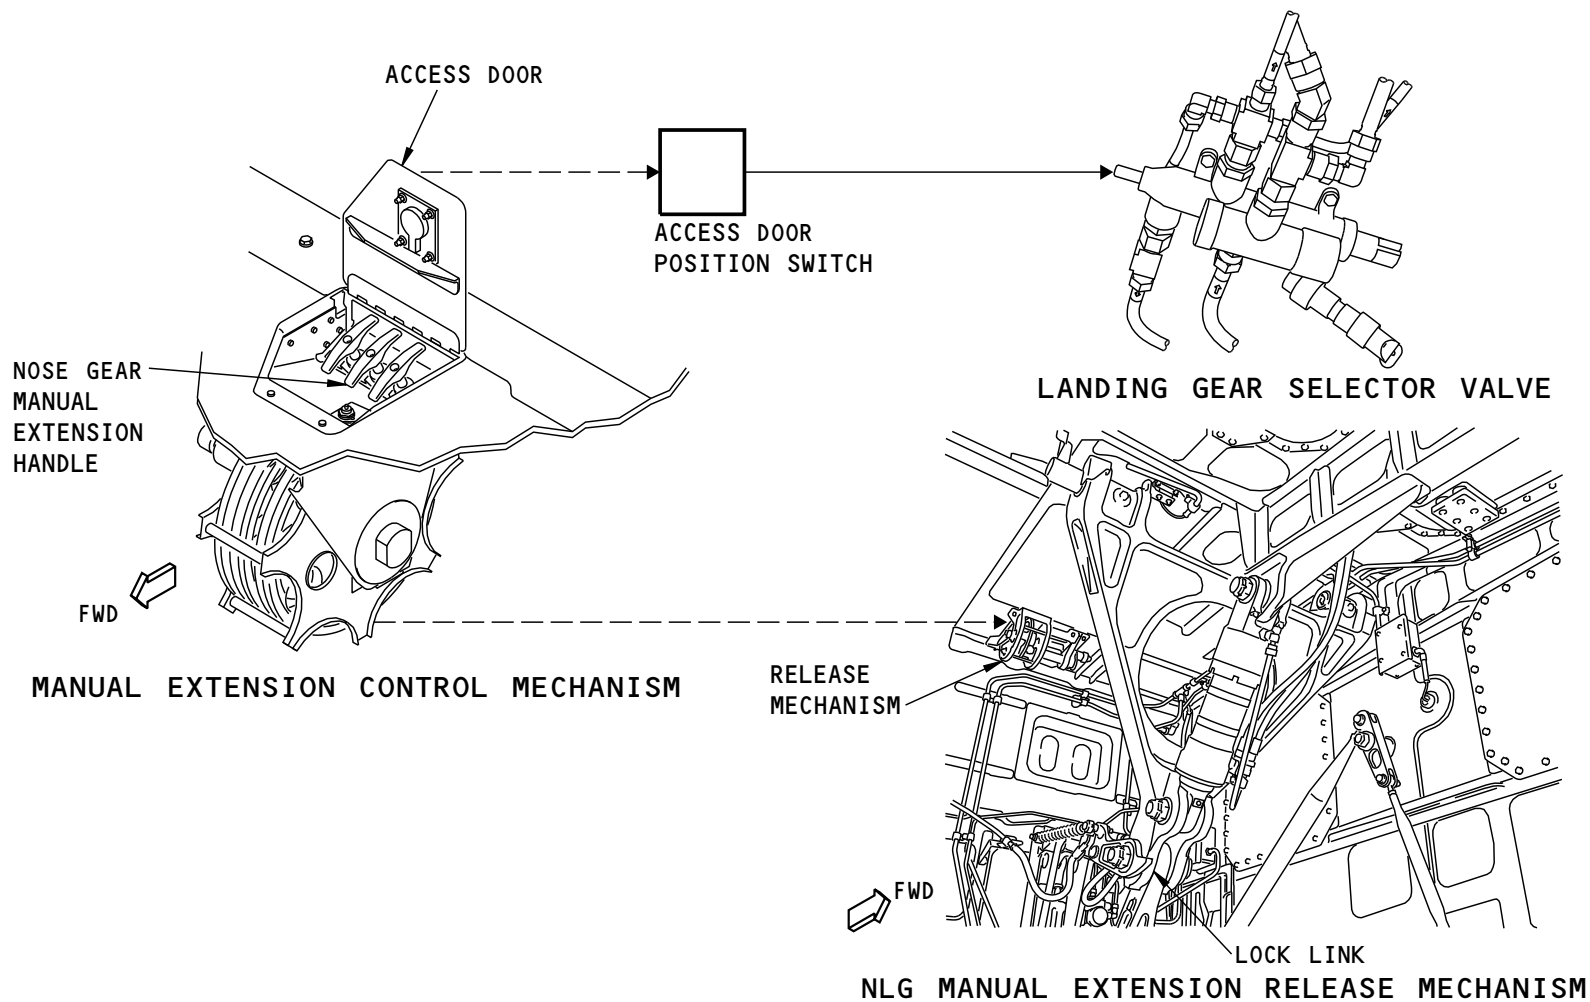

2016206 S0000390487\_V1

## NLG MANUAL EXTENSION SYSTEM - GENERAL DESCRIPTION

**32-35-00**

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## NLG MANUAL EXTENSION SYSTEM - NLG RELEASE MECHANISM

### Purpose

The NLG manual extension release mechanism moves the NLG lock mechanism to the released position. This lets the NLG extend by airloads and gravity.

### Location

The release mechanism is on the upper bulkhead of the nose landing gear wheel well.


### Physical Description

The release mechanism has these components:

- Quadrant
- Cam
- Cam roller
- Release roller.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

NLG MANUAL EXTENSION SYSTEM - NLG RELEASE MECHANISM

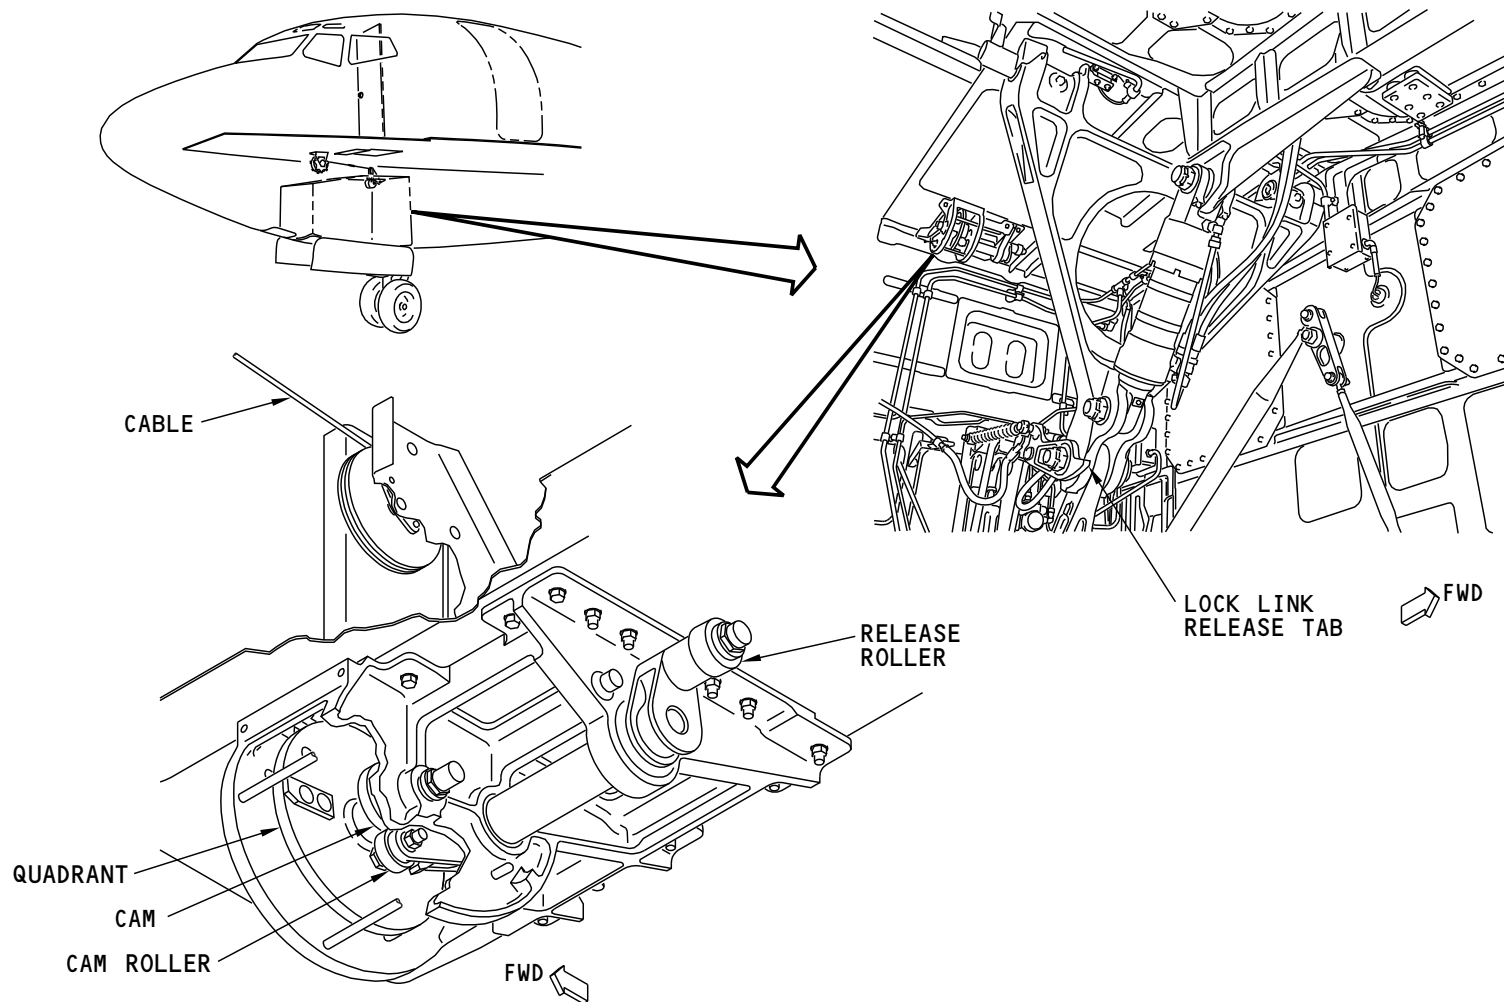

M85002 S0004627905\_V1

NLG MANUAL EXTENSION SYSTEM - NLG RELEASE MECHANISM

32-35-00-002

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-35-00**



NLG MANUAL EXTENSION SYSTEM - FUNCTIONAL DESCRIPTION

General

Pull on the NLG manual extension handle in the flight compartment to operate the NLG manual extension system.

Functional Description

When you pull on the handle, the quadrant turns the cam in the release mechanism. The cam operates the cam roller which then turns the release roller forward.

When the release roller rotates forward, it pushes on the forward lock link of the nose landing gear. This unlocks the lock mechanism and the nose landing gear extends to the down and locked position by airloads and gravity.

32-35-00-003


|             |  |
|-------------|--|
| EFFECTIVITY |  |
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-35-00

## NLG MANUAL EXTENSION SYSTEM - FUNCTIONAL DESCRIPTION

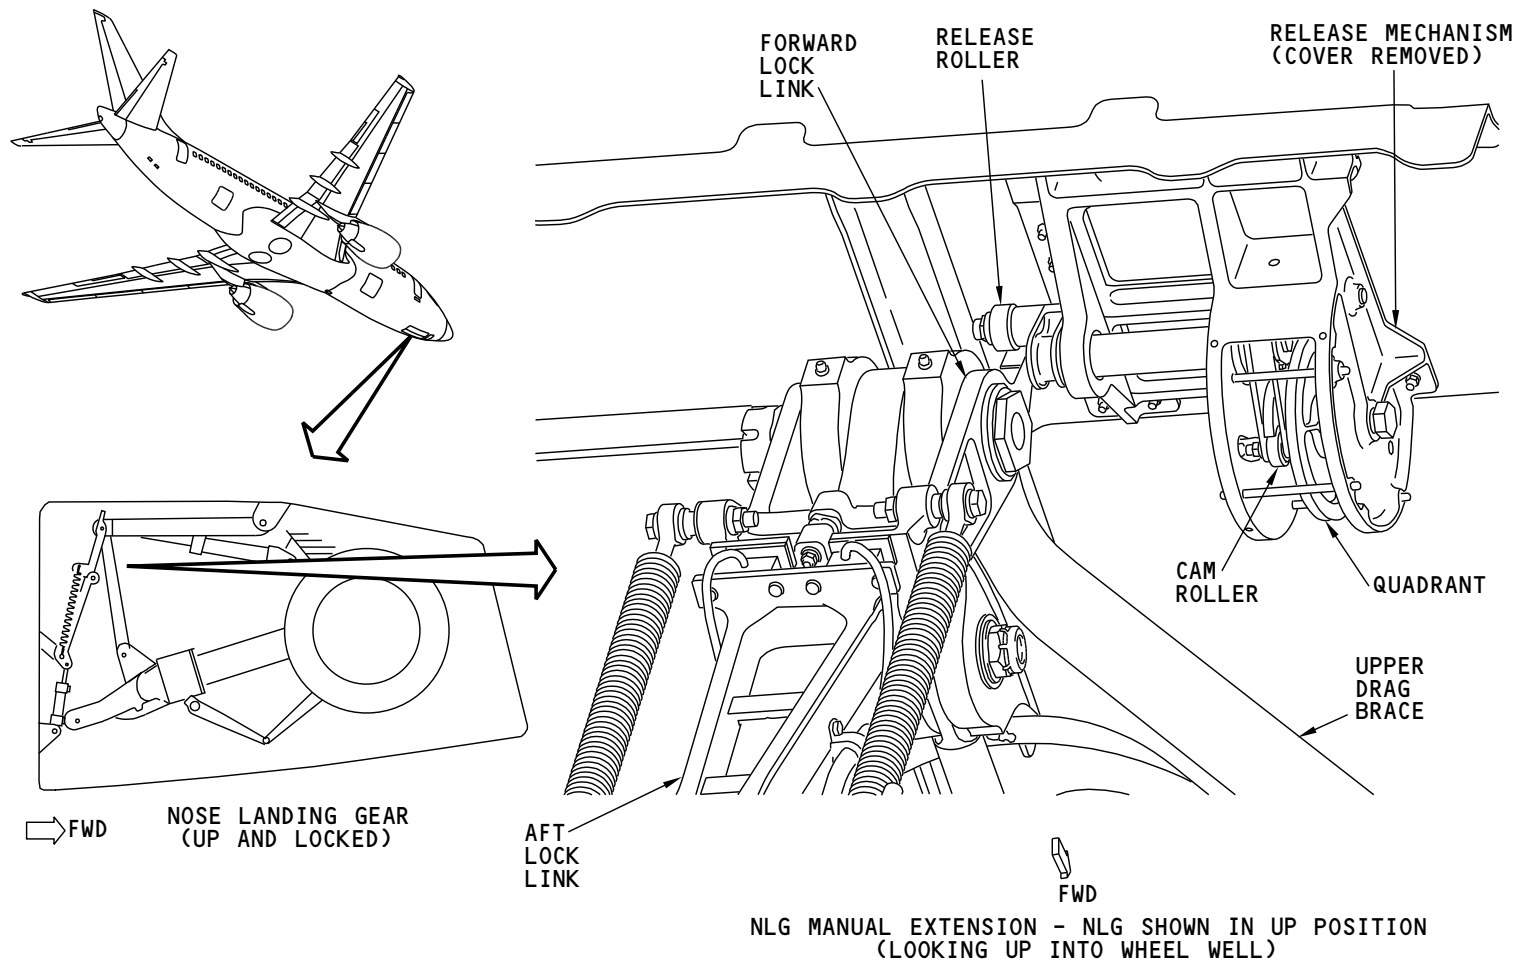

M85003 S0004627907\_V1

## NLG MANUAL EXTENSION SYSTEM - FUNCTIONAL DESCRIPTION

32-35-00





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-40-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WHEELS AND BRAKES - INTRODUCTION****General**

The wheels and brakes system includes these systems:

- Tires and wheels
- Hydraulic brake system
- Parking brake system
- Antiskid/autobrake system.

**Abbreviations and Acronyms**

- AACU - antiskid/autobrake control unit
- A/B - autobrake
- AC - alternating current
- accum - accumulator
- ADIRU - air data inertial reference unit
- alt - alternate
- bat - battery
- BIT - built-in test
- BITE - built-in test equipment
- BMV - brake metering valve
- cont - control
- DC - direct current
- fwd - forward
- gnd - ground
- hyd - hydraulic
- inbd - inboard
- ind - indicator
- inop - inoperative
- kts - knots
- KPA - kilopascals
- L - left


- LG - landing gear
- microsw - microswitch
- MLG - main landing gear
- max - maximum
- NLG - nose landing gear
- norm - normal
- NWS - nose wheel steering
- outbd - outboard
- P - pressure
- PSEU - proximity switch electronics unit
- PSI - pounds per square inch
- R - right
- RTO - rejected takeoff
- sec - seconds
- sol - solenoid
- sw - switch
- sys - system
- vlv - valve
- ww - wheel well

**32-40-00****SIA ALL EFFECTIVITY**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## WHEELS AND BRAKES - INTRODUCTION

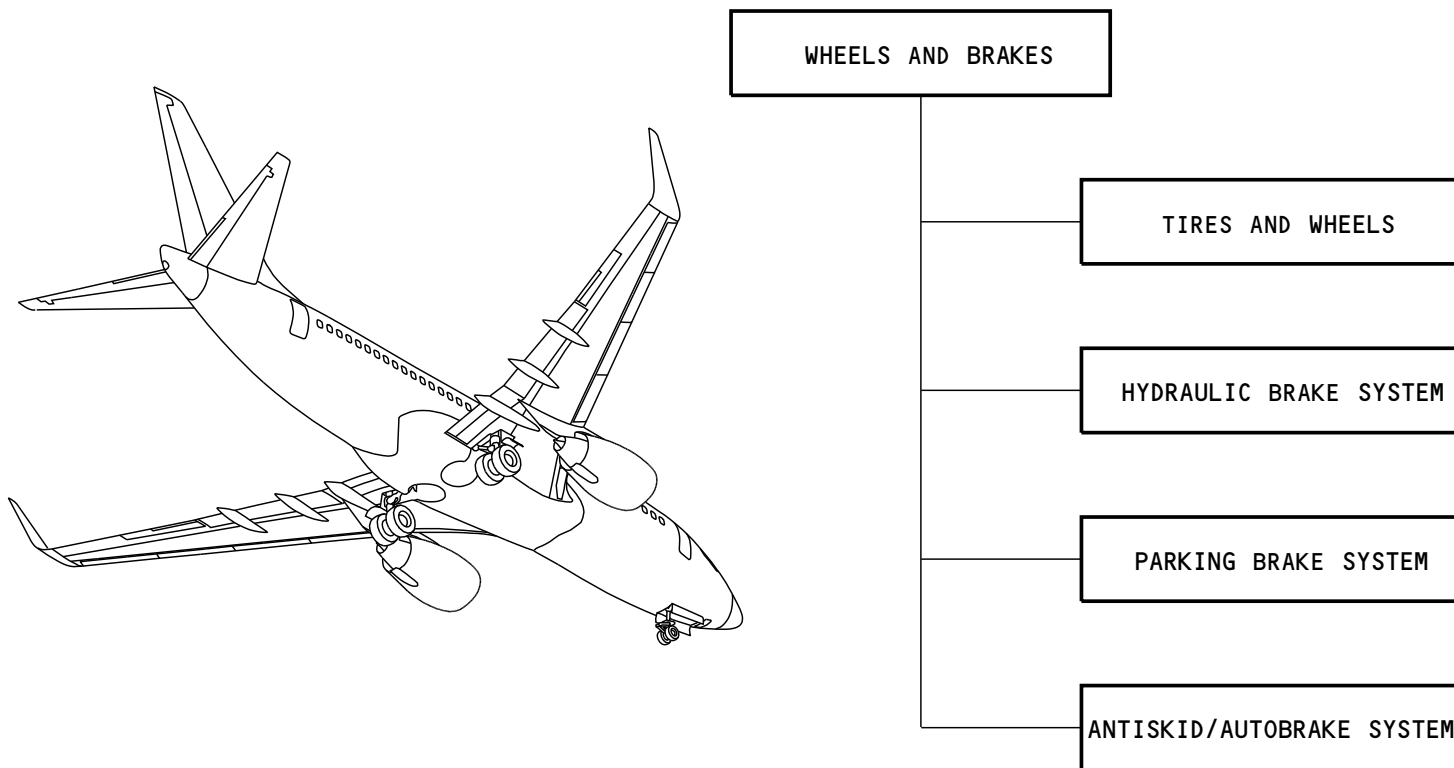

M85005 S0004627912\_V1

## WHEELS AND BRAKES - INTRODUCTION

**32-40-00**





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-41-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## HYDRAULIC BRAKE SYSTEM - GENERAL DESCRIPTION

### Purpose

The hydraulic brake system controls hydraulic pressure to the main landing gear brakes.

Brake hydraulic source selection uses the alternate brake selector valve and the accumulator isolation valve to control different pressure sources to supply pressure to these brake functions:

- Normal brakes
- Alternate brakes
- Accumulator brakes.

The brake pedals control the normal and the alternate brake systems.

### Components

These are the hydraulic brake system components:

- Brake pedal bus mechanism
- Brake cables (4)
- Brake pressure indicator
- Brake metering valve assembly (2)
- Alternate brake selector valve
- Accumulator isolation valve
- Accumulator
- Accumulator servicing components
- Brake hydraulic fuses (6)
- Brake shuttle valves (4)
- Brake assembly (4)
- Brake system relief valve.

### Normal Brakes

If hydraulic system B supplies pressure, the normal brake system uses hydraulic system B pressure to operate the brakes.

### Alternate Brakes

The alternate brake system uses hydraulic system A pressure to operate the brakes when hydraulic system B does not supply pressure.

### Accumulator Brakes

When the hydraulic systems A and B do not supply pressure, the brake accumulator supplies pressure to the normal brake system.

### Gear Retract Brakes

During landing gear retraction, the alternate brake system gets pressure to operate the brakes. This stops wheel rotation before the landing gear retracts.


**32-41-00**

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## HYDRAULIC BRAKE SYSTEM - GENERAL DESCRIPTION

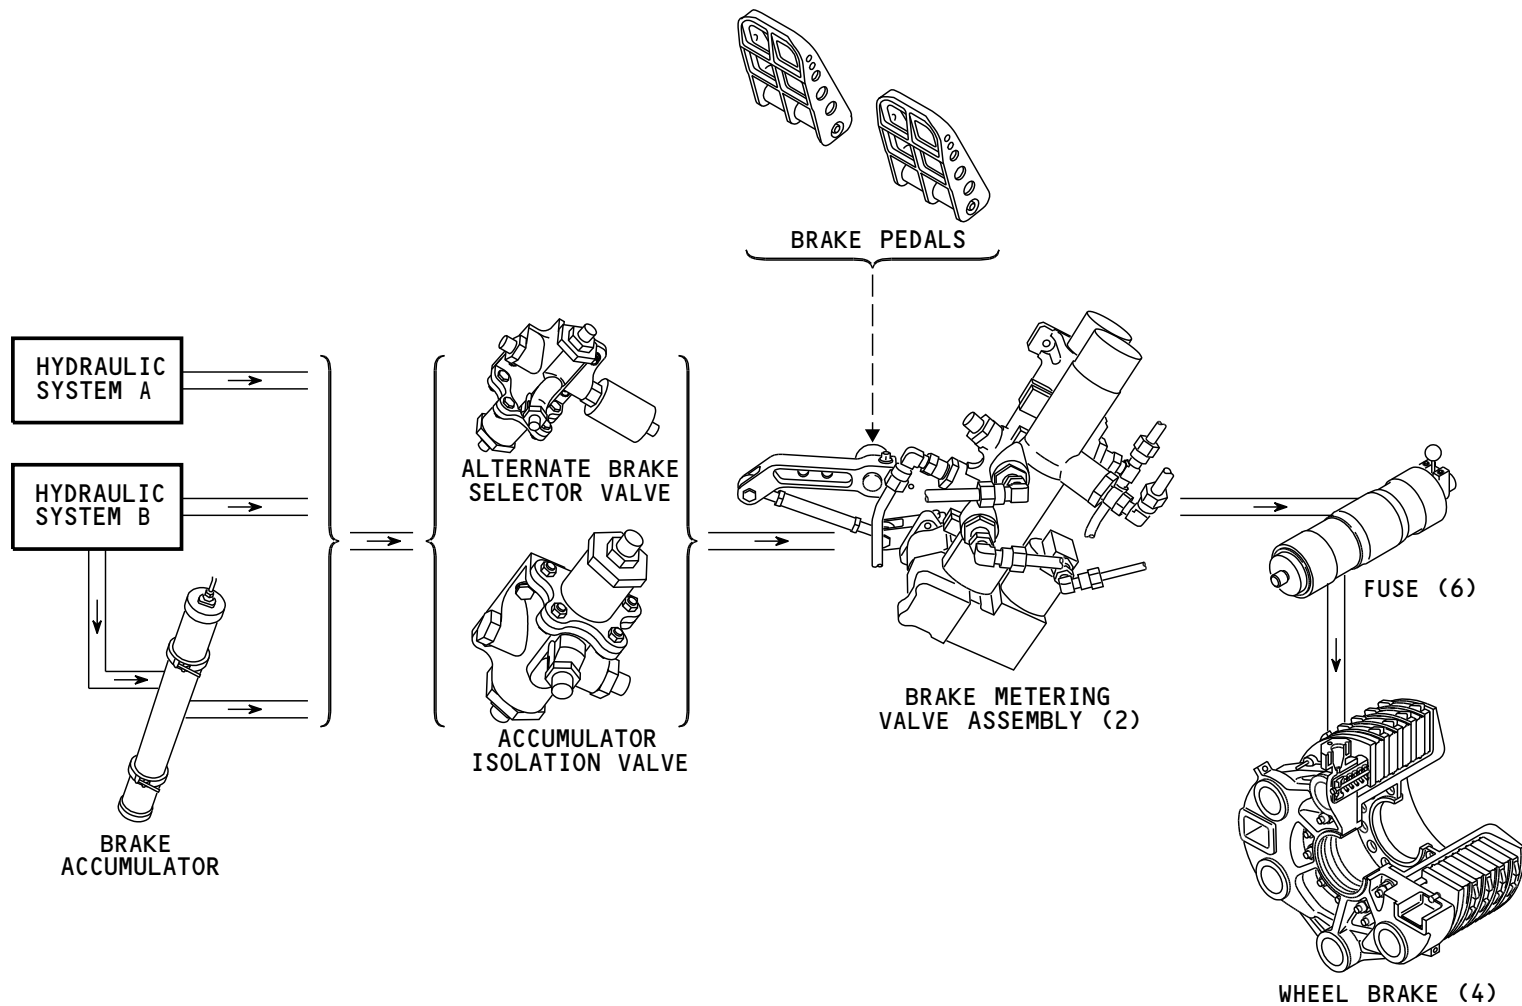

M85006 S0004627916\_V1

## HYDRAULIC BRAKE SYSTEM - GENERAL DESCRIPTION

32-41-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## HYDRAULIC BRAKE SYSTEM - COMPONENT LOCATION

### Flight Compartment Components

The hydraulic brake system includes these components on or near the flight compartment:

- Brake pedal bus mechanism
- Brake cables
- Hydraulic brake pressure indicator.

### Brake Pedal Bus Mechanism

Most of the brake pedal bus mechanism components are below the flight compartment floor. You get access to these components from the forward equipment compartment.

### Brake Cables


Brake cables connect the brake pedal bus mechanism to the brake metering valves in the main landing gear wheel well. You get access to these components from the forward equipment compartment and below the flight compartment floor.

### Hydraulic Brake Pressure Indicator

The hydraulic brake pressure indicator is on the P3 first officer instrument panel.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

HYDRAULIC BRAKE SYSTEM - COMPONENT LOCATION

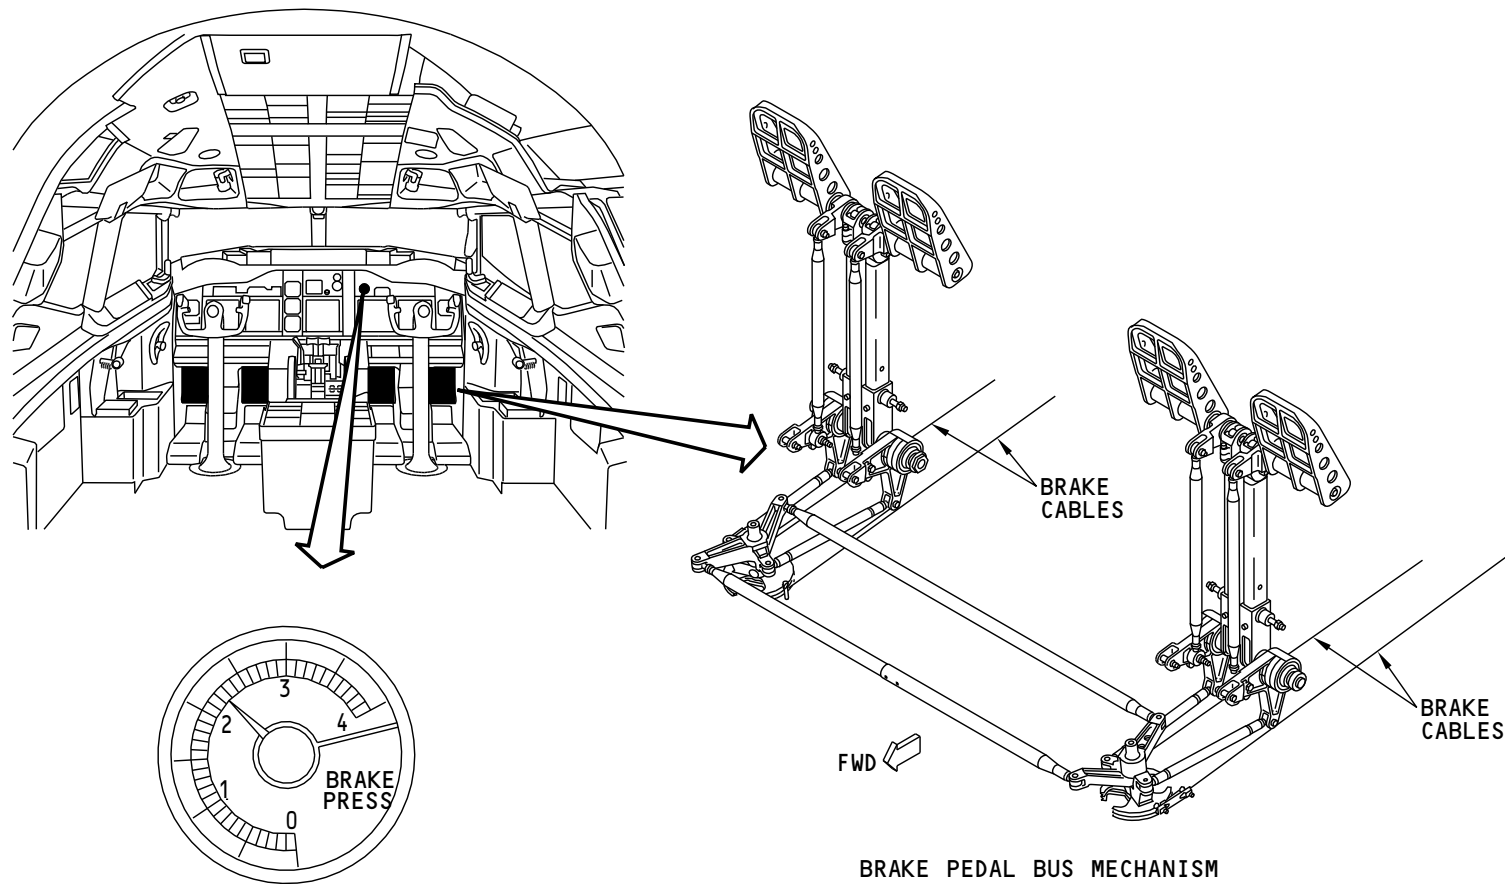

HYDRAULIC BRAKE PRESSURE INDICATOR

HYDRAULIC BRAKE SYSTEM - COMPONENT LOCATION

M85007 S0004627918\_V1



## HYDRAULIC BRAKE SYSTEM - BRAKE PEDAL BUS MECHANISM

### Purpose

The brake pedal mechanism sends brake pedal inputs to the brake metering valves to manually control brake metered pressure.

Bus rods connect the left and right brake pedal bus crank assemblies. This permits control of the left and right brakes with the captain or the first officer pedals.

### Components

These are the brake pedal mechanism components:

- Captain and first officer rudder pedals
- Vertical controls rods (4)
- Lower bellcranks (4)
- Fore-aft control rods (4)
- Brake pedal bus crank assemblies (2)
- Cable quadrants (2)
- Bus rods (2)
- Brake cables (4).

### Location

The rudder pedals and vertical control rods are above the flight compartment floor. The vertical control rods extend through the floor into the forward equipment compartment. All of the other components are in the forward equipment compartment.

The brake cables attach to the brake pedal mechanism cable quadrants and go to the main landing gear wheel well.

### Functional Description

Two sets of brake pedals operate the brake pedal bus mechanism.

Pedal movement goes through vertical control rods to the lower bellcranks. These bellcranks connect to brake pedal bus crank assemblies and cable quadrants with fore-aft control rods.

Input to the left cable quadrant controls the left brakes with brake cables on the left side of the airplane. The right cable quadrant and cables are on the right side of the airplane and operate the same as the left.


**32-41-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## HYDRAULIC BRAKE SYSTEM - BRAKE PEDAL BUS MECHANISM

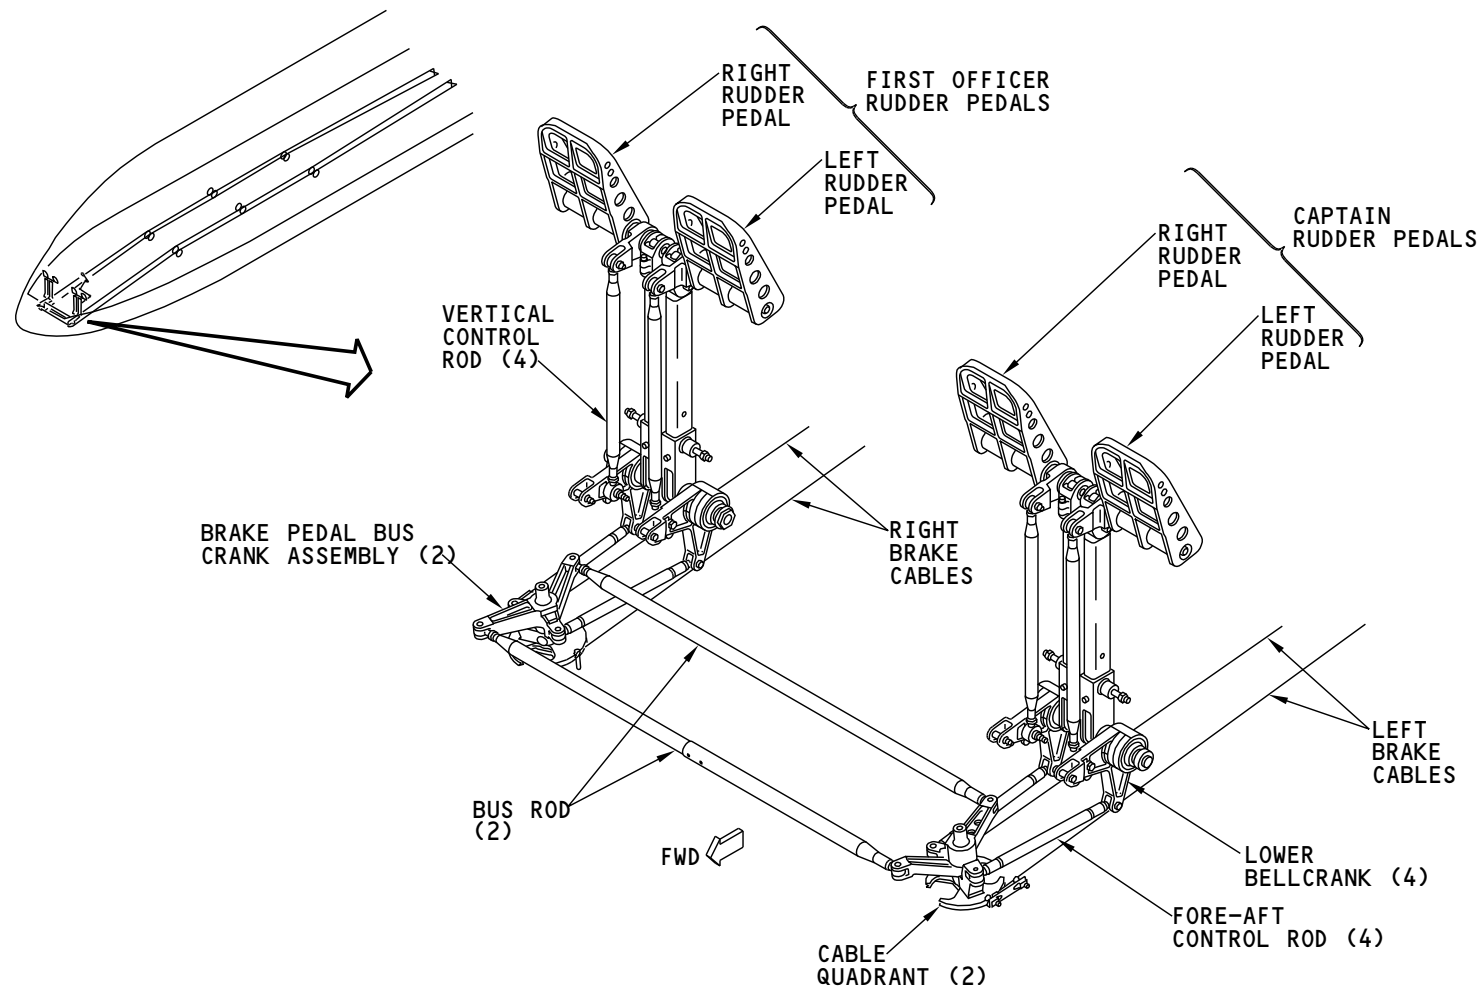

M85008 S0004627920\_V1

## HYDRAULIC BRAKE SYSTEM - BRAKE PEDAL BUS MECHANISM

32-41-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**HYDRAULIC BRAKE SYSTEM - BRAKE METERING VALVE ASSEMBLY****Purpose**

The brake metering valve assemblies get input from the brake pedals through control cables and a control quadrant that operate a crank and control rod. Movement of the brake pedal mechanism controls the brake metering valves that send out metered brake pressure to the brakes.

**location**

There are two brake metering valve assemblies in the main landing gear wheel well on the aft side of the ceiling.

**Physical Description**

The brake metering valve assemblies are interchangeable and have these components:



- Normal metering valve
- Alternate metering valve
- Gear retract braking actuator.

The normal and alternate metering valve have identical housings that are bolted together and share a common input shaft.

The gear retract braking actuators are mounted integrally with the alternate metering valve.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

HYDRAULIC BRAKE SYSTEM - BRAKE METERING VALVE ASSEMBLY

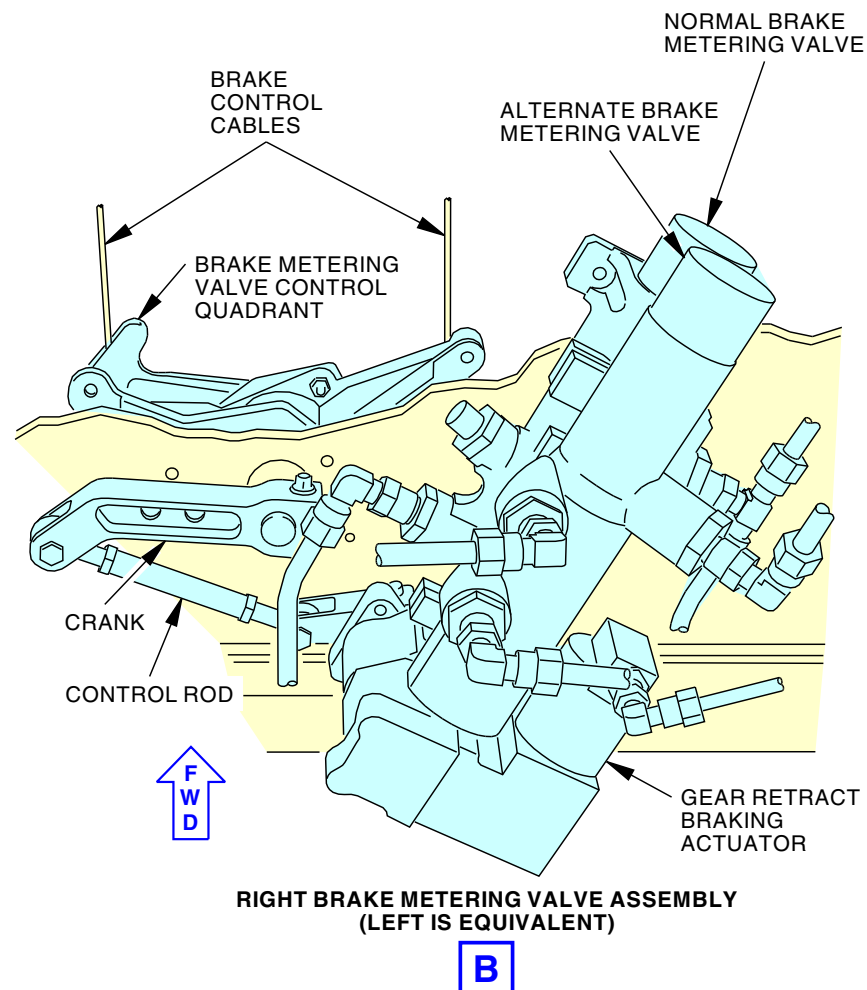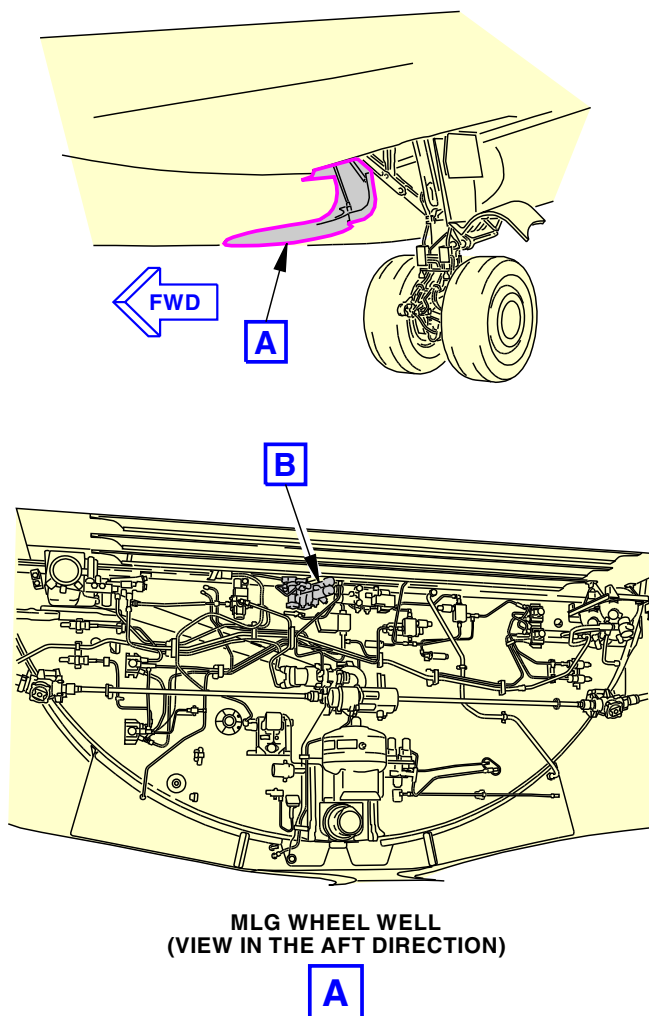

M85009 S0004627922\_V2

HYDRAULIC BRAKE SYSTEM - BRAKE METERING VALVE ASSEMBLY

**32-41-00**

**HYDRAULIC BRAKE SYSTEM - BRAKE METERING VALVE ASSEMBLY - FUNCTIONAL DESCRIPTION****General**

On the brake metering valve assembly, the normal and alternate brake metering valves are almost the same. They attach together and use the same input shaft.

Only one valve at a time gets pressure, except during gear retract braking. The alternate brake selector valve and accumulator isolation valve control which metering valve gets pressure.

The normal brake metering valve uses hydraulic system B or accumulator pressure for the normal brake system.

The alternate brake metering valve uses hydraulic system A pressure for the alternate brake system when hydraulic system B does not supply pressure. It also uses pressure from the landing gear retract line to stop the main gear wheel rotation during retraction.

**Normal and Alternate Brake Application**

The brake pedal command goes to the metering valves through cables and linkage. This moves the metering valve input shaft.

When the input shaft turns, it moves the metering valve spools in both valves at the same time.

The metering valve spools are spring-loaded to the brakes OFF position.

Metering valve spool movement sends pressure to the brakes and to the feedback chamber. This pressure applies the brakes and moves the metering valve spool to the brake pressure maintained position. This also applies a feedback force back through the brake control cables to the brake pedals.

Brake pedal release lets the springs return the metering valve spools in both valves to the closed position. This sends brake pressure to return and releases the brakes.

**Gear Retract Wheel Braking**

During landing gear retraction, landing gear retract pressure from the landing gear selector valve pressurizes the gear retract braking actuator.

The gear retract braking actuator moves a forked actuator lever to operate the alternate brake metering valve spool. This operation does not move the input shaft and does not move the brake pedals.


The movement of the alternate metering valve spool sends landing gear retract pressure to the brakes.

**32-41-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

## HYDRAULIC BRAKE SYSTEM - BRAKE METERING VALVE ASSEMBLY - FUNCTIONAL DESCRIPTION

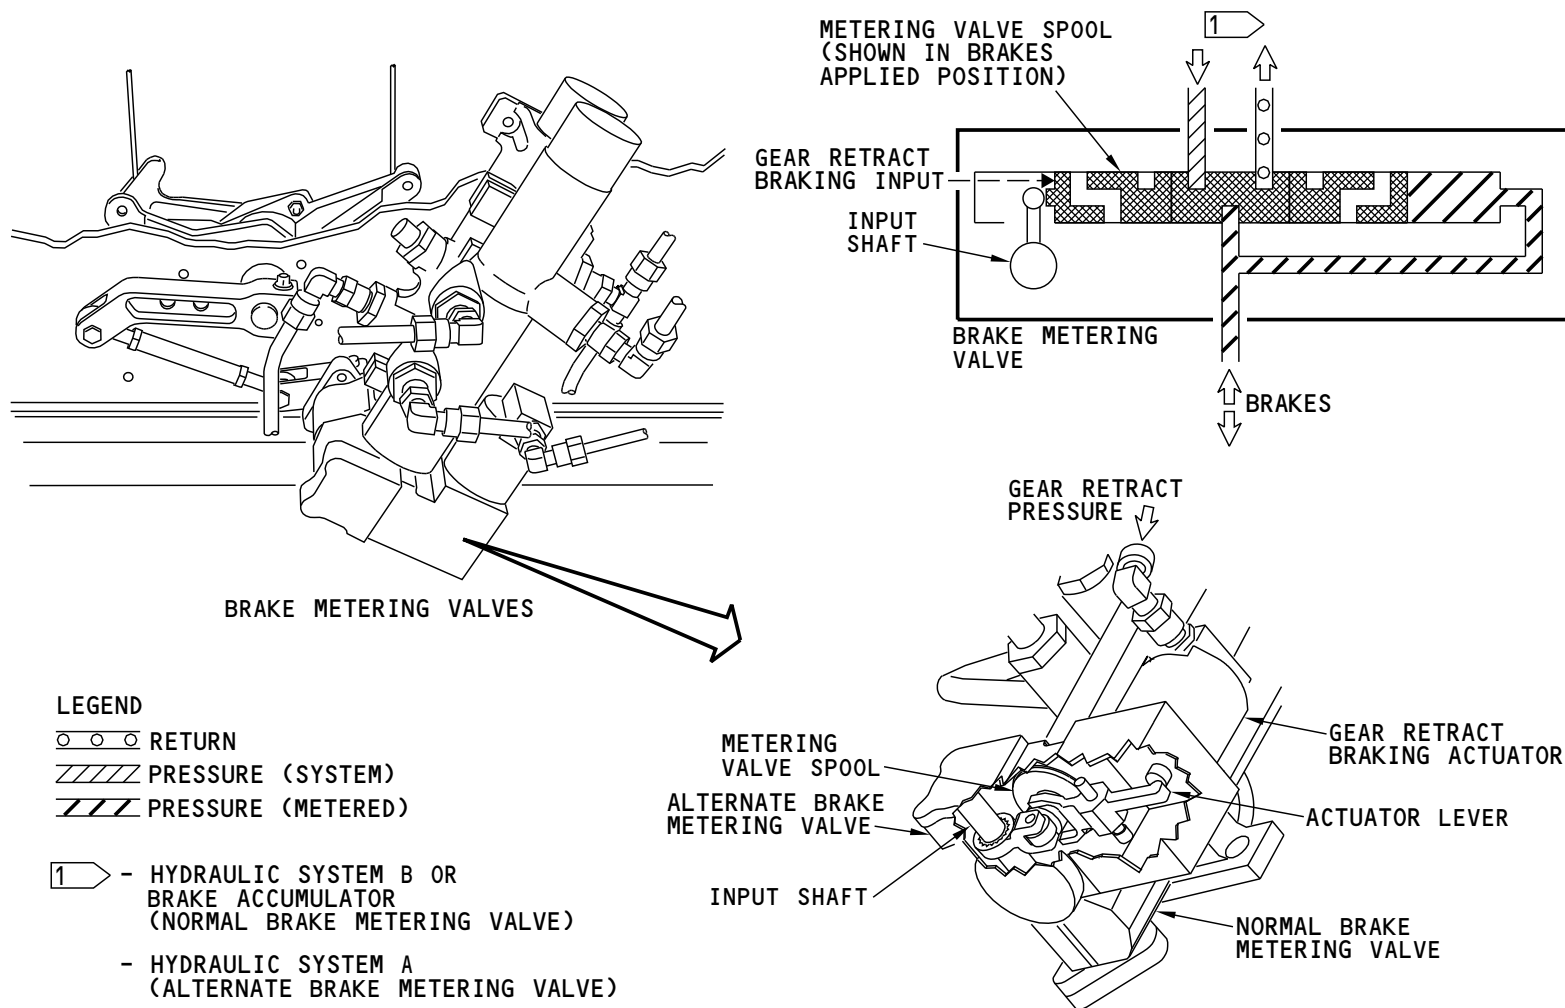

M84904 S0004627924\_V1

## HYDRAULIC BRAKE SYSTEM - BRAKE METERING VALVE ASSEMBLY - FUNCTIONAL DESCRIPTION

32-41-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**HYDRAULIC BRAKE SYSTEM - ALTERNATE BRAKE SELECTOR AND ACCUMULATOR ISOLATION VALVES****Purpose**

The alternate brake selector valve selects and sends hydraulic systems B or A pressure to the normal or alternate brake systems.

The accumulator isolation valve holds pressure in the brake accumulator when the alternate brake system gets pressure.

**Location**

Both valves are in the main landing gear wheel well on the upper bulkhead.

**Physical Description**

The each valve is a two-position valve with these components:


- Housing
- Slide valve
- Pressure switch (alternate brake selector valve only).

Both valves are the same and are interchangeable except for a pressure switch on the alternate brake selector valve.

Each valve gets pressure from two sources. The pressures push on pistons in the valves that have different surface areas. This moves the valves to select the brake source.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## HYDRAULIC BRAKE SYSTEM - ALTERNATE BRAKE SELECTOR AND ACCUMULATOR ISOLATION VALVES

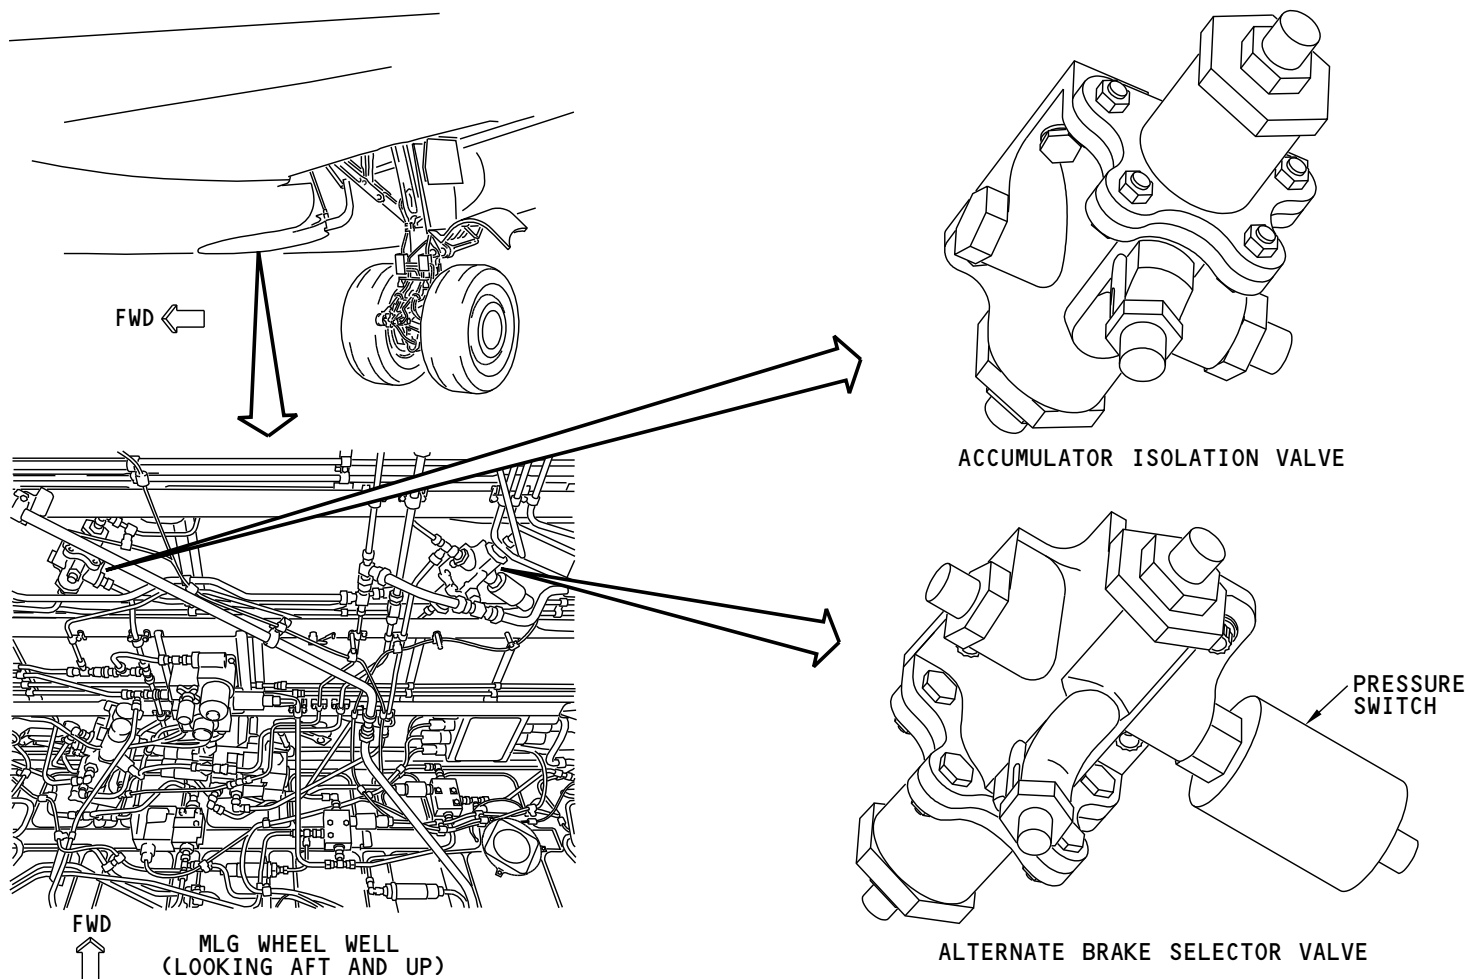

M85010 S0004627926\_V1

## HYDRAULIC BRAKE SYSTEM - ALTERNATE BRAKE SELECTOR AND ACCUMULATOR ISOLATION VALVES

32-41-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**HYDRAULIC BRAKE SYSTEM - ALT BRAKE SELECTOR AND ACCUM ISOLATION VALVES - FUNCTIONAL DESCRIPTION****General**

The alternate brake selector and accumulator isolation valves operate together to control pressure to the normal and alternate brake systems.

**Alternate Brake Selector Valve**

When hydraulic system A and B pressures are the same, hydraulic system B pressure on the alternate brake selector valve does not let hydraulic system A supply pressure to the alternate brake system. In this position, the alternate brake selector valve lets landing gear retract pressure pressurize the alternate brake system during gear retraction.

When hydraulic system B does not supply pressure, the alternate brake selector valve moves. This lets hydraulic system A pressure supply pressure to the alternate brake system.

The alternate brake selector valve pressure switch sends a signal to the antiskid system when the alternate brake system receives pressure.

See the antiskid/autobrake system for more information about the antiskid system. (SECTION 32-42)

The pressure switch also sends a signal to the flight data acquisition unit (FDAU).

See the Flight Data Recording System (FDRS) section for more information on the flight data acquisition unit. (SECTION 31-31)

**Accumulator Isolation Valve**

When hydraulic system B does not supply pressure, alternate brake system pressure from the alternate brake selector valve moves the accumulator isolation valve. This isolates brake accumulator pressure from the normal brake system.

When hydraulic system B and A do not supply pressure, brake accumulator pressure moves the accumulator isolation valve. This sends pressure from the brake accumulator to the normal brake system.

**32-41-00**


EFFECTIVITY

SIA ALL


D633A101-SIA


ECCN 9E991 BOEING PROPRIETARY - See title page for details

## HYDRAULIC BRAKE SYSTEM - ALT BRAKE SELECTOR AND ACCUM ISOLATION VALVES - FUNCTIONAL DESCRIPTION

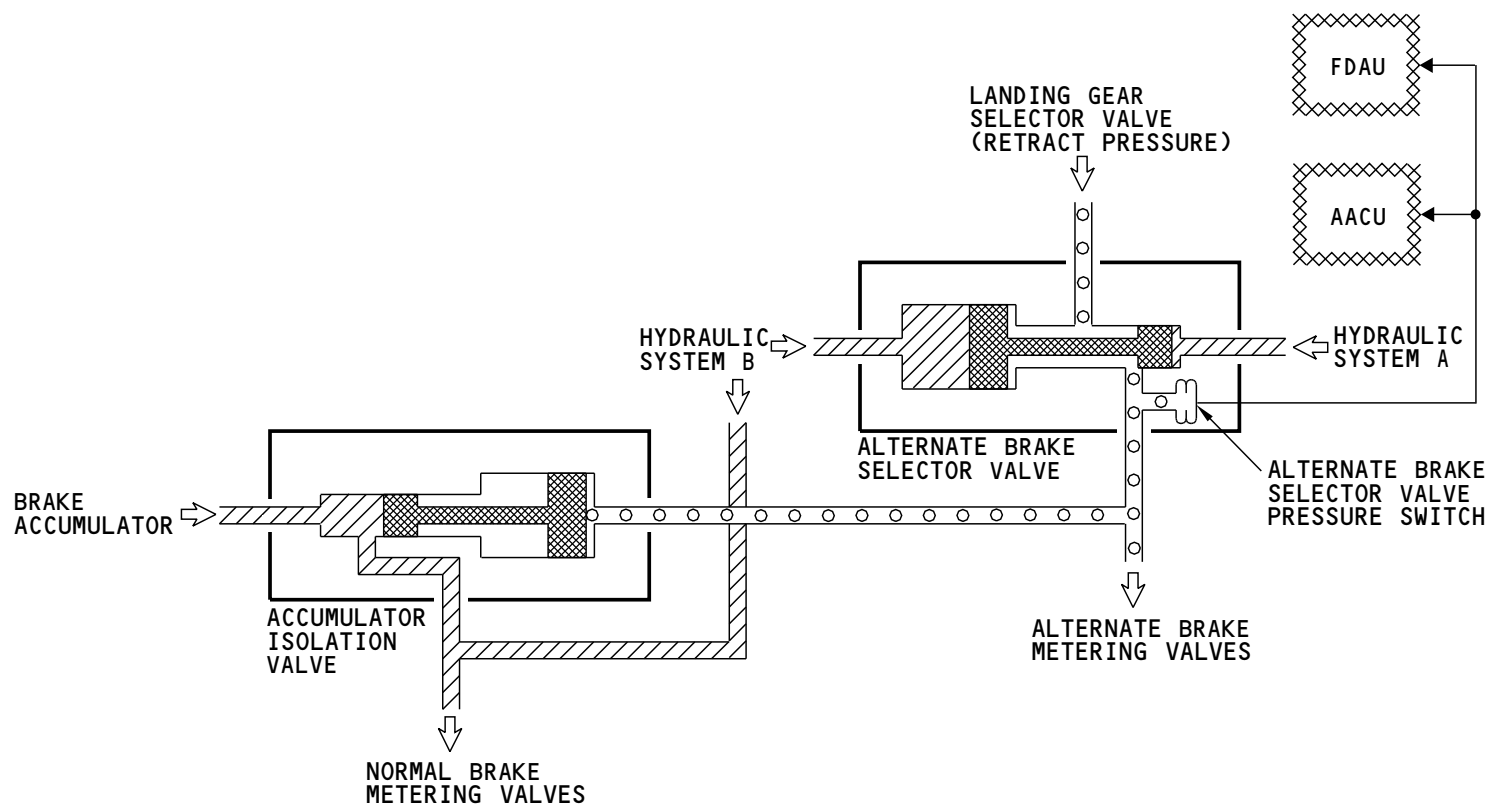

## LEGEND

 RETURN OR RETRACT PRESSURE

 PRESSURE

M84905 S0004627928\_V1

## HYDRAULIC BRAKE SYSTEM - ALT BRAKE SELECTOR AND ACCUM ISOLATION VALVES - FUNCTIONAL DESCRIPTION

32-41-00-008

SIA ALL

EFFECTIVITY

32-41-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## HYDRAULIC BRAKE SYSTEM - BRAKE ACCUMULATOR

### Purpose

The brake accumulator supplies brake pressure to the normal brake hydraulic system if there are no other pressure sources. It is also the pressure source for the parking brake system when the hydraulic systems do not supply pressure.

### Location

The brake accumulator is in the right aft wing-to-body fairing. To get access to the brake accumulator, open the hinged door on the bottom of the fairing.

The servicing components are on the aft bulkhead in the main landing gear wheel well.

### Physical Description

Brake accumulator and servicing components include:

- Brake accumulator
- Inflation valve
- Pressure transmitter
- Pressure indicator
- Brake pressure relief valve.

### Functional Description

The accumulator is a gas charged unit with a floating piston that separates the gas and the fluid. It has a precharge of 1000 psi and a volume of 300 cubic inches (4.9 liters). Hydraulic system B supplies pressure to the accumulator.

The brake accumulator pressure transmitter sends the pressure signal to the brake pressure indicator in the flight compartment.

The direct reading pressure indicator in the main landing gear wheel well lets you see the accumulator pressure while you service the accumulator.

Servicing instructions are on a placard by the charging valve and transmitter.

When the accumulator is fully charged, it supplies enough pressure for at least six full brake applications or to keep the parking brake pressurized for eight hours.

The brake system relief valve opens when the pressure in the brake accumulator increases to more than 3500 psi. This prevents damage to the brake accumulator. The relief valve closes when the pressure decreases to less than 3100 psi.

### Training Information Point

Obey this warning when you operate the inflation valve:




**WARNING**

LOOSEN THE SWIVEL NUT ONLY. DO NOT LOOSEN THE VALVE. PRESSURE IN THE VALVE CAN BLOW THE VALVE OFF AND CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.

# 32-41-00

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

### HYDRAULIC BRAKE SYSTEM - BRAKE ACCUMULATOR

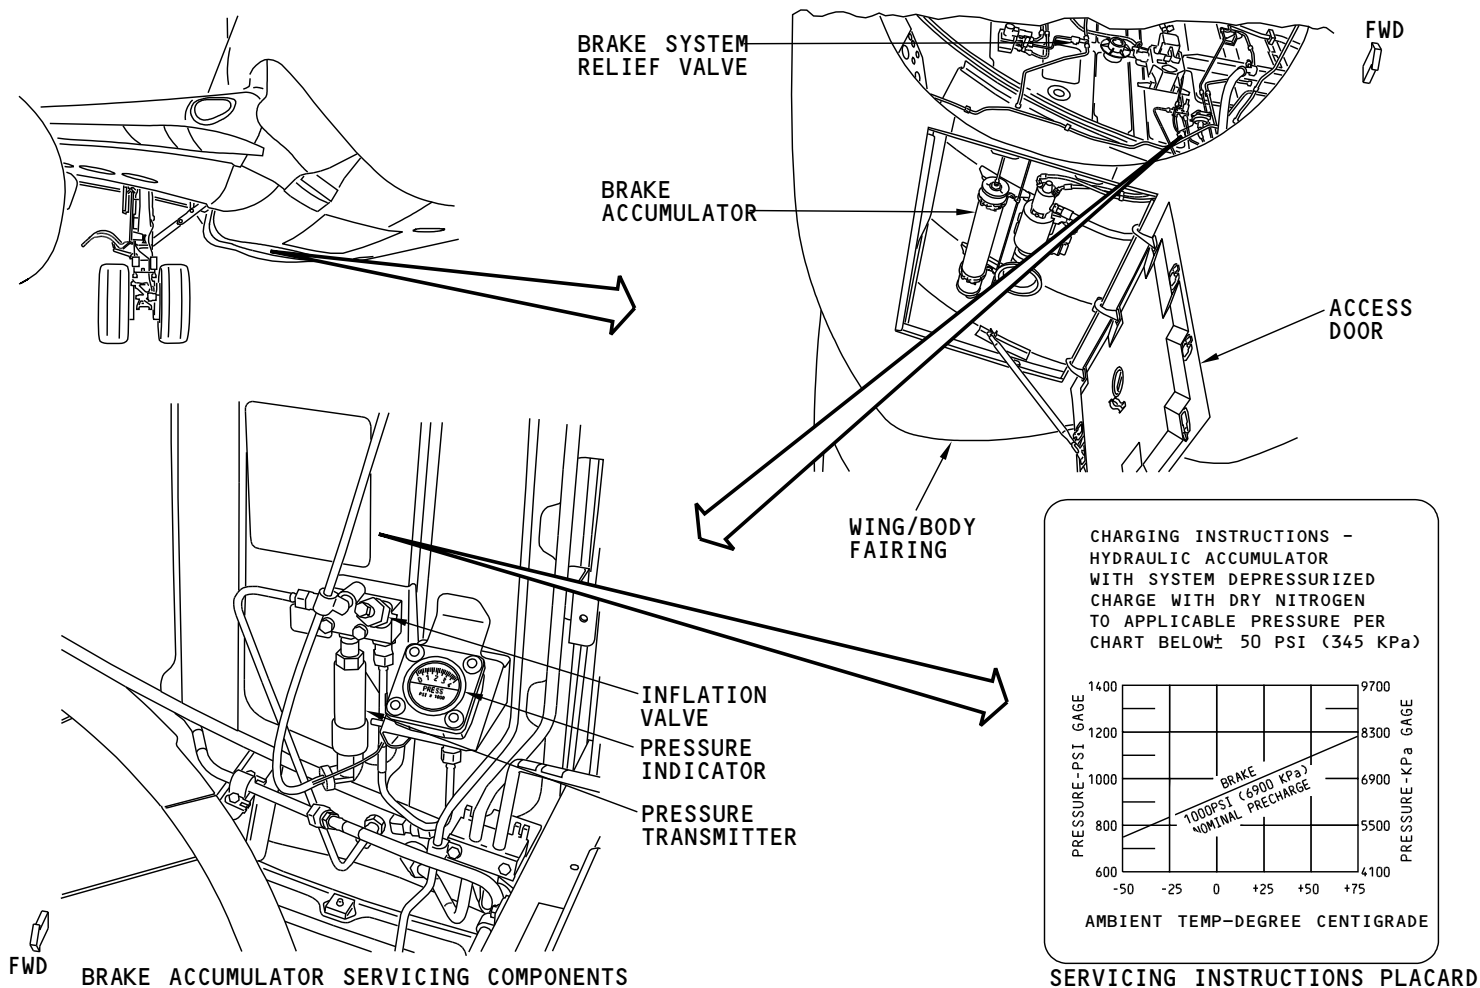

M85011 S0004627930\_V1

### HYDRAULIC BRAKE SYSTEM - BRAKE ACCUMULATOR

32-41-00

**HYDRAULIC BRAKE SYSTEM - BRAKE HYDRAULIC FUSES****Purpose**

Brake hydraulic fuses prevent hydraulic fluid loss if there is an external leak downstream of the fuses.

Four hydraulic fuses in the normal brake lines protect each brake during normal brake operation. Two hydraulic fuses in the alternate brake lines each protect both brakes on a main landing gear during alternate brake operation.

**Location**

The brake hydraulic fuses for the normal brake system are on the aft bulkhead of the main landing gear wheel well.

The brake hydraulic fuses for the alternate brake system are on the outboard sides of the upper bulkhead of the main landing gear wheel well.

**Physical Description**

The brake hydraulic fuse is a volume type and has these components:

- Housing
- Spring
- Piston
- Metering slot
- Manual bypass valve.

**Functional Description**

During normal operation, the piston and spring are at the relaxed position. This lets fluid pressure go through the metering slot and over the bypass valve normally. When the pressure differential across the fuse starts to decrease below normal, the piston starts to compress the spring.

If 60 to 95 cubic inches (0.9-1.5 liters) of fluid goes through the hydraulic fuse metering slot and bypass valve, the piston compresses the spring until the fuse is closed. When the pressure differential across the hydraulic fuse decreases between 0 and 30 psi, the fuse resets. This lets the spring push the piston to the normal position.

A reset lever permits manual reset of the hydraulic fuse. To reset the hydraulic fuse, move the reset lever in the direction shown on the placard near the fuse. This operates a bypass valve inside the hydraulic fuse that makes the pressure on each side of the fuse equal.

There are no visual indications of a closed fuse.

**Training Information Point**

Hold the reset lever in the reset position while you bleed the brakes so the fuse does not set.


**32-41-00**

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# HYDRAULIC BRAKE SYSTEM - BRAKE HYDRAULIC FUSES

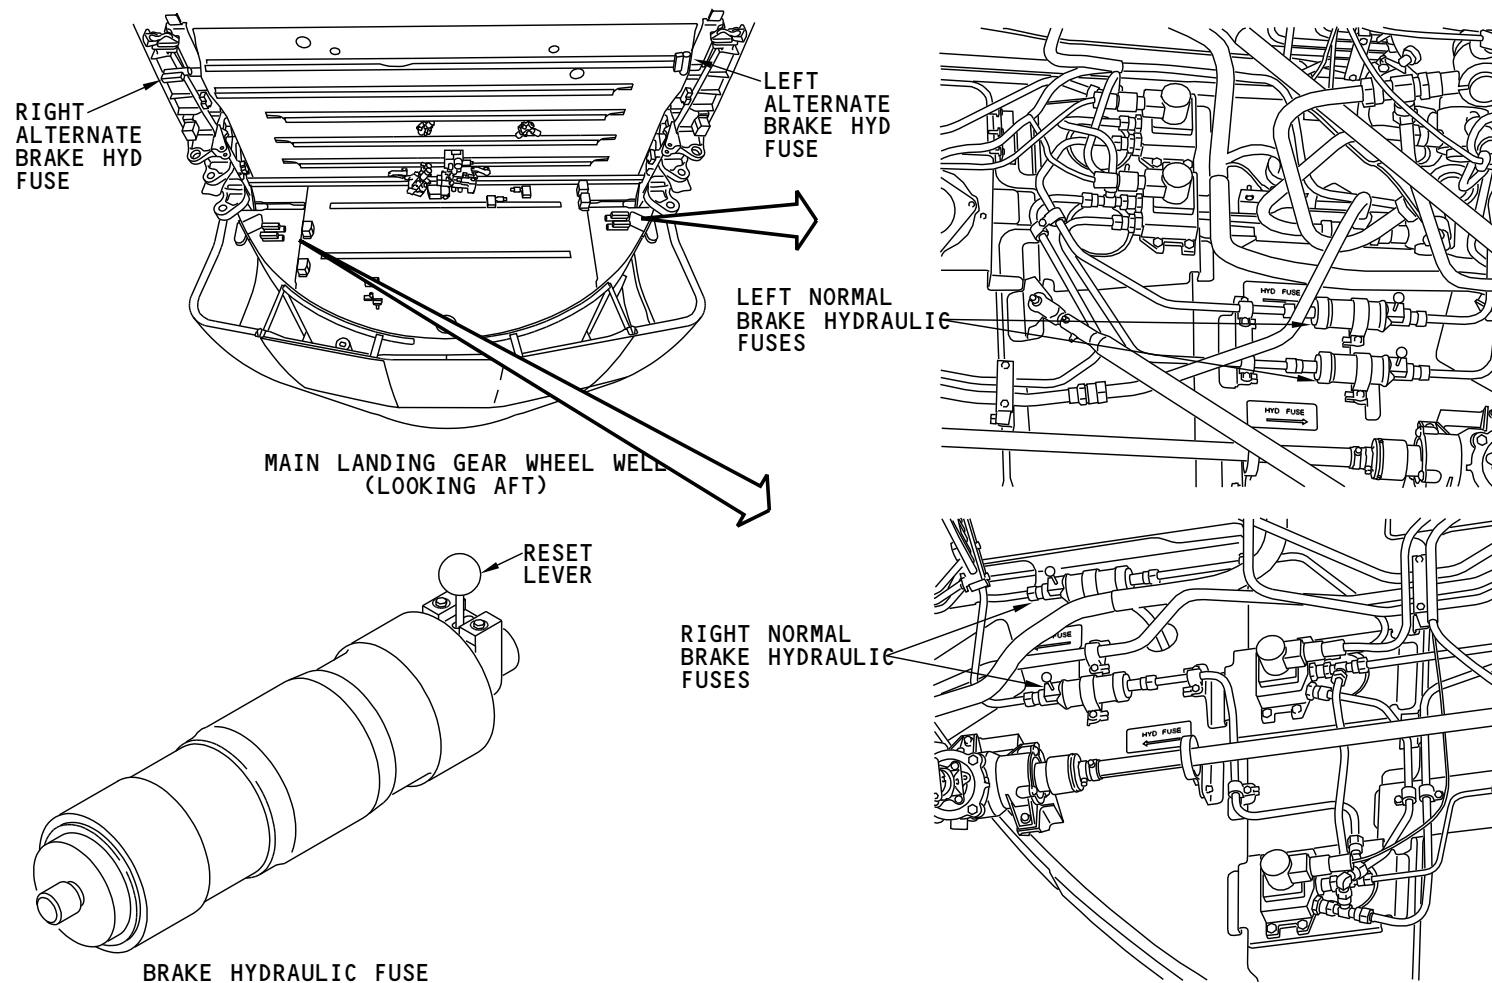

M85012 S0004627932\_V1

# HYDRAULIC BRAKE SYSTEM - BRAKE HYDRAULIC FUSES

**32-41-00**

**HYDRAULIC BRAKE SYSTEM - BRAKE SHUTTLE VALVES****Purpose**

The brake shuttle valves select the highest of normal/autobrake or alternate/gear retract pressures and sends it to the brakes.

**Location**

The brake shuttle valves are on the outboard sides of the ceiling in the main landing gear wheel well.

**Physical Description**


The shuttle valves are un-biased valves with a shuttle piston and a spring detent. The valves are interchangeable.

**Functional Description**

The shuttle piston moves to the detented position when a pressure differential between the two input pressure source lines increases to 80 psi or more. This connects the input line with the highest metered pressure to the brake line. The shuttle piston also blocks the line that has the lowest pressure.

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

# HYDRAULIC BRAKE SYSTEM - BRAKE SHUTTLE VALVES

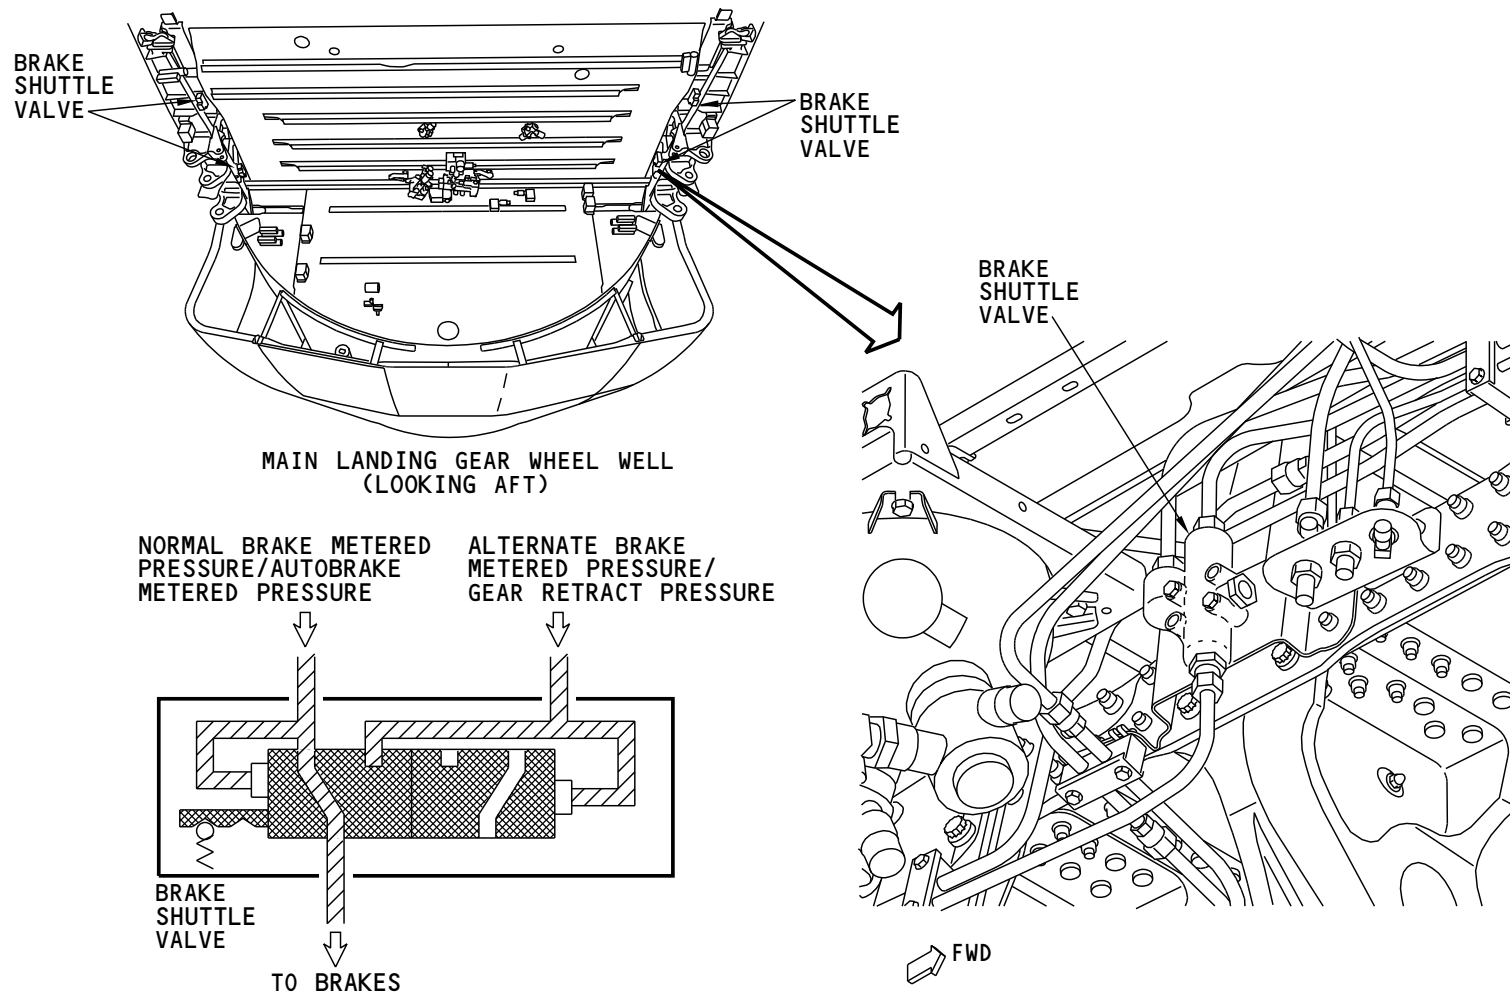

M84906 S0004627934\_V1

## HYDRAULIC BRAKE SYSTEM - BRAKE SHUTTLE VALVES

## HYDRAULIC BRAKE SYSTEM - BRAKE ASSEMBLY

### General

The main landing gear wheel brakes use hydraulic pressure to slow or stop the airplane during landing and taxi.

### Location

Each wheel brake is on a main landing gear axle.

### Physical Description

The brake assembly is a rotor-stator unit that operates using hydraulic pressure. The assembly uses multiple carbon discs as rotors and stators.

Each main landing gear wheel brake has these components:

- Stators
- Rotors
- Pressure Plate
- Piston/adjusters (6)
- Axle bushings
- Wear indicator pins (2)
- Brake hose connection/hydraulic bleed port.

### Functional Description

The brake assembly has bushings. These bushings attach to replaceable sleeves on the landing gear axle.

A torque takeout slot on the brake assembly aligns with a torque pin on the bottom of the main landing gear inner cylinder. The slot and pin transmit brake torque to the main landing gear strut.

A retention cable connects both brakes together on each main landing gear. The cable keeps the brake on the axle if the wheel falls off the airplane.

Piston/adjuster assemblies apply brake system hydraulic pressure to the pressure plate. The pressure plate forces the stators and rotors together in the brake housing. This slows or stops the wheel. The pistons automatically adjust for brake wear.

### Training Information Point



#### WARNING

MAKE SURE TO KEEP YOUR FINGERS AWAY FROM THE PARTS OF THE BRAKE THAT CAN MOVE DURING THE BLEED OPERATION. INJURIES TO PERSONS CAN OCCUR.



#### CAUTION

BLEED THE BRAKE SYSTEM CORRECTLY. AIR IN THE SYSTEM CAN MAKE THE BRAKES UNSERVICEABLE. BRAKES WHICH ARE UNSERVICEABLE CAN HAVE A FAILURE DURING OPERATION.



#### CAUTION

DO NOT LET THE BRAKE UNIT WEAR UNTIL THE RELINE INDICATOR PIN IS BELOW THE SURFACE. DAMAGE TO EQUIPMENT CAN OCCUR.

Two indicator pins on the inboard side of the brake housing show brake wear. You must apply the brakes to check the wear indicator pins.






# 32-41-00

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# HYDRAULIC BRAKE SYSTEM - BRAKE ASSEMBLY

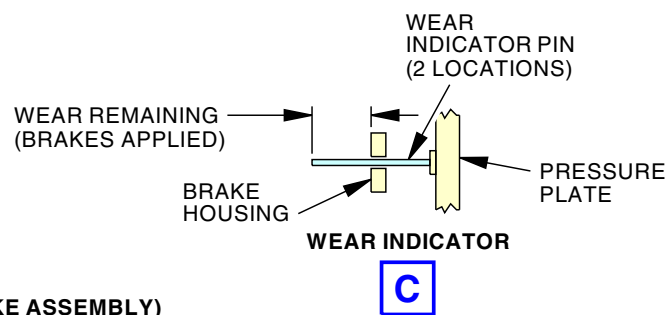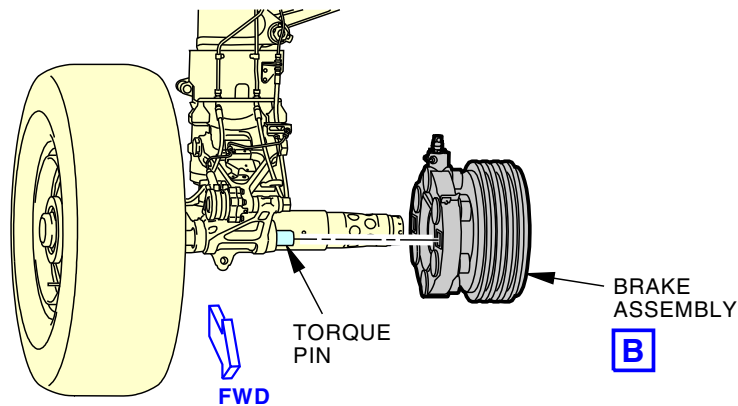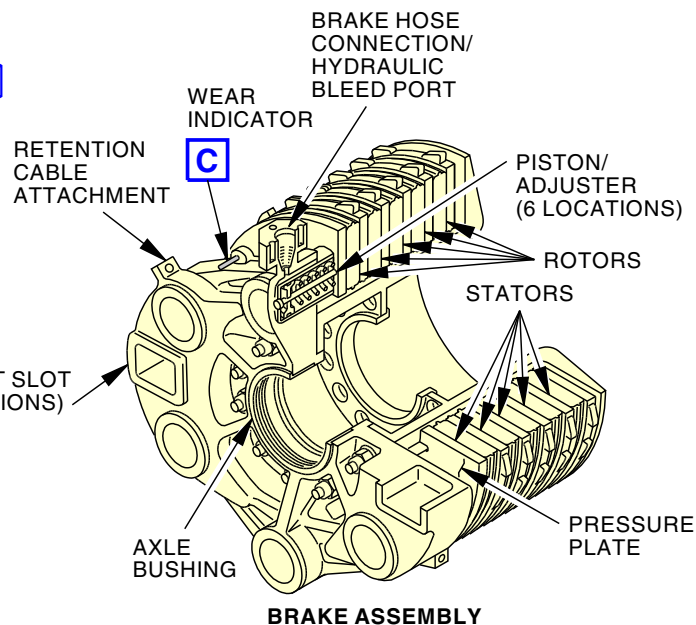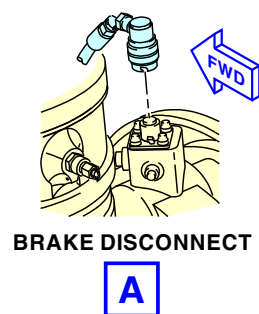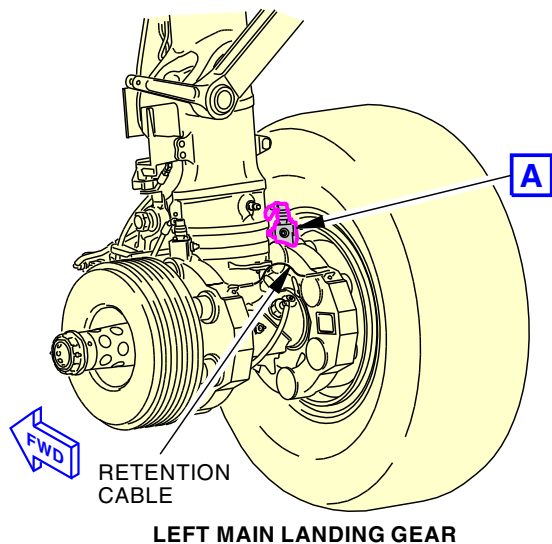


(STEEL BRAKE ASSEMBLY)


## HYDRAULIC BRAKE SYSTEM - BRAKE ASSEMBLY

M85014 S0004627937\_V2


HYDRAULIC BRAKE SYSTEM - BRAKE ASSEMBLY

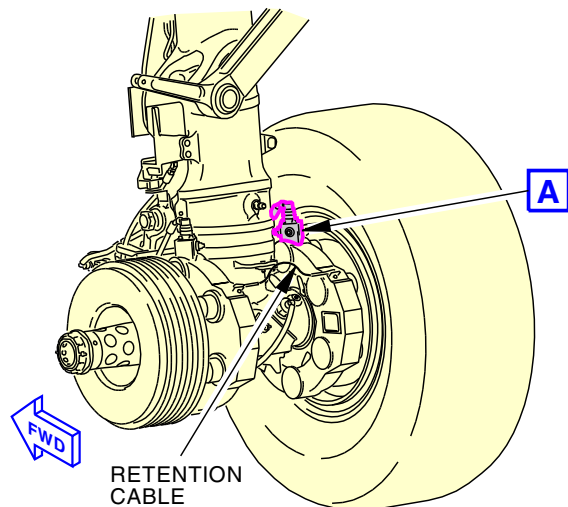


LEFT MAIN LANDING GEAR

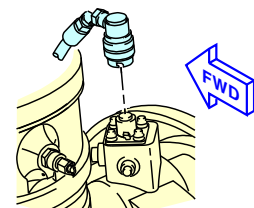

BRAKE DISCONNECT

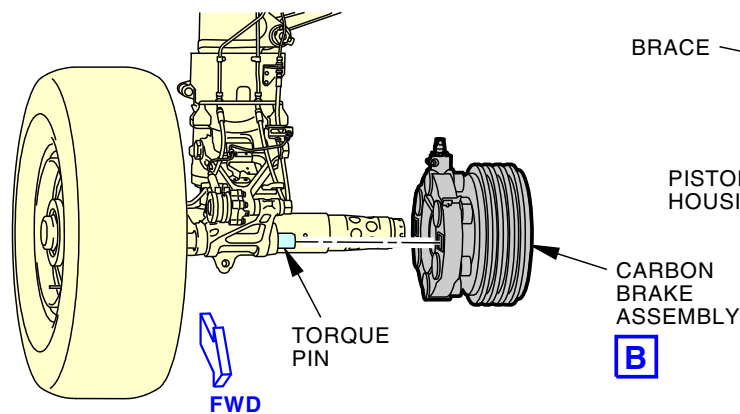

(CARBON BRAKE ASSEMBLY)

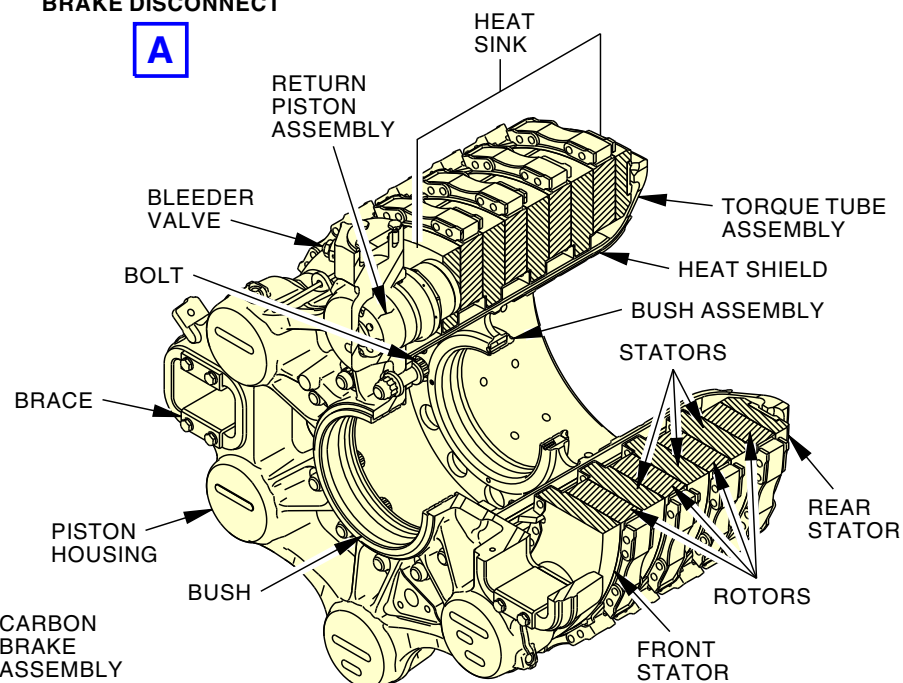

CARBON BRAKE ASSEMBLY

**B**

1562297 S0000289465\_V2

HYDRAULIC BRAKE SYSTEM - BRAKE ASSEMBLY

**32-41-00**

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-41-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## HYDRAULIC BRAKE SYSTEM - FUNCTIONAL DESCRIPTION

### General

The source selection operation supplies pressure for these different brake modes:

- Normal brakes
- Alternate brakes
- Accumulator brakes
- Gear retract braking.

When the pressure in one hydraulic brake source decreases, the alternate brake selector valve changes position to set the next available source. This pressure goes to the normal or alternate brake metering valves. The accumulator isolation valve closes to hold pressure in the brake accumulator during alternate brake operation. The accumulator isolation valve opens to send accumulator pressure to the normal brake metering valves when hydraulic system A and B do not supply pressure.

Brake pedal input goes through the brake pedal bus mechanism and cables to the left and right brake metering valves. The metering valves use this mechanical input to control the pressure source and pressurize the brakes.

### Normal Brakes

When hydraulic system B supplies pressure, the alternate brake selector valve moves to stop pressure to the alternate brake system. The brakes then get metered hydraulic system B pressure from the normal brake metering valves.

Hydraulic system B pressure also charges the brake accumulator and moves the accumulator isolation valve.

### Alternate Brakes

When hydraulic system B pressure does not supply pressure, hydraulic system A pressure moves the alternate brake selector valve. The alternate brake selector valve sends hydraulic system A pressure to the alternate brake system. The brakes can then get metered hydraulic system A pressure from the alternate brake metering valves.

Pressure in the alternate brake system moves the accumulator isolation valve to isolate accumulator pressure.

### Accumulator Brakes

When neither hydraulic system A nor B supplies pressure, accumulator pressure moves the accumulator isolation valve. The brakes then get brake accumulator pressure from the normal brake metering valves.


The brake system relief valve starts to open at 3500 psi to protect the accumulator when the accumulator pressure increases to more than normal.

### Gear Retract Braking

When the normal brake system receives pressure during landing gear retraction, the alternate brake selector valve sends landing gear retract pressure to the alternate brake system. The gear retract pressure operates the alternate brake metering valves to the brakes applied position. This stops wheel spin before they go into the wheel well.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

# HYDRAULIC BRAKE SYSTEM - FUNCTIONAL DESCRIPTION

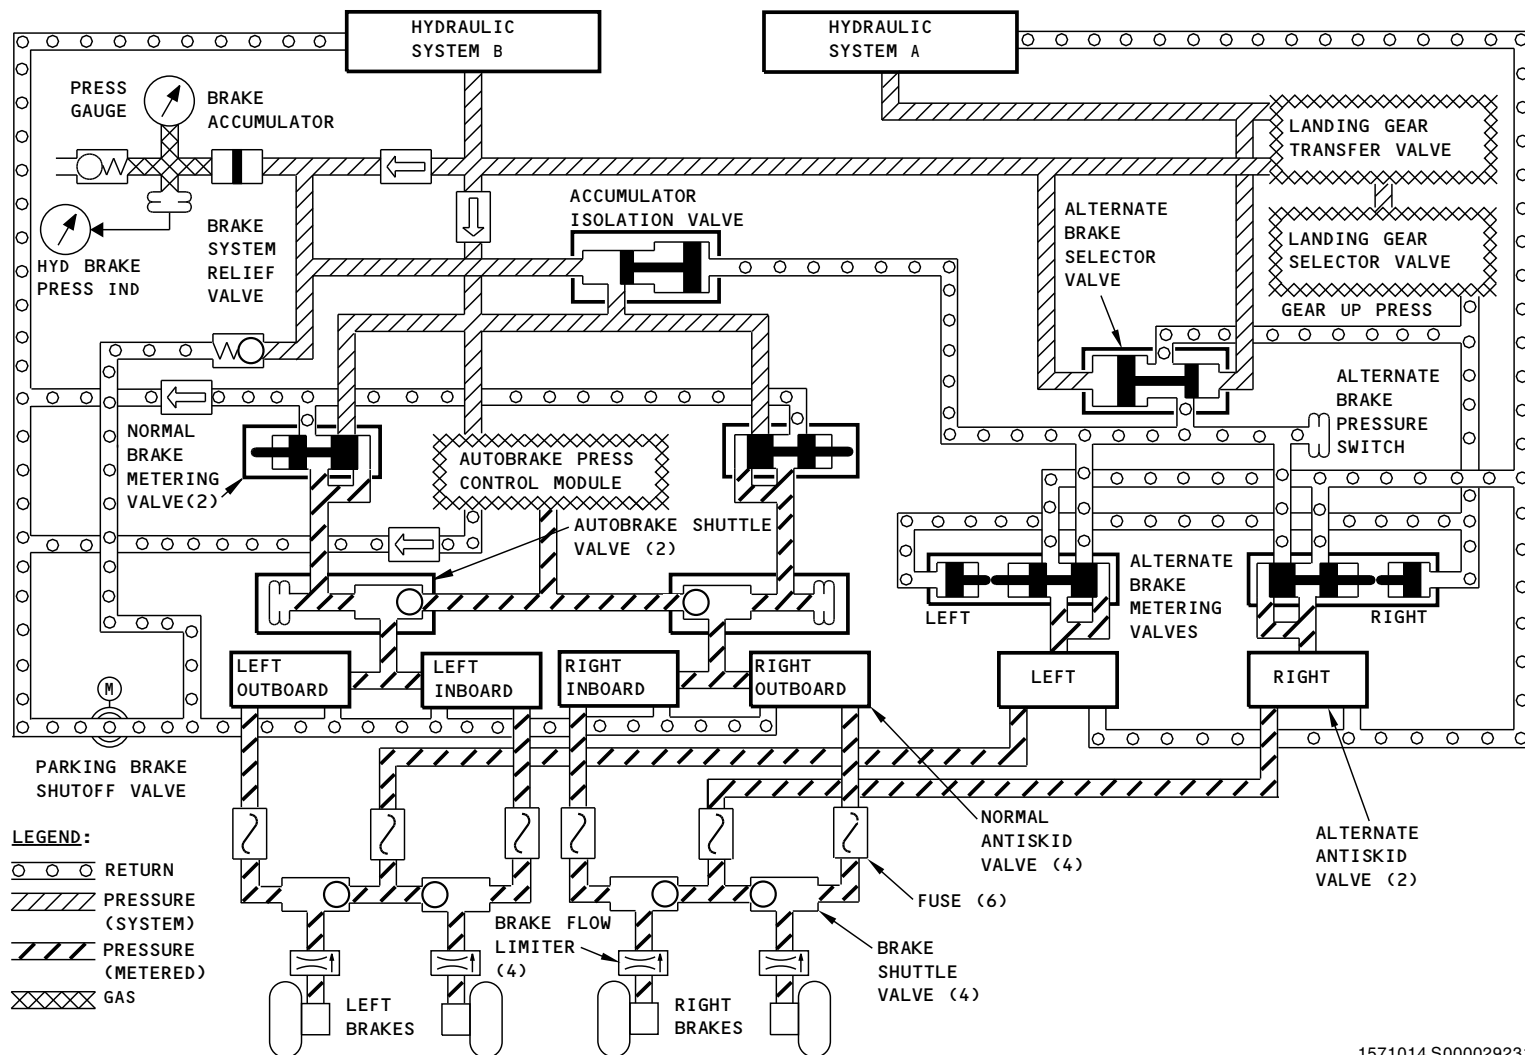

1571014 S0000292315\_V2

## HYDRAULIC BRAKE SYSTEM - FUNCTIONAL DESCRIPTION

32-41-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**HYDRAULIC BRAKE SYSTEM - BRAKE PRESSURE TRANSDUCER****Purpose**

The brake pressure transducer monitors metered brake pressure of the normal and alternate brake systems and sends electrical signals to the flight data acquisition unit (FDAU).

**Location**

The brake pressure transducers for the normal brake system are on the aft bulkhead of the main landing gear wheel well, down stream of the autobrake shuttle valves before the antiskid valves. One for the left brake system and one for the right brake system.

The brake pressure transducers for the alternate brake system are on the outboard sides of the upper bulkhead of the main landing gear wheel well, down stream of the alternate brake metering valves before the antiskid valves. One for the left brake system and one for the right brake system.

**Physical Description**

Each brake pressure transducer is a sealed assembly with a piston, disc spring, and electrical switch.

The brake pressure transducers are interchangeable.


**Functional Description**

The normal brake pressure transducers monitor left and right metered brake pressure from the normal brake metering valves or the autobrake pressure control module. Each transducer sends electrical signals to the FDAU.

The alternate brake pressure transducers monitor left and right metered brake pressure from the alternate brake metering valves. Each transducer sends electrical signals to the FDAU.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

HYDRAULIC BRAKE SYSTEM - BRAKE PRESSURE TRANSDUCER

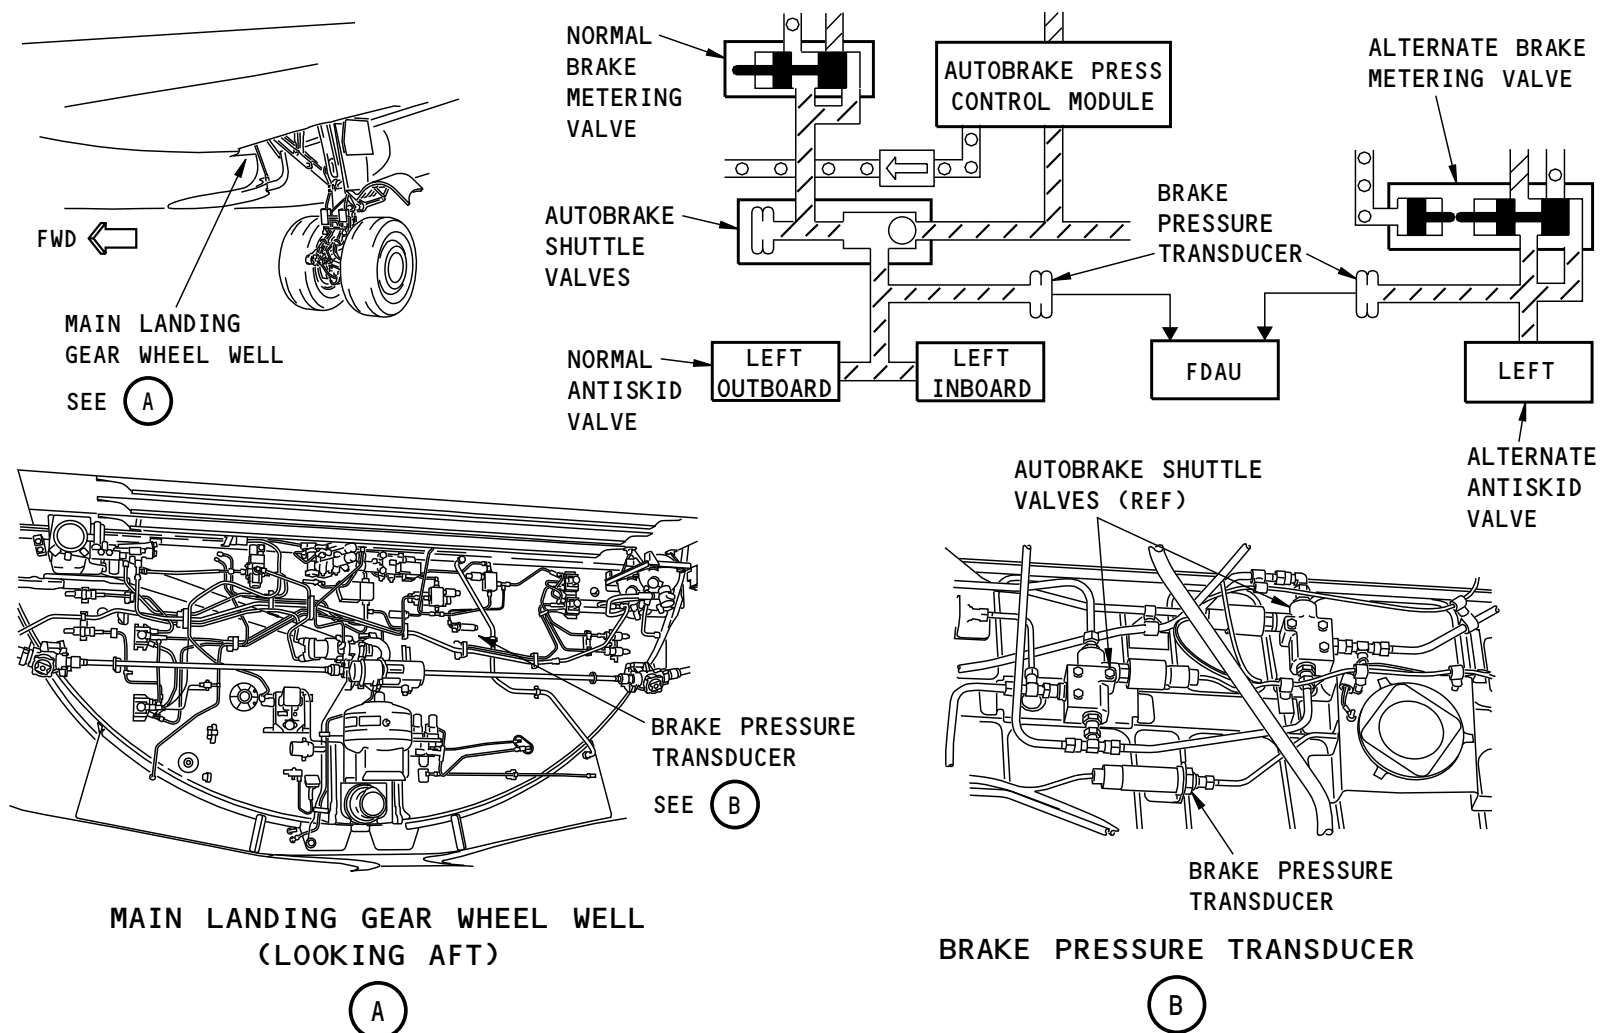

2103445 S0000447998\_V1

HYDRAULIC BRAKE SYSTEM - BRAKE PRESSURE TRANSDUCER

**32-41-00**





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-42-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## ANTISKID/AUTOBRAKE SYSTEM - INTRODUCTION

### Purpose

The antiskid system controls the brake system to prevent wheel skids during brake application.

The autobrake system supplies metered brake pressure to stop the airplane after the airplane lands or if a rejected takeoff (RTO) occurs.

### Antiskid System

The antiskid system monitors wheel deceleration and controls the brake metered pressure to prevent skid conditions. These are the antiskid functions:

- Skid control operates at more than eight knots to control each wheel deceleration during normal antiskid and both wheels on each main landing gear during alternate antiskid
- Locked wheel protection compares wheel speeds more than 25 knots of the two inboard or the two outboard wheels and releases brake pressure from the slower wheel
- Touchdown protection prevents wheel brake operation of 2 and 4 when the airplane is in the air
- Hydroplane protection decreases wheel brake pressure to 1 and 3 when ground speed is more than wheel speed
- Gear retract inhibit prevents the alternate antiskid system from operation during normal landing gear retraction.

### Autobrake System


The autobrake system monitors wheel deceleration and controls metered pressure on touchdown to maintain what the pilot selected on the AUTO BRAKE select switch until the airplane comes to a full stop. These are the autobrake functions:

- 1, 2, 3, and MAX deceleration positions command the autobrake system during landing brake control to modulate brake pressure until the airplane is at a full stop

- The rejected takeoff (RTO) position commands the autobrake system to apply full pressure to the wheel brakes and stop the airplane. The autobrake system operates in RTO when the pilot starts a rejected takeoff at groundspeed more than 88 knots.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## ANTISKID/AUTOBRAKE SYSTEM - INTRODUCTION

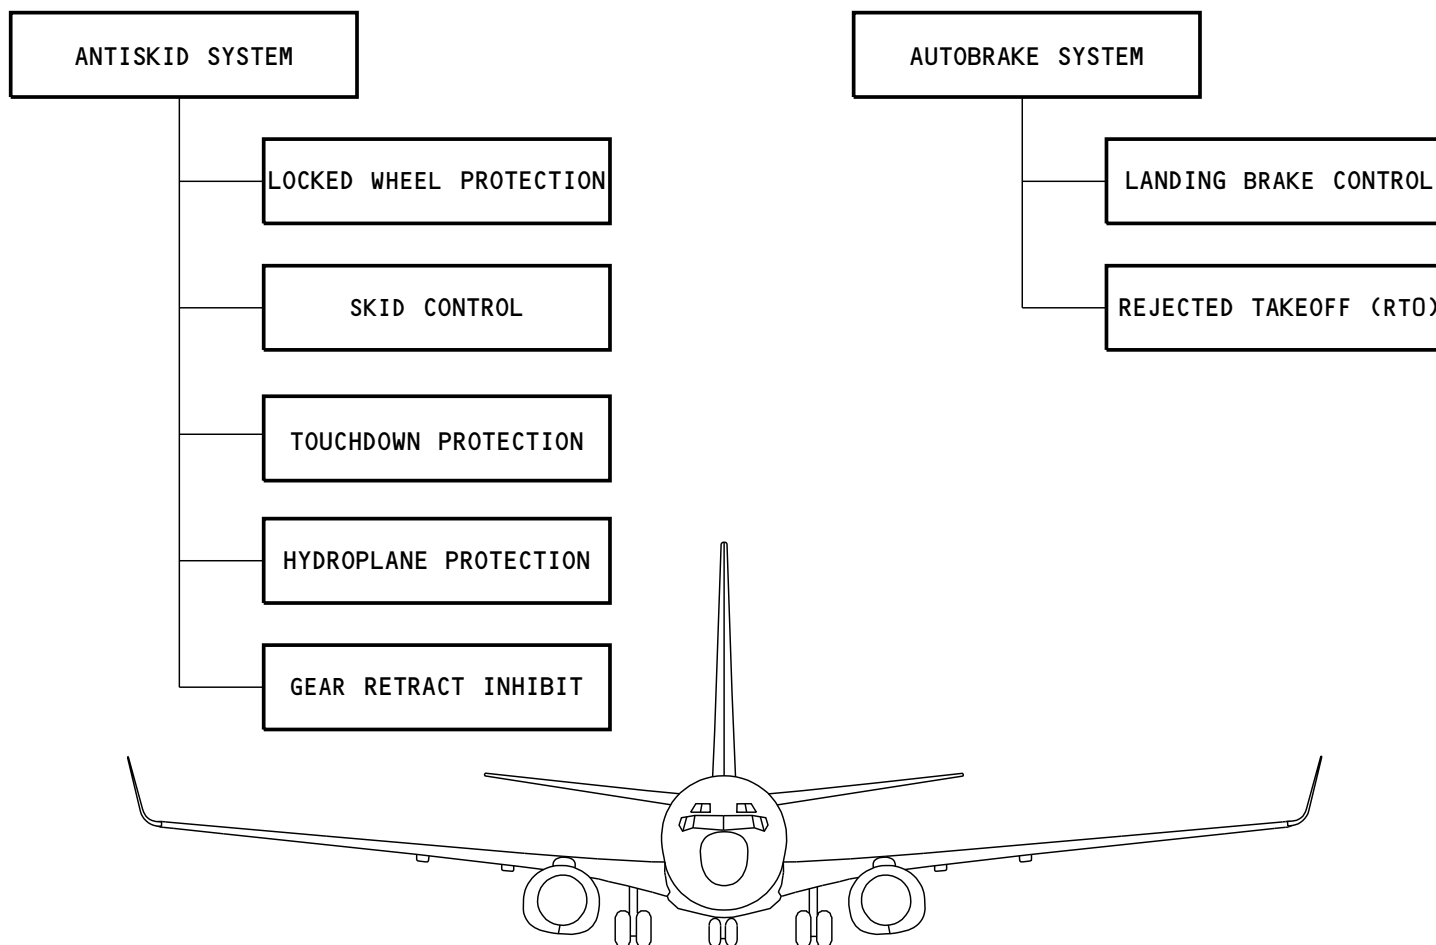

M85016 S0004627944\_V1

## ANTISKID/AUTOBRAKE SYSTEM - INTRODUCTION

**32-42-00**

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-42-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**ANTISKID/AUTOBRAKE SYSTEM - ANTISKID GENERAL DESCRIPTION****Purpose**

The antiskid system controls the metered brake pressure from the hydraulic brake system or the autobrake pressure from the autobrake system to prevent wheel skid. This gives maximum brake force to stop the airplane with any runway condition.

**Components**

These are the antiskid components:

**SIA ALL PRE SB 737-32-1528**

- Antiskid valves (6)

**SIA ALL POST SB 737-32-1528**

- Antiskid valves (4)

**SIA ALL**

- Transducers (4)
- Landing gear lever up switch
- Alternate brake pressure switch
- Antiskid/autobrake control unit (AACU)
- Antiskid inoperative amber light.

**Antiskid Valves****SIA ALL PRE SB 737-32-1528**

Four antiskid valves in the normal hydraulic brake system control brake pressure to each wheel brake. Two antiskid valves in the alternate hydraulic brake system control brake pressure to the wheel brakes on each main landing gear.

**SIA ALL POST SB 737-32-1528**

Two antiskid valves in the normal hydraulic brake system control brake pressure to each wheel brake. Two antiskid valves in the alternate hydraulic brake system control brake pressure to the wheel brakes on each main landing gear.

**SIA ALL****Transducer**

A transducer in each main landing gear wheel axle supplies wheel speed data to the AACU.

**Landing Gear Lever Up Switches**

The landing gear lever up switches sends the position of the landing gear lever to the AACU.

**Alternate Brake Pressure Switch**

The alternate brake pressure switch shows that the alternate hydraulic brake system has pressure.

**Antiskid/Autobrake Control Unit**

The AACU controls antiskid operation and monitors the system for faults.

**Antiskid Inoperative Amber Light**

The ANTI SKID INOP amber light comes on if there is a fault in the antiskid system.

**General Description**

The AACU gets wheel speed data from the transducers. The left and right ADIRUs supply ground speed data. The PSEU supplies air/ground signals from system 1 and system 2 to the AACU for touchdown/hydroplane protection. The parking brake system supplies a signal when there is a disagreement between the parking brake valve and the parking brake switch.

**32-42-00**

EFFECTIVITY

SIA ALL

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**ANTISKID/AUTOBRAKE SYSTEM - ANTISKID GENERAL DESCRIPTION**

When a wheel skids, the AACU sends signals to the antiskid valves. If the normal brake system has pressure, the antiskid valve in the normal hydraulic brake system releases pressure for that wheel. This permits wheel speed to increase and stop the skid condition.

The normal antiskid valve releases unwanted brake pressure through the parking brake valve. The antiskid system monitors the correct operation of the parking brake valve to make sure the unwanted brake pressure can be released.

If the alternate hydraulic brake system has pressure, the antiskid system operates almost the same as the normal system. If a wheel on one main landing gear skids, the antiskid valve in the alternate hydraulic brake system releases the brake pressure to the two brakes on that main landing gear.

When the alternate brake pressure switch has pressure, it sends signals to the alternate antiskid sense relay and the flight data acquisition unit (FDAU).

The AACU sends signals to the auto speedbrake module when each wheel speed is more than 60 knots. The auto speedbrake module uses the wheel speed input to operate the auto speedbrake actuator during the RTO function.

See the air/ground system section for more information about the PSEU. (SECTION 32-09)


See the parking brake system section for more information about the parking brake system. (SECTION 32-44)

See the flight data recording system (FDRS) section for more information about the FDAU. (SECTION 31-31)

See the speedbrake control system section for more information about the auto speedbrake system. (SECTION 27-62)

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

# ANTISKID/AUTOBRAKE SYSTEM - ANTISKID GENERAL DESCRIPTION

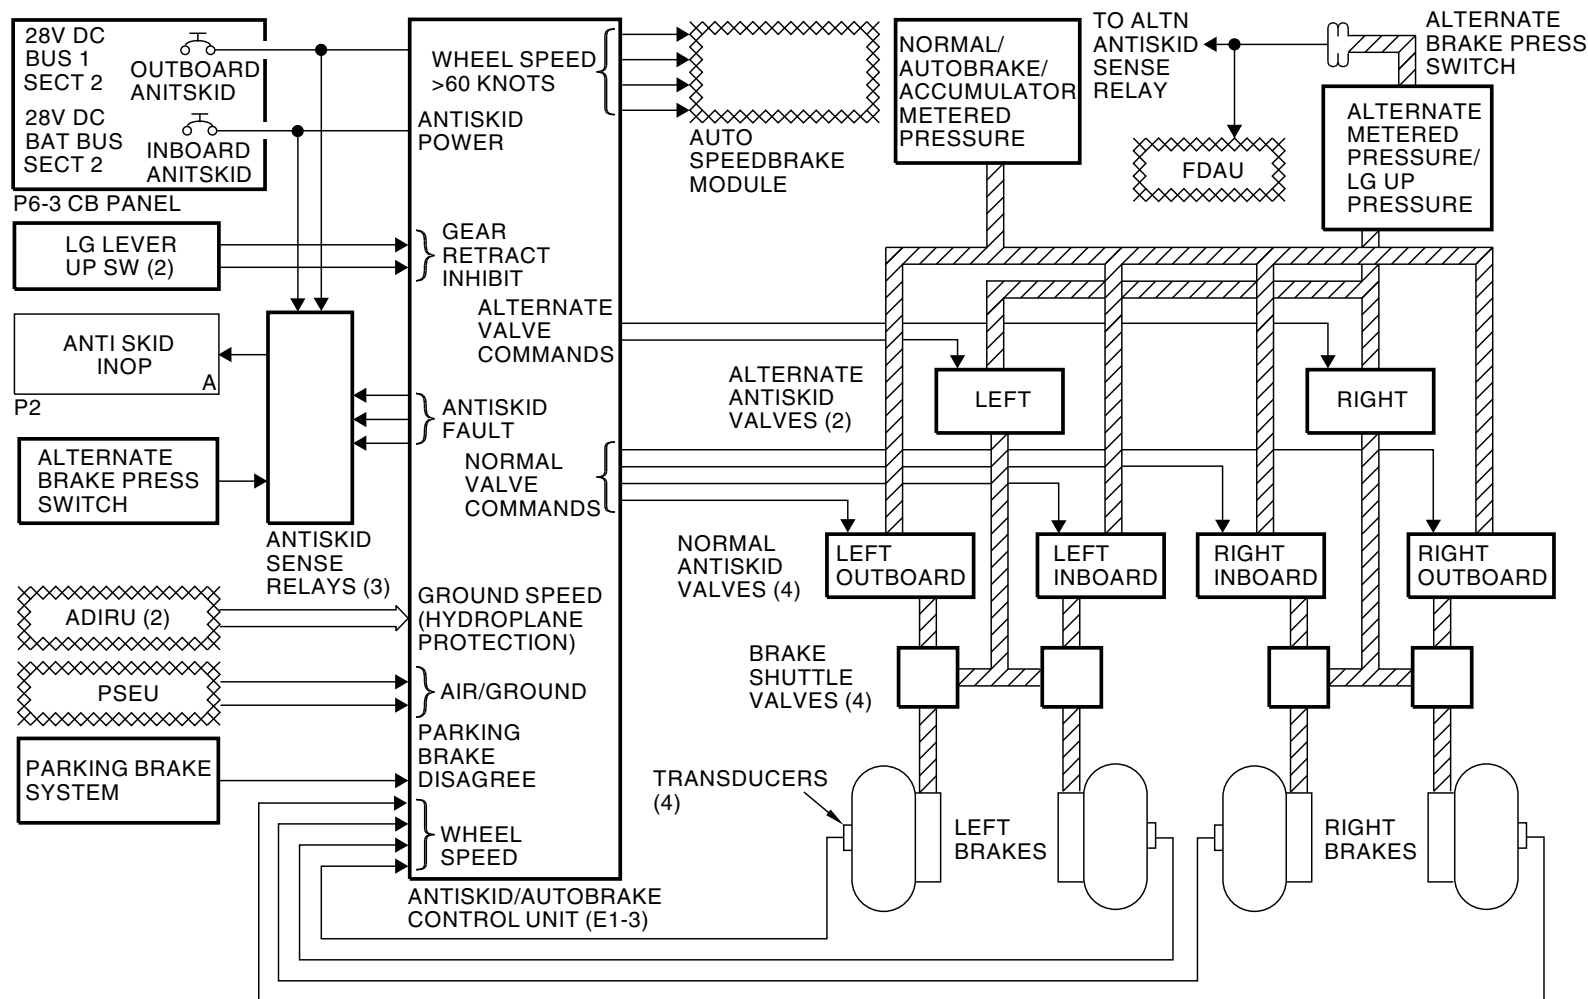

M85017 S0004627946\_V2

## ANTISKID/AUTOBRAKE SYSTEM - ANTISKID GENERAL DESCRIPTION


32-42-00

EFFECTIVITY  
SIA ALL PRE SB 737-32-1528

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

### ANTISKID/AUTOBRAKE SYSTEM - ANTISKID GENERAL DESCRIPTION

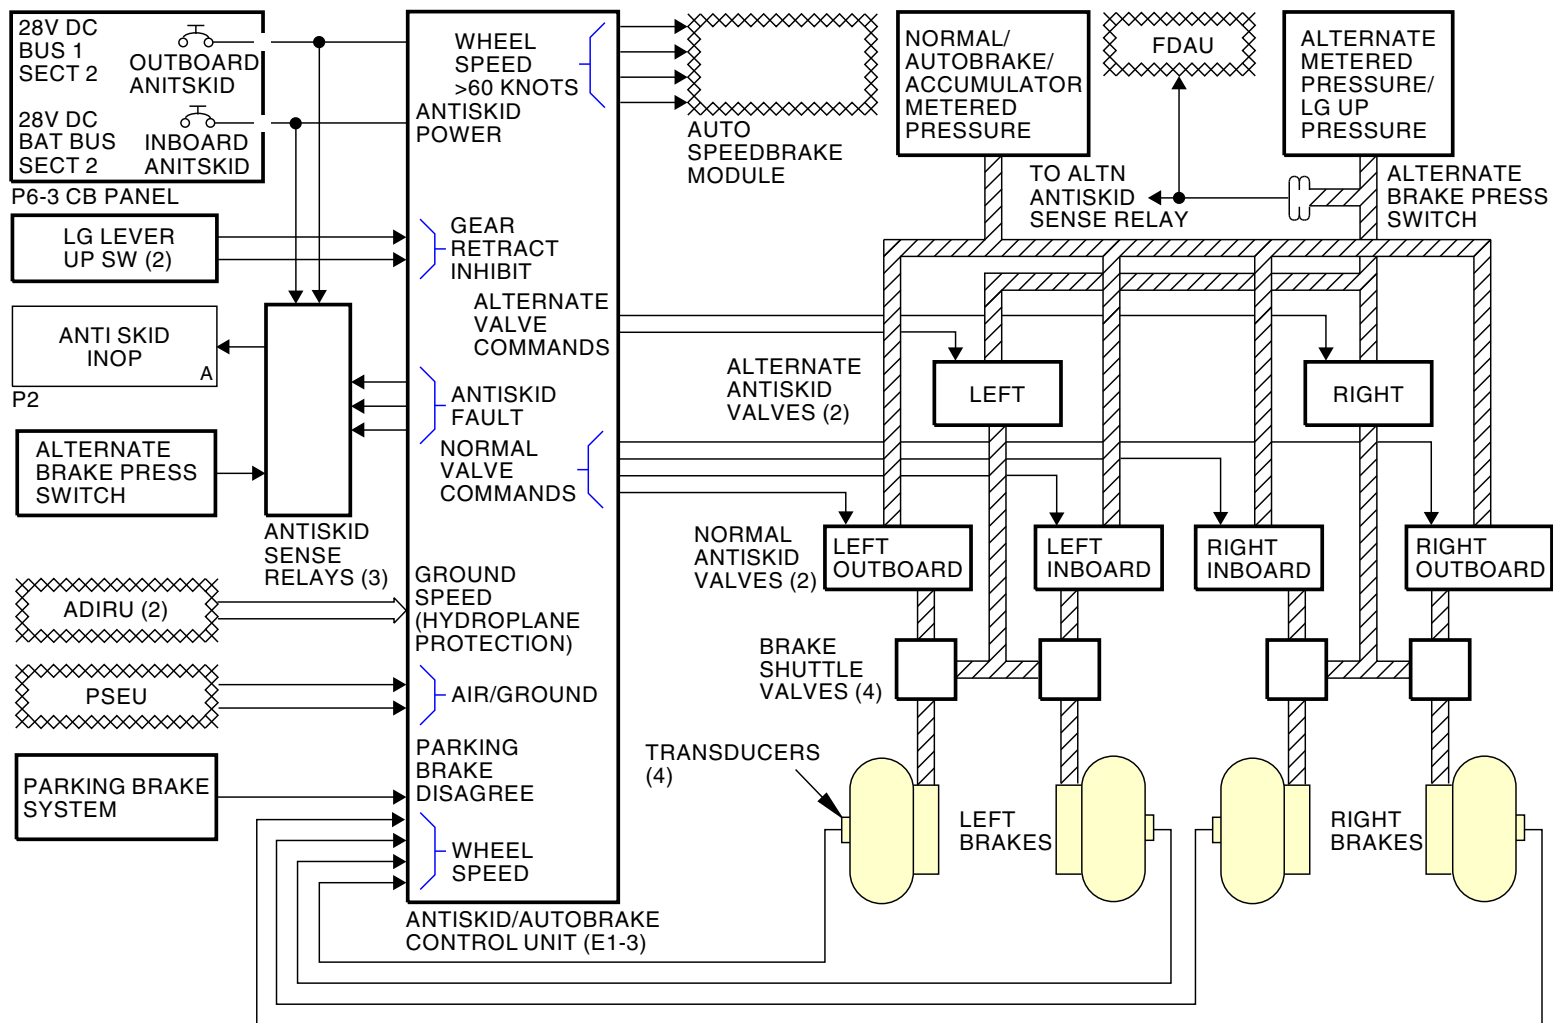

2894398 S0000689891\_V1

### ANTISKID/AUTOBRAKE SYSTEM - ANTISKID GENERAL DESCRIPTION

32-42-00

EFFECTIVITY  
SIA ALL POST SB 737-32-1528

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE GENERAL DESCRIPTION****General**

The autobrake system applies the brakes to stop the airplane after it lands or during a rejected takeoff.

These are the autobrake components of the antiskid/autobrake system:

- Antiskid/autobrake control unit (AACU)
- AUTO BRAKE select switch
- Autobrake pressure control module
- Autobrake shuttle valves (2)
- AUTO BRAKE DISARM amber light.

The autobrake system does not operate with the alternate hydraulic brake system.

**Antiskid/Autobrake Control Unit**

The antiskid/autobrake control unit controls autobrake operation. The antiskid/autobrake control unit gets inputs from these sources:

- Speed brake arming switch
- Autothrottle switch packs (2)
- ADIRU (2)
- PSEU
- Autobrake pressure control module
- Autobrake shuttle valve (2)
- Transducers (4).

**AUTO BRAKE Select Switch**

The AUTO BRAKE select switch lets the pilot select a rate of deceleration to the antiskid/autobrake control unit for landing autobrake or rejected takeoff (RTO) braking operation.

**Autobrake Pressure Control Module**

The autobrake pressure control module sends autobrake pressure through the autobrake shuttle valves to the normal brake system. Hydraulic system B supplies pressure to the autobrake pressure control module.

**Autobrake Shuttle Valve**

The autobrake shuttle valve sends autobrake pressure to the normal brake system. It does this when normal metered pressure is less than autobrake pressure. The metered pressure switch on the autobrake shuttle valve sends signals to the antiskid/autobrake control unit when the normal brake metering valves supply pressure.

**AUTO BRAKE DISARM Amber Light**

The AUTO BRAKE DISARM amber light comes on when the pilot selects autobrakes and any of these conditions occur:

- Malfunction in the autobrake system
- Malfunction in the antiskid system
- Autobrake system is manually disarmed.

**General Description**

You select an autobrake landing rate of deceleration or RTO braking with the AUTO BRAKE select switch.

When all conditions for arming and application are correct, the AACU controls the autobrake pressure control module. The autobrake pressure control module sends autobrake pressure to the brakes through the normal hydraulic brake system. The autobrake pressure control module also sends brake pressure electrical signals to the flight data acquisition unit for recording purposes.

See the flight data recording system (FDRS) section for more information about the FDAU. (SECTION 31-31)

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE GENERAL DESCRIPTION**

The AACU sends signals to the auto speedbrake module when each wheel speed is more than 60 knots. The auto speedbrake module uses the wheel speed input to operate the auto speedbrake actuator during the RTO function.

See the speedbrake control system section for more information about the auto speedbrake system. (SECTION 27-62)

The antiskid system operates normally during autobrake operation.


When all conditions for disarming and de-application are correct, the AACU controls these components:

- Autobrake pressure control module
- Autobrake disarm relay
- AUTO BRAKE DISARM amber light.

Manual brake application by the pilot will override and disarm the autobrake system.

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

# ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE GENERAL DESCRIPTION

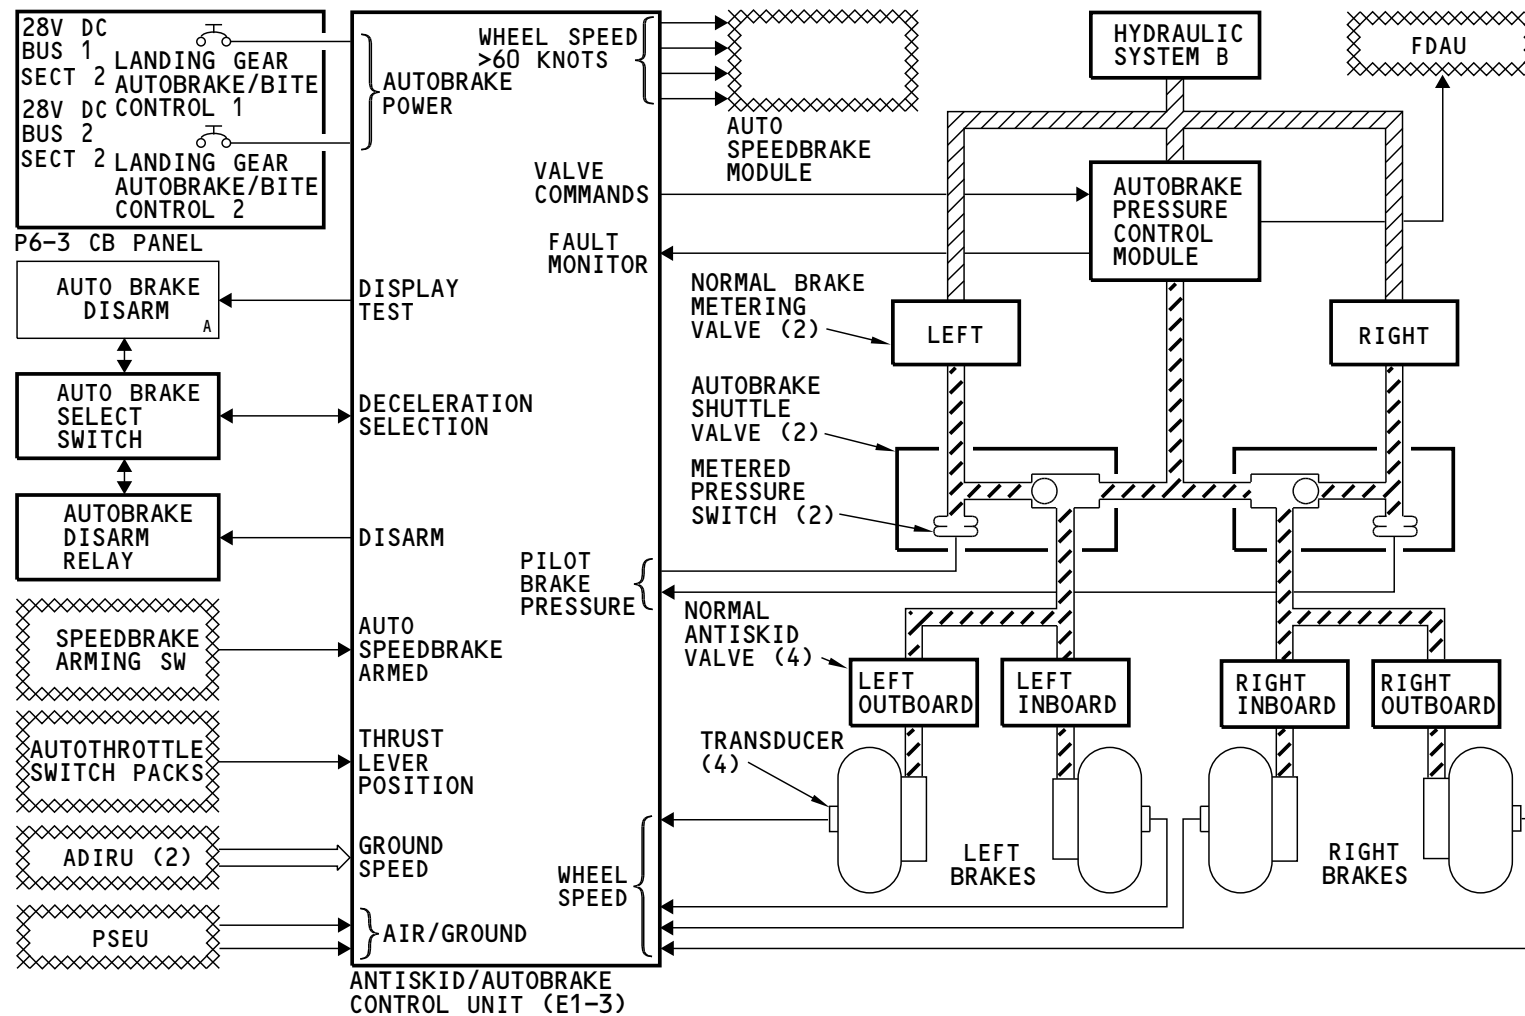

M85025 S0004627948\_V1

## ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE GENERAL DESCRIPTION


32-42-00

EFFECTIVITY  
SIA ALL PRE SB 737-32-1528

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

### ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE GENERAL DESCRIPTION

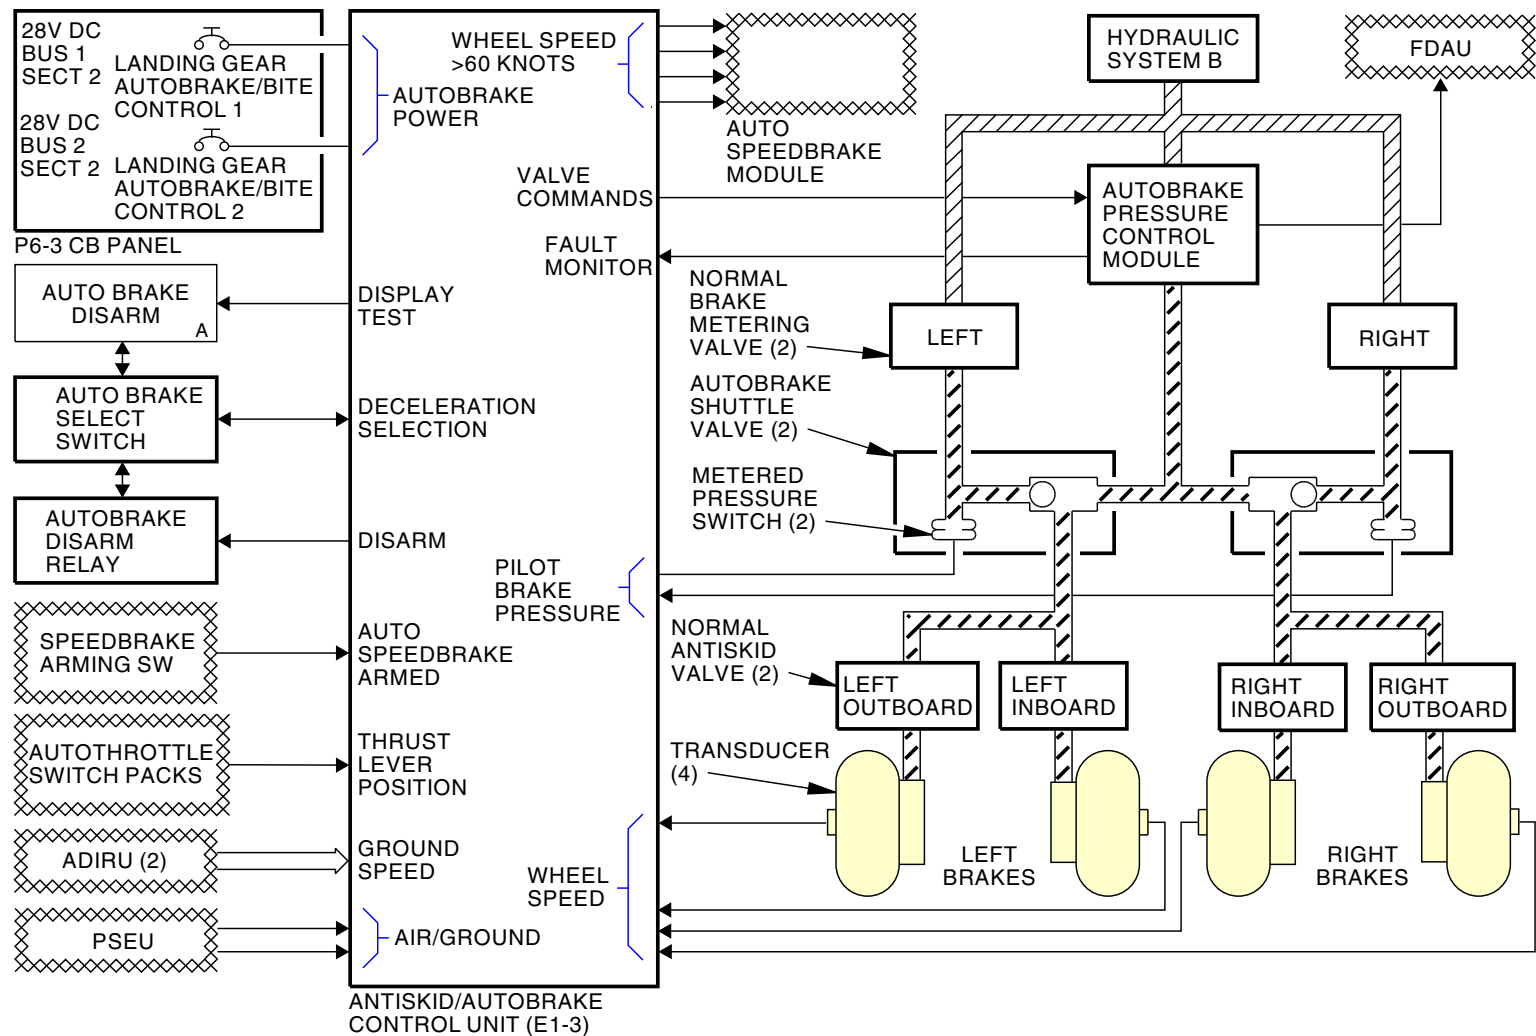

2894400 S0000689894\_V1

### ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE GENERAL DESCRIPTION

32-42-00

EFFECTIVITY  
SIA ALL POST SB 737-32-1528

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-42-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**ANTISKID/AUTOBRAKE SYSTEM - TRANSDUCER****Purpose**

The antiskid transducers supply wheel speed data to the antiskid/autobrake control unit to get wheel deceleration data. This data also goes to the antiskid/autobrake control unit for autobrake operation.

**Location**

There are four antiskid transducers. Each main landing gear wheel has a transducer in the axle.

**Physical Description**

When the transducer shaft turns, it provides wheel speed input to the transducer. The hubcap shaft on the inside of the hubcap turns the transducer shaft when the wheel turns.

A lug on the transducer aligns with a slot in the adapter assembly. This prevents rotation of the transducer in the adapter assembly.

**Training Information Point**

The transducer is an LRU.


When you remove the hubcap and the two axle nut lock bolts, you can remove the adapter assembly from the axle. You remove the transducer from the adapter assembly after you remove the retainer nut. You do not have to remove the axle nut.

**32-42-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ANTISKID/AUTOBRAKE SYSTEM - TRANSDUCER

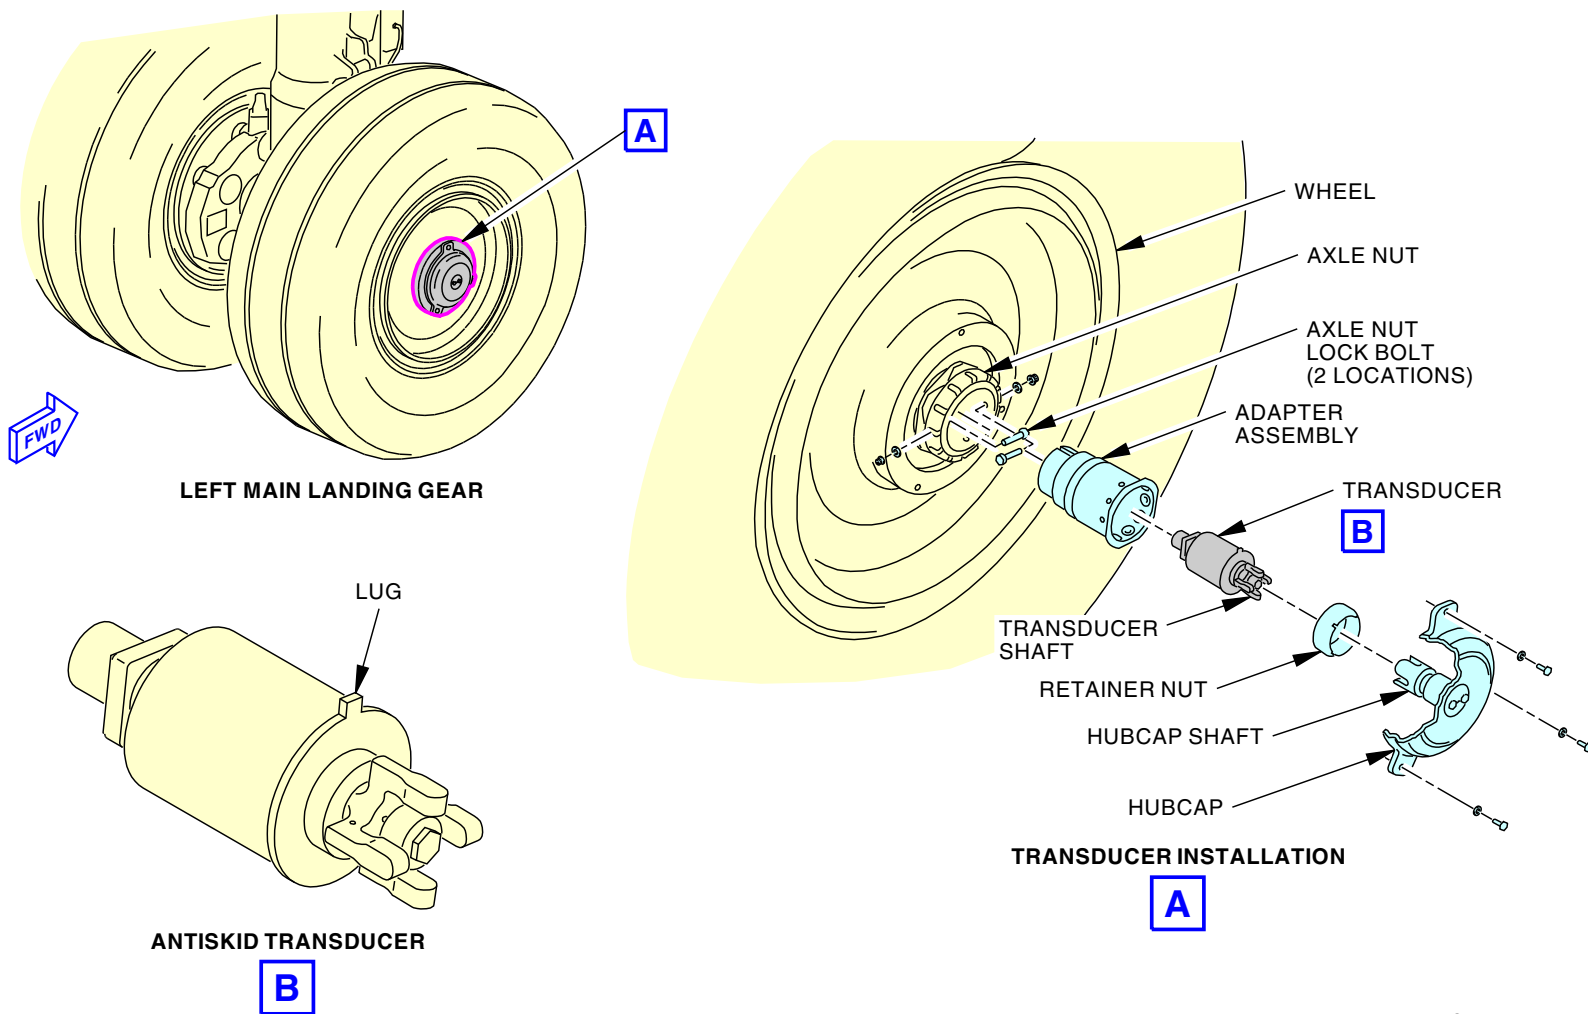

M85018 S0004627950\_V2

ANTISKID/AUTOBRAKE SYSTEM - TRANSDUCER

**32-42-00**

**ANTISKID/AUTOBRAKE SYSTEM - ANTISKID/AUTOBRAKE CONTROL UNIT****Purpose**

The Antiskid/Autobrake Control Unit (AACU) contains circuit cards for the antiskid and autobrake systems and for the related BITE functions.

**Location**

The AACU is on the E1-3 shelf in the electronic equipment compartment.

**Physical Description**

The AACU includes these cards:

- Outboard antiskid card
- Inboard antiskid card
- Autobrake card
- BITE card.

**Functional Description**

The AACU sends brake release inputs to the antiskid valves and brake application inputs to the autobrake pressure control module.

The AACU also monitors the antiskid and autobrake systems for faults and does the built-in test functions.

Built-in test functions on the BITE panel of the AACU lets you show faults and do tests on the antiskid and autobrake systems.




DO NOT TOUCH THE UNIT BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE UNIT.


**32-42-00**

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ANTISKID/AUTOBRAKE SYSTEM - ANTISKID/AUTOBRAKE CONTROL UNIT

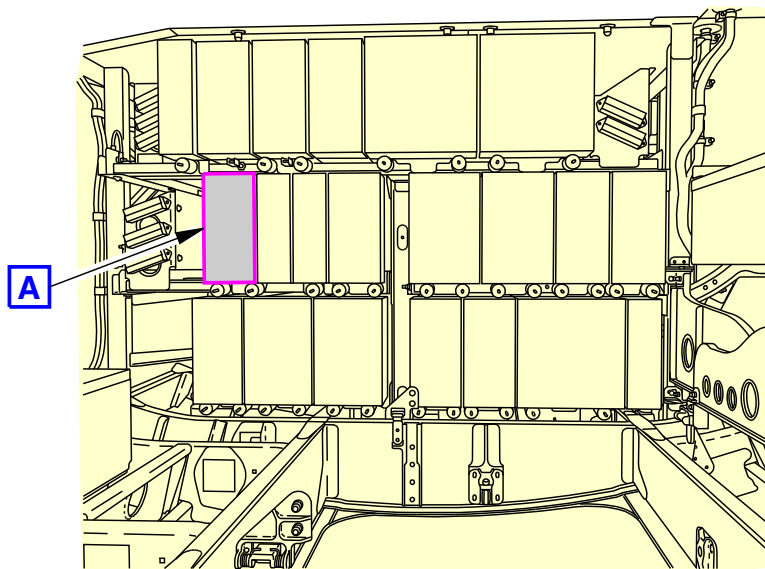

ELECTRONIC EQUIPMENT COMPARTMENT  
(VIEW IN THE FORWARD DIRECTION)

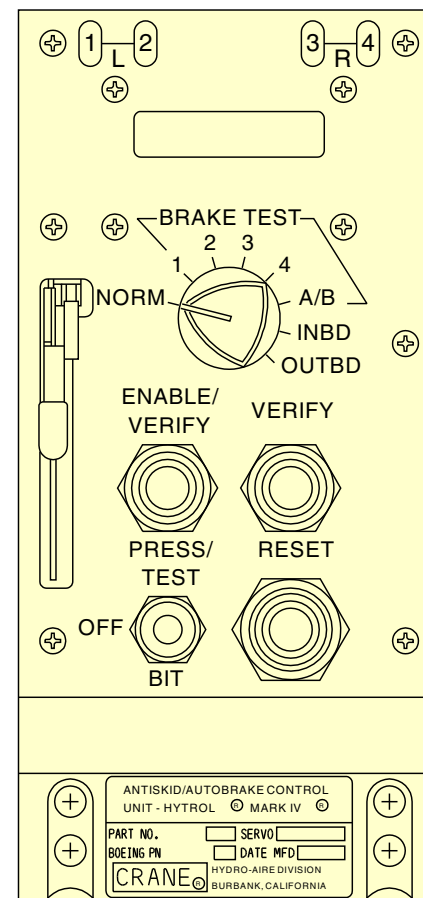

**A**

M85019 S0004627952\_V2

ANTISKID/AUTOBRAKE SYSTEM - ANTISKID/AUTOBRAKE CONTROL UNIT


**32-42-00**

EFFECTIVITY  
SIA ALL; AIRPLANES WITH STEEL OR CARBON BRAKES


D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

ANTISKID/AUTOBRAKE SYSTEM - ANTISKID/AUTOBRAKE CONTROL UNIT

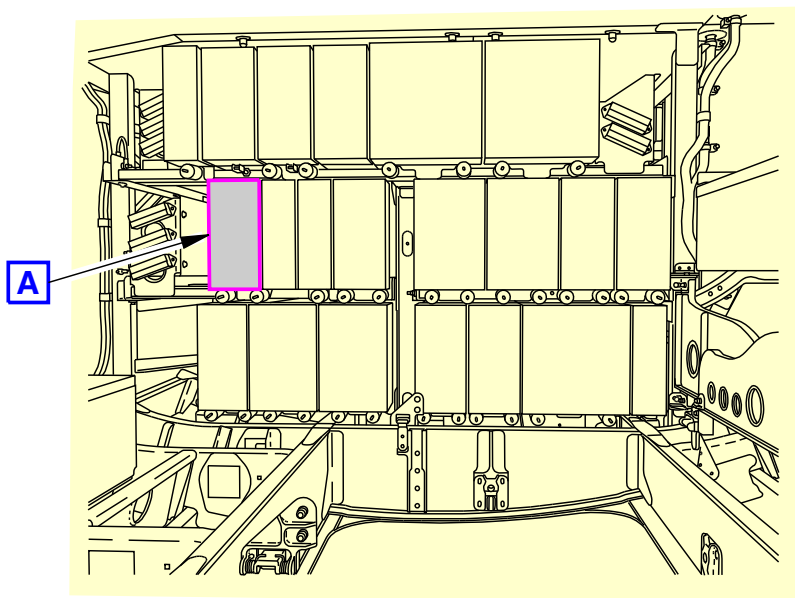

ELECTRONIC EQUIPMENT COMPARTMENT  
(VIEW IN THE FORWARD DIRECTION)

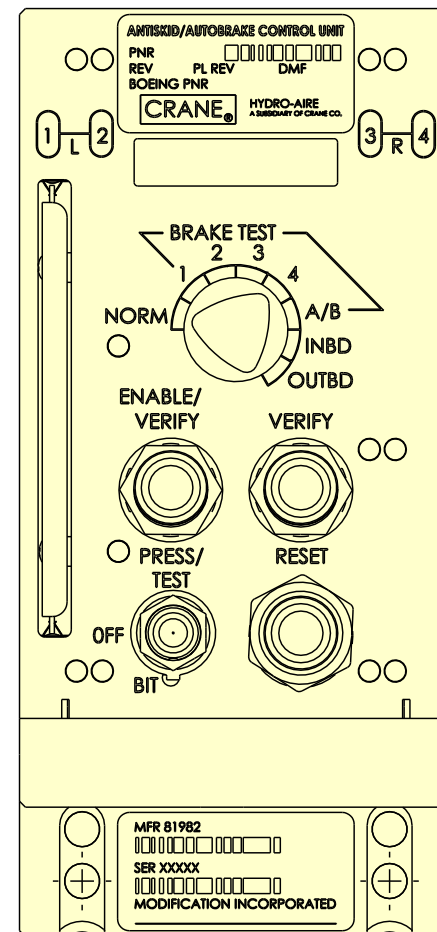

**A**

2581206 S0000621734\_V2

ANTISKID/AUTOBRAKE SYSTEM - ANTISKID/AUTOBRAKE CONTROL UNIT

**32-42-00**

EFFECTIVITY  
SIA ALL; AIRPLANES WITH CARBON BRAKES

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-42-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE

Purpose

The antiskid valves release brake pressure to prevent wheel skids.

**SIA ALL PRE SB 737-32-1528**

Four antiskid valves in the normal hydraulic brake system give protection to each wheel during normal brake operation. Two antiskid valves in the alternate hydraulic brake system each give protection to both wheels on a main landing gear during alternate brake operation.

**SIA ALL POST SB 737-32-1528**

Two antiskid valves in the normal hydraulic brake system give protection to each wheel during brake operation. Two antiskid valves in the alternate hydraulic brake system each give protection to both wheels on a main landing gear during alternate brake operation.

**SIA ALL**


Location

The antiskid valves for the normal brake system are on the aft bulkhead of the main landing gear wheel well.

The antiskid valves for the alternate brake system are on the outboard sides of the ceiling of the main landing gear wheel well.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

**ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE**

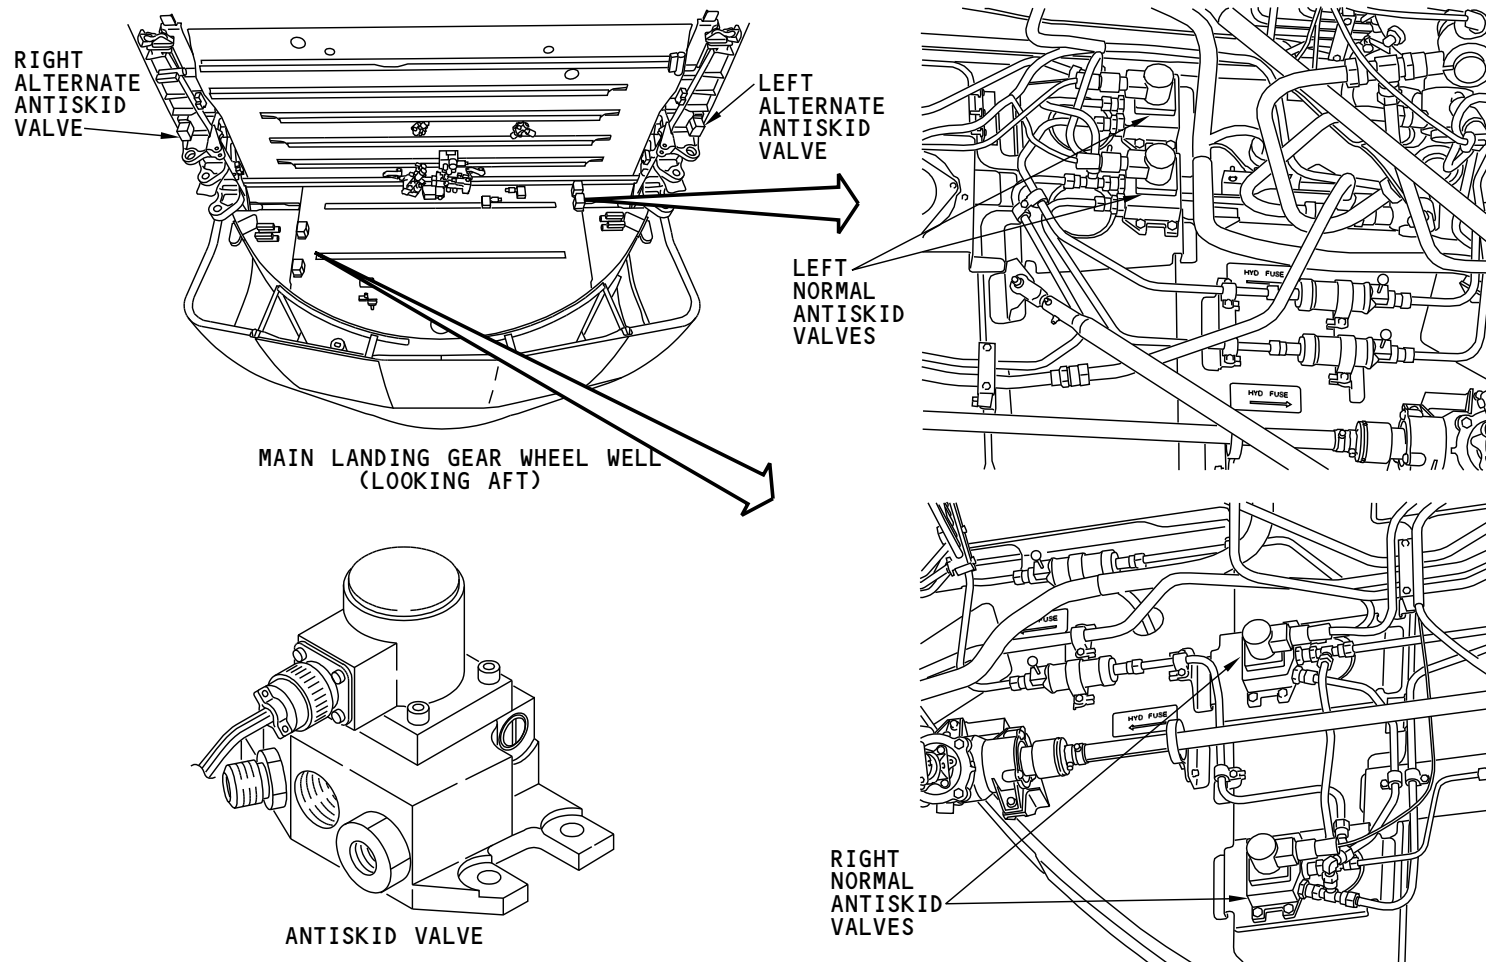


M85020 S0004627954\_V1


**ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE**

**32-42-00**


**ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE**

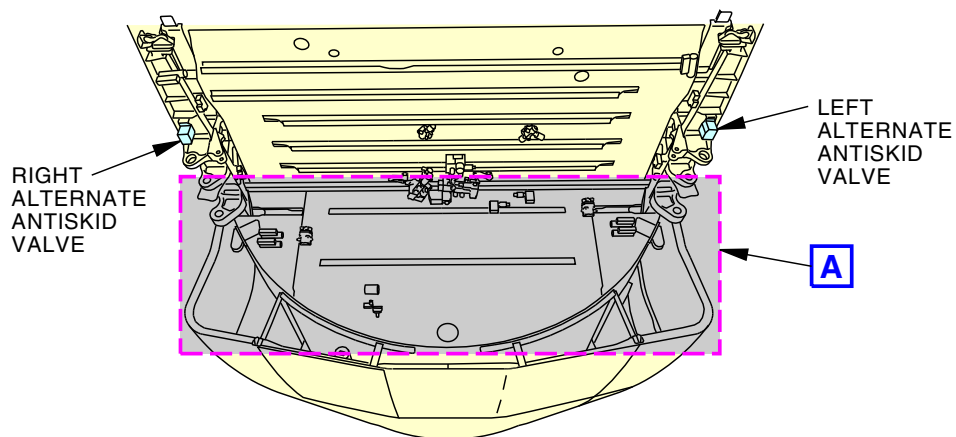


**MAIN LANDING GEAR WHEEL WELL  
(VIEW IN THE AFT DIRECTION)**

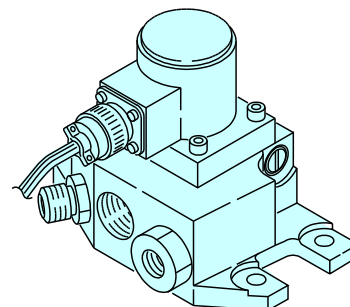

**ALTERNATE ANTISKID VALVE**

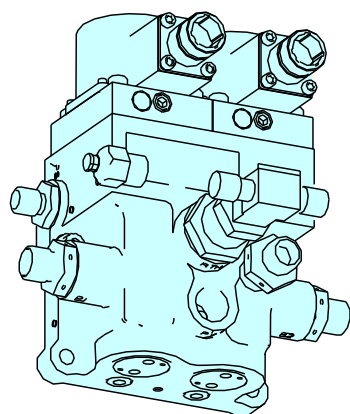

**NORMAL ANTISKID VALVE  
(EXAMPLE)**

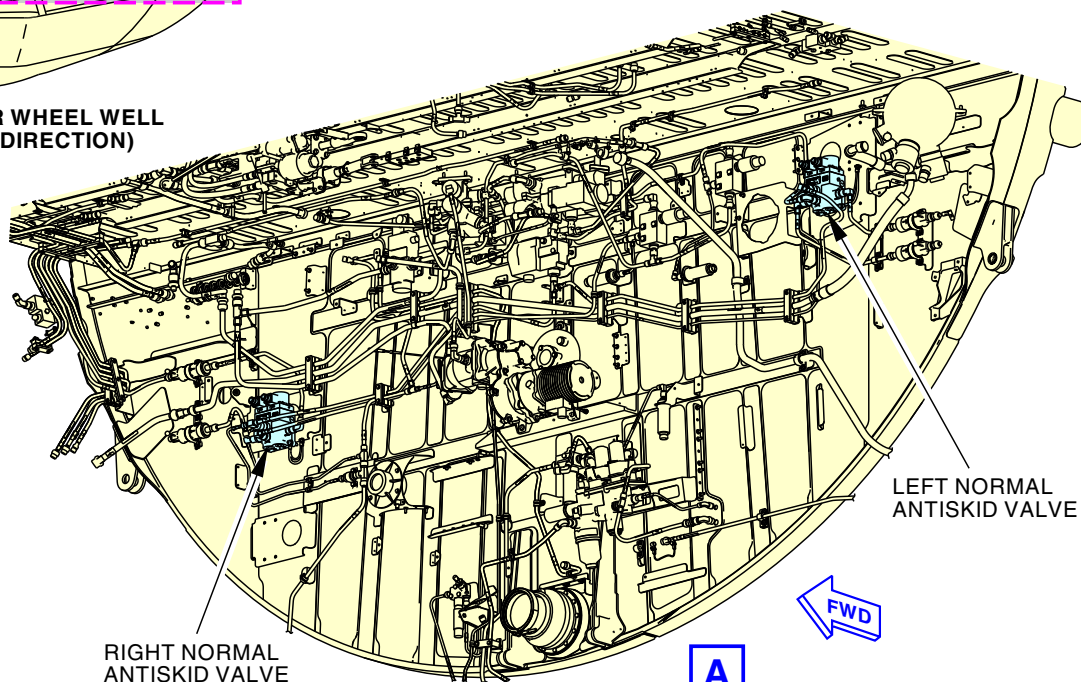

**ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE**

2894401 S0000689895\_V2

**32-42-00**

EFFECTIVITY  
SIA ALL POST SB 737-32-1528

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-42-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE - FUNCTIONAL DESCRIPTION

General**SIA ALL PRE SB 737-32-1528**

Four antiskid valves in the normal hydraulic brake system control the brake pressure for each brake independently. Two antiskid valves in the alternate hydraulic brake system each control brake pressure for both brakes on one of the main landing gear. All six antiskid valves are the same.

**SIA ALL POST SB 737-32-1528**

Two antiskid valves in the normal hydraulic brake system control the brake pressure for each brake independently. Two antiskid valves in the alternate hydraulic brake system each control brake pressure for both brakes on one of the main landing gear.

**SIA ALL**

The antiskid valves have these two stages of control:

- The first stage valve controls pressure in proportion to input current from the antiskid/autobrake control unit.
- The second stage keeps pressure to the brakes equal to the first stage control pressure.

Filters**SIA ALL PRE SB 737-32-1528**

In-line screen filters remove contamination from the metered pressure as it goes into the antiskid valve and as it goes out of the valve and to the brake.

**SIA ALL POST SB 737-32-1528**

In-line screen filters remove contamination from the metered pressure as it goes into the antiskid valve.

**SIA ALL**First Stage Valve

The first stage valve uses a current controlled flapper between two nozzles to adjust the first stage pressure. One nozzle connects to the metered pressure and the other connects to the return.

When no current goes to the valve, the flapper moves against the return nozzle. In this position, control pressure is the same as metered pressure.

When full current goes to the valve, the flapper moves against the pressure nozzle. In this position, control pressure is the same as return pressure.

For each intermediate value of input current, the flapper moves between the two nozzles to adjust the control pressure.

Second Stage Valve

The second stage valve uses a spool valve. It moves with first stage control pressure and a spring on one end and brake pressure on the other end.

When there is no brake pressure, the spring holds the spool in position to send metered pressure to fill the brakes.

When control pressure is more than brake pressure, the spool moves to send metered pressure to the brakes.

During antiskid operation, the spool operates to keep the brake pressure equal to first stage control pressure. It sends unwanted brake pressure to the system return.

Return Check Valve

If the return line has a blockage and return pressure is more than brake pressure, the return check valve releases brake pressure to metered pressure.


**32-42-00**

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE - FUNCTIONAL DESCRIPTION

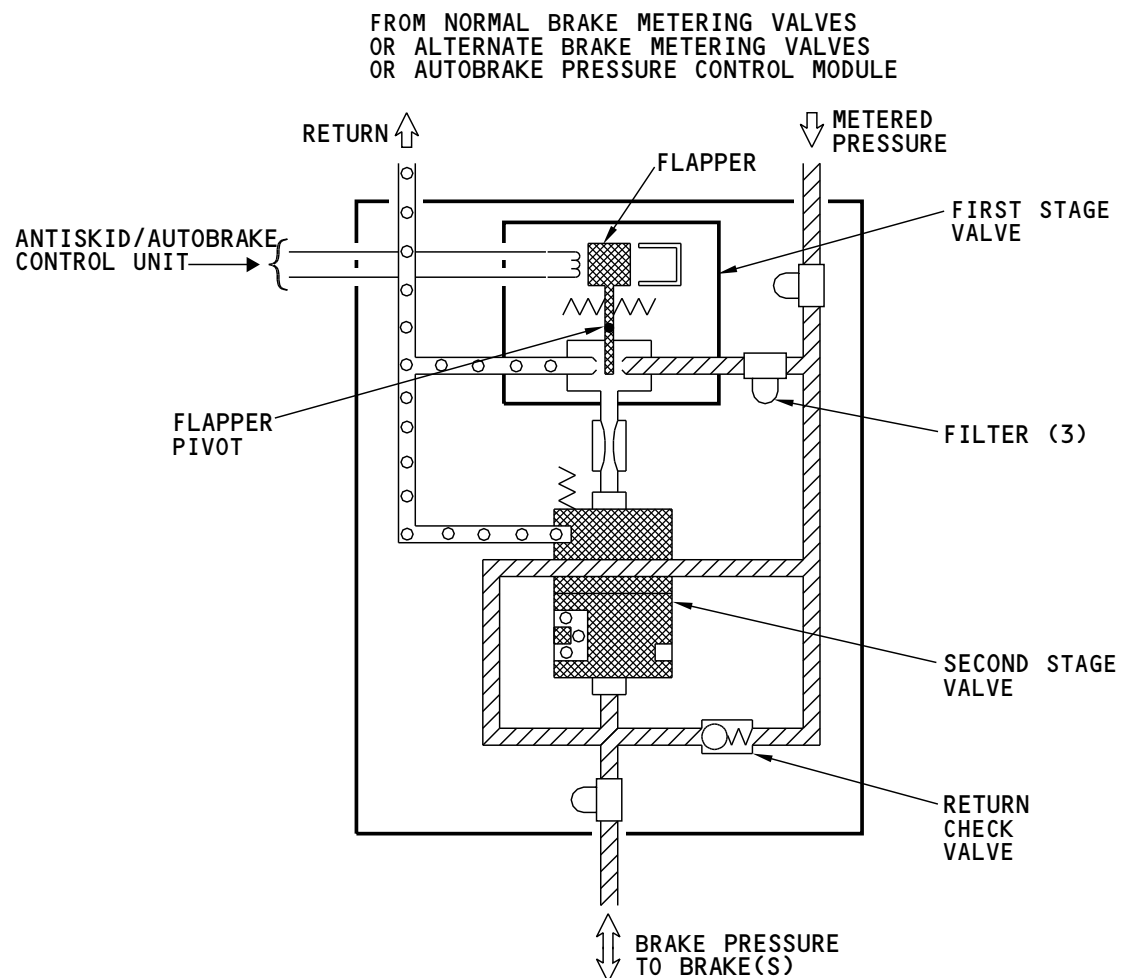

M84908 S0004627956\_V1

## ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE - FUNCTIONAL DESCRIPTION


32-42-00

EFFECTIVITY  
SIA ALL PRE SB 737-32-1528

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE - FUNCTIONAL DESCRIPTION

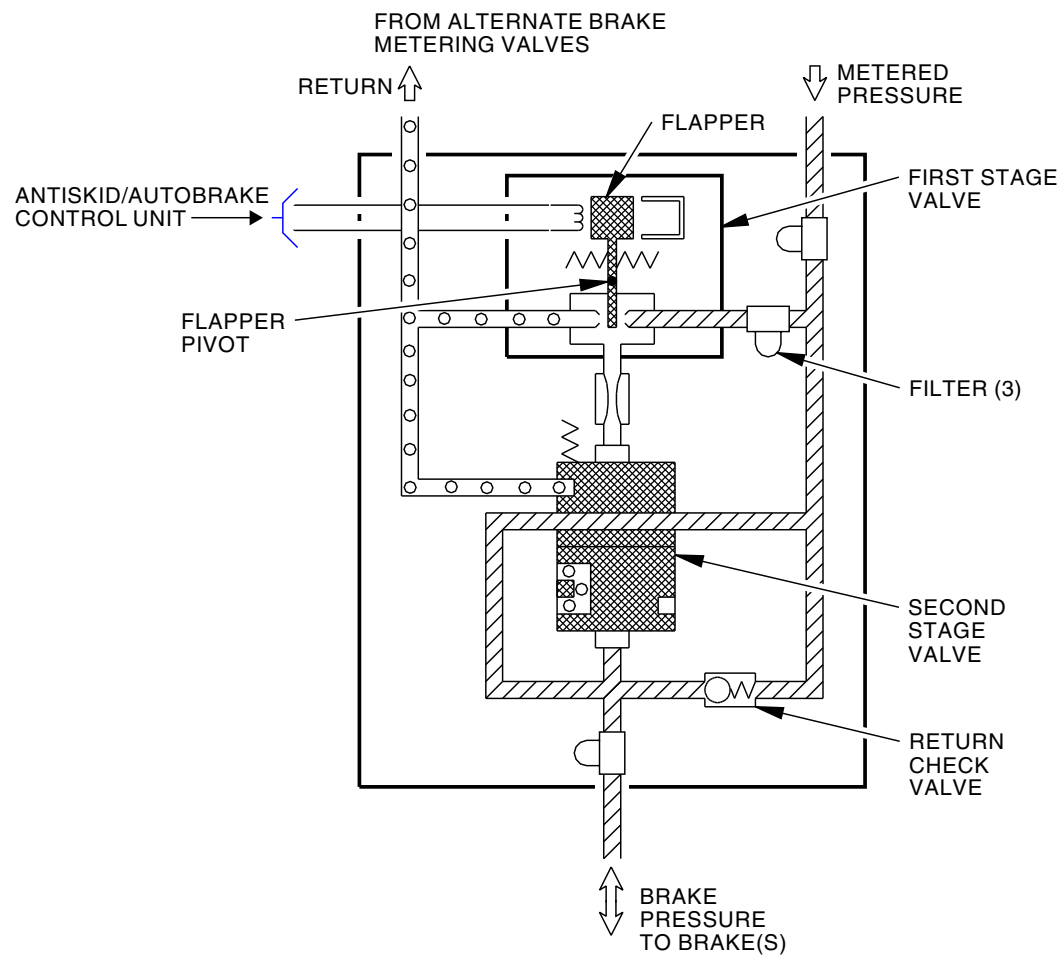

2894403 S0000689896\_V1

## ANTISKID/AUTOBRAKE SYSTEM - ALTERNATE ANTISKID VALVE - FUNCTIONAL DESCRIPTION


32-42-00

EFFECTIVITY  
SIA ALL POST SB 737-32-1528

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# ANTISKID/AUTOBRAKE SYSTEM - ANTISKID VALVE - FUNCTIONAL DESCRIPTION

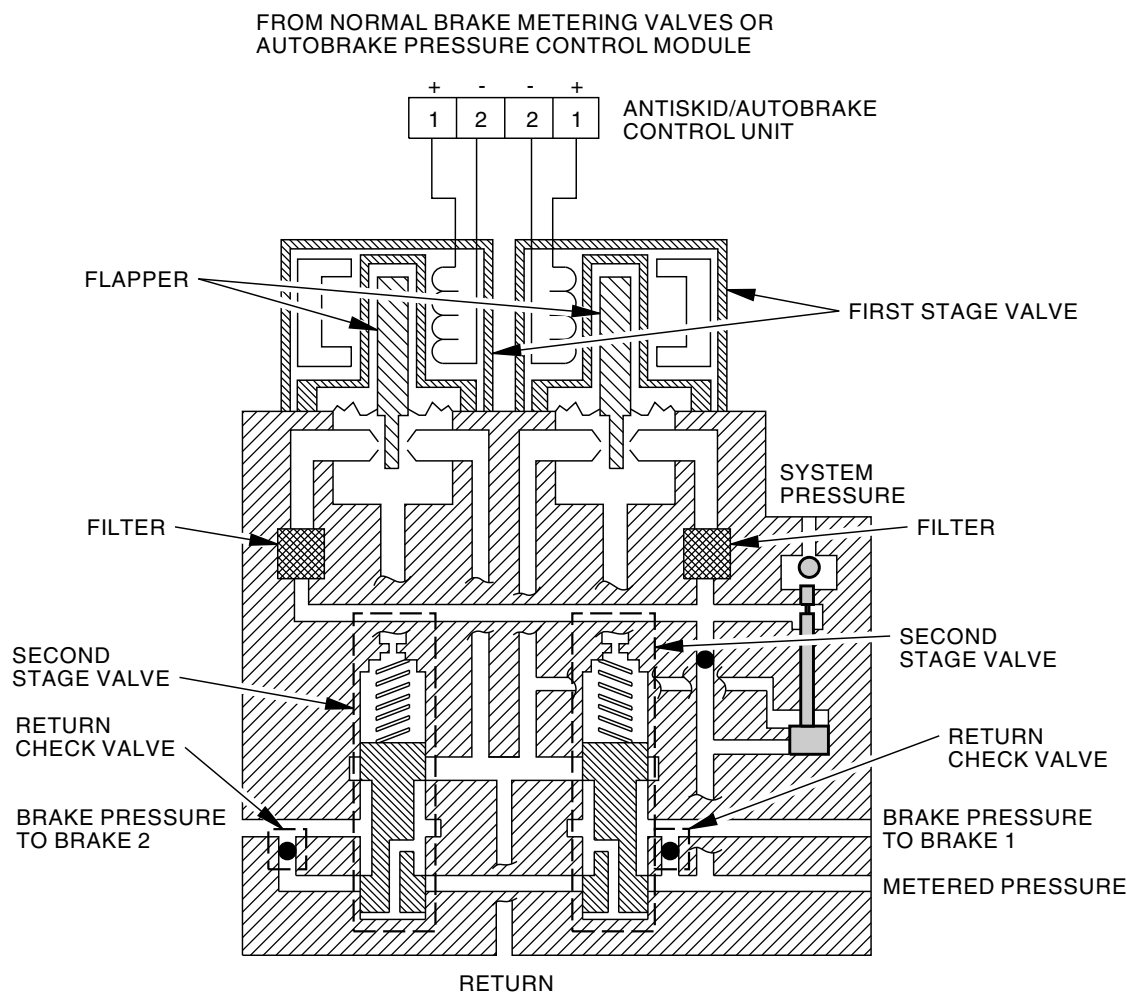

2894405 S0000689898\_V1

## ANTISKID/AUTOBRAKE SYSTEM - NORMAL ANTISKID VALVE - FUNCTIONAL DESCRIPTION

32-42-00

EFFECTIVITY  
SIA ALL POST SB 737-32-1528

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE PRESSURE CONTROL MODULE

**Purpose**

The autobrake pressure control module uses input from the antiskid/autobrake control unit to meter hydraulic system B pressure to the normal brake system during autobrake operation.

**Location**

The autobrake pressure control module is on the ceiling of the main landing gear wheel well.

**Physical Description**

The autobrake pressure control module is an LRU and contains these LRUs:

- Filter
- Control valve pressure switch
- Solenoid valve pressure switch
- Control valve
- Solenoid valve.

**Training Information Point**

Obey these cautions when you remove and install LRUs on the module:



DO NOT LET DIRT OR CONTAMINANTS GO INTO THE PORT OF THE FILTER. MALFUNCTION CAN OCCUR.




WHEN YOU REMOVE THE SOLENOID VALVE FROM THE MODULE, MAKE SURE THE VALVE IS KEPT IN A VERTICAL POSITION. IF THE VALVE IS NOT KEPT IN A VERTICAL POSITION, DAMAGE TO THE CONNECTOR PINS CAN OCCUR.

**CAUTION**



WHEN YOU REMOVE THE SOLENOID VALVE AND THE SEAL PLATE, MAKE SURE NO CONTAMINANTS GO INTO THE OPEN PORTS ON THE MODULE. DAMAGE TO THE VALVE CAN OCCUR IF CONTAMINANTS GO INTO THE PORTS.

ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE PRESSURE CONTROL MODULE

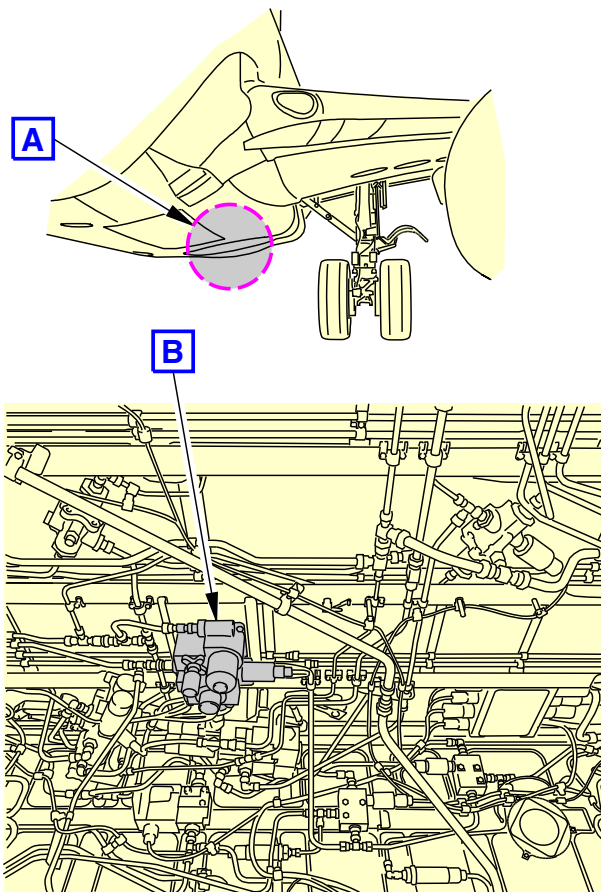

MLG WHEEL WELL  
(LOOKING UP AND AFT)

**A**

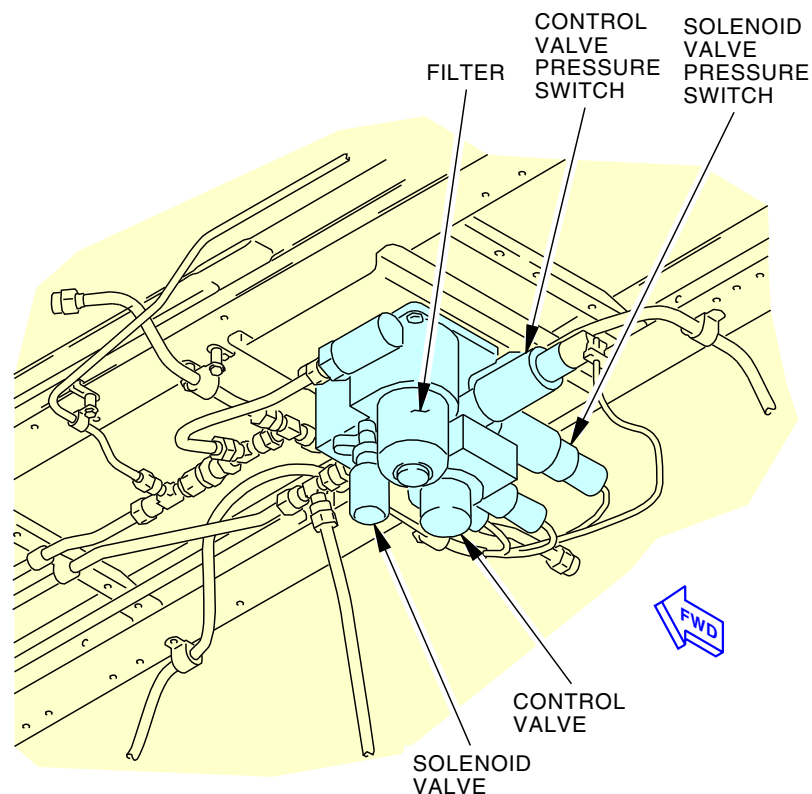

AUTOBRAKE PRESSURE CONTROL MODULE

**B**

M85026 S0004627958\_V2

ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE PRESSURE CONTROL MODULE

**32-42-00**

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE PRESSURE CONTROL MODULE - FUNCTIONAL DESCRIPTION****General**

The autobrake pressure control module has these components:

- Solenoid valve
- Solenoid valve pressure switch
- Control valve
- Control valve pressure switch.

**Solenoid Valve**

The solenoid valve is a two-stage valve. The first stage is a solenoid-operated valve. It controls pressure to the second stage valve. The second stage is a pressure-operated valve. It controls pressure to the control valve. The antiskid/autobrake control unit (AACU) sends signals to the solenoid valve.

The AACU uses a solenoid valve pressure switch to monitor the pressure from the solenoid valve for faults. The solenoid valve pressure switch also sends brake pressure signals less than 1000 psi to the flight data acquisition unit for recording purposes.

See the flight data recording system (FDRS) section for more information about the FDAU. (SECTION 31-31)

**Control Valve**

The control valve is also a two stage valve. The first stage is a variable electro-hydraulic control valve. It sends control pressure to operate the second stage valve. The second stage valve is a metering valve that is almost the same as the brake metering valves. The second stage valve sends autobrake pressure to the normal brake system in proportion to the signal from the AACU. The signal from the AACU operates the first stage of the control valve.

The AACU uses the control valve pressure switch to monitor the pressure from the control valve for faults. The pressure switch opens when control pressure from the control valve is more than 1000 psi.

**Functional Description**


When you move the AUTO BRAKE select switch to the 1, 2, 3, MAX, or RTO positions, it sends the selected position to the AACU.

The AACU sends signals to the first stage of the solenoid valve and the first stage of the control valve to apply the autobrakes. Pressure then goes to operate the second stage of both valves. This sends autobrake pressure to the brakes.

The solenoid and control valve pressure switches monitor the valves for correct operation. The AACU disarms the autobrakes if one of the valves has a fault.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE PRESSURE CONTROL MODULE - FUNCTIONAL DESCRIPTION

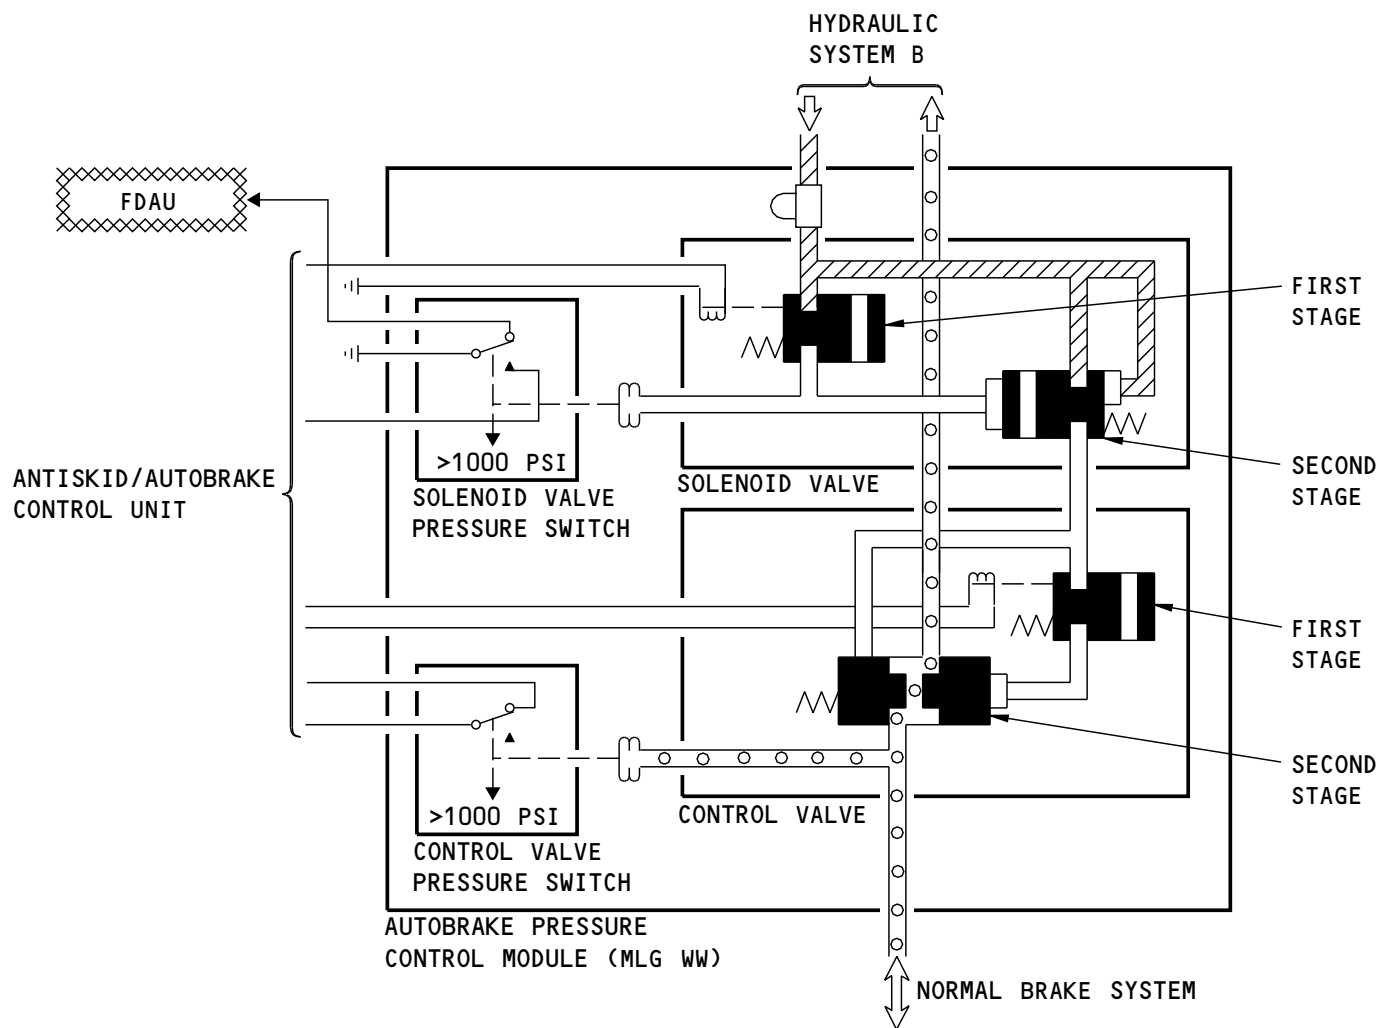

M84909 S0004627960\_V2

## ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE PRESSURE CONTROL MODULE - FUNCTIONAL DESCRIPTION

32-42-00-104

SIA ALL

EFFECTIVITY

32-42-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE SHUTTLE VALVES****Purpose**

Two autobrake shuttle valves select the highest of autobrake or normal metered pressures and send it to the brakes.

**Location**

The autobrake shuttle valves are on the aft bulkhead of the main landing gear wheel well.

**Physical Description**


The valves are un-biased shuttle valves with detents. The valves are interchangeable.

**Functional Description**

The metered pressure switch sends signals to the antiskid/autobrake control unit when the pressure from the normal brake metering valve increases to more than 750 psi. The antiskid/autobrake control unit uses this signal to disarm the operation of the autobrakes.

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE SHUTTLE VALVES**

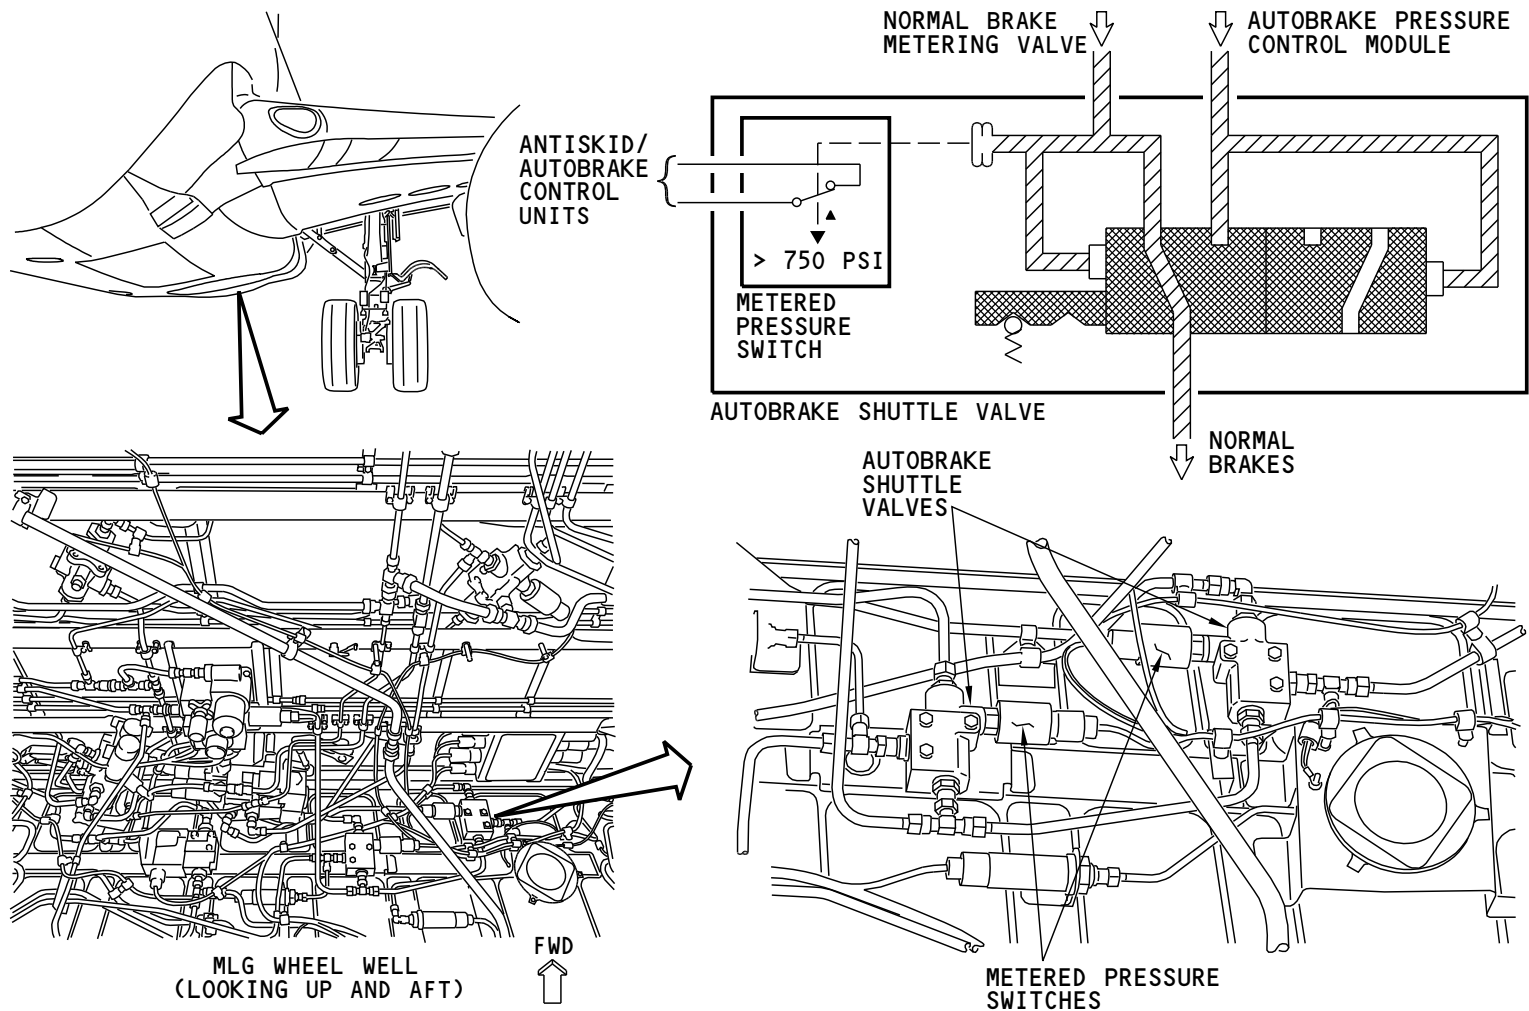

M84910 S0004627962\_V1

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE SHUTTLE VALVES**

**32-42-00**

**ANTISKID/AUTOBRAKE SYSTEM - CONTROLS AND INDICATIONS****Purpose**

The AUTO BRAKE select switch lets the pilots select a landing autobrake deceleration rate, or autobrake operation if a rejected takeoff occurs.

The AUTO BRAKE DISARM amber light shows that there is a disarm condition in the autobrake system.

**Location**

The AUTO BRAKE select switch is on the P2 center instrument panel above the upper center display unit.

The AUTO BRAKE DISARM light is above the AUTO BRAKE select switch.

**Functional Description**

The AUTO BRAKE select switch is a six position selector switch.

Positions 1 through MAX command the rate of deceleration for autobrake operation after an airplane lands. You must pull on the select switch to move it to the MAX position.

The RTO position commands maximum brake pressure when the pilot does a rejected takeoff.

When the AUTO BRAKE select switch is in the 1, 2, 3, or MAX position, the AUTO BRAKE DISARM amber light comes on for these conditions:

- Landing disarm logic true
- RTO turn on self check
- RTO disarm logic true when RTO autobrakes have been applied
- Within 1.4 seconds after touchdown if the selector was in the RTO position since takeoff
- RTO autobrake commanded to apply and the autobrake solenoid valve pressure is low.

The AUTO BRAKE DISARM amber light also comes on when the AUTO BRAKE select switch is in the OFF position and the solenoid valve pressure increases more than 1000 psi.

Move the AUTO BRAKE select switch to the OFF position to turn the AUTO BRAKE DISARM amber light off.


**32-42-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# ANTISKID/AUTOBRAKE SYSTEM - CONTROLS AND INDICATIONS

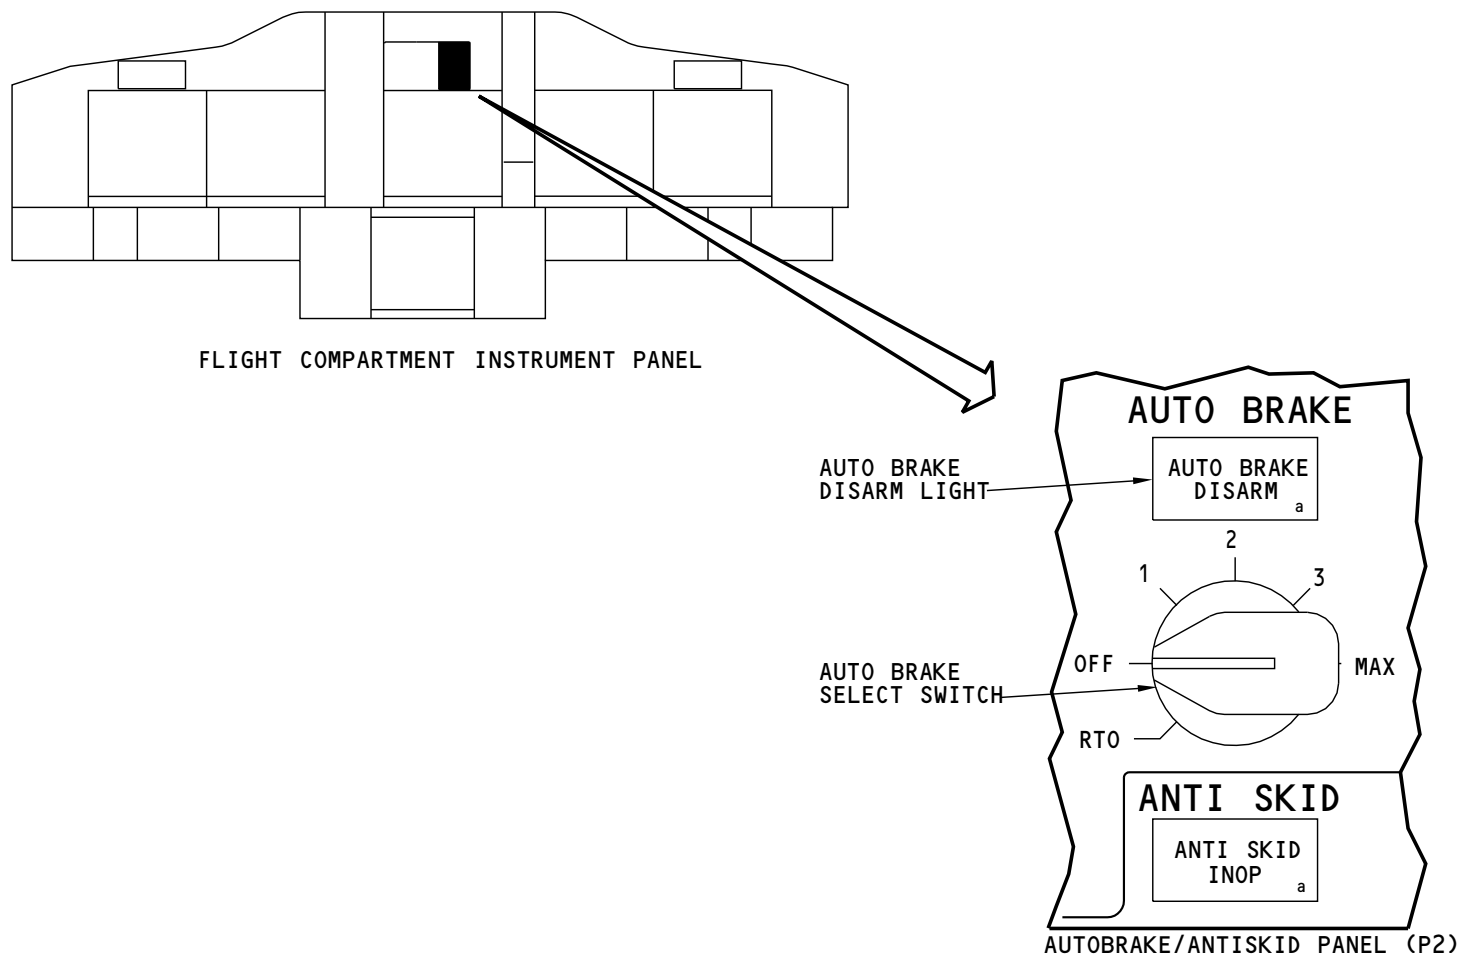

M85027 S0004627964\_V1

## ANTISKID/AUTOBRAKE SYSTEM - CONTROLS AND INDICATIONS

32-42-00

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |



ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - ANTISKID CONTROL - 1

**General**

Two antiskid cards supply antiskid control. One antiskid card supplies the antiskid function for the outboard wheels and the other antiskid card supplies the antiskid function for the inboard wheels.

Each antiskid card gets wheel speed signals from two transducers. The left ADIRU sends a ground speed signal to the outboard antiskid card. The right ADIRU sends a ground speed signal to the inboard antiskid card.

Each antiskid card controls two normal and one alternate valve. The normal and alternate valves get commands at the same time.

**Normal Antiskid**


When a skid condition occurs, the antiskid system sends a signal from the normal valve driver on the antiskid card to the normal antiskid valve.

**Alternate Antiskid**

The signals sent to both normal valve drivers also go to the alternate valve driver for those two wheels. The alternate valve driver then sends the higher of the two signals to the alternate antiskid valve.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

# ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - ANTISKID CONTROL - 1

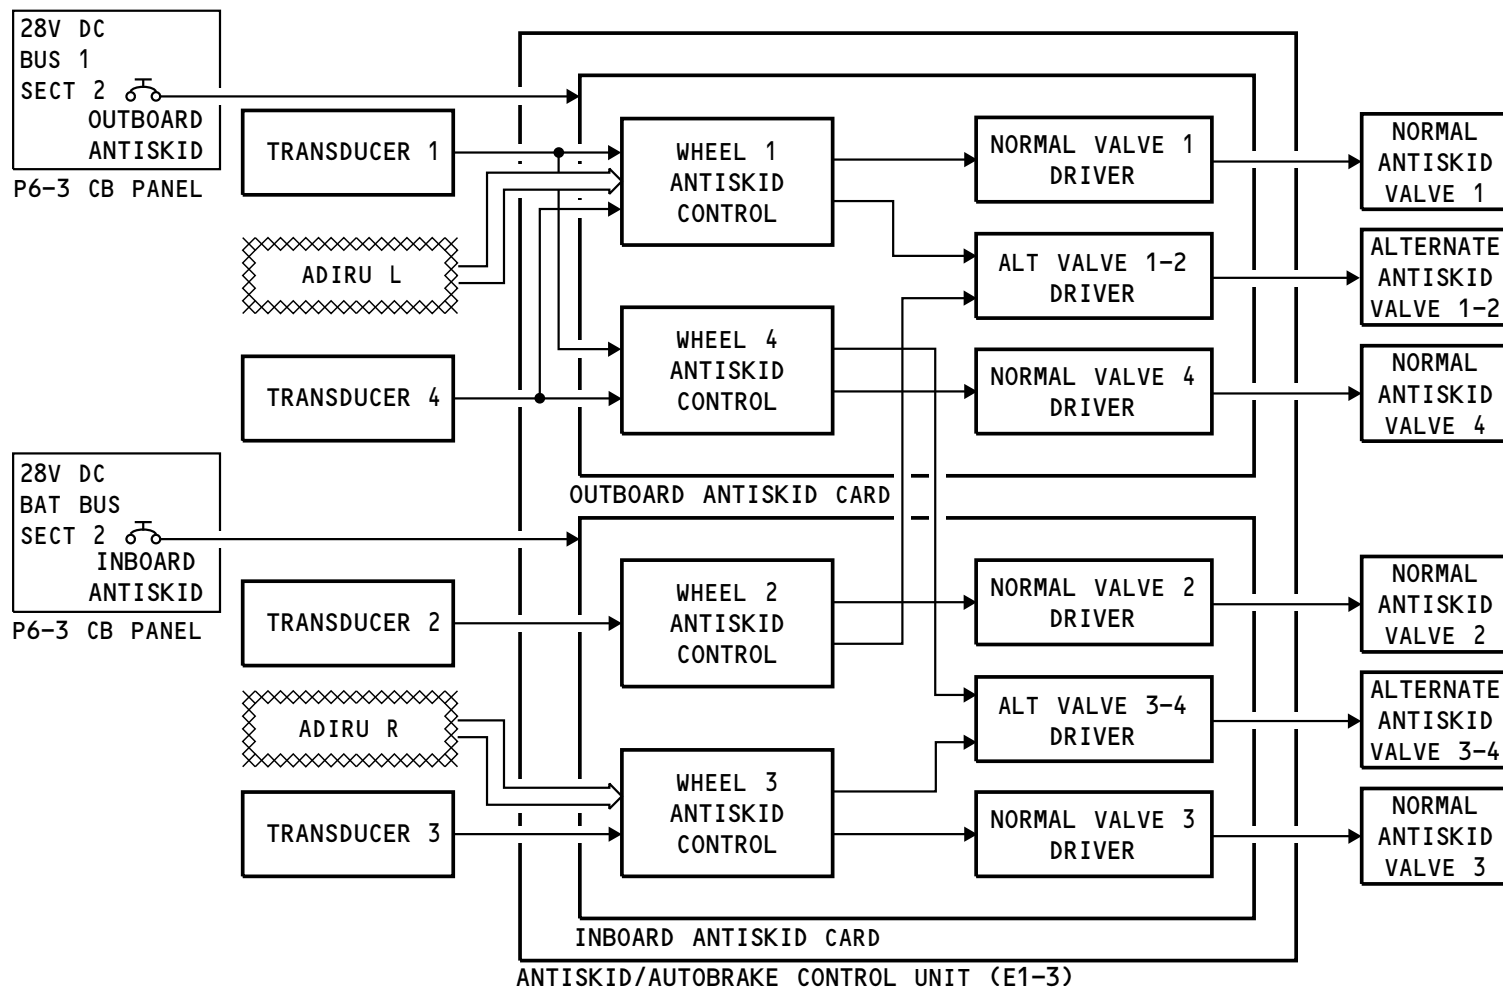

M85021 S0004627966\_V2

## ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - ANTISKID CONTROL - 1

32-42-00

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

**ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - ANTISKID CONTROL - 2****General**

The antiskid card has these functions:

- Skid control
- Locked wheel protection
- Touchdown protection
- Touchdown/hydroplane protection
- Gear retract braking inhibit.

**Skid Control**

Skid control compares the calculated wheel speed velocity with a velocity model to control wheel deceleration. If a wheel slows down too quickly, the skid control releases brake pressure until the wheel speed increases.

Skid control does not operate at less than a speed of eight knots.

During normal antiskid operation, the skid control operates for each wheel. During alternate antiskid operation, the skid control operates for both wheels on one main landing gear.

**Locked Wheel Protection**

Locked wheel protection compares the wheel speeds of the two outboard or the two inboard pair of wheels.

If the slower wheel speed decreases to less than 30 percent of the faster wheel speed, the locked wheel protection releases brake pressure from the slower wheel. Locked wheel protection does not operate at a speed less than 25 knots.

**Touchdown Protection**

The touchdown protection releases brake pressure from wheels 2 and 4 while the airplane is in the air and remains active until 0.7 seconds after the corresponding wheel spins up to 70 knots, or when the ground mode has been sensed continuously for three (3) seconds. The PSEU supplies the air or ground signals to the AACU, (system 1 for wheel 2 and system 2 for wheel 4).

**Touchdown/Hydroplane Protection**

The touchdown/hydroplane protection compares wheel speed data to ADIRU ground speed data. When the wheel speed decreases to 50 knots less than ground speed, the touchdown/hydroplane protection releases pressure to the brake. The hydroplane function supplies protection to wheels 1 and 3 only.


**Gear Retract Inhibit**

To permit gear retract braking, the antiskid system stops alternate antiskid operation during landing gear retraction. This occurs during the 12.5 seconds after the landing gear lever moves to the UP position.

This permits gear retract braking to stop the wheels during landing gear retraction without antiskid brake release.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - ANTISKID CONTROL - 2

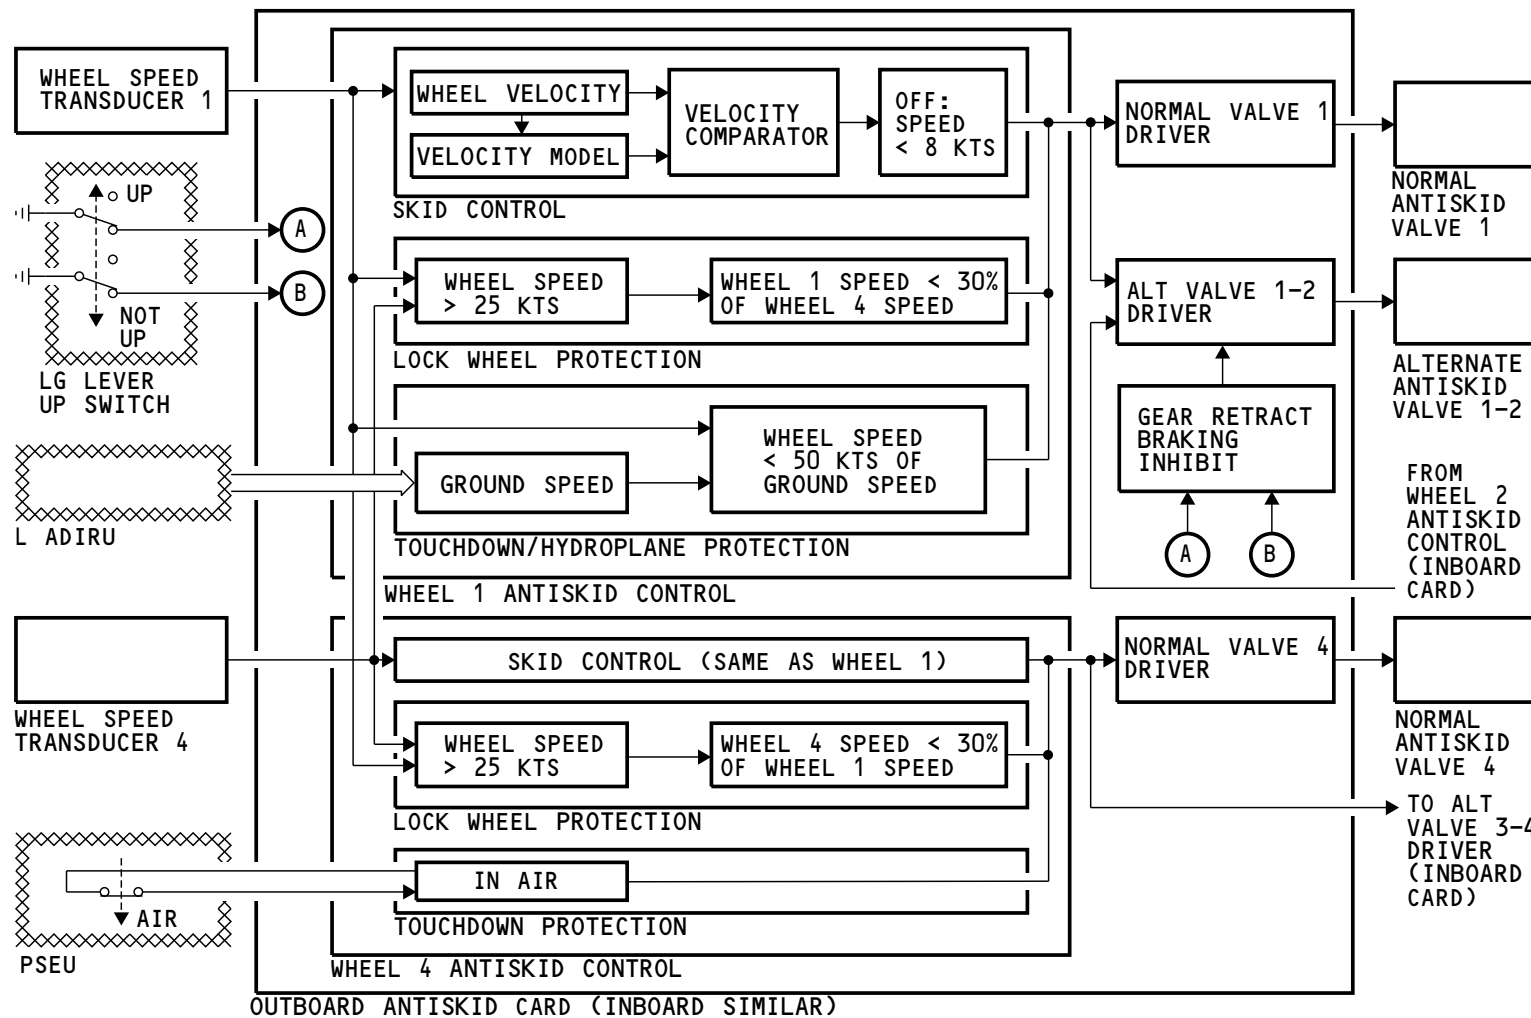

M85022 S0004627968\_V1

## ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - ANTISKID CONTROL - 2

32-42-00

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

**ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - FAULT INDICATION****General**

The BITE card in the antiskid/autobrake control unit (AACU) sends fault signals through relays to the flight compartment.

**Fault Indication**

The amber ANTI SKID INOP light comes on if there is a fault. The light can get a ground from one of these antiskid sense relays:

- Outboard
- Inboard
- Alternate.

When the BITE card in the AACU finds a fault in the normal inboard or normal outboard antiskid, it removes the ground from the related sense relay. The sense relay deenergizes, which sends a ground to make the amber ANTI SKID INOP light come on. The alternate antiskid sense relay is enabled when pressure is sensed at the alternate brake selector valve pressure switch.

The alternate brake selector valve pressure switch also sends signals to the flight data acquisition unit (FDAU).

See the flight data recording system (FDRS) section for more information about the FDAU. (SECTION 31-31)

The amber ANTI SKID INOP light comes on for these conditions:

- Wiring problem
- ANTI SKID INOP light fault
- Inboard or outboard antiskid card fault
- Inboard or outboard antiskid power fault
- One or more antiskid sense relay faults
- One or more transducer faults
- Parking brake lever and parking brake shutoff valve disagree
- Display test active
- Pressure switch fault on the alternate brake selector valve

- Antiskid/autobrake control unit ACCU component fault.

The normal antiskid valves release unwanted brake pressure through the parking brake valve. Therefore, the antiskid system monitors the parking brake system for a fault. When the parking brake valve is not in its commanded position, the parking brake relay does not send a ground to the AACU. This causes a fault in the outboard and inboard antiskid, and the amber ANTI SKID INOP light comes on.

The amber ANTI SKID INOP light also comes on for these conditions if the alternate brake selector valve is pressurized:

- Inboard or outboard antiskid card fault
- Inboard or outboard antiskid power fault
- One or more transducer faults
- Alternate antiskid valve fault.

**Training Information Point**


When there is a fault in the antiskid system, the autobrake system is inoperative.

**32-42-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

## ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - FAULT INDICATION

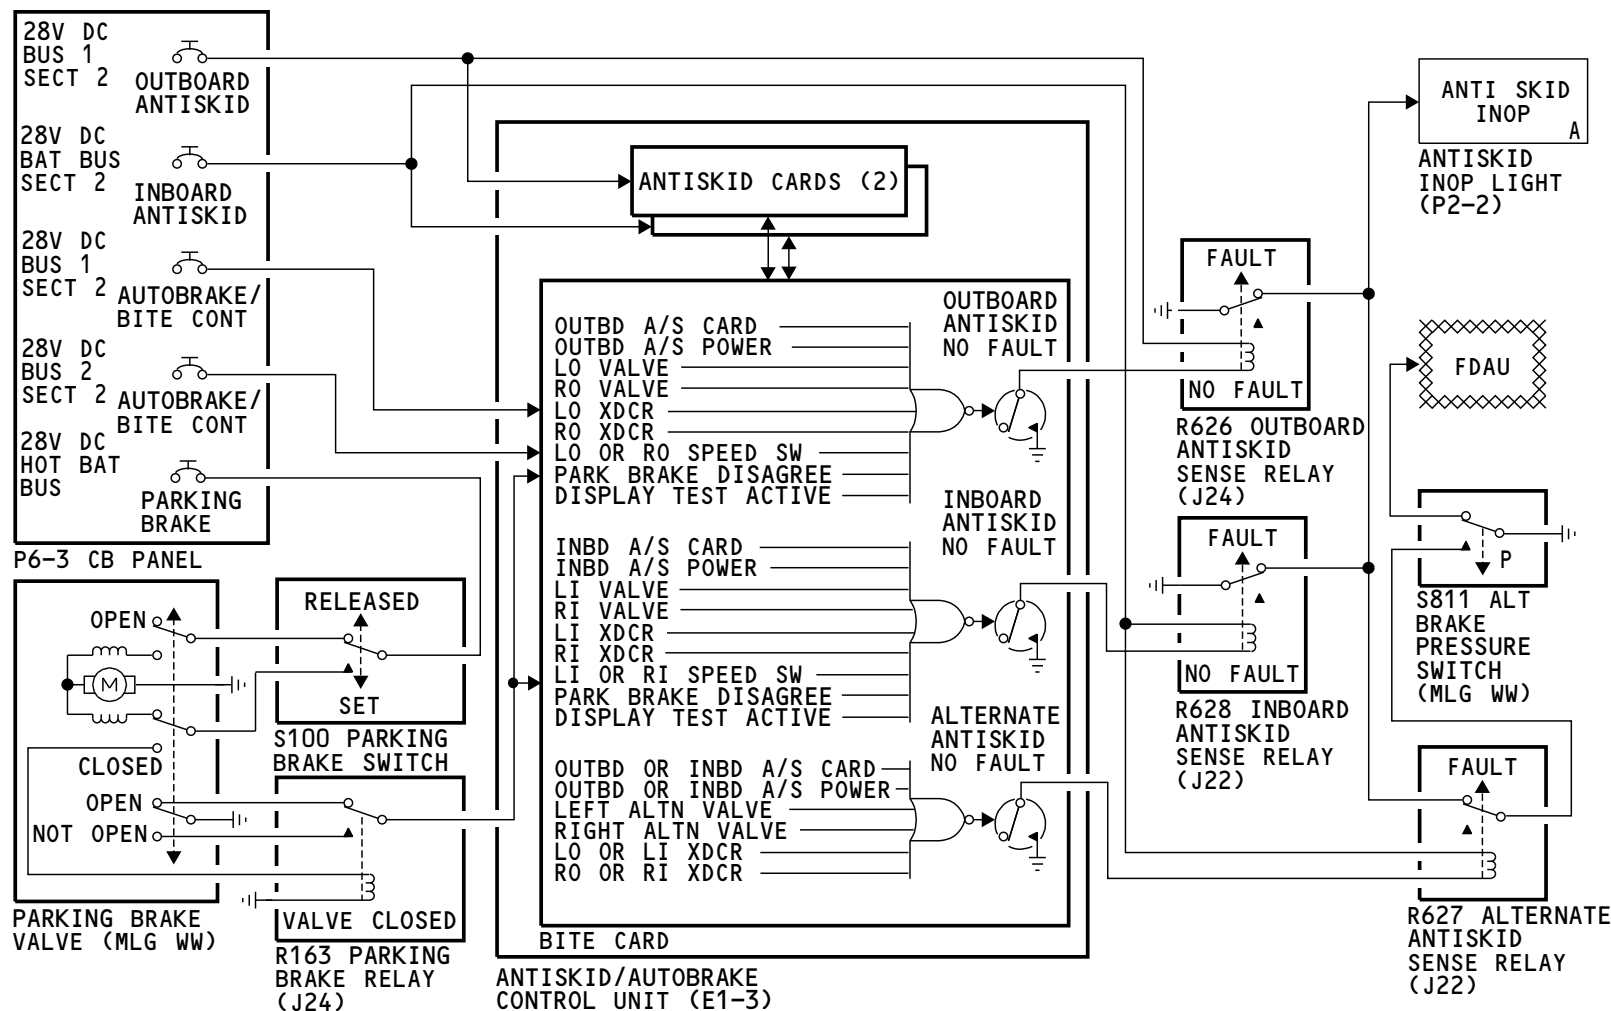

M85023 S0004627970\_V1

## ANTISKID/AUTOBRAKE SYSTEM - ANTISKID FUNCTIONAL DESCRIPTION - FAULT INDICATION

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - AUTOBRAKE CONTROL****General**

The antiskid/autobrake control unit (AACU) uses the autobrake card to control the autobrake system for landing and rejected takeoff.

The antiskid/autobrake control unit gets power from bus 1 and 2 main dc buses. This power also goes to the AUTO BRAKE select switch.

**Functional Description**

When you move the AUTO BRAKE select switch to the OFF position, it sends power to energize the autobrake disarm relay to the reset position. The 1, 2, 3, MAX, or RTO contacts on the select switch send the select switch position data to the AACU.

When all the conditions for arming the system occur, the AACU sends power to the autobrake pressure control module to control autobrake pressure to the brake system. This slows and stops the airplane at the deceleration rate the pilot selects.

These components send signals to the AACU:

- Thrust lever position from the autothrottle microswitch packs
- Air/ground from the proximity switch electronics unit
- Speed brake lever arm switch
- Metered pressure switches
- Ground speed from the air data inertial reference unit
- Control valve pressure switch monitored for faults in the autobrake pressure control module control valve
- Solenoid valve pressure switch monitored for faults in the autobrake pressure control module solenoid valve.

These switches are used for arm and disarm of the autobrake operation.

When a disarm condition occurs, the AACU removes power from the solenoid and control valves on the autobrake pressure control module. It also sends a ground to energize the autobrake disarm relay to the disarm position. The disarm relay sends a ground to make the AUTO BRAKE DISARM light come on.

To reset the autobrake disarm relay, move the AUTO BRAKE select switch to the OFF position. This will turn the amber AUTO BRAKE DISARM light off when the autobrake system is disarmed, and the AUTO BRAKE select switch is not in the OFF position.


**32-42-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - AUTOBRAKE CONTROL

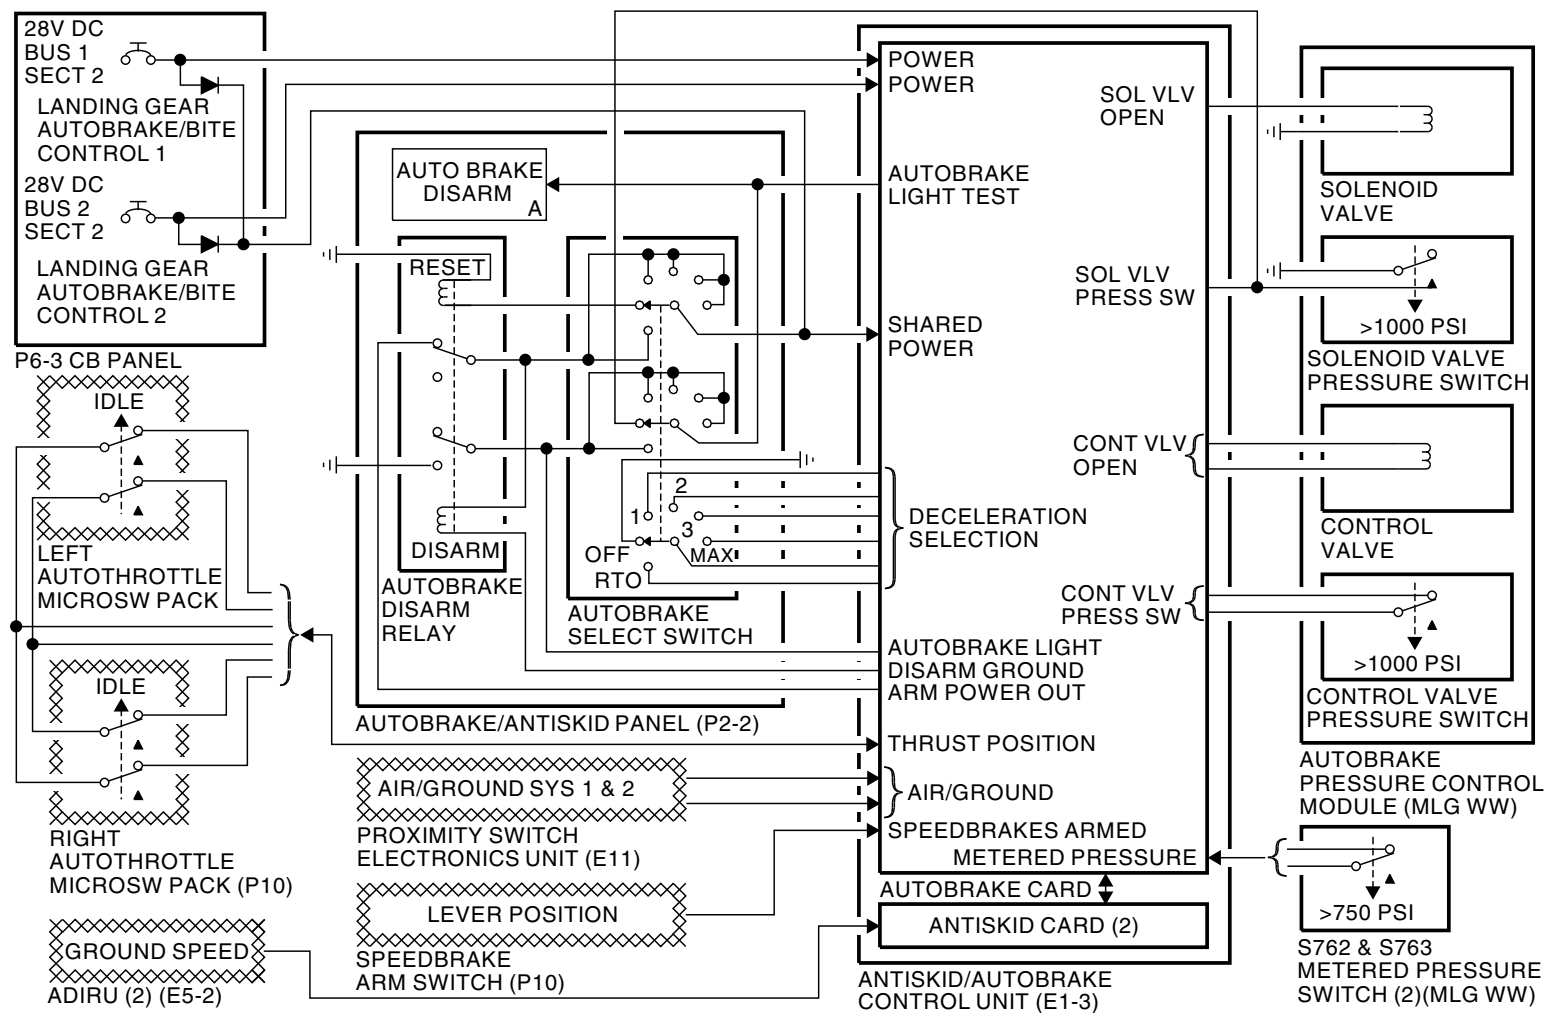

M85028 S0004627972\_V2

## ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - AUTOBRAKE CONTROL

32-42-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - LANDING ARM & APPLICATION LOGIC****General**

The autobrake system controls autobrake pressure to stop the airplane at the selected deceleration rate.

**Landing Arm Logic**

The autobrake system arms for landing when all of these conditions occur:

- You move the AUTO BRAKE select switch to a landing deceleration position (1, 2, 3, or MAX)
- Both air/ground systems in air mode, or both thrust levers at idle, or one or both air/ground systems in the ground mode for less than or equal to three seconds
- Valid input from left ADIRU
- No fault in the autobrake system
- No fault in the normal antiskid system
- Normal brake metered pressure less than 750 psi.

When you move the AUTO BRAKE select switch to 1, 2, 3, or MAX and one or more of the arm conditions is not true, the select switch stays in the selected position and the AUTO BRAKE DISARM light comes on.

**Landing Application Logic**

The autobrake function applies the brakes when these conditions occur:

- Landing autobrake is armed
- Both thrust levers at idle
- Either air/ground system continuously indicates ground for 0.2 seconds (if wheel spin-up occurs more than one second before ground is sensed) or 0.7 seconds (if wheel spin-up is occurs less than one second before ground is sensed)
- Wheel spin-up detection occurs or the spin-up latch sets.

Wheel spin-up detection occurs when one wheel on each main landing gear increases to 60 kts or greater and the wheel speed stays above 30 kts.

The spin-up latch sets 3 seconds after the air/ground system is in the ground mode and the wheel spin-up detection occurs. The spin-up latch resets when the air/ground system is in the air mode or the autobrake system is off or in the disarm mode.

When the landing autobrake function applies the brakes, it energizes the valve relay in the antiskid/autobrake control unit. This sends power to the solenoid valve and control valve on the autobrake pressure control module.

While autobrake application occurs, you can change the rate of deceleration and not disarm the system.

These are the deceleration rates and brake pressures for each position of the autobrake selector switch:

| AUTO BRAKE Select Switch | Deceleration Rate (ft/sec/sec)     | Pressure (psi) |
|--------------------------|------------------------------------|----------------|
| 1                        | 4                                  | 1250           |
| 2                        | 5                                  | 1500           |
| 3                        | 7.2                                | 2000           |
| MAX                      | 14 (> 80 knots)<br>12 (< 80 knots) | 3000           |


If one or more of the arm conditions are not true while the autobrakes apply the brakes, the AUTO BRAKE select switch stays in the selected position and the AUTO BRAKE DISARM light comes on.

**32-42-00****EFFECTIVITY**  
**SIA ALL**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - LANDING ARM & APPLICATION LOGIC

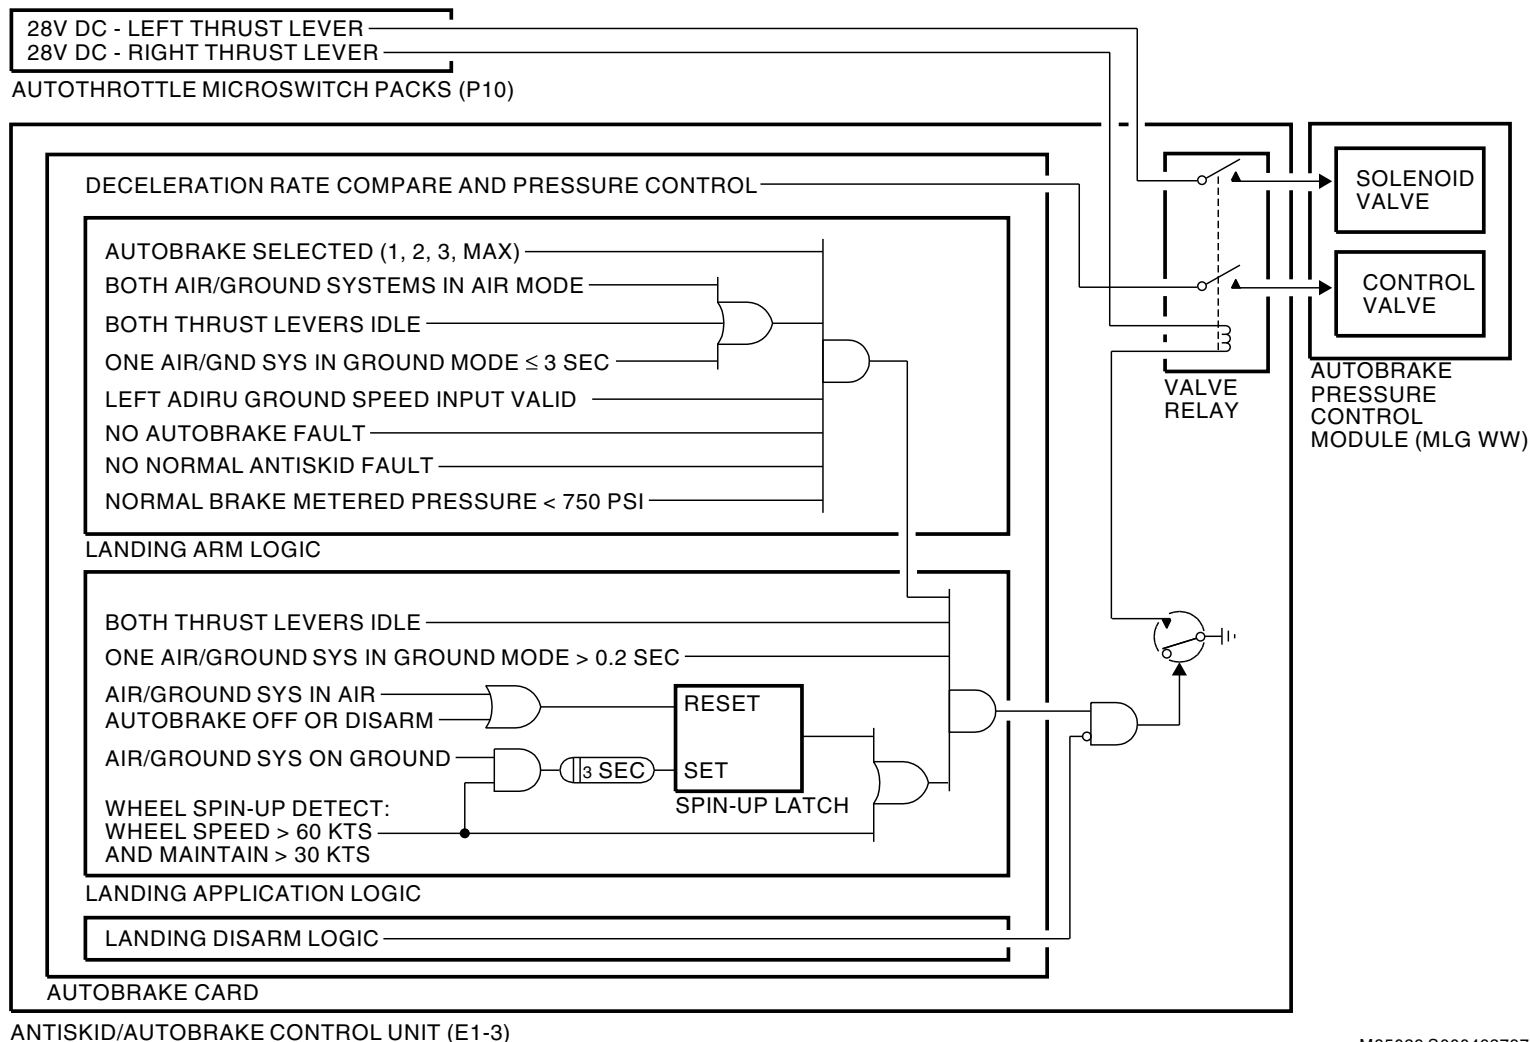

M85029 S0004627974\_V3

## ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - LANDING ARM & APPLICATION LOGIC

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - LANDING DISARM LOGIC****Landing Disarm Logic**

The autobrake system releases the landing autobrakes and disarms the autobrake system when any of these conditions occur:

- AUTO BRAKE select switch to the OFF position
- One normal metered pressure is more than 750 psi
- One thrust lever advanced out of the idle position after the airplane is on the ground for more than 3 seconds (before 3 seconds causes brake release with no disarm)
- Speedbrake lever from the UP position to the DOWN position
- Fault in the normal antiskid system
- Fault in the autobrake system
- Input from left ADIRU not valid.


When disarmed, the system sends a signal to the AUTO BRAKE DISARM light, and the light comes on (except for the first condition, when you move the AUTO BRAKE select switch to OFF).

Move the AUTO BRAKE select switch to the OFF position to make the light not come on.

**NOTE:** Hydroplane protection on the antiskid cards uses both ADIRUs ground speeds. With the R ADIRU failed, landing autobrakes can be armed for landing. R ADIRU fault will appear on AACU front panel.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

# ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - LANDING DISARM LOGIC

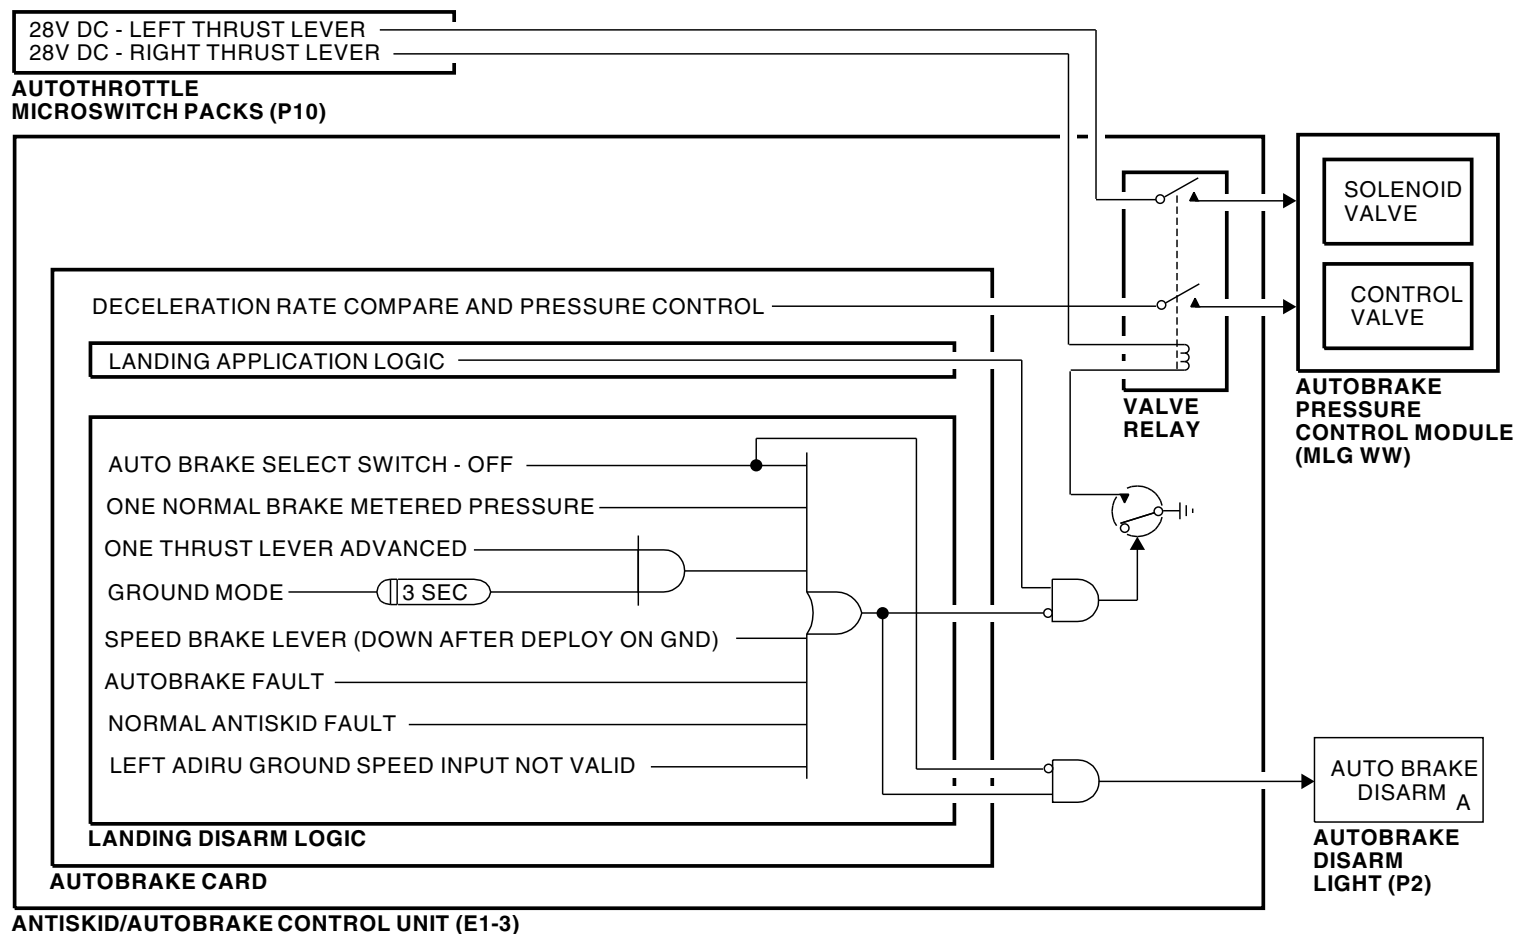

M85030 S0004627976\_V2

## ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - LANDING DISARM LOGIC

32-42-00-109

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# 32-42-00

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - RTO ARM AND APPLICATION LOGIC****RTO Arm Logic**

When you move the AUTO BRAKE select switch to the Rejected Takeoff (RTO) position, the antiskid/autobrake control unit starts a turn-on self check. The autobrake system arms for the RTO autobrake function when all of the these turn-on self check conditions occur:

- AUTO BRAKE select switch to the RTO position
- No fault in the RTO autobrake function
- Two air ground systems in the ground mode
- Average of all wheel speeds less than 60 knots
- No fault in the normal antiskid system
- Two thrust levers are in the idle position
- Solenoid and control valve pressures less than 1000 psi.

The turn-on self check also does a test of the antiskid/autobrake control unit and related components. While the turn-on self check operates, the AUTO BRAKE DISARM light comes on for 1.4 seconds. If the turn-on self check fails, the RTO autobrakes do not arm and the AUTO BRAKE DISARM light stays on.

**NOTE:** On the ground before takeoff, arming the autobrakes for RTO does not require either ADIRU. During takeoff at 88 knots, when autobrakes are initially enabled, only the left ADIRU is required for ground speed crosscheck, however subsequently both ADIRUs for crosscheck are required.

**RTO Application Logic**

The autobrake function applies the brakes when these conditions occur:

- RTO autobrake is armed
- Two thrust levers are in the idle position
- All wheel speeds average more than 88 knots
- No fault in the normal antiskid system
- Two normal metered pressures are less than 750 psi.

When the RTO autobrake function applies the brakes, it energizes a relay in the antiskid/autobrake control unit. This sends power to the solenoid and control valves on the autobrake pressure control module.

The autobrake system sends full hydraulic pressure to the brakes to slow and stop the airplane.


**32-42-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - RTO ARM AND APPLICATION LOGIC

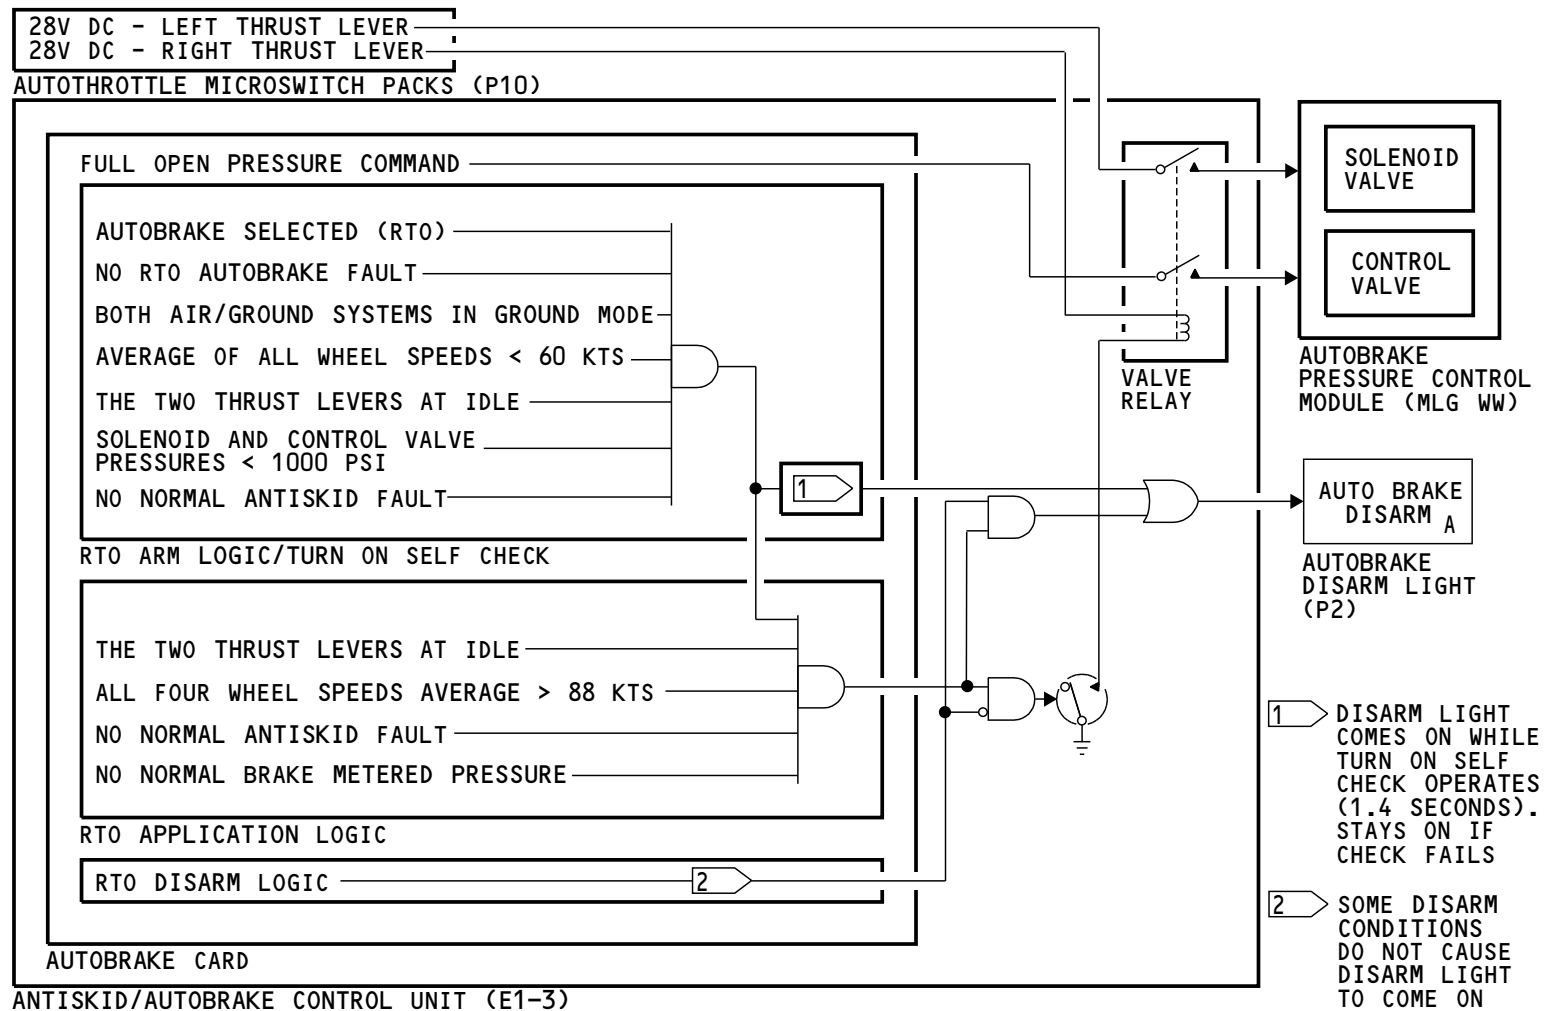

M85031 S0004627978\_V1

## ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - RTO ARM AND APPLICATION LOGIC

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - RTO DISARM LOGIC****RTO Disarm Logic**

The autobrake system releases the RTO autobrakes (if they were applied) and disarms the autobrake system (the AUTO BRAKE DISARM light does not come on) when any of these conditions occur:

- AUTO BRAKE select switch to the OFF position
- Two air/ground systems are in the air mode.


If RTO autobrake was applied, the autobrake system releases the RTO autobrakes and disarms the autobrake system (the AUTO BRAKE DISARM light comes on) when any of these conditions occur:

- One or both normal metered pressure more than 750 psi
- One or both thrust levers at more than idle position
- Fault in the autobrake system
- Fault in the normal antiskid system
- Speedbrake lever moved from the UP position to the DOWN position.

Move the AUTO BRAKE select switch to the OFF position to make the light go off.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

# ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - RTO DISARM LOGIC

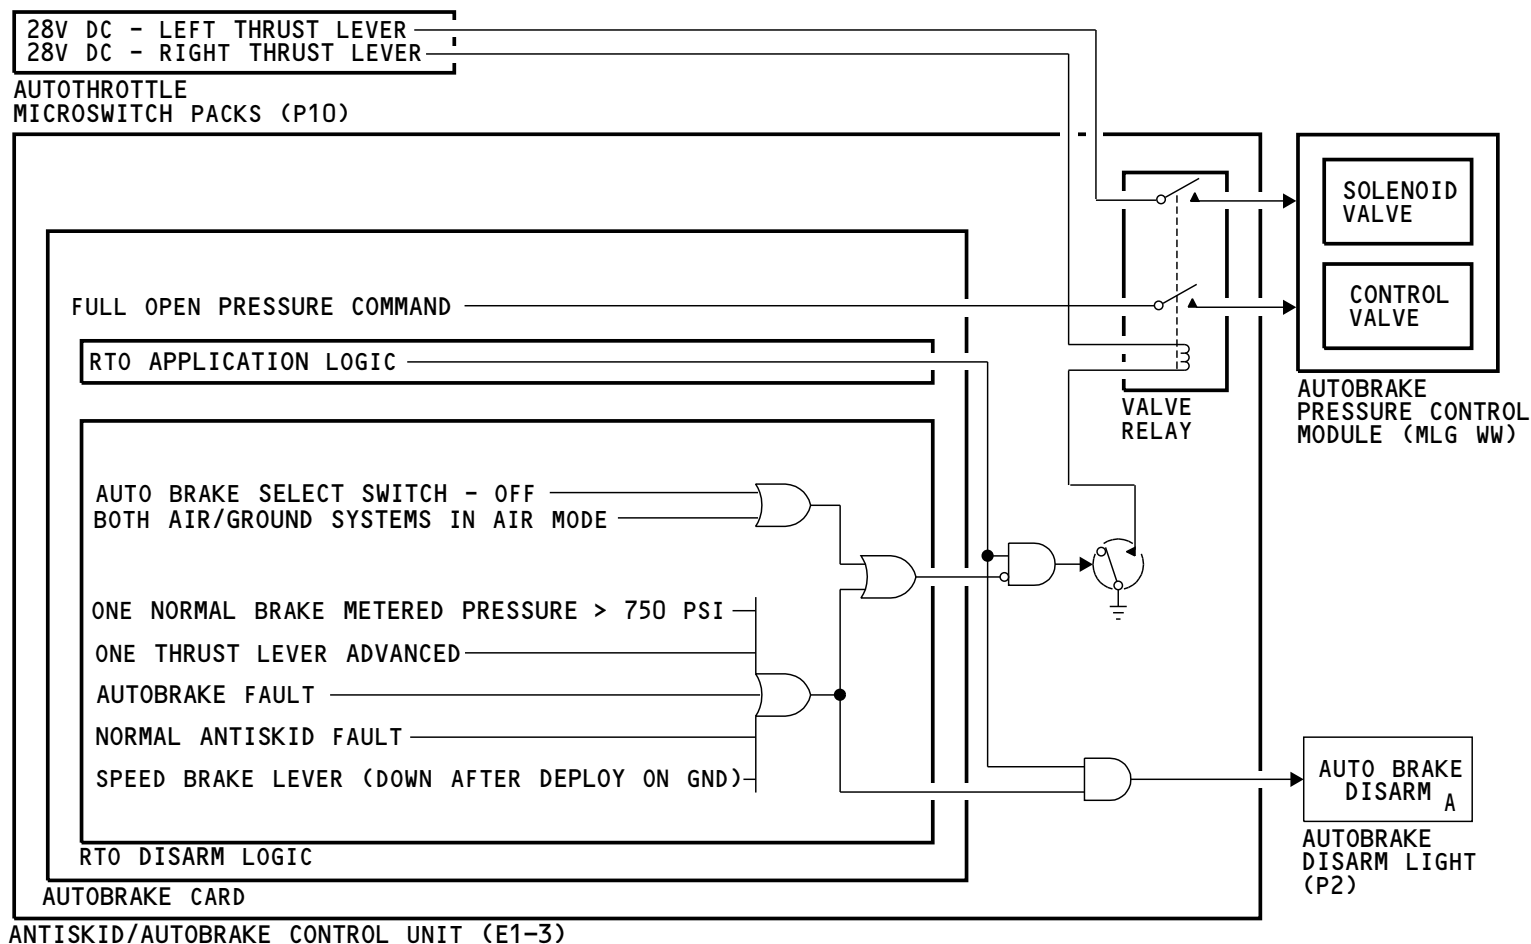

M85032 S0004627980\_V1

## ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - RTO DISARM LOGIC

32-42-00-111

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-42-00



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-42-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## ANTISKID/AUTOBRAKE SYSTEM - TRAINING INFORMATION POINT - AACU BITE

**General**

These are the functions you can do with the BITE of the Antiskid/Autobrake Control Unit (AACU):

- Display test
- Built-in test (BIT) memory (recall) test
- Antiskid/autobrake control test
- Normal antiskid brake test
- Alternate antiskid brake test
- Autobrake application test
- Wheel speed signal test (speed switch test)
- Reset (memory clear).

The BITE instructions are on a placard that is inside the AACU. To read the instructions, unlatch the placard, pull it out from the unit and turn it to a position where you can read it while you do the BITE tests.

**Display Test**

Move the PRESS/TEST/BIT switch to the PRESS/TEST position to start the display test. Four sections of the message display come on for 2.5 seconds, then the other four come on for 2.5 seconds. Each section of the 8-character message display shows one character. During the display test, the ANTI SKID INOP and AUTO BRAKE DISARM amber lights in the flight compartment come on for 5 seconds.

**BIT Memory Recall Test**

The AACU continuously monitors the antiskid and autobrake systems. If faults are found, the AACU keeps the fault data in the BIT memory. Move the PRESS/TEST/BIT switch to the BIT position to show fault messages kept by the AACU. Move the switch to the BIT position for each fault shown until the message TEST END shows in the message display.

**Antiskid/Autobrake Control Test**

The control test does a complete system electrical test. You do the test with the rotary switch in the NORM position. Then move these switches to start the test:

- AUTO BRAKE select switch (in flight compartment) to 1, 2, 3, MAX, or RTO
- Push and hold the ENABLE/VERIFY switch
- Push the VERIFY switch
- Release the two switches.

During the test, the message WAIT flashes in the message display. If there are no faults, the message TEST END shows in the message display. If the control test finds a fault, the fault message shows in the message display. Push the VERIFY switch to see other faults. When the control test finds that there are no more faults, the message TEST END shows in the message display.

**Normal Antiskid Brake Test**

The normal antiskid brake test sends signals equivalent to a wheel skid to the normal antiskid valves. To prepare for the test, operate hydraulic system B to supply pressure to the normal brake system and hold the brakes in the applied position. Do the normal antiskid valve tests one at a time in positions 1 through 4 on the rotary switch.

Use these switches to start the test:

- Push and hold the ENABLE/VERIFY switch
- Push the VERIFY switch
- Release the two switches.

The message display of the AACU shows the position of the brake you do the test on. If there are no faults, the selected brake will release and then receive pressure again. If there are faults, the fault message shows in the message display and the brake does not release and then receive pressure again.

**ANTISKID/AUTOBRAKE SYSTEM - TRAINING INFORMATION POINT - AACU BITE**

The normal antiskid brake test will be aborted/rejected when both air/ground signals from the PSEU are in the air mode.

**Alternate Antiskid Brake Test**

You do the alternate antiskid brake test the same as the normal antiskid brake test except for these conditions:

- Hydraulic system B does not supply pressure
- Hydraulic system A does supply pressure
- The two brakes on a main landing gear release.

**Autobrake Application Test**

The autobrake application test sends signals equivalent to an autobrake application to the autobrake pressure control module. Operate hydraulic system B to supply pressure to the normal brake system. Move the rotary switch to the A/B position to select the test. You will do the test for each position 1, 2, 3, MAX, and RTO on the AUTO BRAKE select switch.

Use these switches to start the test:

- Push and hold the ENABLE/VERIFY switch
- Push the VERIFY switch
- Release the two switches.

If there are no faults, all brakes receive pressure for 10 seconds. The position of the autobrake selector shows on the message display of the AACU.

If there are faults, the fault message shows in the message display and the brakes do not receive pressure. At test complete, the autobrake system disarms and the AUTO BRAKE DISARM light comes on.

The RTO application test will be aborted/rejected when both air/ground signals from the PSEU are in the air mode.

**Wheel Speed Signal Test (Speed Switch Test)**

The AACU sends signals to the auto speedbrake system when each wheel speed increases more than 60 knots. This occurs during the normal and alternate antiskid brake tests.

The wheel speed signal test sends the more than 60 knot wheel speed signal to the auto speed brake system for each wheel, both inboard wheels, or both outboard wheels. To do the wheel speed signal test, move the rotary switch to the 1, 2, 3, 4, INBD, or OUTBD position. Then push and hold the ENABLE/VERIFY switch, move the PRESS/TEST/BIT switch to the PRESS/TEST position, and release both switches. This sends the more than 60 knot wheel speed signal to the auto speed brake system.

See the speedbrake control system section for more information about the auto speedbrake system. (SECTION 27-62)

**Reset**

When you push the RESET switch, the faults stored in the BIT memory from the continuous monitoring are erased.

# ANTISKID/AUTOBRAKE SYSTEM - TRAINING INFORMATION POINT - AACU BITE

DISPLAY TEST -SELECT 'PRESS/TEST'.

ALL DISPLAY SEGMENTS LIGHT IN A CHECKERBOARD PATTERN.

MEMORY RECALL -SELECT 'BIT'.

ALL A/S AND A/B INDICATORS LIGHT.

"TEST END" OR STORED FAILURE DISPLAYED. SELECT 'BIT' TO CONTINUE.

**WARNING: TESTS APPLY AND RELEASE BRAKES. VERIFY AREA AROUND BRAKES IS CLEAR.**

AIRCRAFT CONFIGURATION -CHOCK WHEELS, RELEASE PARKING BRAKE, PRESSURIZE HYDR SYSTEMS A AND B, THRUST LEVERS IN IDLE, SPOILERS STOWED, ADIRU IN "NAV" MODE.

ANTISKID/AUTOBRAKE CONTROL TEST -ARM A/B POSITION 1. ROTARY SWITCH IN "NORM" POSITION. DEPRESS "ENABLE/VERIFY" AND HOLD, THEN DEPRESS "VERIFY". RELEASE BOTH.

"TEST END" OR FAILED LRU DISPLAYED. DEPRESS "VERIFY" TO CONTINUE.

NORMAL ANTISKID BRAKE TEST - FULLY DEPRESS BRAKE PEDALS, ROTARY SWITCH IN "BRAKE TEST 1" POSITION. DEPRESS "ENABLE/VERIFY" AND HOLD, THEN DEPRESS "VERIFY". RELEASE BOTH. REPEAT FOR POSITIONS 2-4. RELEASE BRAKE PEDALS.

SELECTED BRAKE DISPLAYED. BRAKE RELEASES THEN REAPPLIES.

ALTERNATE ANTISKID BRAKE TEST - DEPRESSURIZE HYDR SYSTEM B. REPEAT ABOVE TEST.


SELECTED BRAKE DISPLAYED. SELECTED BRAKE AND PAIRED BRAKE RELEASE. THEN REAPPLY.

AUTOBRAKE APPLICATION TEST - PRESSURIZE HYDR SYS B. ARM A/B POSITION 1. ROTARY SWITCH IN "A/B" POSITION. DEPRESS "ENABLE/VERIFY" AND HOLD. THEN DEPRESS "VERIFY". RELEASE BOTH. REPEAT FOR POSITIONS 2 AND 3, MAX AND RTO.

A/B SWITCH POSITION DISPLAYED. ALL BRAKES APPLY, THEN PRESSURE STEPS DOWN, THEN A/B DISARMS.


MEMORY CLEAR -SELECT 'RESET'.

BITE INSTRUCTION PLACARD

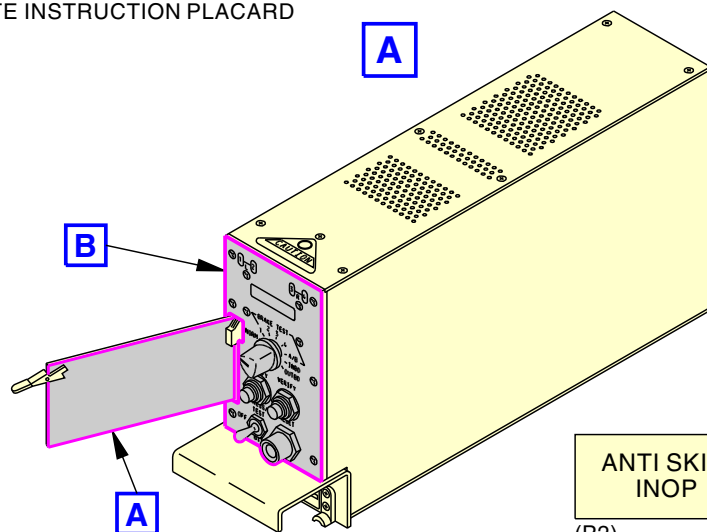

ANTI SKID  
INOP A  
(P2)

AUTO BRAKE  
DISARM A  
(P2)

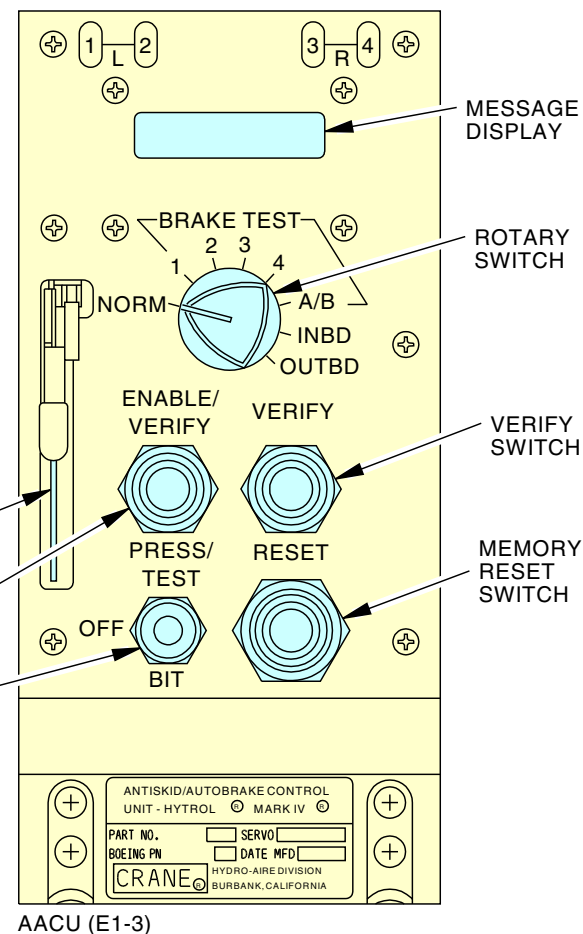

AACU (E1-3)

B

M85024 S0004627982\_V2

## ANTISKID/AUTOBRAKE SYSTEM - TRAINING INFORMATION POINT - AACU BITE

32-42-00

EFFECTIVITY  
SIA ALL; AIRPLANES WITH STEEL OR CARBON BRAKES

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## ANTISKID/AUTOBRAKE SYSTEM - TRAINING INFORMATION POINT - AACU BITE

**DISPLAY TEST** - SELECT "PRESS/TEST".

**MEMORY RECALL** - SELECT "BIT".

**WHEEL SPIN TEST** - ROTARY SWITCH IN "BRAKE TEST 1" POSITION. DEPRESS "VERIFY" AND HOLD, THEN SELECT "PRESS/TEST". RELEASE BOTH. SPIN WHEEL. REPEAT FOR WHEELS 2-4.

**WARNING:** TEST MAY DEPLOY AUTOSPEEDBRAKES. ENSURE SPEEDBRAKE LEVER IS STOWED AND AREA AROUND SPOILER PANELS IS CLEAR.

**SPEED SWITCH TEST** - ROTARY SWITCH IN "BRAKE TEST 1" POSITION. DEPRESS "ENABLE/VERIFY" AND HOLD, THEN SELECT "PRESS/TEST". RELEASE BOTH. REPEAT FOR POSITIONS 2-4. INBD, OUTBD.

**WARNING:** TESTS APPLY AND RELEASE BRAKES. VERIFY AREA AROUND BRAKES IS CLEAR.

**AIRCRAFT CONFIGURATION** - CHECK WHEELS, RELEASE PARKING BRAKE, PRESSURIZE HYDR SYSTEMS A AND B, THRUST LEVERS IN IDLE, SPOILERS STOWED, ADRU IN NAV MODE.

**ANTISKID/AUTOBRAKE CONTROL TEST** - ARM A/B POSITION 1. ROTARY SWITCH IN "NORM" POSITION. DEPRESS "ENABLE/VERIFY" AND HOLD, THEN DEPRESS "VERIFY". RELEASE BOTH. ALLOW TEST TO FINISH SETA/B TO OFF. REPEAT FOR POSITIONS 2, 3, MAX AND RTO.

**NORMAL ANTISKID BRAKE TEST** - FULLY DEPRESS BRAKE PEDALS. ROTARY SWITCH IN "BRAKE TEST 1" POSITION. DEPRESS "ENABLE/VERIFY" AND HOLD, THEN DEPRESS "VERIFY". RELEASE BOTH. REPEAT FOR POSITIONS 2-4. RELEASE BRAKE PEDALS.

**ALTERNATE ANTISKID BRAKE TEST** - DEPRESSURIZE HYDR SYSTEM B. REPEAT ABOVE TEST.

**AUTOBRAKE APPLICATION TEST** - PRESSURIZE HYDR SYSTEM B. ARM A/B POSITION. ROTARY SWITCH IN "A/B 1" POSITION. DEPRESS "ENABLE/VERIFY" AND HOLD, THEN DEPRESS "VERIFY". RELEASE BOTH. ALLOW TEST TO FINISH. SET A/B TO OFF. REPEAT FOR ALL OTHER AUTOBRAKE POSITIONS.

**MEMORY CLEAR** - SELECT "RESET".

ALL DISPLAY SEGMENTS LIGHT IN A CHECKER BOARD PATTERN. ALL A/B AND A/B INDICATORS LIGHT.

"TSET END" OR STORED FAILURE DISPLAYED. SELECT "BIT" TO CONTINUE.

"SPIN X 1" DISPLAYED. 2-4. INBD, OUTBD.

"SPSW X" DISPLAYED. 2-4. INBD, OUTBD. SPEED SWITCH SET INBD.

"TEST END" OR FAILED LNU DISPLAYED. DEPRESS "VERIFY" AND "VERIFY" TO CONTINUE.


SELECTED BRAKE DEPLOYED. BRAKE RELEASES THEN REAPPLIES.

SELECTED BRAKE DEPLOYED. SELECTED BRAKE AND PAIRED BRAKE RELEASE. THEN REAPPLY.

A/B SWITCH POSITION DISPLAYED. ALL BRAKES APPLY. THEN PRESSURE STEPS DOWN. THEN A/B DEARM.


"IF AUTO BRAKE DEARM LIGHT REMAINS ON FOR MORE THAN 10 SECONDS AFTER DEARM, AUTOBRAKE POSITION IS SELECTED. PERFORM A MEMORY RECALL.

BITE INSTRUCTION PLACARD

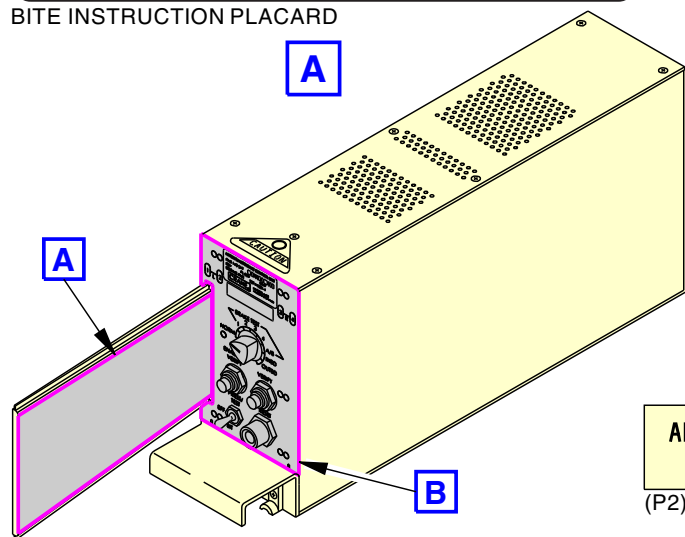

ANTI SKID  
INOP A  
(P2)

AUTO BRAKE  
DISARM A  
(P2)

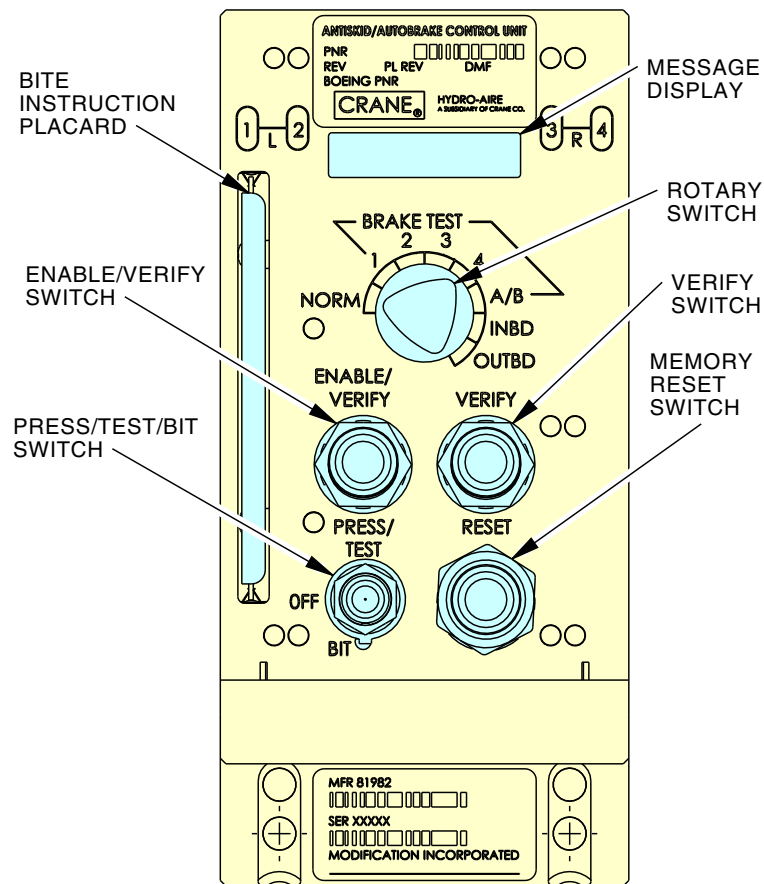

AACU (E1-3)

B

2581207 S0000621735\_V2

## ANTISKID/AUTOBRAKE SYSTEM - TRAINING INFORMATION POINT - AACU BITE

32-42-00

EFFECTIVITY  
SIA ALL; AIRPLANES WITH CARBON BRAKES

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-42-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - FAULT INDICATION****General**

The antiskid/autobrake control unit (AACU) gets power from bus 1 and 2 main dc buses. Power goes to the BITE card and AUTOBRAKE card. Power also goes to the AUTOBRAKE select switch.

The BITE card in the AACU sends fault signals through the AUTOBRAKE card to the antiskid/autobrake panel in the flight compartment. This controls the amber AUTO BRAKE DISARM light. The AUTO BRAKE DISARM light receives power from the master dim and test system (not shown).

**Fault Indication**

The amber AUTO BRAKE DISARM light comes on if there is a fault. The light can get a ground from one of these components:

- Autobrake pressure control module solenoid valve pressure switch
- Autobrake light logic switch
- Autobrake disarm relay
- Autobrake light test.

The autobrake disarm ground logic switch controls the autobrake disarm relay.

The amber AUTO BRAKE DISARM light comes on for these autobrake/antiskid conditions:

- Autobrake select switch to OFF and the autobrake pressure control module solenoid valve pressure more than 1000 psi (6895 kPa)
- Autobrake select switch to 1, 2, 3, MAX, or RTO and the autobrake light logic switch energize
- Autobrake select switch to 1, 2, 3, MAX, or RTO and the autobrake disarm relay energized
- AUTO BRAKE DISARM light test in the AACU.

When the BITE card in the AACU finds a fault in the antiskid system, it sends a signal to the autobrake disarm ground logic and autobrake light logic on the autobrake card. The BITE card also sends a signal to the ANTI SKID INOP light.

The autobrake disarm ground logic switch gives a ground for the autobrake disarm relay for one or more of these conditions:

- Autobrake selected and the landing autobrake disarm logic is true
- RTO autobrake operation fault
- No RTO autobrake operation fault and the RTO autobrake disarm logic is true
- RTO autobrake is selected, and the signal from the proximity switch electronics unit (PSEU) shows on-ground for 1.4 seconds.

The autobrake disarm relay gets a reset when the AUTOBRAKE select switch moves to OFF.

The autobrake light logic switch gives a ground for the amber AUTO BRAKE DISARM light for one or more of these conditions:

- Autobrake disarm ground logic true
- Landing autobrake is initially selected, and there is a landing arming fault
- RTO autobrake is initially selected, and there is an RTO arming fault.

The autobrake light test is done during initial power-up of the AACU and during BITE tests.

**Training Information Point**

When there is a fault in the antiskid system, the autobrake system does not operate.


**32-42-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - FAULT INDICATION

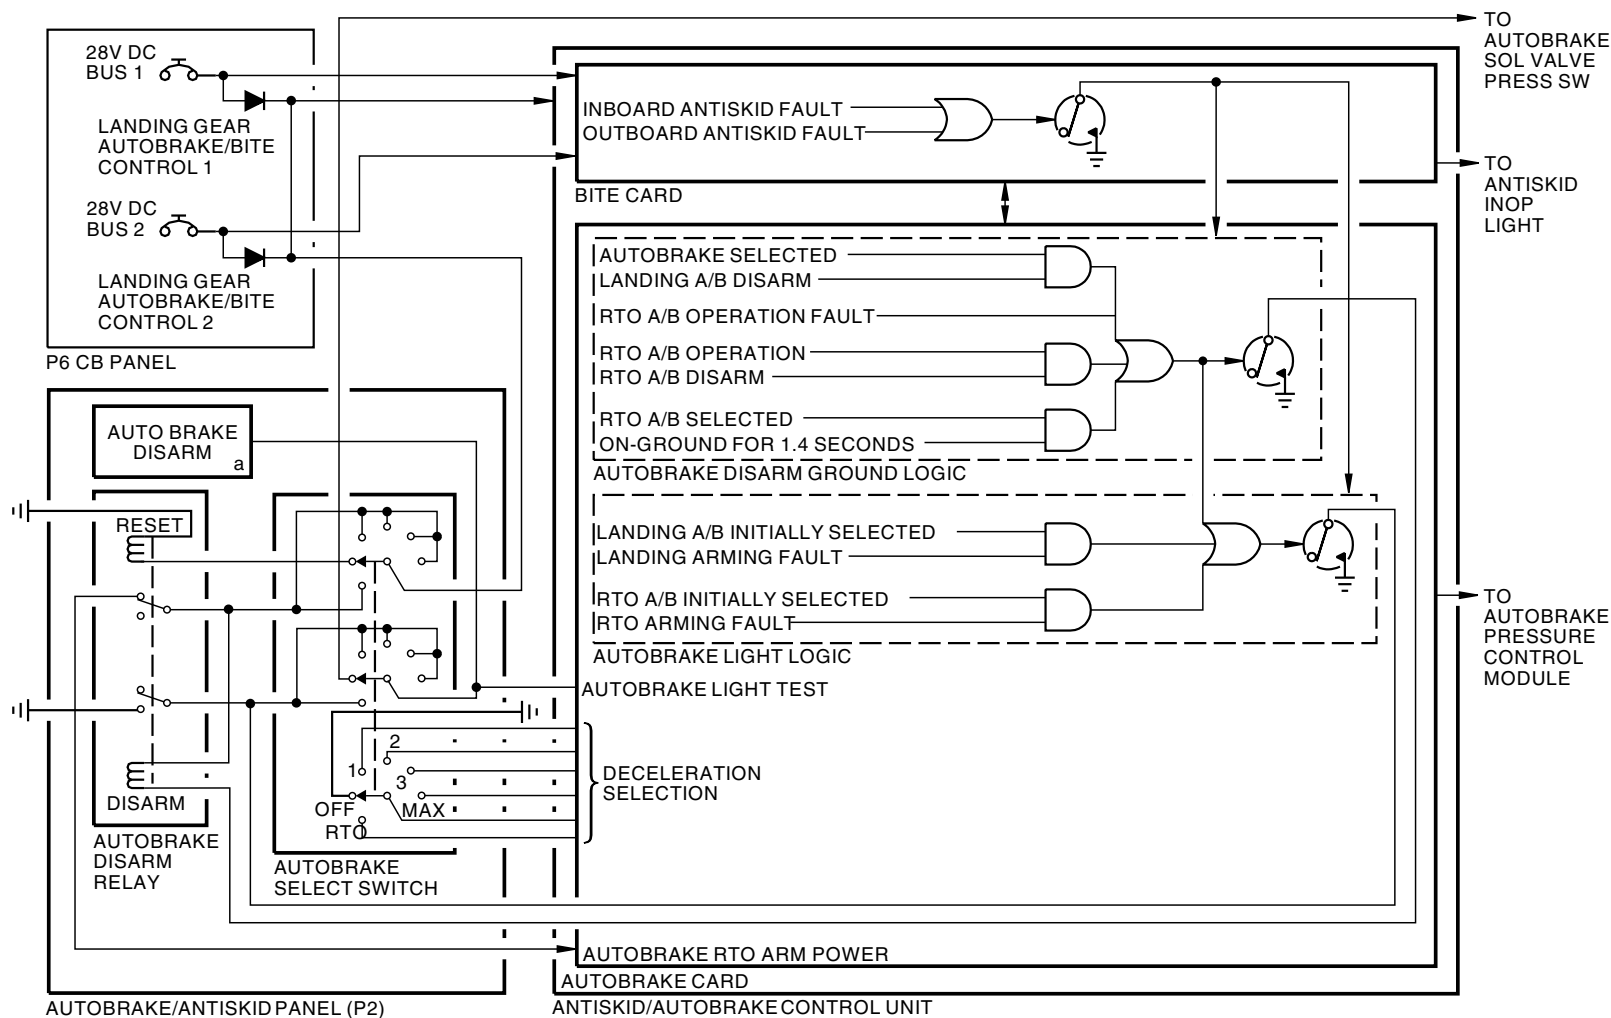

2105037 S0000448004\_V2

## ANTISKID/AUTOBRAKE SYSTEM - AUTOBRAKE FUNCTIONAL DESCRIPTION - FAULT INDICATION

**ANTISKID/AUTOBRAKE SYSTEM - ENGINE THROTTLE SWITCHES****Purpose**

The engine throttle switches supply data to the antiskid/autobrake control unit (AACU) for the autobrake function. The AACU uses this data to arm or disarm the autobrakes after landing.

**Location**

The engine throttle switches are on the autothrottle switchpacks below the control stand. To get access, go through access panels in the overhead of the nose landing gear wheel well.

**Physical Description**

The engine throttle switches operate when the thrust levers move less than the idle position (less than 44 degrees of thrust resolver angle rotation (TRA)).

**Functional Description**

This table gives you data about the autobrake switches:

| Name             | Switch | TRA Position                         |
|------------------|--------|--------------------------------------|
| Autobrake System | S2     | RET < 44 Autobrake Arm Logic Enabled |
| Autobrake System | S3     | RET < 44 Autobrake Arm Logic Enabled |

**Training Information Point**

You can remove the switches as the switchpack assembly.


**32-42-00**

|         |             |
|---------|-------------|
| SIA ALL | EFFECTIVITY |
|---------|-------------|

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## ANTISKID/AUTOBRAKE SYSTEM - ENGINE THROTTLE SWITCHES

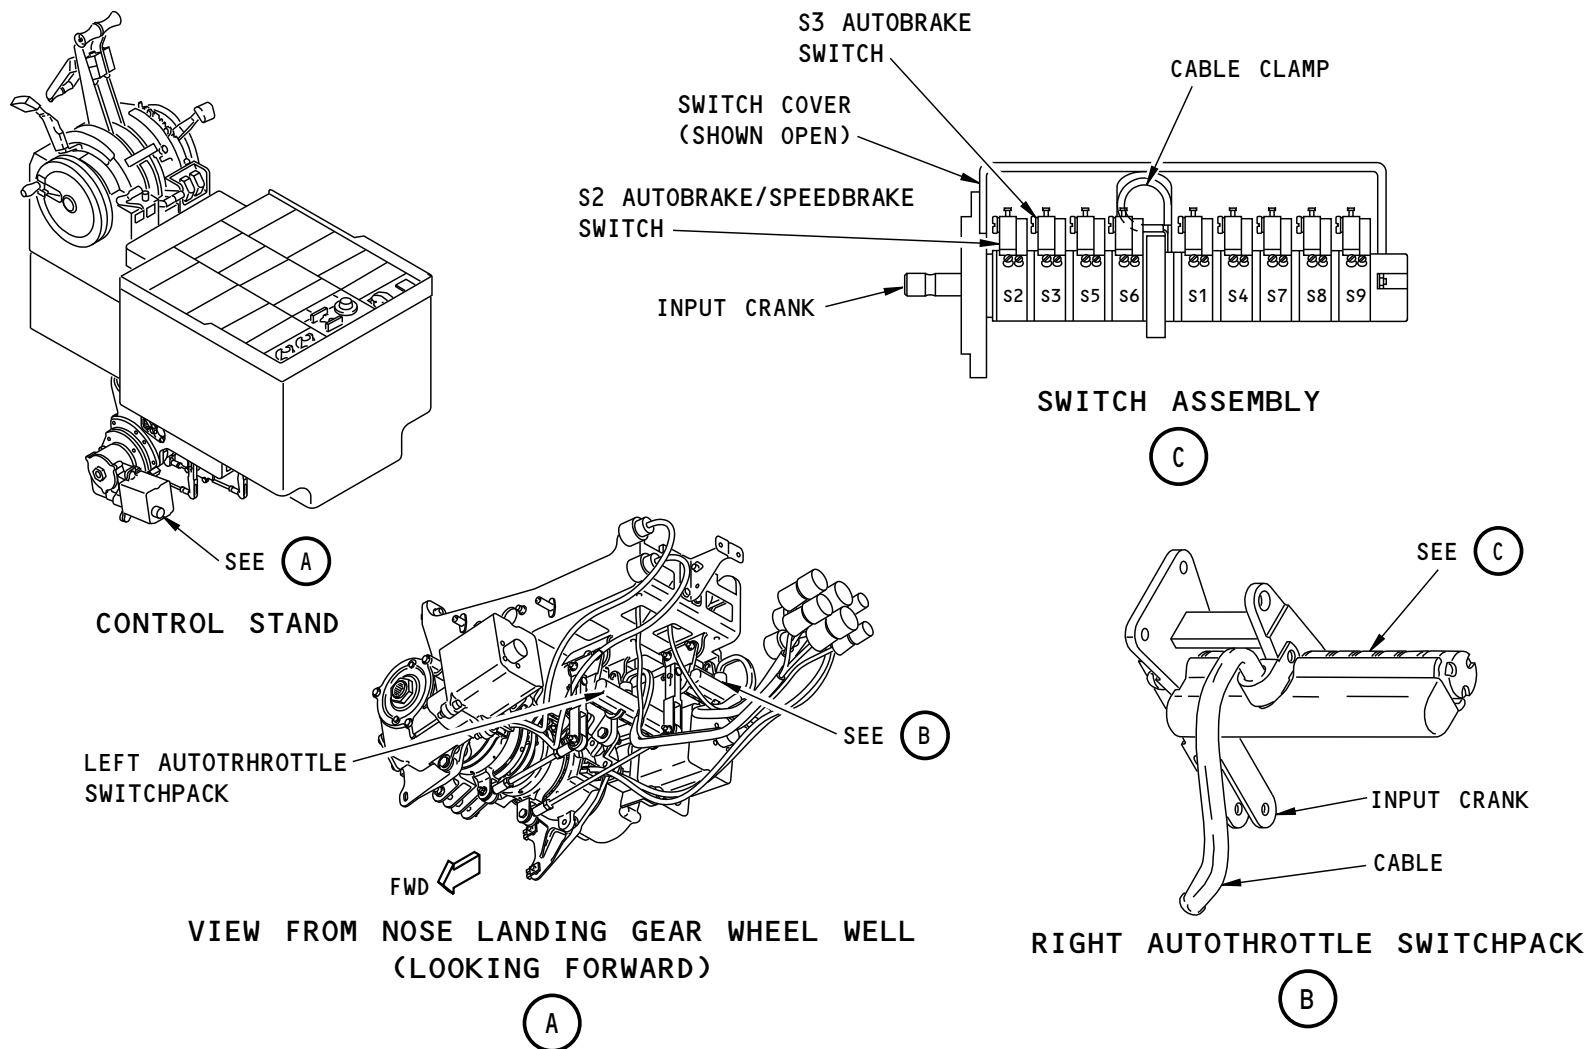

2104421 S0000448013\_V1

## ANTISKID/AUTOBRAKE SYSTEM - ENGINE THROTTLE SWITCHES


32-42-00

EFFECTIVITY  
SIA ALL; AUTOTHROTLE SWITCHPACK WITH INTEGRATED SWITCHES P/N  
254A1150-11, -12, -13, -14, -15, -16

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

ANTISKID/AUTOBRAKE SYSTEM - ENGINE THROTTLE SWITCHES

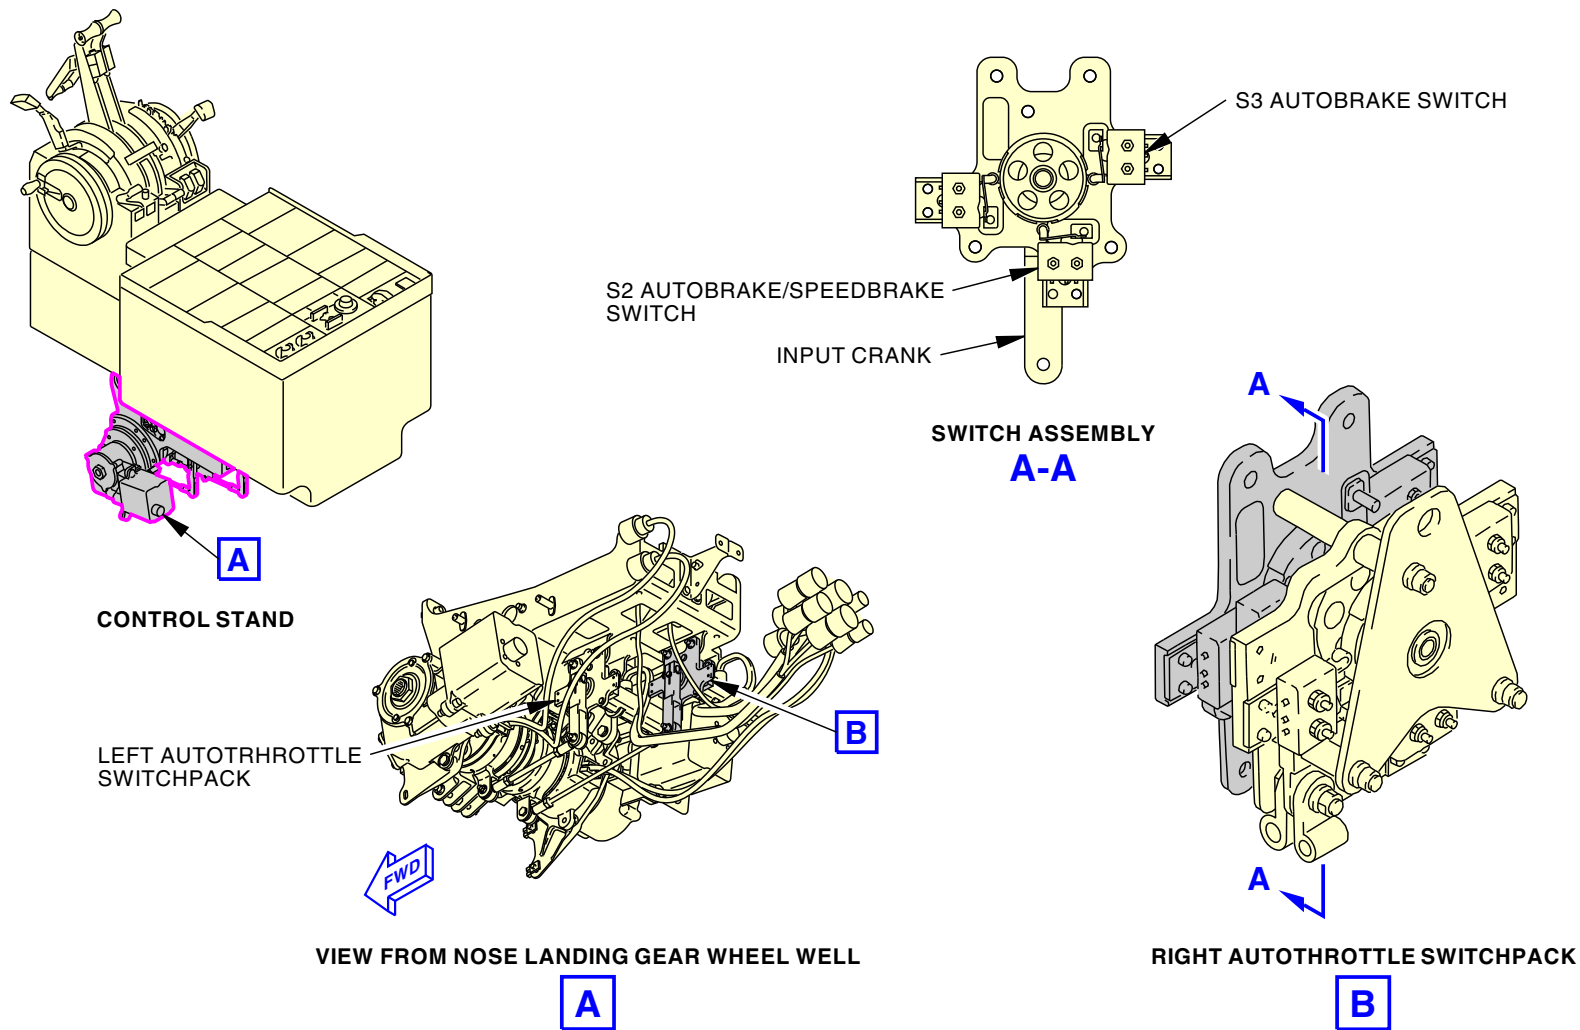

2893089 S0000688284\_V1

ANTISKID/AUTOBRAKE SYSTEM - ENGINE THROTTLE SWITCHES

**32-42-00**



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-44-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## PARKING BRAKE SYSTEM - INTRODUCTION

### Purpose

The parking brake system uses the normal hydraulic brake system to keep the main landing gear brakes applied when you park the airplane.

### Parking Brake System Indication

A red parking brake light adjacent to the parking brake lever shows the condition of the parking brake system.




A light on the external power panel also shows the condition of the parking brake system.

### Training Information Point




PARKING BRAKES SHOULD NOT BE SET FOLLOWING A HIGH ENERGY STOP. HIGH ENERGY STOPS ARE DEFINED AS A REFUSED TAKE OFF OR ANY STOP OTHER THAN NORMAL. UNDER STATIC PRESSURE, HOT BRAKE SURFACES TEND TO FUSE TOGETHER. THEREFORE, AFTER A HIGH ENERGY STOP, OR FOLLOWING TOUCH AND GO STOPS, A COOLING PERIOD OF 40 TO 60 MINUTES SHOULD BE ALLOWED BEFORE THE PARKING BRAKE IS SET.

### PARKING BRAKE SYSTEM - INTRODUCTION

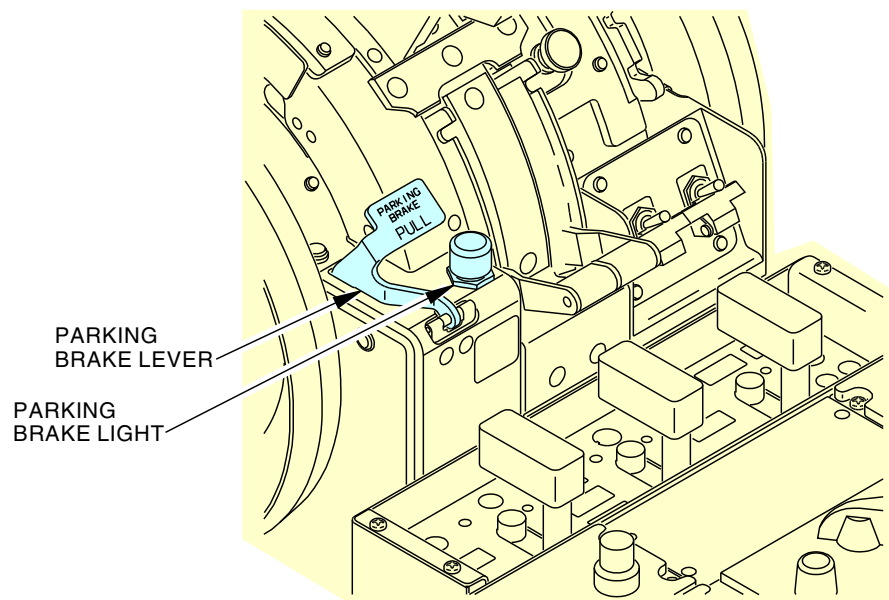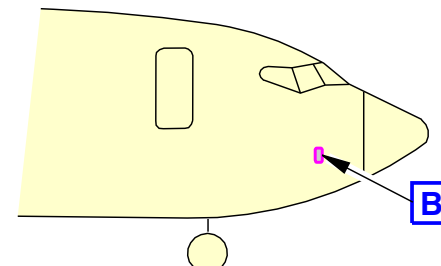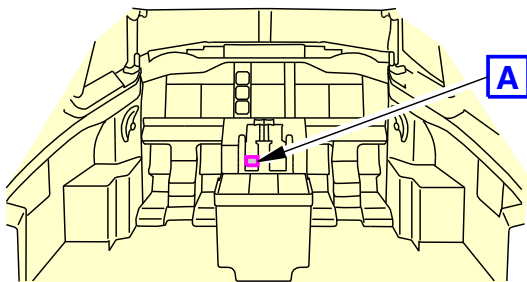

P10 CONTROL STAND  
(EXAMPLE)

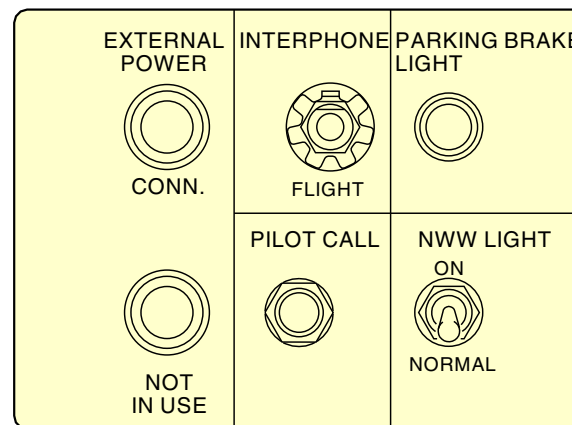

EXTERNAL POWER PANEL (P19)

M85035 S0004627987\_V2

### PARKING BRAKE SYSTEM - INTRODUCTION

**PARKING BRAKE SYSTEM - GENERAL DESCRIPTION****Components**

These are the parking brake system components:

- Parking brake lever
- Parking brake linkage
- Parking brake switch
- Parking brake light
- Parking brake repeater light
- Parking brake close sense relay
- Parking brake shutoff valve.

**General Description**

When you push the brake pedals and pull the parking brake lever, the linkage latches the brake pedals in the brakes-applied position. This operates the brake metering valves, which supply pressure to the brakes.

The parking brake switch sends a signal to close the parking brake shutoff valve. The switch sends a parking brake set signal to the proximity switch electronics unit.

The parking brake switch also sends a signal to the parking brake repeater light on the external power panel.

The parking brake shutoff valve does not let brake pressure leak from the return of the normal antiskid valves.

The parking brake shutoff valve sends a signal to operate the parking brake light. The valve also sends a signal through the parking brake close sense relay to the antiskid/autobrake control unit.

A fully charged (3000 psi) brake accumulator keeps the brakes pressurized at least eight hours. Use chocks around both outboard main landing gear wheels when you park the airplane more than eight hours.

To release the parking brake, push the brake pedals until the parking brake lever moves down, then release the brake pedals. This sends brake metered pressure to the hydraulic system return through the brake metering valves.


**32-44-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# PARKING BRAKE SYSTEM - GENERAL DESCRIPTION

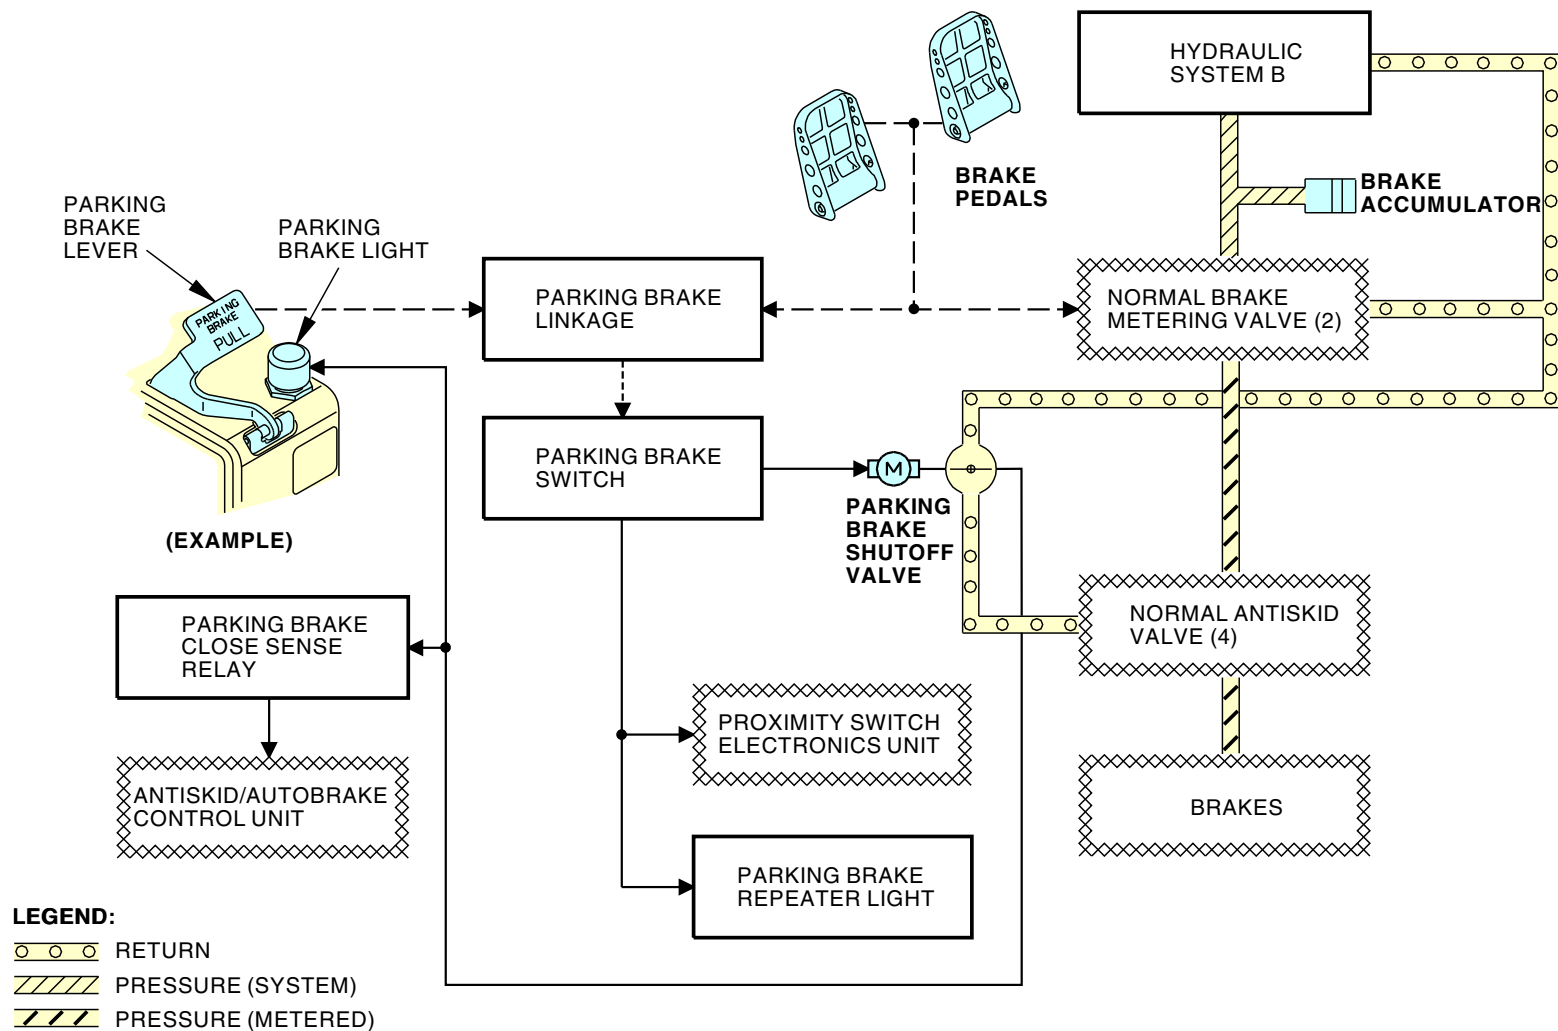

M85038 S0004627990\_V2

## PARKING BRAKE SYSTEM - GENERAL DESCRIPTION

32-44-00

32-44-00-002

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## PARKING BRAKE SYSTEM - LINKAGE

### Purpose

The parking brake linkage mechanically locks the brake pedals in the applied position.

These are the parking brake linkage components:

- Parking brake lever
- Parking brake switch
- Latch pawls (2)
- Return spring.

### Location

The parking brake linkage is in the forward equipment compartment below the captain brake pedals.

The parking brake switch is on the parking brake linkage.

### Functional Description

When you push the brake pedals and pull the parking brake lever up, these things occur:

- The brake pedals move the vertical control rods down
- The vertical control rods move the pawl stop down
- The parking brake lever moves the linkage and the bellcrank
- The bellcrank turns the latch pawl
- The latch pawl holds the pawl stop down when the brake pedals are released
- The parking brake switch moves to the closed position
- You can then release the parking brake lever
- This keeps the captain and first officer brake pedals in the applied position.

To release the parking brakes, momentarily push on the brake pedals. This moves the pawl stop down and the return spring turns the latch pawl. When you release the pedals, the pedals move to the brakes off position.


**32-44-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# PARKING BRAKE SYSTEM - LINKAGE

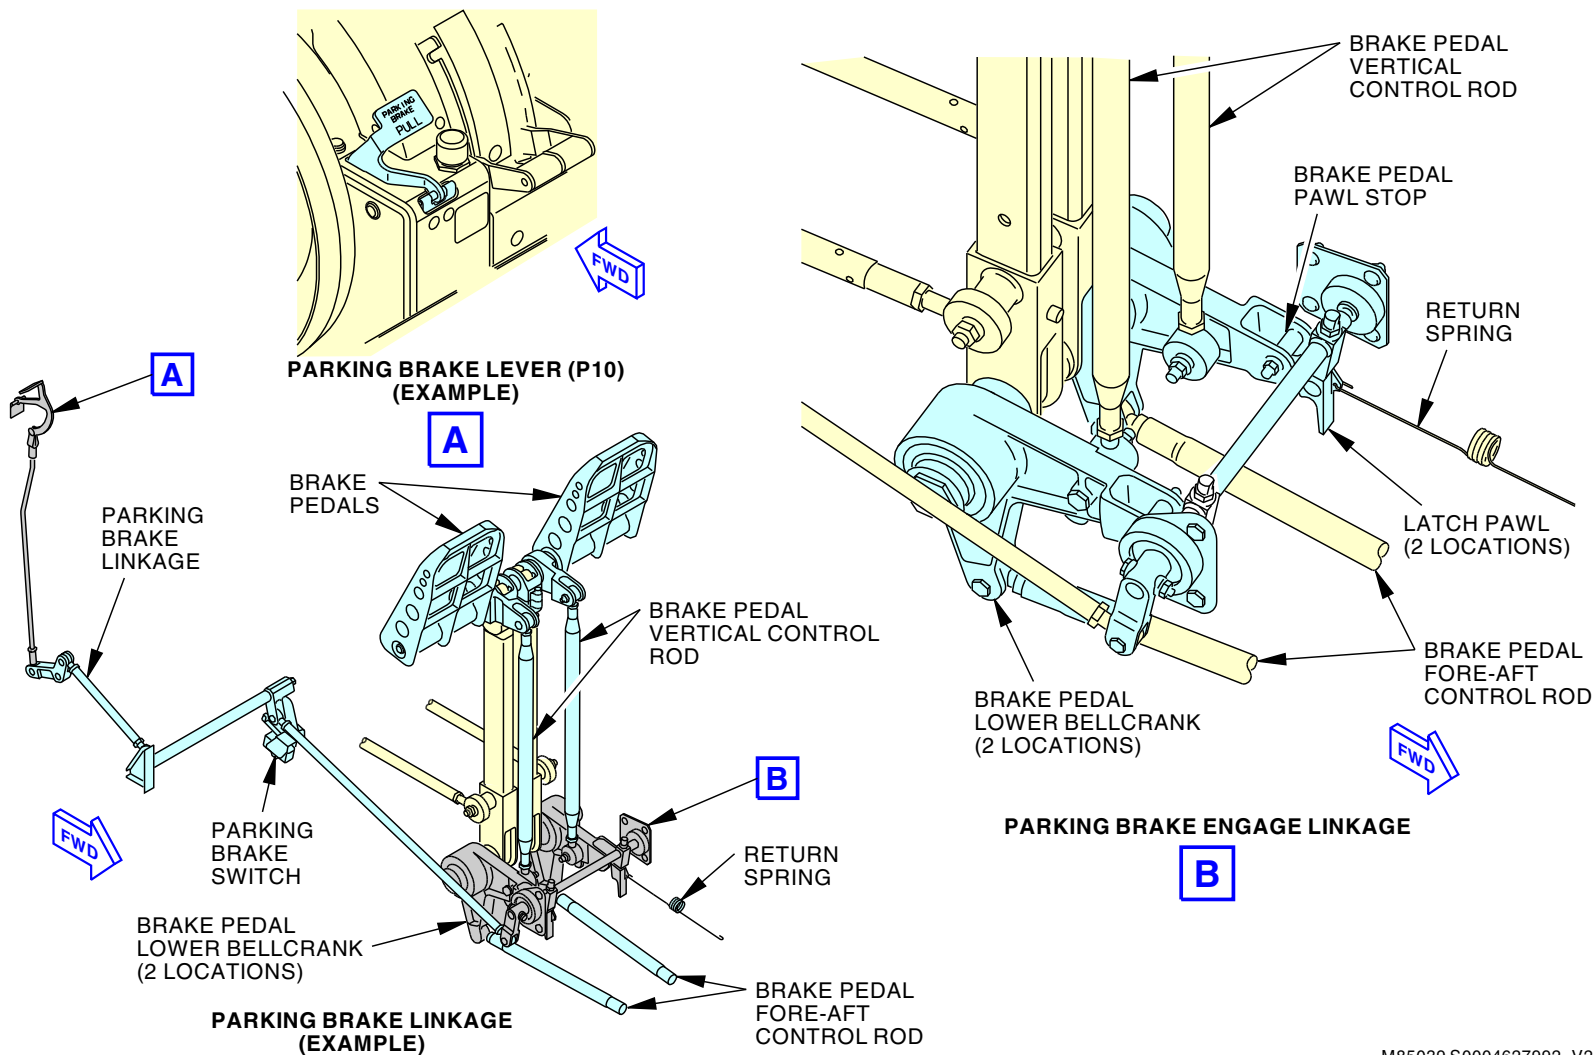

M85039 S0004627992\_V2

## PARKING BRAKE SYSTEM - LINKAGE

32-44-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**PARKING BRAKE SYSTEM - PARKING BRAKE SHUTOFF VALVE****Purpose**

The parking brake shutoff valve closes to prevent brake accumulator pressure leakage through the normal antiskid valve return.

**Location**

The parking brake shutoff valve is on the aft bulkhead of the main landing gear wheel well.

**Physical Description**


The valve is a 28v dc motor-operated valve. It has a manual override lever which shows the position of the valve and lets you move the valve manually. The nameplate on the motor shows the position of the manual override lever. The lever is in the open position when the lever is near the POSITION 1 or OPEN position on the nameplate. The lever is in the closed position when the lever is near the POSITION 2 or CLOSED position on the nameplate.

**Functional Description**

When the parking brake shutoff valve closes, it closes the return lines from the normal antiskid valves. This prevents brake system pressure loss caused by internal leakage in the normal antiskid valves.

An internal position switch in the valve sends a valve position signal to the parking brake close sense relay.

**PARKING BRAKE SYSTEM - PARKING BRAKE SHUTOFF VALVE**

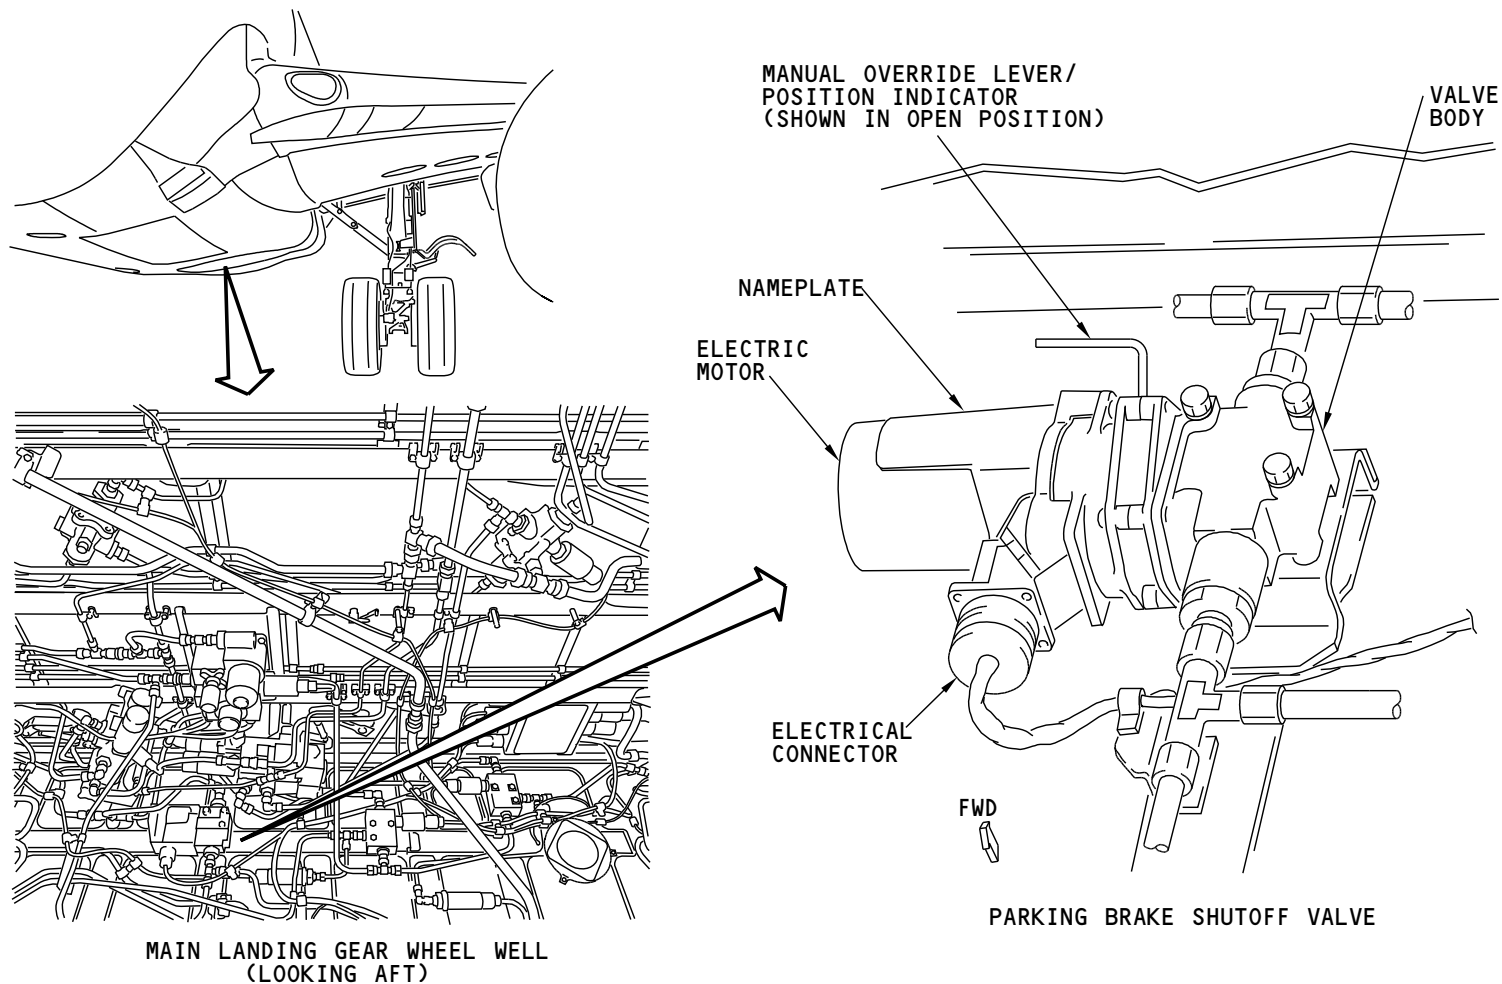

M85040 S0004627994\_V1

**PARKING BRAKE SYSTEM - PARKING BRAKE SHUTOFF VALVE**

**32-44-00**

**PARKING BRAKE SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL****General**

When you set the parking brake lever, the parking brake switch sends 28v dc power from the hot battery bus to close the parking brake shutoff valve. Limit switches in the parking brake shutoff valve remove power from the valve motor when the valve reaches the commanded position. A position switch in the valve sends valve position signals to the parking brake light and the antiskid system.

**Indication**

When the parking brake shutoff valve moves from the open position, the position switch in the parking brake shutoff valve sends a ground to the parking brake light. This makes the parking brake light come on.

You can push-to-test the parking brake light.

When the parking brake switch moves to the set position, it sends 28v dc power to the parking brake repeater light on the external power panel. This makes the parking brake repeater light come on.

The parking brake switch sends lever set and lever not set signals to the proximity switch electronics unit (PSEU). The PSEU operates the takeoff warning system when the parking brake is set during a takeoff. The PSEU sends a parking brake set and airplane on ground signal to other airplane systems.

See the takeoff warning system section for more information about the aural warning system. (SECTION 31-53)

See the air/ground system section for more information about the PSEU. (SECTION 32-09)

**Fault Monitoring**

When the valve moves to the closed position, a limit switch inside the valve sends 28v dc from the parking brake switch to energize the parking brake close sense relay. A valve position signal goes through the parking brake close sense relay to the antiskid/autobrake control unit (AACU). The AACU monitors the parking brake shutoff valve for failure.

See the antiskid/autobrake system section for more information about the AACU. (SECTION 32-42)

**32-44-00**


EFFECTIVITY

SIA ALL

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# PARKING BRAKE SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL

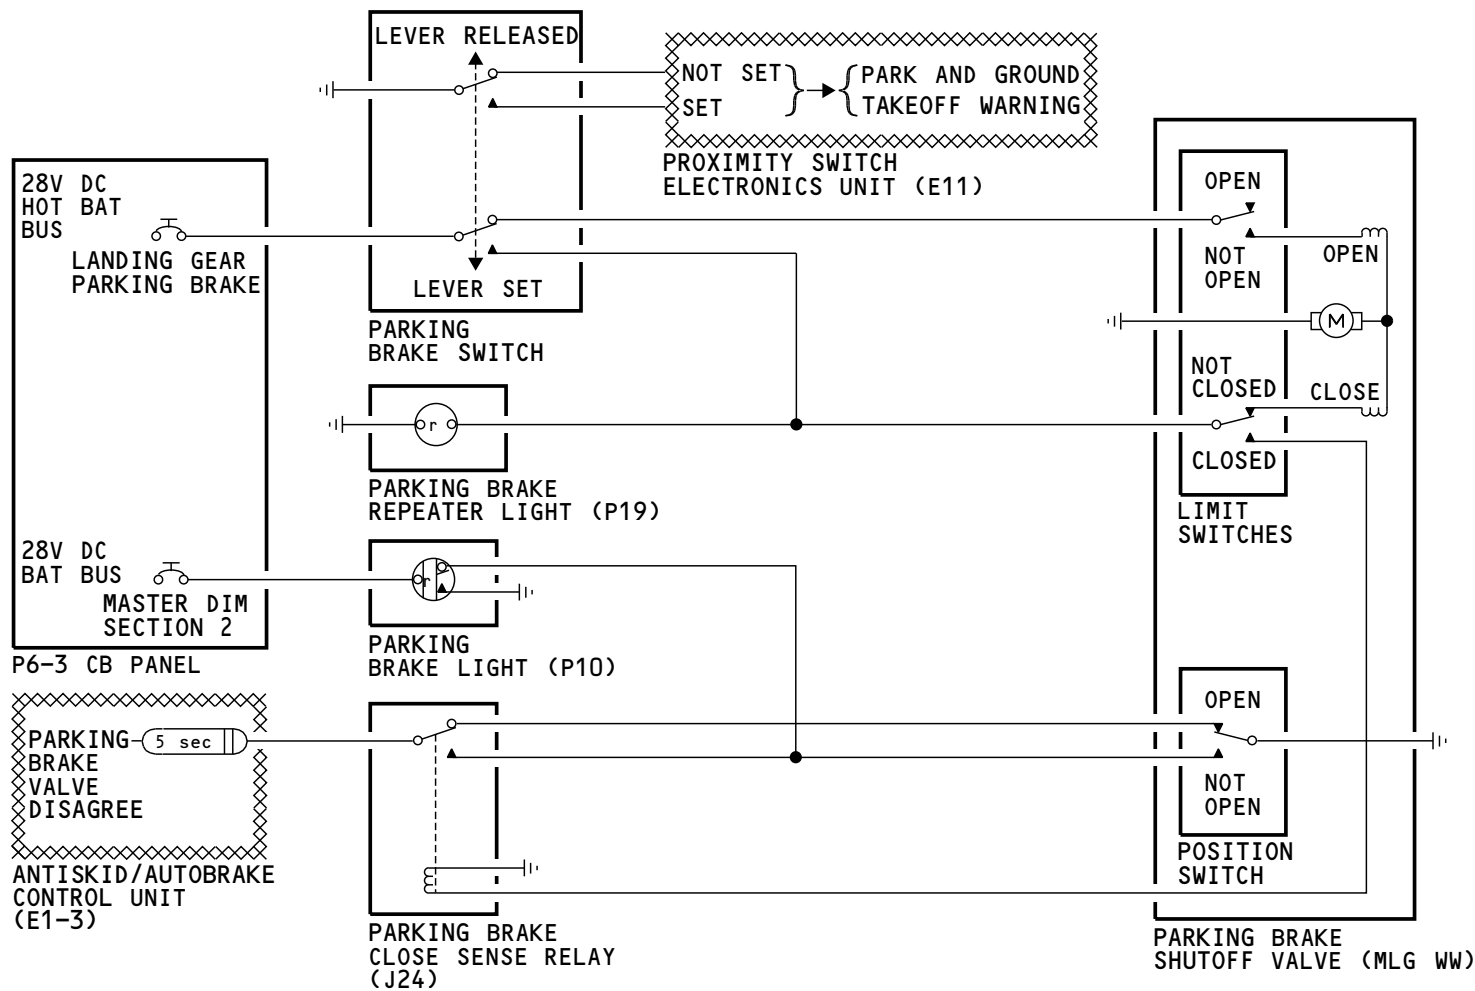

M85042 S0004627997\_V1

## PARKING BRAKE SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL

32-44-00-005

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-44-00





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-45-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## TIRES AND WHEELS - GENERAL DESCRIPTION

### Main Landing Gear

Each main landing gear has two tire and wheel assemblies.

### Nose Landing Gear

The nose landing gear has two tire and wheel assemblies.

### Nose Wheel Spin Brake

Nose wheel spin brakes stop nose wheel rotation during retraction when the nose wheels enter the wheel well.

### Training Information Point

Obey these warnings and cautions when you do maintenance on the tires and wheels.



YOU MUST DEFLATE THE TIRE BEFORE YOU REMOVE THE WHEEL AND TIRE ASSY. A DEFECTIVE WHEEL AND TIRE CAN EXPLODE IF YOU DO NOT DEFLATE THE TIRE BEFORE YOU REMOVE THE ASSEMBLY. INJURY TO PERSONS OR DAMAGE TO EQUIPMENT CAN OCCUR.



MAKE SURE ALL PERSONS ARE CLEAR OF THE INFLATION VALVE PATH. IF THE VALVE BLOWS OFF WHILE YOU REMOVE IT, INJURY TO PERSONS CAN OCCUR.



DO NOT INFLATE A TIRE TOO MUCH. IF YOU INFLATE A TIRE TOO MUCH, A TIRE AND/OR WHEEL FAILURE CAN OCCUR. THIS CAN CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.



DEFLATE THE TIRE BEFORE YOU REMOVE THE TIE BOLTS. AN EXPLOSIVE SEPARATION OF THE WHEEL HALVES COULD CAUSE INJURY OR DAMAGE.



YOU MUST INITIALLY INFLATE THE TIRE WITH NITROGEN. IF THE TIRE WAS INITIALLY INFLATED WITH AIR, THE GASES (IN A TIRE THAT HAS BECOME TOO HOT) COULD HAVE AN EXPLOSIVE MIXTURE WITH THE OXYGEN (IN THE AIR THAT WAS PUT IN THE TIRES). A TIRE EXPLOSION CAN CAUSE DAMAGE TO THE AIRPLANE AND/OR INJURY TO PERSONS.





MAKE SURE THE DIRECT READING GAGE IS CORRECTLY CALIBRATED AND HAS AN APPROVED DIAL. IF THE GAGE IS NOT ACCURATE, YOU CAN INFLATE THE TIRES TO AN INCORRECT PRESSURE. THIS CAN CAUSE DAMAGE TO THE TIRES.



DO NOT APPLY GREASE TO THE AREA BETWEEN THE AXLE BEARINGS. HIGH TEMPERATURES IN THIS AREA DURING A LANDING CAN CAUSE ALL GREASE IN THIS AREA TO BURN. THIS CAN CAUSE DAMAGE TO WHEELS, TIRES, AND BRAKES.

## TIRES AND WHEELS - GENERAL DESCRIPTION

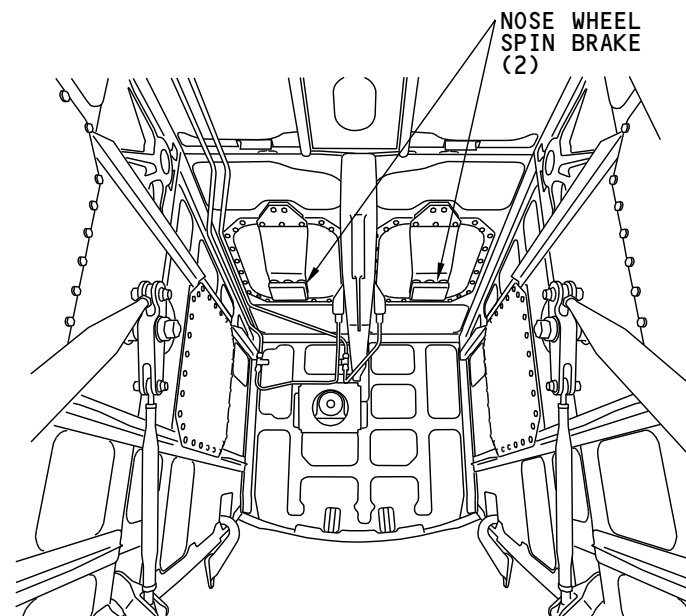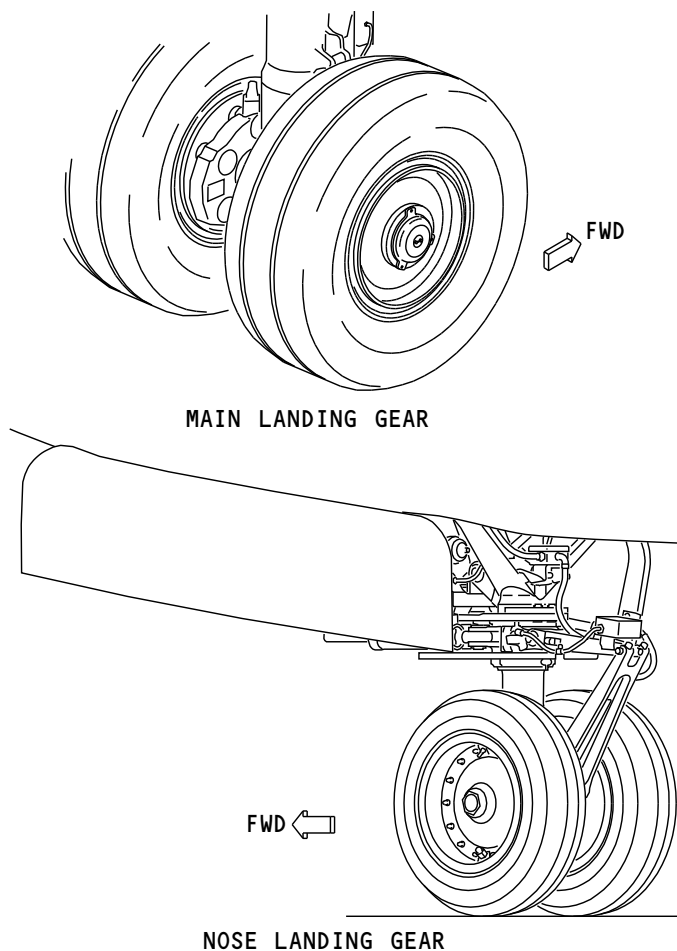

NOSE LANDING GEAR WHEEL WELL  
(LOOKING FORWARD)

M85043 S0004628001\_V1

## TIRES AND WHEELS - GENERAL DESCRIPTION

**32-45-00**

32-45-00-001

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-45-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## TIRES AND WHEELS - MAIN LANDING GEAR WHEEL AND TIRE

### Main Landing Gear Wheels

The main landing gear wheels are made of inner and outer wheel halves. Tie bolts hold the two halves together. Brake rotor drive keys and heat shields are in the inner half of each wheel.

Each wheel has these components:

- Tire inflation valve
- Over pressure relief valve
- Thermal fuse plugs.

### Tire Inflation Valve

A tire inflation valve is in the inner wheel half.

### Over Pressure Relief Valve

An over pressure relief valve is in the inner wheel half. The relief valve releases all of the pressure in the tire when the pressure increases more than 375-450 psi. The over pressure relief valve must be replaced if it releases pressure.

### Thermal Fuse Plugs

Thermal fuse plugs in the inner wheel half prevent tire explosion caused by hot brakes. The plugs melt to release tire pressure at approximately 390F (199C). The fuse plug must be replaced if it melts.

### Main Landing Gear Tires

Main landing gear tires are H44.5 x 16.5-21 with a 28 bias ply rating.

Main landing gear tires are H44.5 x 16.5R-21 with a 30 radial ply rating.

### Training Information Point

The tire will last longer if you maintain the proper tire pressure at all times.

If you use dry air to inflate the tire, make sure the oxygen content does not exceed 5%.

If the measured tire pressure is below the selected nominal service pressure by no more than 5%, inflate the tire to the necessary pressure.

If the tire pressure is between 5% - 10% below the selected nominal service tire pressure, inflate the tire and check it again after 24 hours. If the tire pressure is more than 5% below the selected nominal service pressure again, replace the tire.

If the measured tire pressure is between 10% - 20% below the selected nominal service tire pressure, remove and replace the wheel and tire assembly.

If the measured tire pressure is more than 20% below the selected nominal service tire pressure, replace the tire and wheel assembly. If the wheel and tire assembly has turned with airplane weight on it after the pressure had decreased, replace the wheel and tire assembly installed on the opposite side of that axle.

When you assemble a main landing gear wheel, make sure the inflation valve, which is on the inner wheel half, is aligned with the correct ventilation hole in the outer wheel half. The correct ventilation hole in the outer wheel half has the word VALVE on the wheel next to the hole. This makes sure that the valve aligns correctly with the valve access hole in the outboard hubcap.



**WARNING**

REMOVE ONLY ONE WHEEL AND TIRE ASSEMBLY FROM THE MAIN LANDING GEAR AT A TIME. IF YOU REMOVE THE TWO WHEEL AND TIRE ASSEMBLIES AT THE SAME TIME, STRUCTURAL DAMAGE AND INJURY TO PERSONS CAN OCCUR IF THE AIRPLANE FALLS.



**CAUTION**

MAKE SURE THAT THE WHEEL THAT YOU INSTALL IS FROM THE SAME MANUFACTURER AS THE BRAKE. DAMAGE CAN OCCUR IF YOU INSTALL A WHEEL FROM A DIFFERENT MANUFACTURER THAN THE BRAKE.

# 32-45-00


| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## TIRES AND WHEELS - MAIN LANDING GEAR WHEEL AND TIRE

**CAUTION**

MAKE SURE THE BRAKE ROTORS ARE ALIGNED. DAMAGE TO THE ROTORS CAN OCCUR IF THE DRIVE KEYS ON THE WHEEL HIT ROTORS DURING INSTALLATION.

### TIRES AND WHEELS - MAIN LANDING GEAR WHEEL AND TIRE

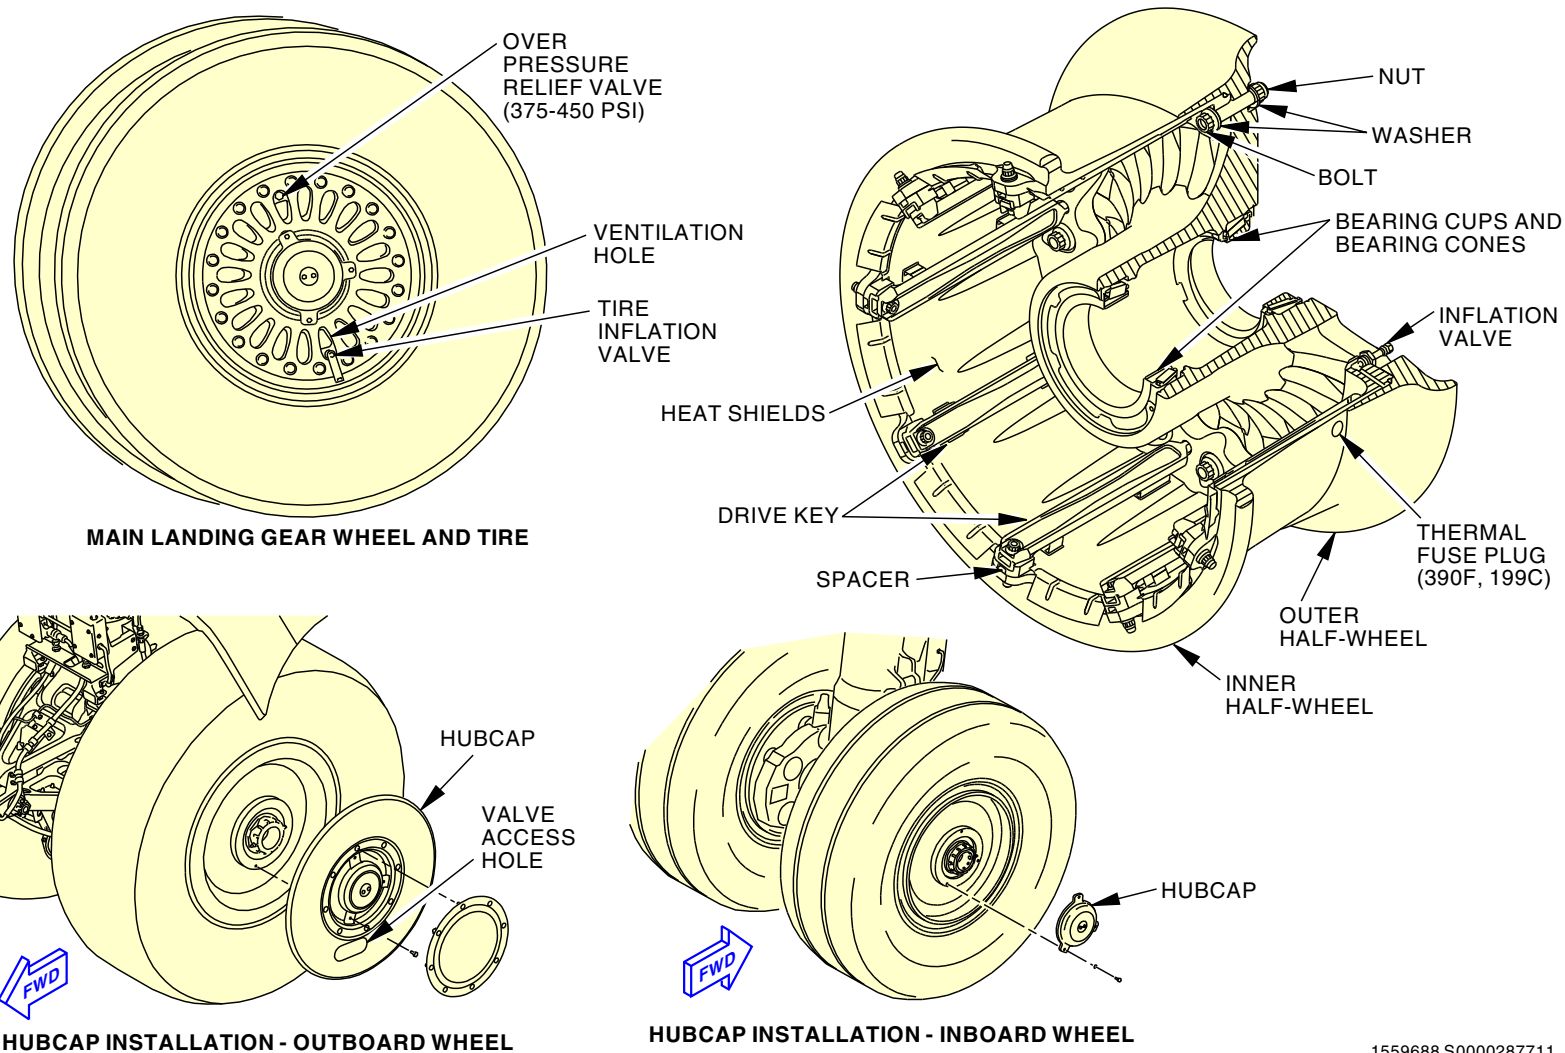

1559688 S0000287711\_V2

### TIRES AND WHEELS - MAIN LANDING GEAR WHEEL AND TIRE

**32-45-00**

32-45-00-002

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## TIRES AND WHEELS - NOSE LANDING GEAR WHEEL AND TIRE

### Nose Landing Gear Wheels

The nose landing gear wheels are made of inner and outer wheel halves. Tie bolts hold the two halves together.

Each wheel has these components:

- Tire inflation valve
- Over pressure relief valve.

### Tire Inflation Valve

A tire inflation valve is in the outer wheel half.

### Over Pressure Relief Valve

An over pressure relief valve is in the outer wheel half. The relief valve releases all of the pressure in the tire when the pressure is more than 375-450 psi. The over pressure relief valve must be replaced if it releases pressure.

### Nose Landing Gear Tires

Nose landing gear tires are 27 x 7.75-R15 with a 12 radial ply rating.



#### **WARNING**

IT IS RECOMMENDED THAT YOU REMOVE ONLY ONE WHEEL AND TIRE ASSEMBLY FROM THE NOSE LANDING GEAR AT A TIME. IF YOU REMOVE THE TWO WHEEL AND TIRE ASSEMBLIES AT THE SAME TIME, STRUCTURAL DAMAGE AND INJURY TO PERSONS CAN OCCUR IF THE AIRPLANE FALLS.

# 32-45-00


SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TIRES AND WHEELS - NOSE LANDING GEAR WHEEL AND TIRE**

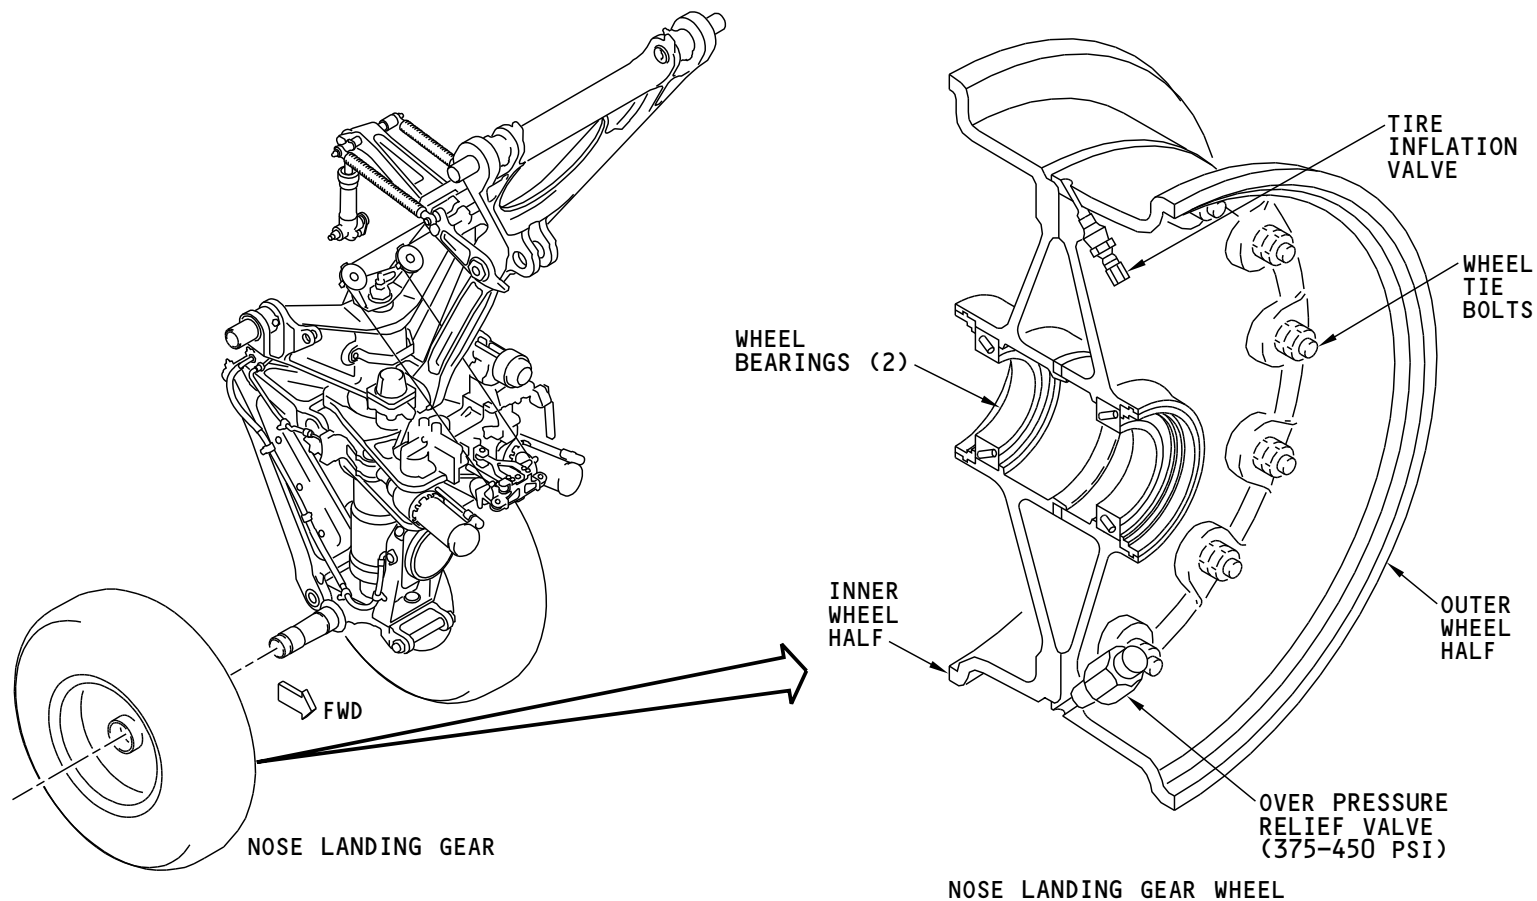

M85048 S0004628008\_V1

**TIRES AND WHEELS - NOSE LANDING GEAR WHEEL AND TIRE**

**32-45-00**

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## TIRES AND WHEELS - NOSE LANDING GEAR WHEEL SPIN BRAKE

**Purpose**

Two nose wheel spin brakes use friction with the nose tires to stop nose wheel rotation after the nose landing gear retracts into the wheel well.


**Physical Description**

The nose wheel spin brake assemblies attach to spring supports in the upper forward nose landing gear wheel well.

You can replace the wear pads on each assembly. The wear pads do not have asbestos in the pads.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## TIRES AND WHEELS - NOSE LANDING GEAR WHEEL SPIN BRAKE

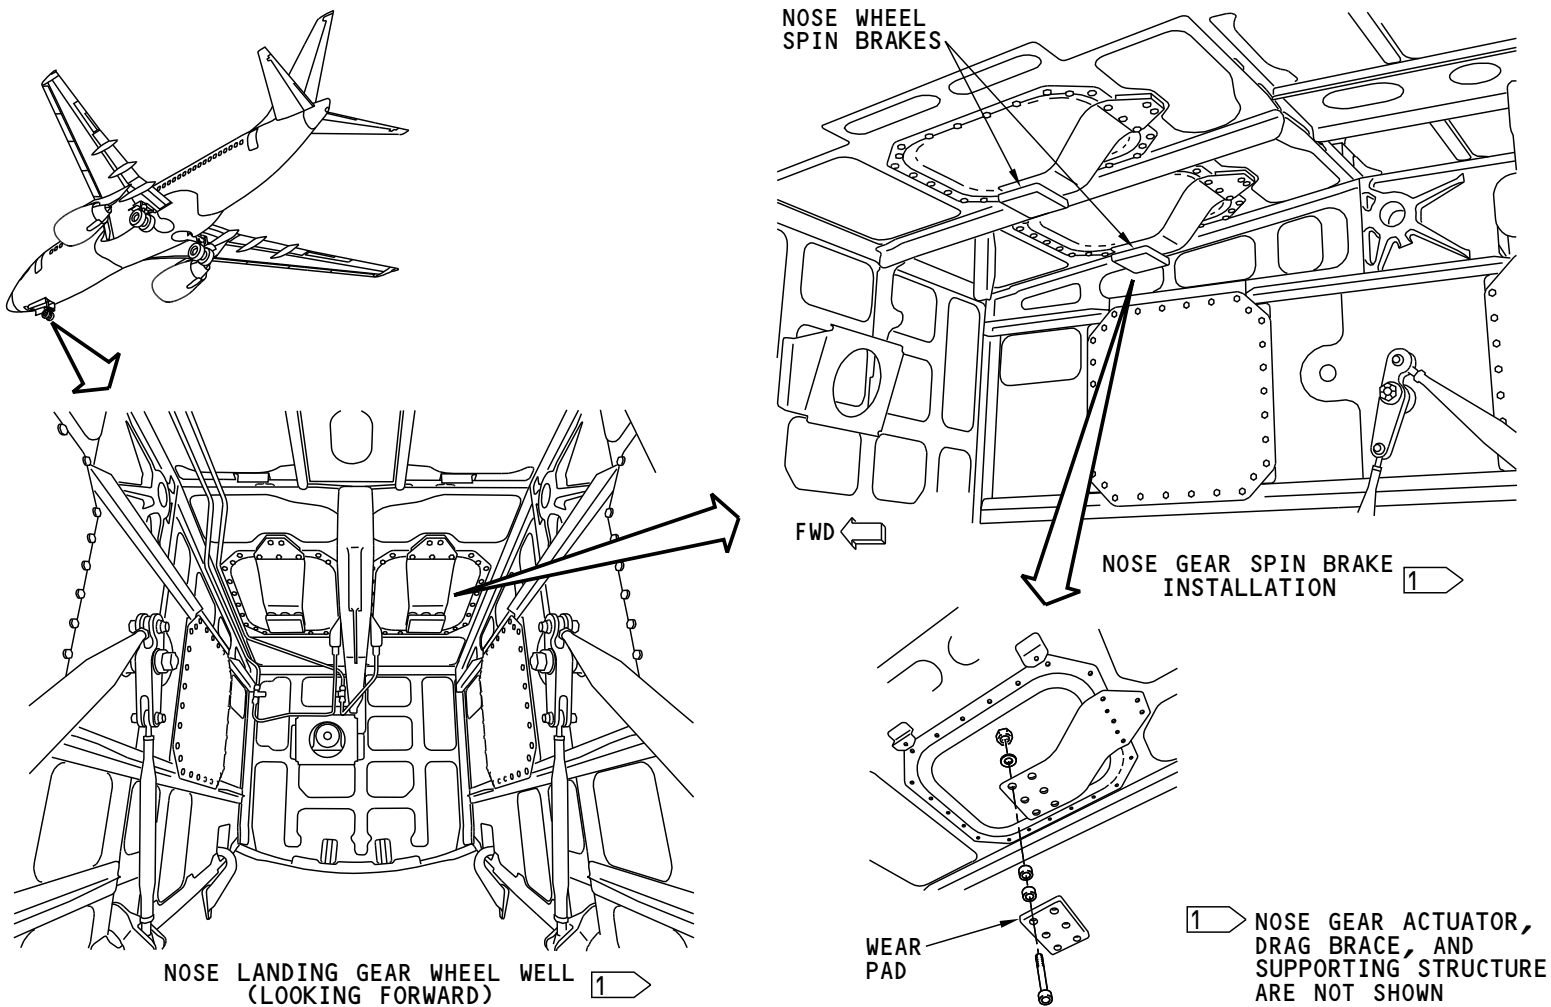

M85050 S0004628011\_V1

## TIRES AND WHEELS - NOSE LANDING GEAR WHEEL SPIN BRAKE

32-45-00





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-46-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## BRAKE TEMPERATURE MONITORING SYSTEM - INTRODUCTION

### Purpose

The brake temperature monitoring system monitors the temperature of each main landing gear brake.


### Brake Temperature Indication

Brake temperature shows on the lower systems display unit.

An amber BRAKE TEMP light gives the indication of a high brake temperature condition.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

# BRAKE TEMPERATURE MONITORING SYSTEM - INTRODUCTION

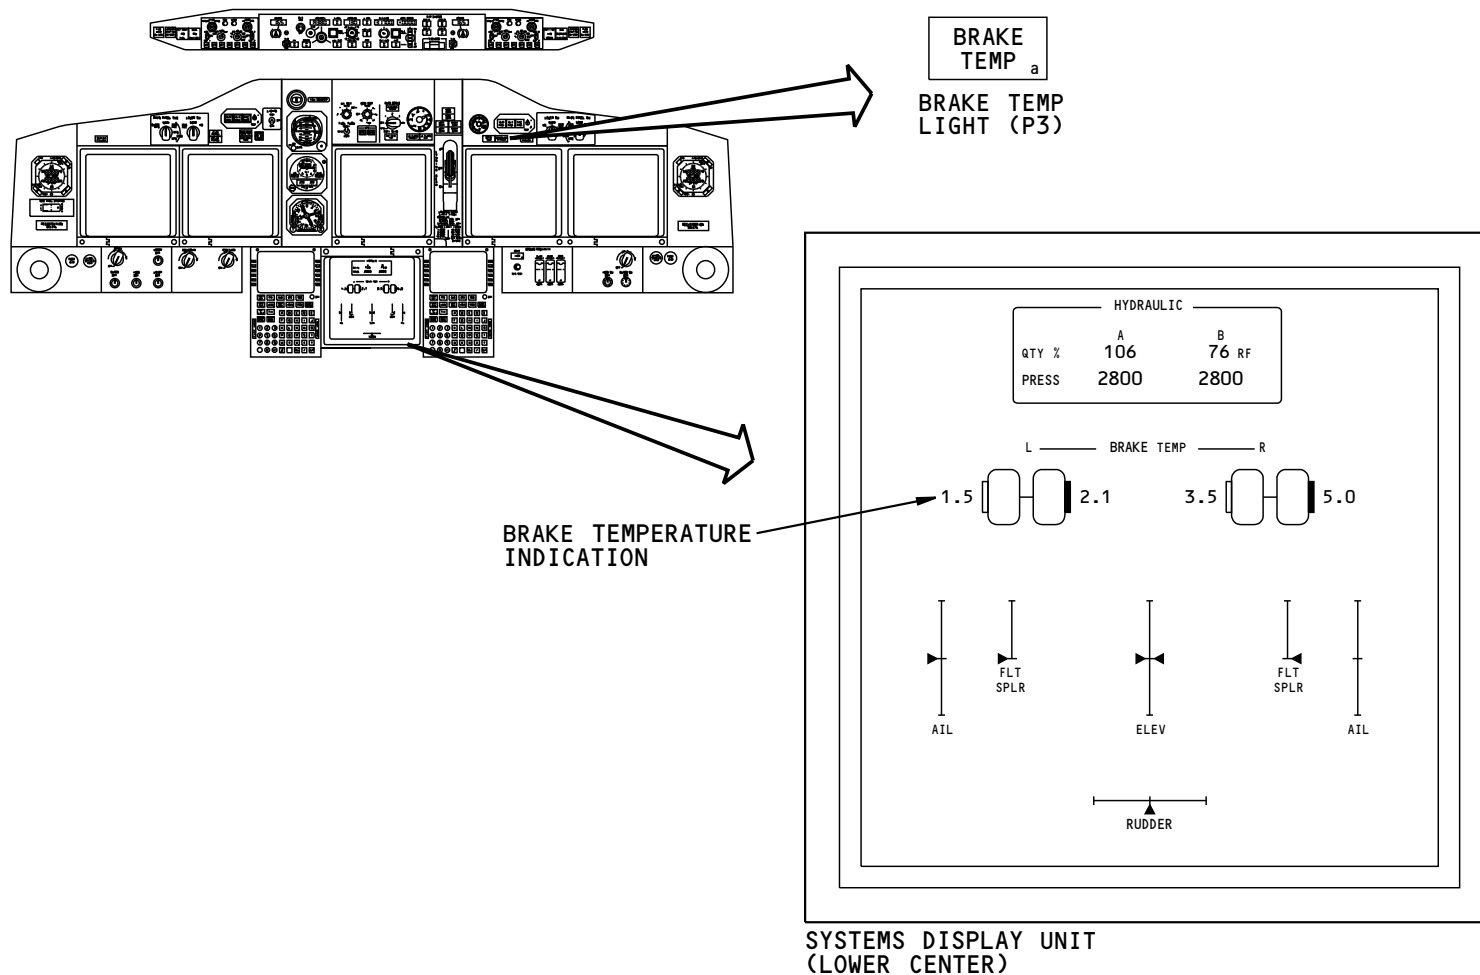

M62089 S000099321\_V1

## BRAKE TEMPERATURE MONITORING SYSTEM - INTRODUCTION

32-46-00-001

| EFFECTIVITY |
|-------------|
| SIA ALL     |

32-46-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**BRAKE TEMPERATURE MONITORING SYSTEM - GENERAL DESCRIPTION****Purpose**

The brake temperature monitoring system monitors the temperature of each main landing gear brake, provides a temperature indication of each main gear brake, and warns of brake high temperature conditions.


**Components**

These are the brake temperature monitoring system components:

- Temperature sensor (4)
- Brake temperature monitoring unit
- Brake temperature display
- BRAKE TEMP light.

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

## BRAKE TEMPERATURE MONITORING SYSTEM - GENERAL DESCRIPTION

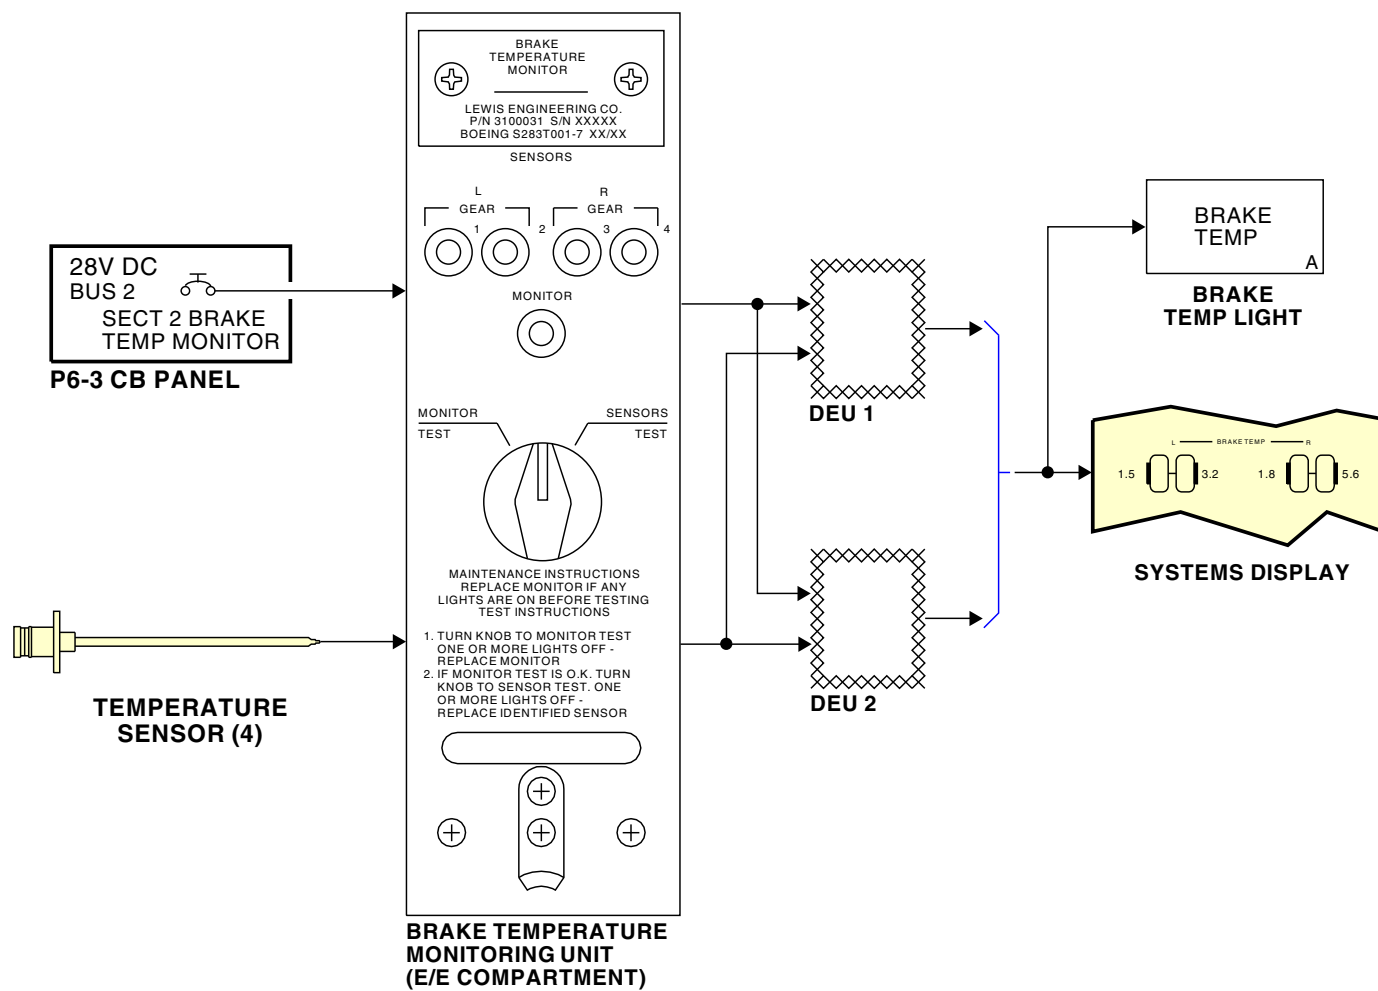

M85051 S0004628015\_V2

## BRAKE TEMPERATURE MONITORING SYSTEM - GENERAL DESCRIPTION

32-46-00

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



**BRAKE TEMPERATURE MONITORING SYSTEM - TEMPERATURE SENSOR**

**Purpose**

The brake temperature sensors supply brake temperature data to the brake temperature monitoring unit (BTMU).

**Location**

There are four brake temperature sensors. Each main landing gear brake has a sensor in the brake housing.

**Physical Description**

The brake temperature sensors are at the 5:00 position in each brake with two bolts. The sensor assembly consists of the bi-metal thermocouple, mounting flange, and connector.

The brake temperature sensors are capable of brake temperature measurement from 100F to 1200F.

The sensors are interchangeable between brakes. The sensors are not adjustable.

**Functional Description**

The brake temperature sensors supply analog signals to the BTMU.


32-46-00-003

|         |              |
|---------|--------------|
| SIA ALL | EFFECTIVITY  |
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-46-00**

**BRAKE TEMPERATURE MONITORING SYSTEM - TEMPERATURE SENSOR**

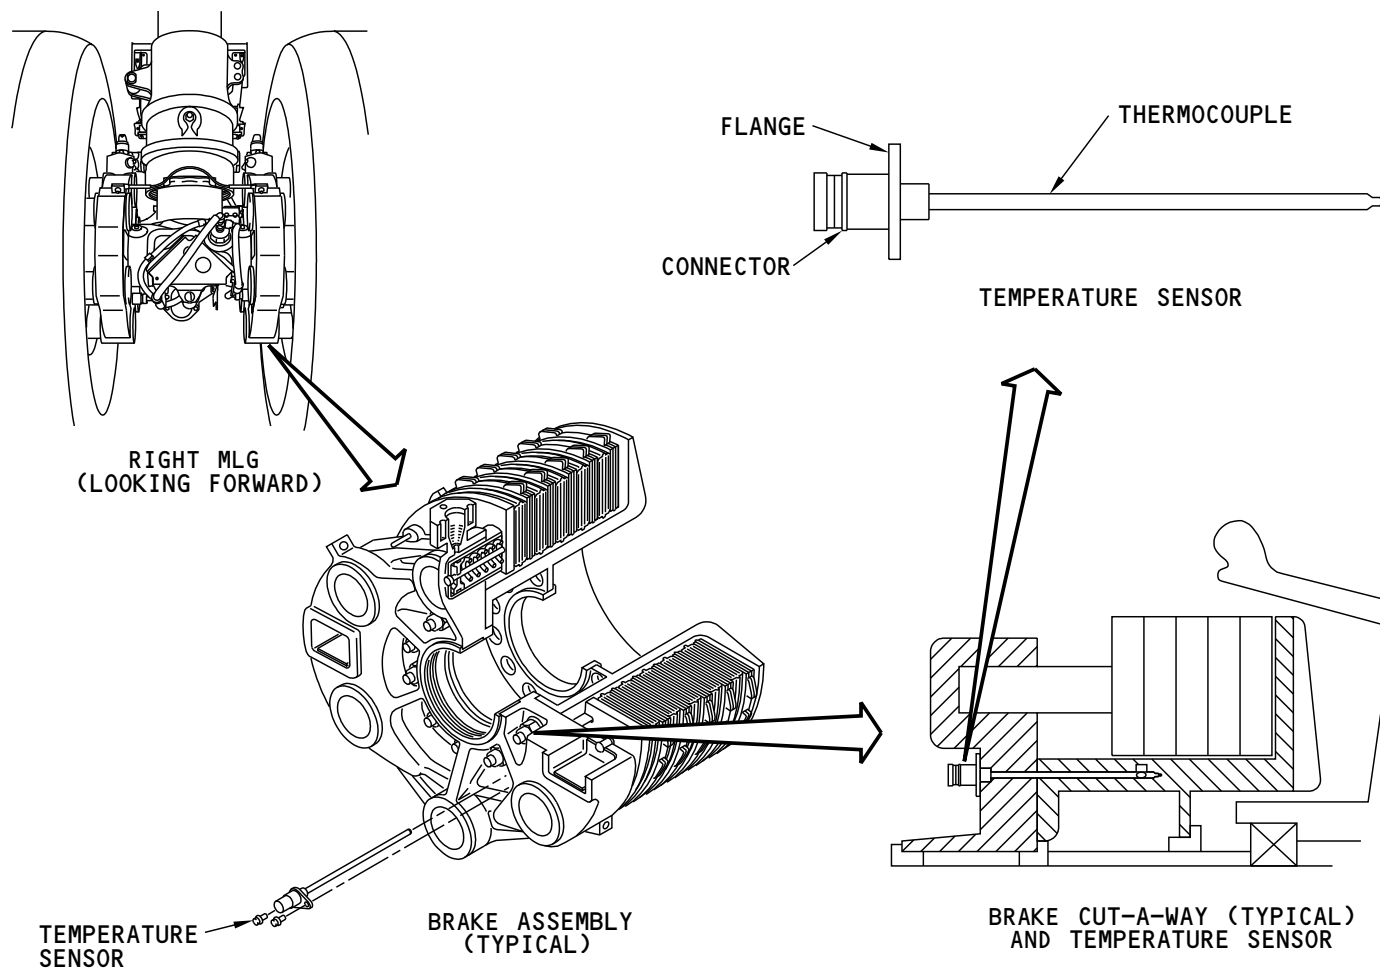

M85052 S0004628017\_V1

**BRAKE TEMPERATURE MONITORING SYSTEM - TEMPERATURE SENSOR**

32-46-00-003

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-46-00**

**BRAKE TEMPERATURE MONITORING SYSTEM - BRAKE TEMPERATURE MONITORING UNIT****Purpose**

The brake temperature monitoring unit (BTMU) receives inputs from the brake temperature sensors and supplies an analog signal to the two display electronic units (DEUs).

**Location**

The BTMU is in the E/E compartment.

**Physical Description**

The BTMU contains two circuit cards, five LEDs and a rotary test switch, which are used for the built-in test equipment (BITE) function of the unit.


**Functional Description**

The BTMU receives analog inputs from the brake temperature sensors. The signal is converted by the BTMU to a dc voltage proportional to the brake temperature and supplied to both DEUs to show on the lower center systems display unit.

Built-in test functions let you do a self-test of the BTMU, and test the brake sensor circuit.

|         |             |
|---------|-------------|
| SIA ALL | EFFECTIVITY |
|---------|-------------|

## BRAKE TEMPERATURE MONITORING SYSTEM - BRAKE TEMPERATURE MONITORING UNIT

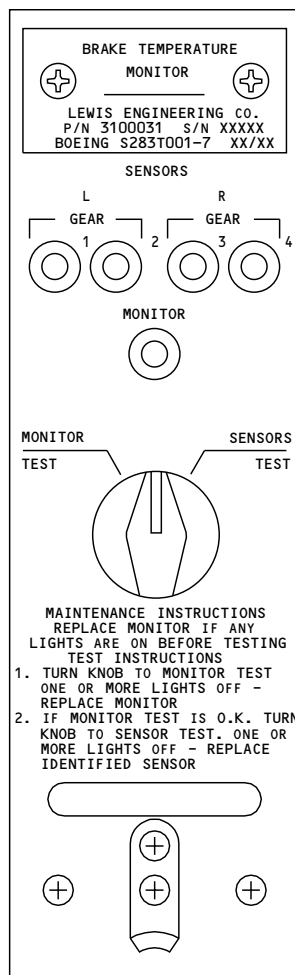

M85053 S0004628019\_V1

## BRAKE TEMPERATURE MONITORING SYSTEM - BRAKE TEMPERATURE MONITORING UNIT

32-46-00-004

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# 32-46-00



**BRAKE TEMPERATURE MONITORING SYSTEM - CONTROLS AND INDICATIONS**

**Purpose**

Brake temperature for each main landing gear wheel is shown by a two-digit number, with a range between 0.0 (100F) and 9.9 (1200F). When the brake temperature is more than 5.0, an amber BRAKE TEMP light comes on.

**Location**

The brake temperature display is on the lower central display unit. To see the display, push the SYS display button on the P2 panel.

The amber BRAKE TEMP light is on the P3 panel.

**Functional Description**


The hottest brake on each main landing gear, if less than 5.0 and equal to or more than 2.5 shows by a solid white normal brake symbol.

If any brake temperature is more than 5.0, the brake temp display and the warm brake symbol turn amber. This shows a hot brake condition. The amber symbol turns off if the brake temperature decreases to less than 3.5.

An amber BRAKE TEMP light turns on when any brake temperature is more than 5.0, and turns off when all brake temperatures decrease to less than 3.5. Brake temperature equal to or more than 5.0 show that wheel fuse plugs may melt.

|             |  |
|-------------|--|
| EFFECTIVITY |  |
| SIA ALL     |  |

# BRAKE TEMPERATURE MONITORING SYSTEM - CONTROLS AND INDICATIONS

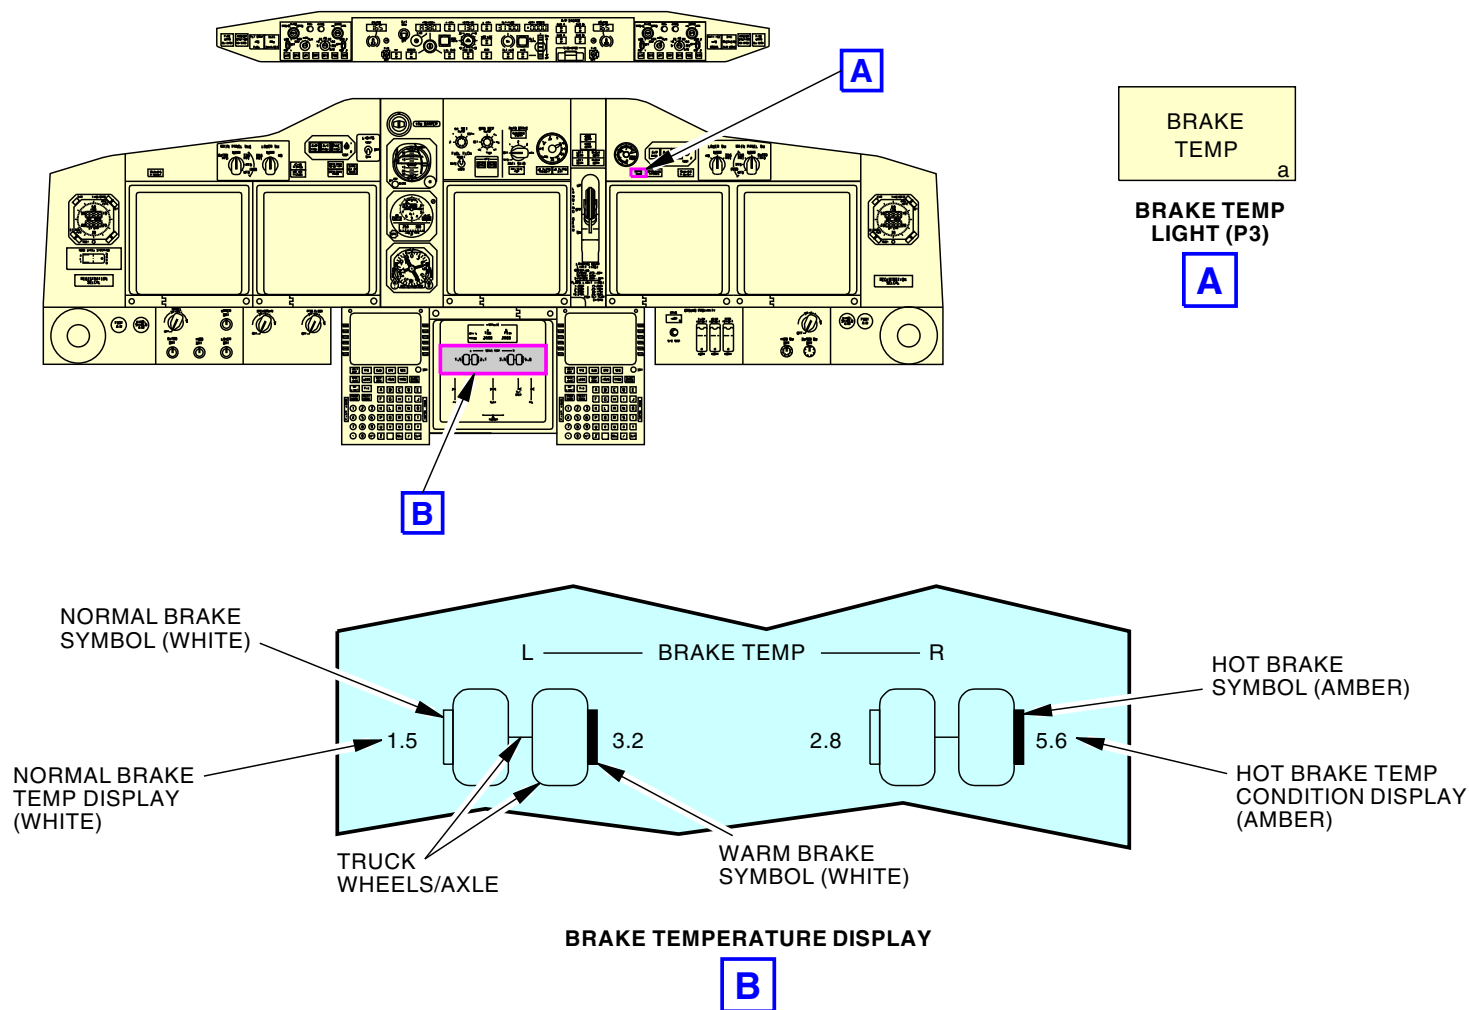

M85055 S0004628022\_V3

## BRAKE TEMPERATURE MONITORING SYSTEM - CONTROLS AND INDICATIONS

32-46-00

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**BRAKE TEMPERATURE MONITORING SYSTEM - FUNCTIONAL DESCRIPTION****Purpose**

The brake temperature monitoring system monitors the temperature of each main landing gear brake. Brake temperature shows on the lower systems display unit. The brake temperature monitoring system also controls an amber BRAKE TEMP light when one of the temperature indications is more than 5.0.

**Functional Description**


Four brake temperature sensors send signals to the brake temperature monitoring unit (BTMU). The BTMU processes the inputs and sends signals to the display electronic units (DEUs).

The DEUs send signals to the lower systems display unit for temperature indications. The DEUs also control the amber BRAKE TEMP light.

The amber BRAKE TEMP light comes on when any of the brake temperature indications are equal to or more than 5.0. The light turns off when all of the brake temperature indications are less than 3.5. High brake temperature will cause a main wheel fuse plug to melt.

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

**BRAKE TEMPERATURE MONITORING SYSTEM - FUNCTIONAL DESCRIPTION**

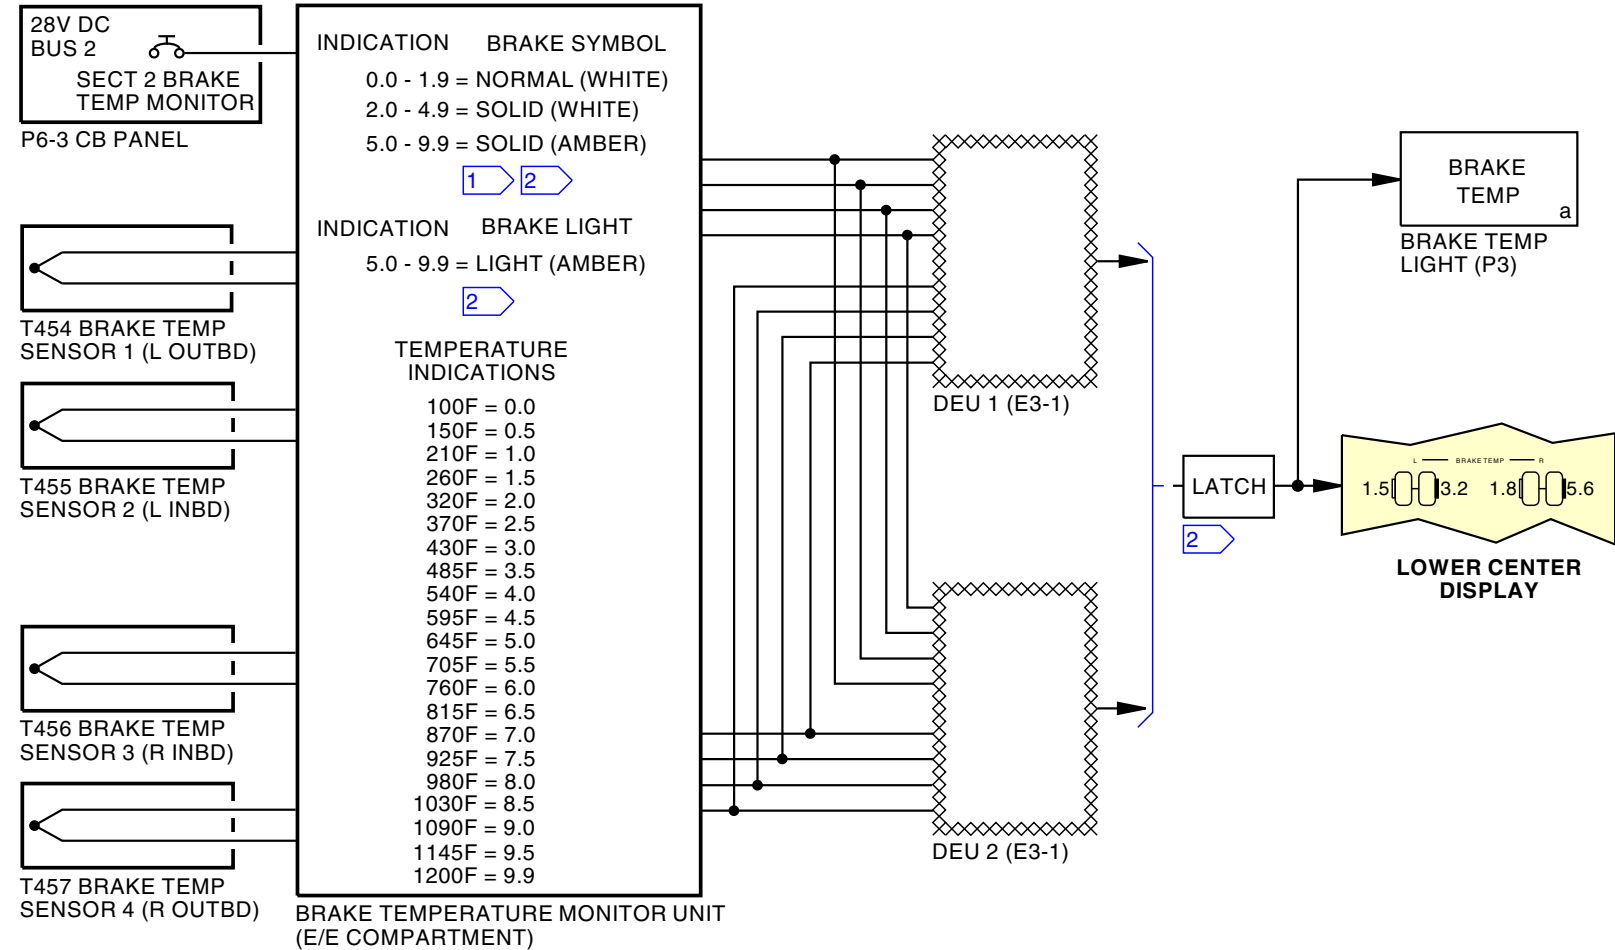

- 1 TEXT GROUP SAME COLOR AS SYMBOL COLOR
- 2 LATCH RESETS WHEN ALL BRAKE TEMP INDICATIONS < 3.5

M85056 S0004628024\_V3

**BRAKE TEMPERATURE MONITORING SYSTEM - FUNCTIONAL DESCRIPTION**

**BRAKE TEMPERATURE MONITORING SYSTEM - TRAINING INFORMATION POINT - BTMU BITE****GENERAL**

These are the functions you can do with the BITE of the brake temperature monitoring unit (BTMU):

- Monitor Test
- Sensor Test.

The BITE instructions are on a placard on the front of the BTMU.

**Monitor Test**




In the monitor test position, the BTMU does a self-test and turns on the five red LEDs, the BRAKE TEMP light, and supplies an indication of 5.0 or above for each brake on the systems display. When the switch is released, the lights turn off and the indication returns to normal.

**Sensor Test**

In the sensor test position, the BTMU turns on the five red LEDs. This shows that the sensor circuit is complete. When you release the switch, the five LEDs turn off.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

# BRAKE TEMPERATURE MONITORING SYSTEM - TRAINING INFORMATION POINT - BTMU BITE

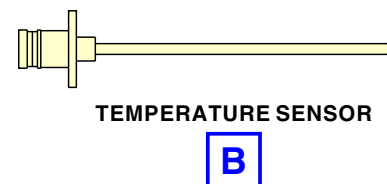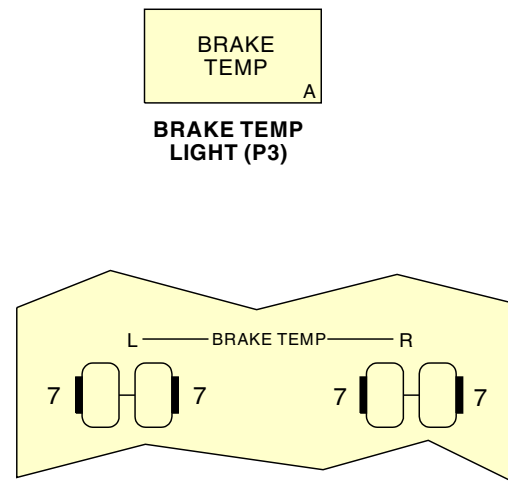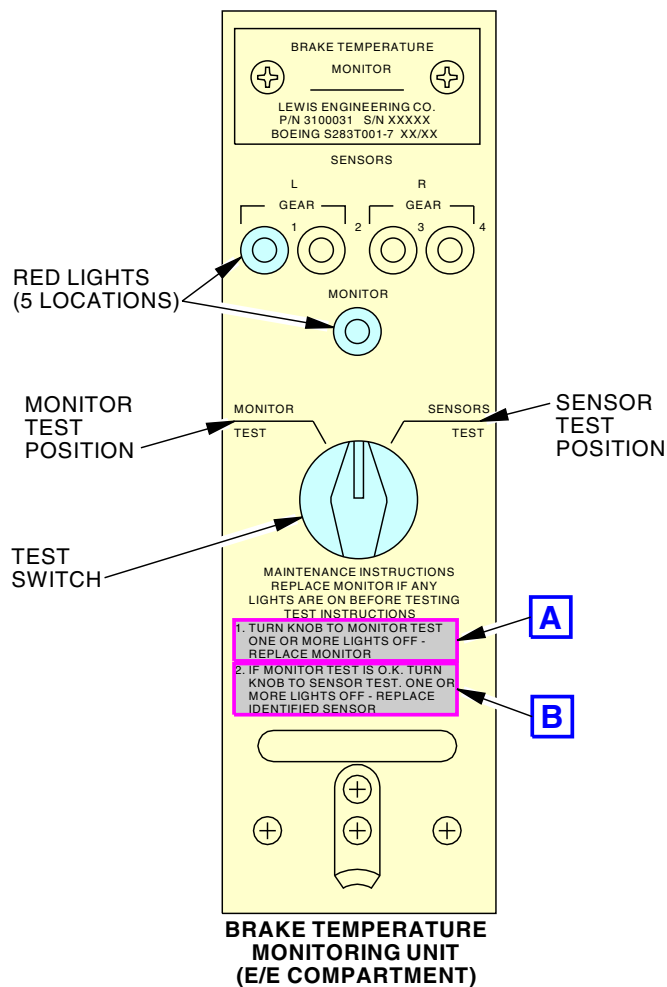

M85057 S0004628026\_V2

## BRAKE TEMPERATURE MONITORING SYSTEM - TRAINING INFORMATION POINT - BTMU BITE

32-46-00-007

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-46-00





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-51-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## NOSE WHEEL STEERING SYSTEM - GENERAL DESCRIPTION

### Purpose

The nose wheel steering system supplies the ground directional control of the airplane.

### General Description

Steering inputs are from the steering wheels or the rudder pedals. When you move the captain or first officer steering wheel full travel, the nose wheels turn a maximum of 78 degrees in the left or right direction. When you move the rudder pedals full travel on the ground, the nose wheels turn a maximum of 7 degrees in the left or right direction. Steering inputs from the steering wheels or rudder pedals go to the metering valve through a cable loop.

- Nose air/ground system in ground mode.

The steering metering valve supplies right turn or left turn pressure to the steering actuators.

The rotary actuator disconnects the rudder pedal input in the air.



#### CAUTION

DO NOT OPERATE THE STEERING WHEEL WITH THE SHOCK STRUT FULLY EXTENDED AND THE TORSION LINKS CONNECTED. DAMAGE TO THE CENTERING CAMS OF THE SHOCK STRUT CAN OCCUR. IF IT IS NECESSARY TO OPERATE THE STEERING SYSTEM, MAKE SURE THAT YOU COMPRESS THE SHOCK STRUT TO 2.10 INCHES OR MORE. MAKE SURE THAT THE DISTANCE BETWEEN THE BOTTOM SURFACE OF THE LOWER STEERING PLATE AND THE TOP SURFACE OF THE TOWING LUG IS LESS THAN 21.90 INCHES.

Hydraulic system A usually supplies pressure to extend and retract the main landing gear. The extend pressure from the landing gear extension and retraction system supplies pressure for nose wheel steering.

The landing gear transfer valve changes the pressure supply of nose wheel steering from hydraulic system A to hydraulic system B. You manually control the landing gear transfer valve with the alternate nose wheel steering switch in the flight compartment.

These conditions cause the manual operation of the landing gear transfer valve:

- Alternate nose wheel steering switch to the alternate position
- Normal quantity in system B reservoir


# 32-51-00

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# NOSE WHEEL STEERING SYSTEM - GENERAL DESCRIPTION

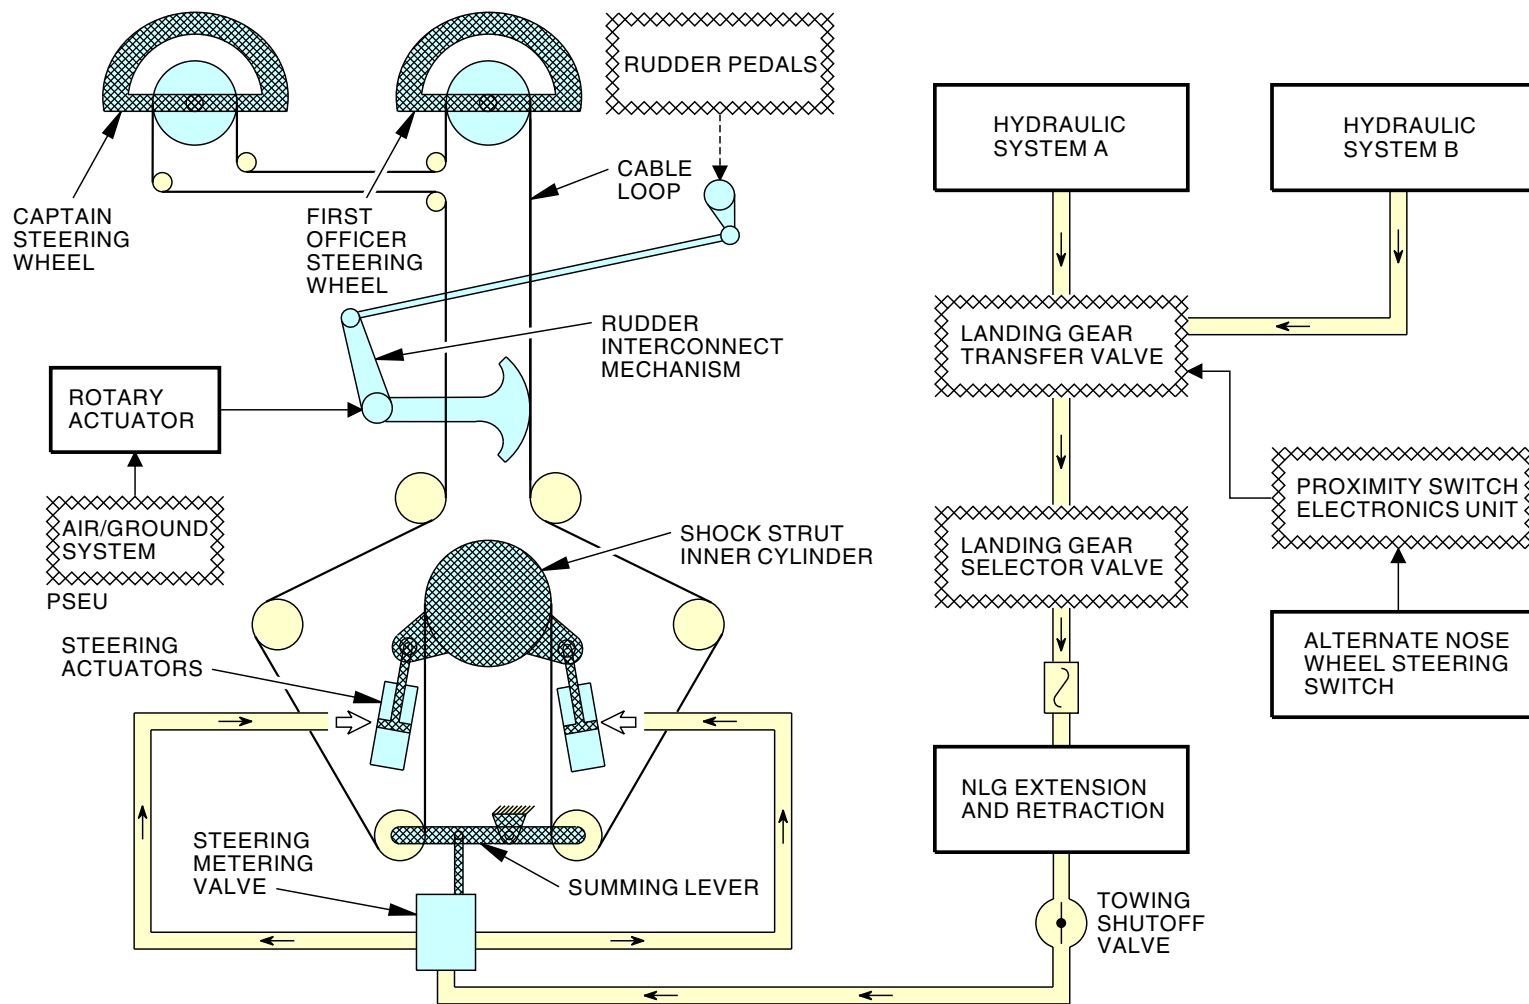

M84912 S0004628031\_V2

# NOSE WHEEL STEERING SYSTEM - GENERAL DESCRIPTION

32-51-00-001

| SIA ALL | EFFECTIVITY |
|---------|-------------|
|         |             |

32-51-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## NOSE WHEEL STEERING SYSTEM - COMPONENT LOCATION

### General

The components of the nose wheel steering system are in the flight compartment and the nose landing gear wheel well.

### Flight Compartment Components

These are the nose wheel steering components in the flight compartment:

- Alternate nose wheel steering switch
- Steering wheel (2)
- Control cables
- Rudder Pedals

### Nose Landing Gear Wheel Well Components

These are the nose wheel steering components in the nose landing gear wheel well:

- Control cables
- Rudder pedal steering mechanism
- Rudder pedal steering rotary actuator
- Summing mechanism
- Steering metering valve module
- Steering actuators (2)
- Nose wheel steering collar
- Towing shutoff valve

### Location

The alternate nose wheel steering switch is on the captain forward instrument panel.

The steering wheels are on the sidewall panel below the captain and first officer number 2 window.


The rudder pedal steering mechanism and rotary actuator are below the flight compartment floor on the left side. You get access to them through a removable panel in the left side of the nose landing gear wheel well.

The control cables go from the steering wheels, through the rudder pedal steering mechanism, and down to the summing mechanism on the nose landing gear.

These are the components on the nose landing gear:

- Summing mechanism
- Steering metering valve module
- Steering actuators
- Nose wheel steering collar.

**NOSE WHEEL STEERING SYSTEM - COMPONENT LOCATION**

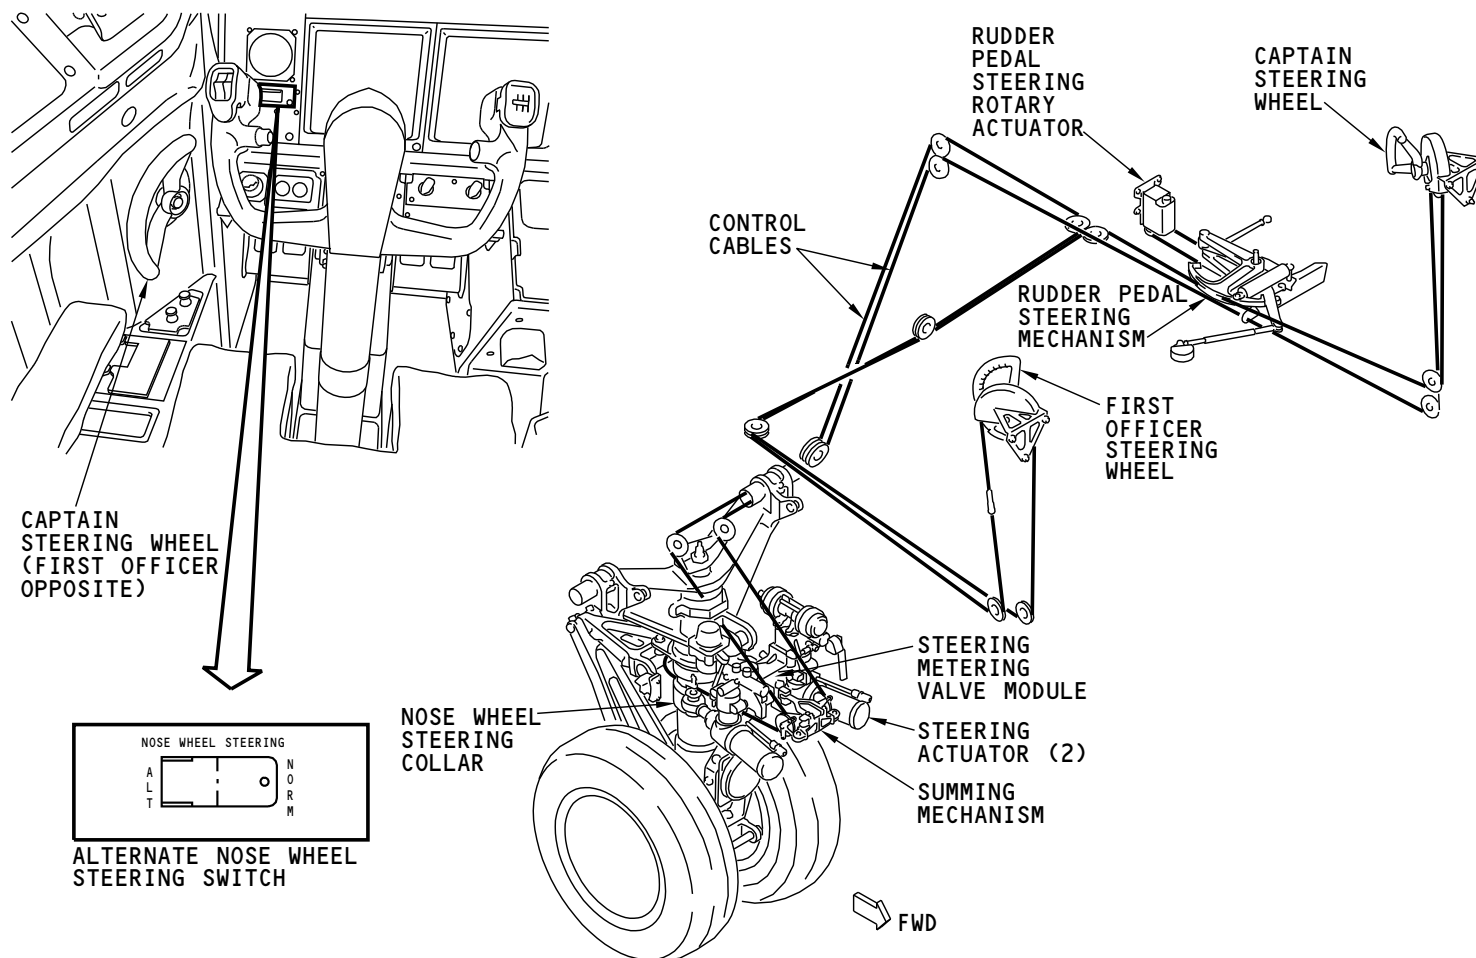

M85059 S0004628034\_V1

**NOSE WHEEL STEERING SYSTEM - COMPONENT LOCATION**

32-51-00-002

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

**32-51-00**

**NOSE WHEEL STEERING SYSTEM - RUDDER PEDAL STEERING MECHANISM AND ROTARY ACTUATOR****Purpose**

The rudder pedal steering mechanism does these functions:

- Mixes the steering inputs from the rudder pedals and the steering wheel
- Prevents rudder pedal inputs when the airplane goes in the air
- Supplies centering forces.

The rotary actuator engages the rudder pedal steering when the nose gear is on the ground and disengages it in the air.

**Location**

The rudder pedal steering mechanism is below the flight compartment floor. You get access to the mechanism through the access panel on the left side bulkhead of the nose landing gear wheel well.

The rotary actuator is below the flight compartment floor, aft of the rudder pedal steering mechanism. You get access to the actuator through the access panel on the left side bulkhead of the nose landing gear wheel well.

**Physical Description**

The rudder pedal steering mechanism is controlled by the rudder pedal rotary actuator and has these components:

- Steering crank
- Rudder pedal steering quadrant
- Clutch arm
- Clutch crank stop
- Centering spring
- Eccentric drum.


The rudder pedal steering rotary actuator is a two-position electrical actuator that uses 115v ac power from bus 2. The actuator has a control drum connected to the bottom and a cable that is a connected to rudder pedal steering mechanism.

**Functional Description**

The rudder pedal steering rotary actuator moves a eccentric cam in the rudder pedal steering mechanism when the airplane goes in the air. This will not let the rudder pedal inputs move the nose wheel steering control cables.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

# NOSE WHEEL STEERING SYSTEM - RUDDER PEDAL STEERING MECHANISM AND ROTARY ACTUATOR

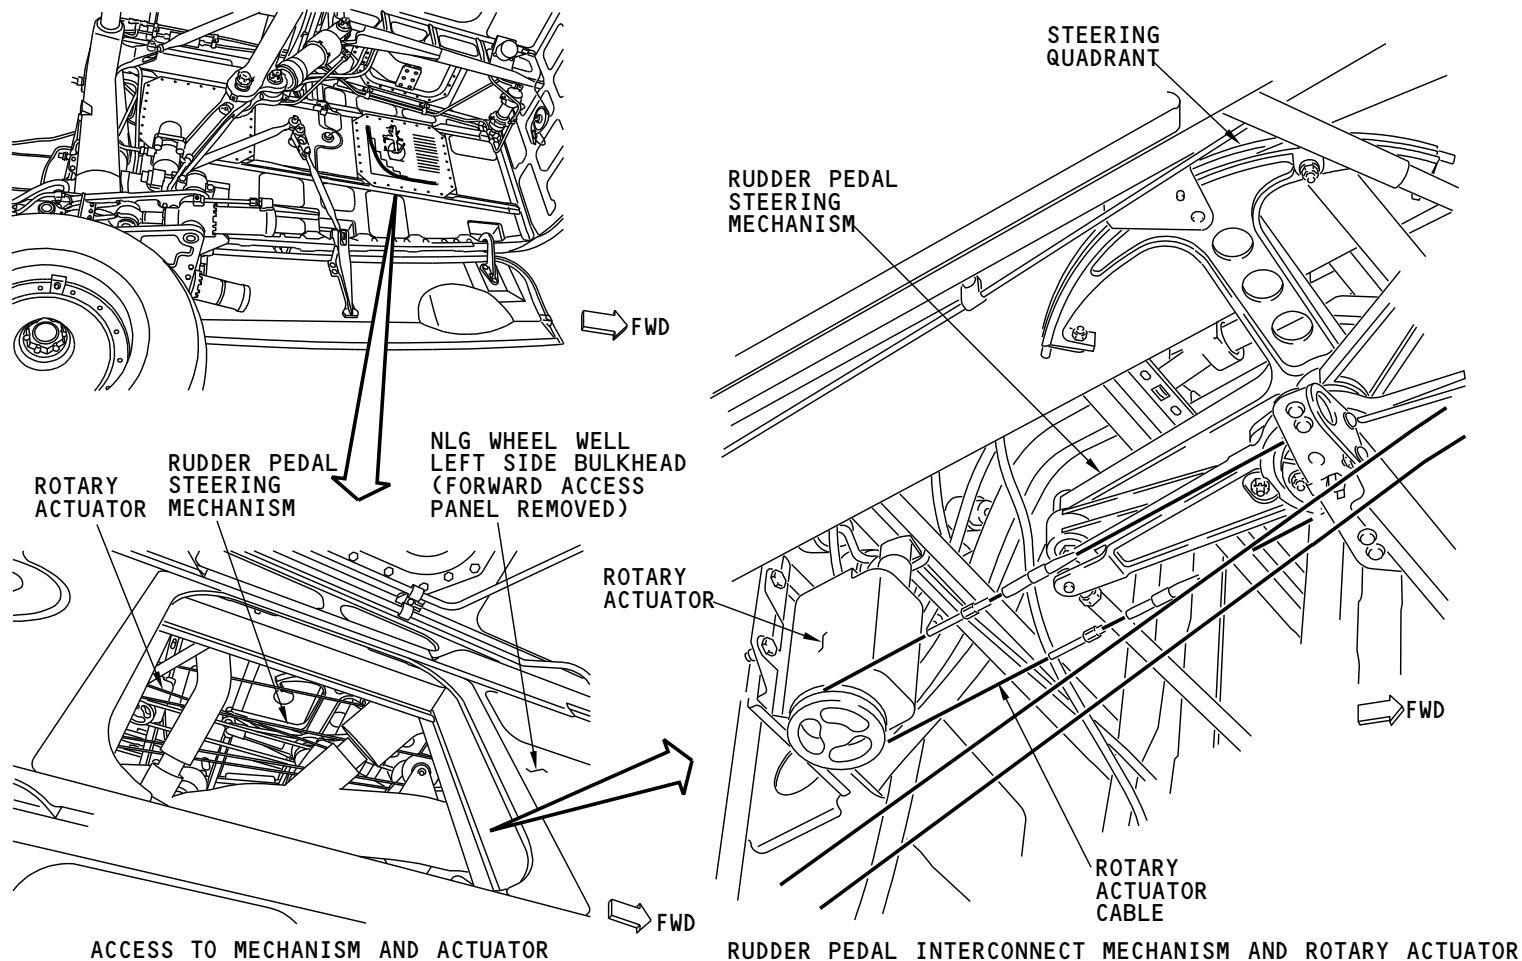

M85060 S0004628036\_V1

## NOSE WHEEL STEERING SYSTEM - RUDDER PEDAL STEERING MECHANISM AND ROTARY ACTUATOR

32-51-00-003

SIA ALL

EFFECTIVITY

32-51-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**NOSE WHEEL STEERING SYSTEM - RUDDER PEDAL STEERING MECHANISM - FUNCTIONAL DESCRIPTION****General**

The nose wheel steering rudder pedal steering mechanism mixes the rudder pedal and steering wheel inputs to the nose wheel steering metering valve.

**Components**

The rudder pedal steering mechanism has these parts:

- Steering crank
- Rudder pedal steering quadrant
- Clutch arm
- Clutch crank stop
- Centering spring
- Eccentric drum.

**Airplane In The Air**

When the airplane goes into the air, a signal from the air/ground system sends power to the rotary actuator. The rotary actuator moves the eccentric drum to the air position. This moves the clutch arm away from the steering crank and will not let any movement of the rudder pedals move the clutch arm. Rudder pedal inputs do not move the steering quadrant.

**Airplane On The Ground**

When the airplane is on the ground, a signal from the air/ground system sends power to the rotary actuator. The rotary actuator moves the eccentric drum to the ground position. This moves the clutch arm in contact with the steering crank stops and permits movement of the rudder pedals to move the clutch arm and then move the steering quadrant.

Movement of the steering wheel moves the control cable and steering quadrant. When the steering quadrant turns, the clutch arm contacts the steering crank stops and extends the centering spring. Because the centering spring in the rudder system is stronger than the centering spring in the pedal steering mechanism, the steering crank will not move. Movement of the steering wheel does not back drive the rudder pedals.


The steering wheel always overrides rudder pedal input because it goes directly to the metering valve through the control cables.

**Training Information Point**

The rudder pedal input linkage connects to the steering crank by a shear rod. If the steering system can not move freely, heavy pressure on the rudder pedals shears the shear rod. This removes the rudder pedal connection to the steering system. This permits the rudder system to move freely when the steering system can not move freely.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

**NOSE WHEEL STEERING SYSTEM - RUDDER PEDAL STEERING MECHANISM - FUNCTIONAL DESCRIPTION**

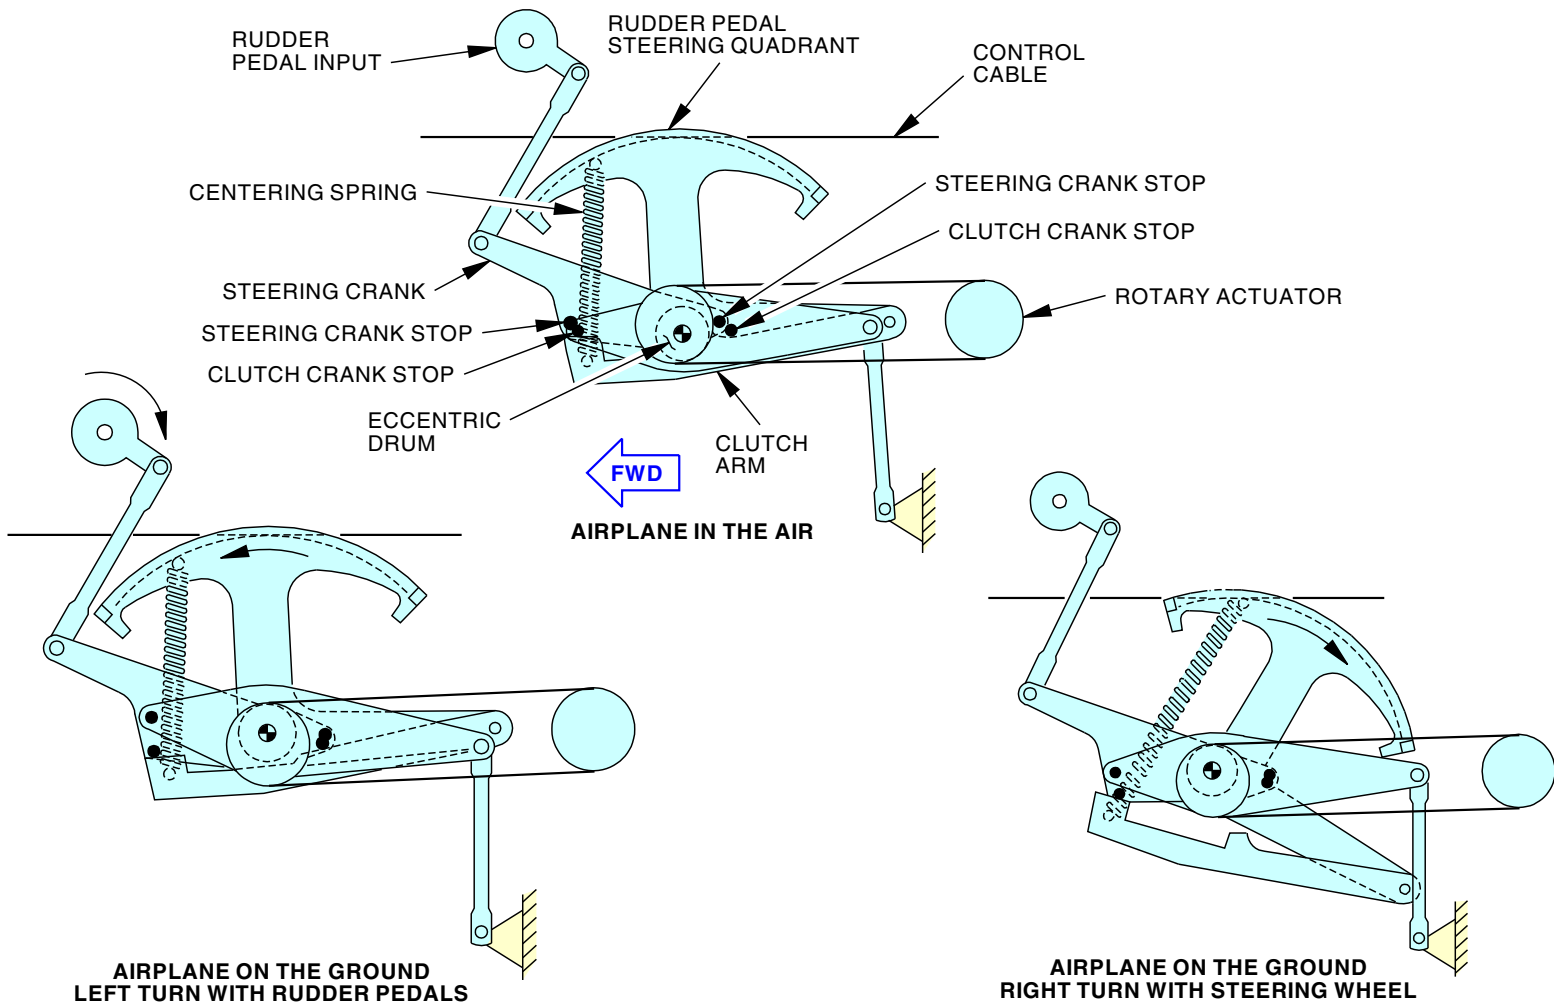

M85061 S0004628038\_V2

**NOSE WHEEL STEERING SYSTEM - RUDDER PEDAL STEERING MECHANISM - FUNCTIONAL DESCRIPTION**

32-51-00-004

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-51-00**



## NOSE WHEEL STEERING SYSTEM - SUMMING MECHANISM AND STEERING METERING VALVE MODULE

**General**

The nose wheel steering summing mechanism mixes steering wheel input and nose gear position feedback to control the nose wheel steering metering valve.

The steering metering valve module controls the flow of hydraulic pressure to the steering actuators.

**Location**

The summing mechanism is above the upper steering plate on the front of the nose landing gear. A protective cover (not shown) is on the summing mechanism.

The steering metering valve is on the upper steering plate on the front of the nose landing gear.

**Physical Description**

The summing mechanism has these components:

- Summing lever
- Pulley (2)
- Input rod.

The pulleys connect to each side of the summing lever. The control cable winds around each pulley.

The steering metering valve module has these components:

- Metering valve
- Dynamic load damper
- Bypass/relief valve (not shown)
- Compensator
- Towing shutoff valve and lever
- Swivel valve (2).

**Summing Mechanism**

The summing mechanism pivots about its center. The input rod connects the summing mechanism to the steering metering valve.

**Steering Metering Valve Module**

The metering valve controls hydraulic flow to the steering actuators.

The hydro-mechanical dynamic load damper decreases shimmy damping in the nose landing gear.

The compensator keeps backpressure in the steering metering valve. The backpressure supplies a force to dampen shimmy, and fluid for the actuators when the nose wheel steering system does not have hydraulic system pressure.

A towing lever on the steering metering valve module controls a towing shutoff valve.

The swivel valves control hydraulic flow to the two sides of the steering actuators.


**Functional Description**

Steering wheel or rudder pedal input moves the summing mechanism from the neutral position. This makes an input to the steering metering valve module that sends pressure to the nose wheel steering actuators. The nose wheel steering actuators turn the nose landing gear wheels.

The movement of the nose gear wheels moves the summing mechanism back towards the neutral position. When the nose landing gear wheel position agrees with the steering wheel or rudder pedal position, the summing mechanism moves the metering valve to the neutral position. This stops the flow to the nose wheel steering actuators.

A towing lever lets you depressurize the nose wheel steering system. Because of this, you do not have to depressurize hydraulic system A to tow the airplane.

**NOSE WHEEL STEERING SYSTEM - SUMMING MECHANISM AND STEERING METERING VALVE MODULE**

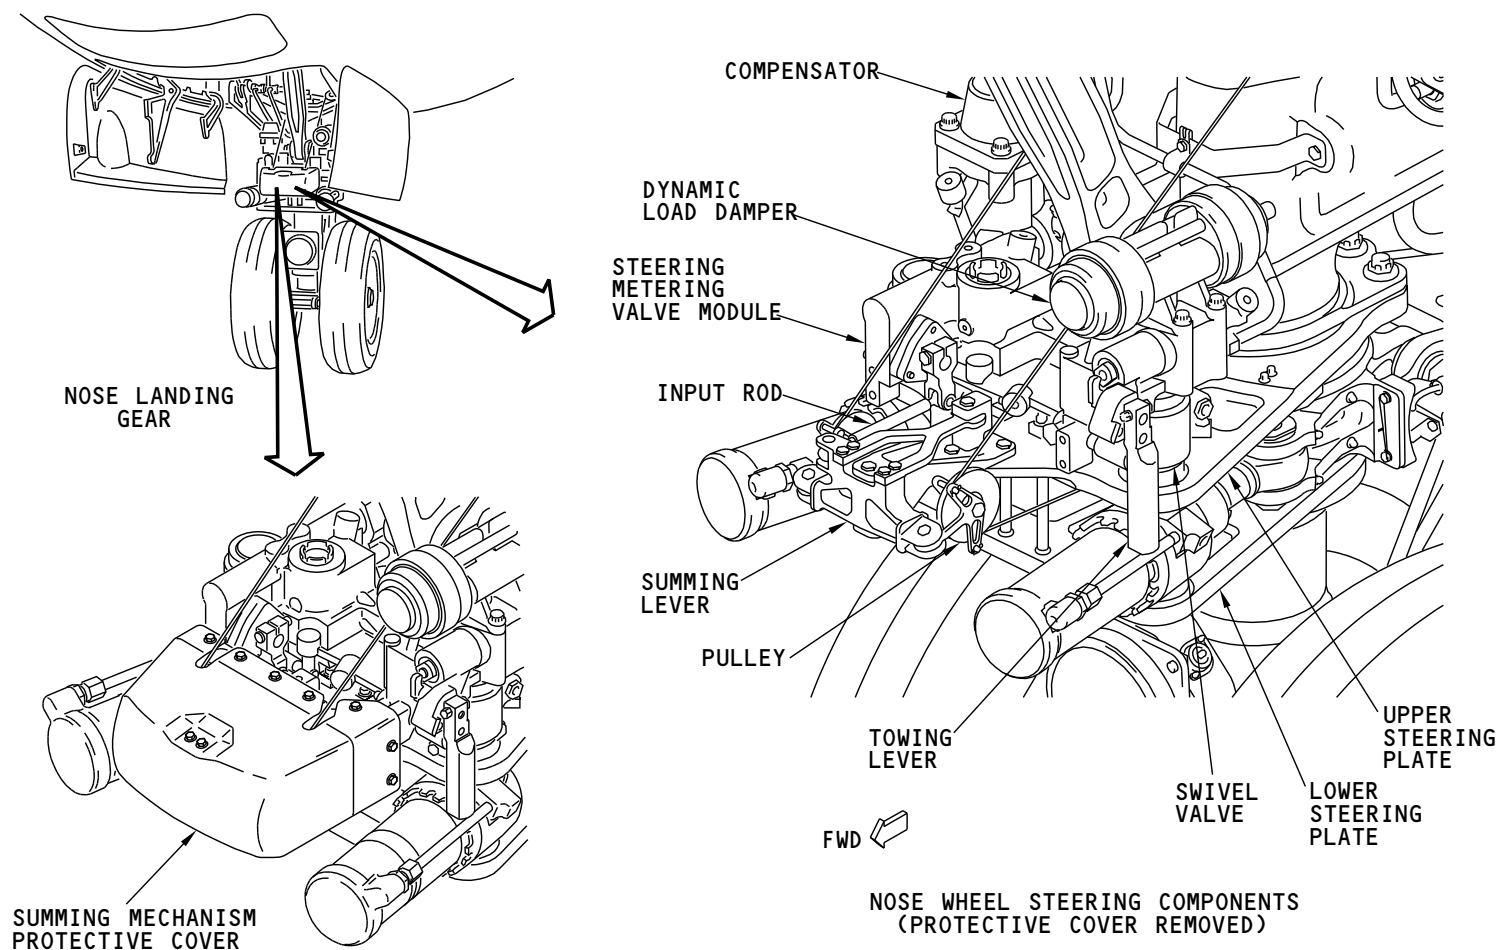

M85062 S0004628040\_V1

**NOSE WHEEL STEERING SYSTEM - SUMMING MECHANISM AND STEERING METERING VALVE MODULE**

32-51-00-005

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**32-51-00**

**NOSE WHEEL STEERING SYSTEM - STEERING ACTUATORS AND STEERING COLLAR****Purpose**

The hydraulic steering actuators move the steering collar to turn the nose wheels.

The steering collar transmits steering torque through the upper and lower torque links to the inner cylinder of nose landing gear.

**Location**

The steering actuators are trunnion-mounted between the upper and lower steering plates. Each actuator is connected to a swivel valve at one end and the steering collar at the other end.

The steering collar is bearing-mounted around the nose gear shock strut outer cylinder. The torsion links connect the steering collar to the shock strut inner cylinder.

**Physical Description**

The steering actuators are unbalanced piston type actuators. Each actuator can swivel left or right. The rod ends of the actuators are connected to the steering collar.


**Functional Description**

The steering actuators get hydraulic pressure from the landing gear hydraulic system and supply steering forces to turn the steering collar.

The steering collar transmits the actuator steering forces, through the torsion links and shock strut inner cylinder, and to the nose landing gear wheels.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

# NOSE WHEEL STEERING SYSTEM - STEERING ACTUATORS AND STEERING COLLAR

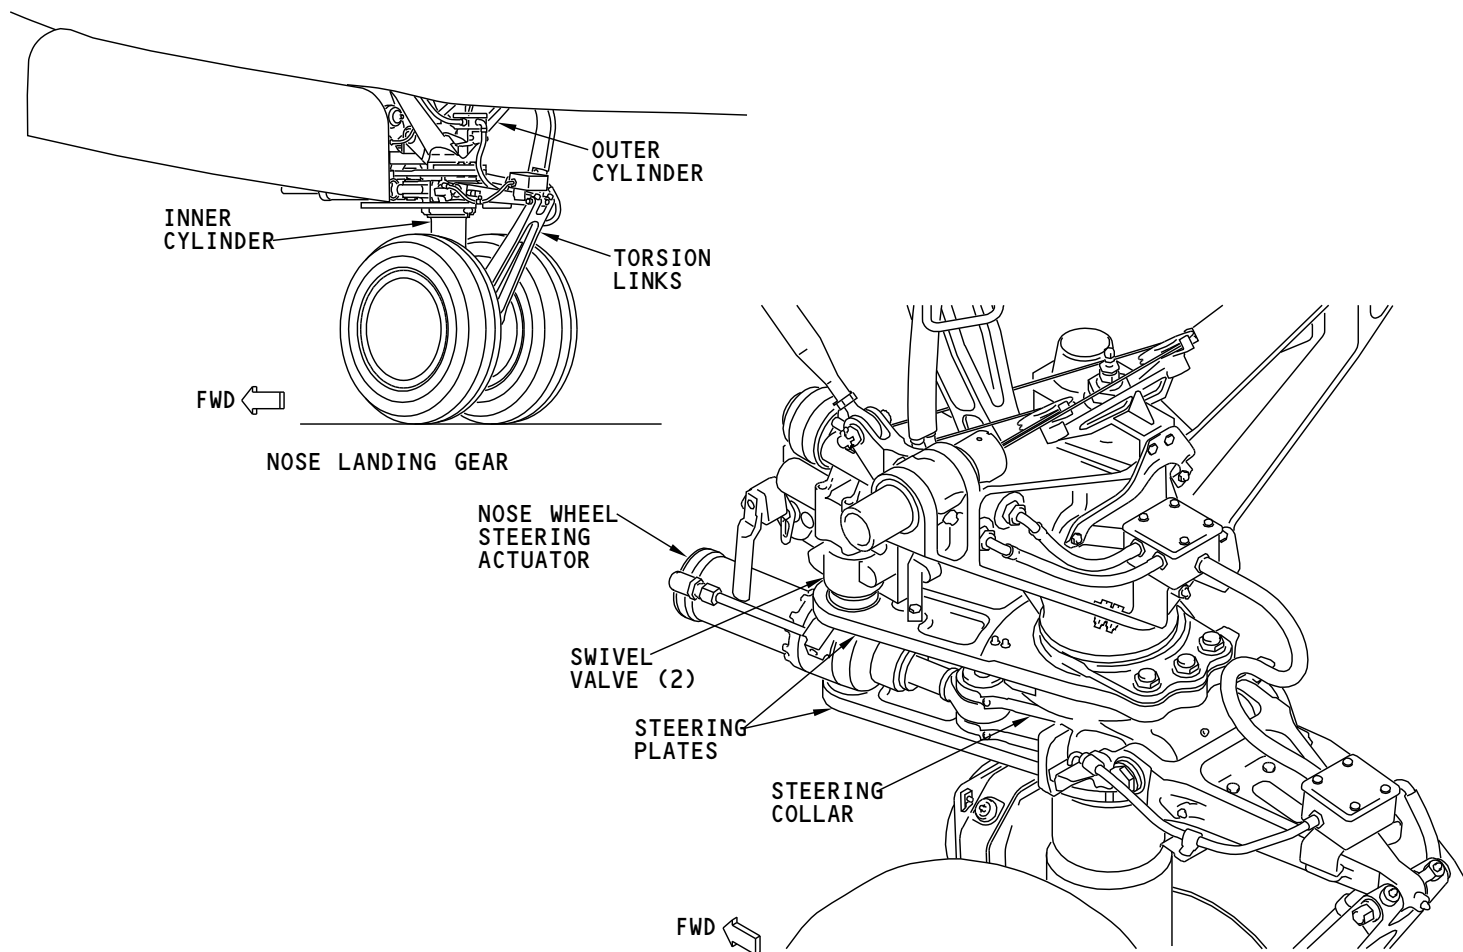

M85063 S0004628042\_V1

## NOSE WHEEL STEERING SYSTEM - STEERING ACTUATORS AND STEERING COLLAR

32-51-00-006

SIA ALL

EFFECTIVITY

32-51-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**NOSE WHEEL STEERING SYSTEM - FUNCTIONAL DESCRIPTION - HYDRAULIC****General**

The nose wheel system uses landing gear down pressure to turn the nose landing gear wheels.

Steering inputs from the steering wheel or rudder pedals go through the control cables to the metering valve. This makes an input through the summing mechanism to move the steering metering valve. This lets hydraulic pressure go through the swivel valves to the steering actuators.

The actuators get pressure on the extend side, the retract side, or both sides to move the nose landing gear wheels from 0 - 78 degrees.

**Gear Movement: 0 - 23 Degrees**

One actuator gets pressure to the head end and the other actuator gets pressure to the rod end. This causes one actuator to extend and the other to retract. This turns the nose landing gear wheels through the torsion links.

**Gear Movement: 23 - 78 Degrees**

When the wheels turn to 23 degrees, the swivel valve for the actuator that is pressurized to retract sends pressure to both sides of that actuator.

The actuator that was pressurized to extend continues to extend to steer the wheels. The actuator that was pressurized to retract is now pressurized to extend. Both actuators continue to extend, this lets the nose landing gear turn to the 78 degree limit.

**Feedback**

When the wheels get to the commanded position, the summing mechanism moves the metering valve back to neutral. This stops hydraulic pressure to the actuators. The actuators hold the wheels at the current position.

**Compensator**

The compensator is a spring-loaded piston type accumulator. The compensator keeps 220-290 psi pressure in the return lines of the steering system. This makes sure the steering actuators stay in their current positions when there is no input to the system.

**Bypass Valve**


The bypass valve opens to connect both sides of the piston in the actuators when an external force turns the nose wheels. This gives protection to the internal parts of the steering system.

**Dynamic Load Damper**

The dynamic load damper is a hydro-mechanical, dynamic damping device that decreases shimmy in the nose steering gear. The towing lever also operates the damper to provide a fluid connection to both sides of the steering actuator pistons during an airplane tow.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

### NOSE WHEEL STEERING SYSTEM - FUNCTIONAL DESCRIPTION - HYDRAULIC

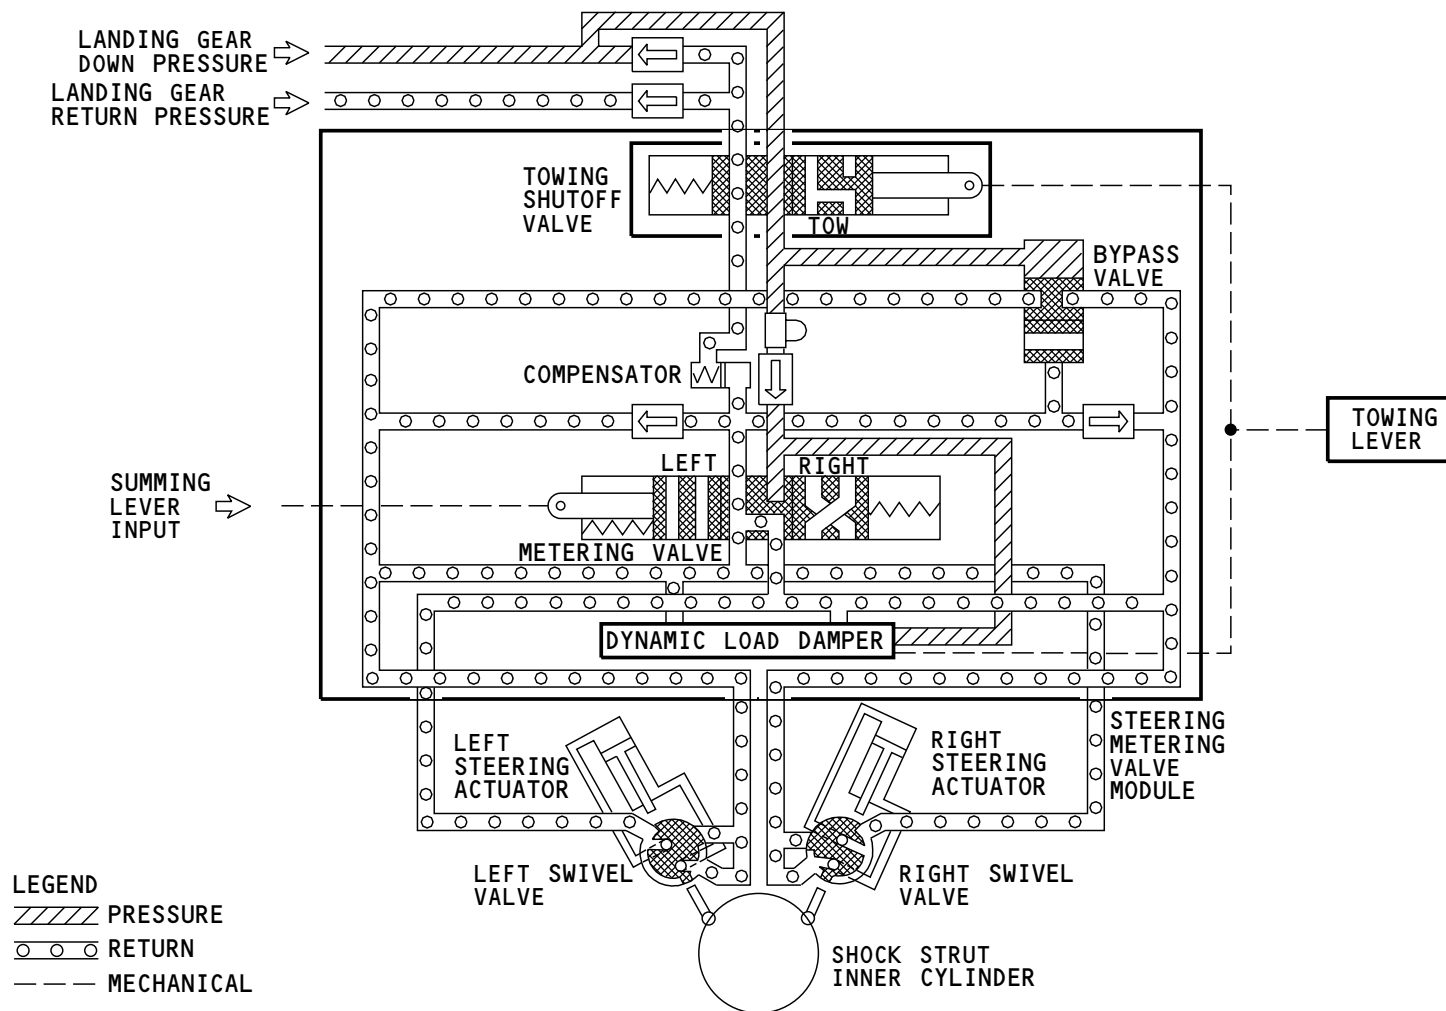

M84913 S0004628044\_V1

### NOSE WHEEL STEERING SYSTEM - FUNCTIONAL DESCRIPTION - HYDRAULIC

32-51-00-007

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-51-00



## NOSE WHEEL STEERING SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL

General

The rotary actuator moves to the engage or disengage the rudder pedal steering mechanism from the nose wheel steering system. The landing gear transfer valve controls B system hydraulic pressure to the nose wheel steering metering valve.

Rotary Actuator

The rotary actuator moves to the engage position when the air/ground relay is energized. A nose on ground signal from the proximity switch electronics unit (PSEU) energizes the air/ground relay. The PSEU removes the nose on ground signal when the nose landing gear moves to the not compressed position. The air/ground relay moves to the air position 5 seconds after the nose on ground signal is removed. This sends power to move the rotary actuator to the disengage position.

Landing Gear Transfer Valve

When the airplane is on the ground and with normal quantity in the hydraulic system B reservoir, the landing gear transfer valve moves to the alternate position when you move the alternate nose wheel steering switch on the P1 panel to the ALT position.

The system B low quantity latch prevents operation of the landing gear transfer valve when the alternate nose wheel steering switch is in the alternate position, and the system B hydraulic quantity momentarily decreases to less than 21 percent. The transfer valve moves to the normal position if the latch sets during alternate operation.

The low quantity latch stops intermittent operation of the transfer valve if the system B quantity increases more than and decreases less than 21 percent again and again. The latch sets when the nose air/ground system is in the ground mode and the system B quantity is low. The latch resets when the alternate nose wheel steering switch is in the normal position.

The PSEU processes the inputs and supplies two signals to the coils on the solenoid valve on the landing gear transfer valve.

The position switch on the transfer valve sends a ground to the BITE in the PSEU when the valve moves to the alternate position.

Training Information Point

You can use the BITE on the PSEU to do a test of the operation of the landing gear transfer valve.

See the Air/ground System section for more information about the PSEU BITE. (SECTION 32-09)

See the Landing Gear Control System section for more information about the landing gear transfer valve. (SECTION 32-31)

**32-51-00**


EFFECTIVITY

SIA ALL

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

# NOSE WHEEL STEERING SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL

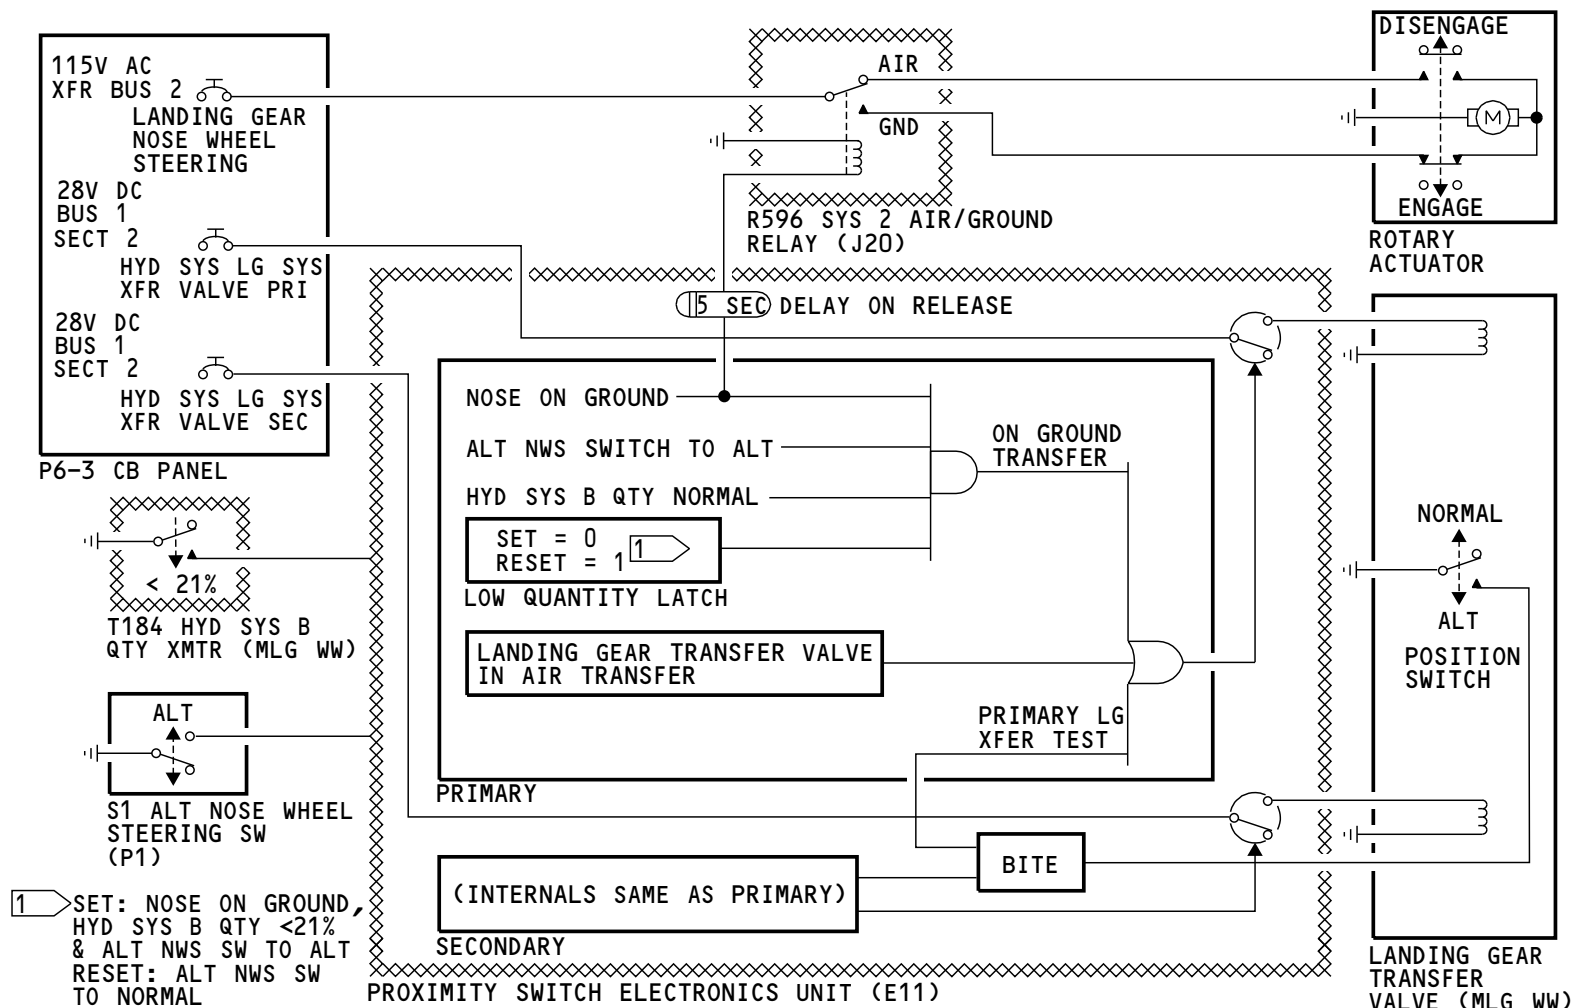

M85064 S0004628046\_V1

## NOSE WHEEL STEERING SYSTEM - FUNCTIONAL DESCRIPTION - ELECTRICAL

32-51-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-51-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## NOSE WHEEL STEERING SYSTEM - TRAINING INFORMATION POINT - TOWING

### General

A towing lever lets you depressurize the nose wheel steering system. Because of this, you do not have to depressurize hydraulic system A to tow the airplane.

The towing lever is on the left side of the metering valve module above the steering actuator.

You can use towbarless equipment to push or pull the airplane.

### Operation

The towing lever is spring-loaded to the off position. Move the lever forward to the tow position. Insert a pin in the pin hole in the lever to hold the lever in the towing position. A placard on the protective cover shows the two positions of the towing lever and gives instructions for towing.

If you tow the airplane and turn the nose wheels more than 78 degrees, you must disconnect the torsion links and the taxi light wire bundle (if installed). Support the lower torsion link from dragging on the ground when it is disconnected.

A red stripe on the outside of each nose landing gear door shows when the wheels are at 78 degrees. When the tow bar aligns with the red stripe, the wheels are at 78 degrees.

Obey these warnings and cautions when you tow the airplane.



WHEN YOU TOW THE AIRPLANE, STAY OUT OF THE DANGEROUS AREAS AROUND THE TOW VEHICLE, TOW BAR, AND AIRPLANE TIRES. IT IS POSSIBLE FOR THE TIRES AND EQUIPMENT TO PULL YOU BELOW THEM WHILE THE AIRPLANE CHANGES POSITIONS AND DIRECTIONS. IF YOU DO NOT KEEP THIS SEPARATION, INJURY TO PERSONNEL CAN OCCUR.



WHEN YOU REMOVE THE STEERING LOCKOUT PIN FROM THE TOW LEVER AND THE HYDRAULIC SYSTEM IS PRESSURIZED, STAY AWAY FROM THE NOSE LANDING GEAR. IF YOU DO NOT OBEY THIS INSTRUCTION, INJURY TO PERSONS CAN OCCUR.



IF THE NOSE GEAR STEERING LOCKOUT PIN IS NOT INSTALLED, MAKE SURE THAT THE PRESSURE IN HYDRAULIC SYSTEM A IS COMPLETELY REMOVED BEFORE TOWING THE AIRPLANE. IF YOU DO NOT OBEY THIS WARNING, YOU CAN CAUSE INJURY TO PERSONS AND DAMAGE TO THE STEERING COMPONENTS.



ONLY USE THE CORRECT PIN FOR THE AIRPLANE MODEL. IF YOU USE AN INCORRECT PIN, THE HYDRAULIC STEERING CAN OPERATE. THIS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.



MOVE THE AIRPLANE FORWARD BEFORE YOU START SHARP TURNS. MAKE SURE THAT THERE ARE NO SUDDEN STARTS AND STOPS. IF YOU TOW THE PLANE IN HIGH LOAD CONDITIONS, REFER TO THE TOW AIRPLANE UNDER ABNORMAL LOADS TASK. ABNORMAL LOADS ARE IF YOU TOW WITH TWO TIRES FLAT ON ONE MAIN GEAR OR TOW ON A SOFT TERRAIN OR TOW UP A SLOPE MORE THAN 5 DEGREES OR OTHER ABNORMAL LOADS. THE NOSE GEAR TOW STRESS CAN BE MORE THAN THE SPECIFICATIONS APPROVAL. IF YOU DO NOT OBEY THIS CAUTION, DAMAGE TO EQUIPMENT CAN OCCUR.



DO NOT APPLY THE BRAKES OR OVER STEER THE AIRPLANE WHEN YOU USE TOWBARLESS DURING A TOW. IF YOU DO NOT OBEY THESE INSTRUCTIONS, YOU CAN CAUSE DAMAGE TO THE NOSE GEAR STRUCTURE AND THE HYDRAULIC SYSTEMS.

# 32-51-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## NOSE WHEEL STEERING SYSTEM - TRAINING INFORMATION POINT - TOWING



### CAUTION

DO NOT USE AIRPLANE BRAKES WHILE YOU TOW THE AIRPLANE. IF YOU USE A TOW BAR, YOU CAN CAUSE THE SHEAR PINS TO SHEAR. MOST TOWBARLESS TOW VEHICLES DO NOT HAVE A SHEAR PIN TO LIMIT THE LOADS IF THE AIRPLANE BRAKES ARE APPLIED. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT CAN OCCUR.




### CAUTION

DO NOT TOW THE AIRPLANE WITH THE NOSE GEAR FULLY COMPRESSED OR EXTENDED. MAKE SURE THAT THE NOSE GEAR IS NOT MORE THAN 23.5 INCHES (597 MM) FROM THE BOTTOM OF THE INNER CYLINDER TO THE BOTTOM OF THE STEERING PLATE. IF YOU DO NOT OBEY INSTRUCTIONS, DAMAGE TO THE NOSE GEAR STRUT INTERNALLY CAN OCCUR.

**NOTE:** With two flat tires on one main gear, if it is possible, you should replace one of the flat tires with a serviceable tire before towing to prevent damage to the tires and wheels.

# NOSE WHEEL STEERING SYSTEM - TRAINING INFORMATION POINT - TOWING

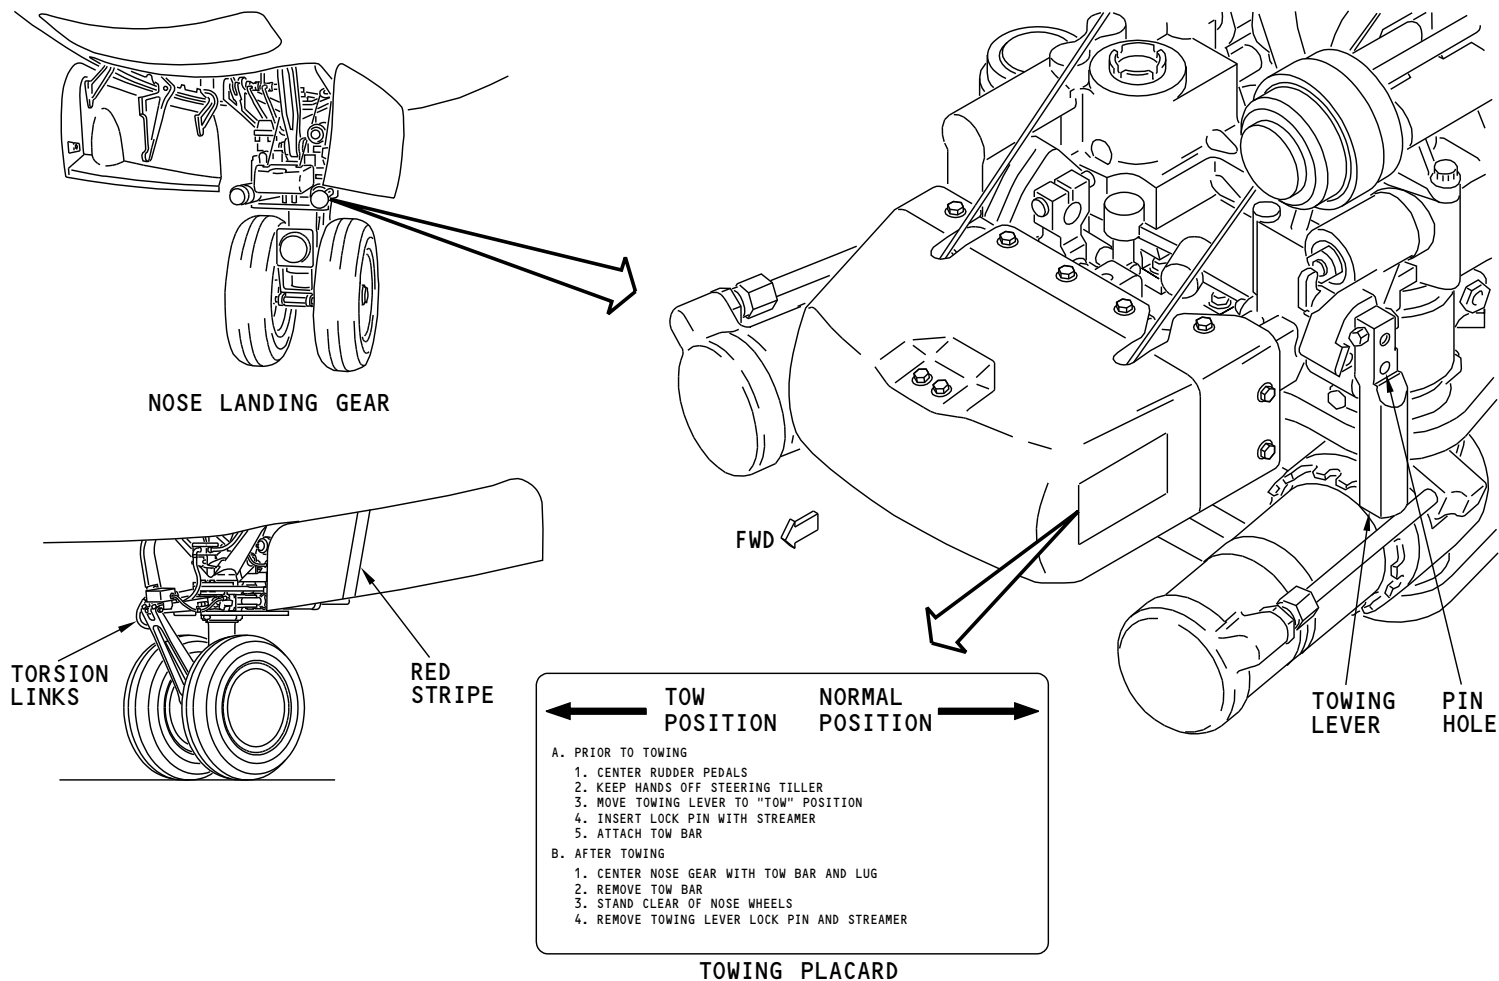

M85065 S0004628048\_V1

## NOSE WHEEL STEERING SYSTEM - TRAINING INFORMATION POINT - TOWING

32-51-00-009

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-51-00





THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-61-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## LG POSITION INDICATING AND WARNING SYSTEM - INTRODUCTION

### Purpose

The landing gear position indicating and warning system shows landing gear position in the flight compartment. It also warns the pilots when the landing gear is not down for a landing.

### Inputs

The landing gear position indicating and warning system uses these proximity sensors to supply landing gear position data to the proximity switch electronics unit (PSEU):

- Left and right main gear up and locked sensors (4)
- Left and right main gear downlock sensors (4)
- Nose gear up/down lock sensors (2)
- Nose gear down sensors (2).

The control lever position switches supply lever position.

The flight control computers supply radio altimeter data.

The stall management yaw damper computers and a switch on the trailing edge flap control unit supply the trailing edge flap position.

The horn reset switch sends a reset signal for aural warning.

The autothrottle switch packs supply thrust lever position data.

### General Description

The PSEU processes all of the inputs and sends signals to the landing gear position lights and the aural warning module.

Three red landing gear position lights come on when the landing gear moves during extension and retraction and during the gear not down warning.

When the landing gear extends to the down and locked position, three primary and three auxiliary green landing gear position lights come on.

The PSEU also sends signals to the flight data acquisition unit (FDAU) about the status of the landing gear. See the flight data recorder system (FDRS) section for more information about the FDAU. (SECTION 31-31)

### Abbreviations and Acronyms

- alt - altitude
- bat - battery
- BITE - built-in test equipment
- CB - circuit breaker
- cont - control
- dc - direct current
- FCC - flight control computer
- FDAU - flight data acquisition unit
- FDRS - flight data recorder system
- fwd - forward
- LG - landing gear
- MLG - main landing gear
- NLG - nose landing gear
- PSEU - proximity switch electronics unit
- pwr - power
- SMYD - stall management yaw damper
- sw - switch
- sys - system
- TE - trailing edge


# 32-61-00

EFFECTIVITY  
SIA ALL

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## LG POSITION INDICATING AND WARNING SYSTEM - INTRODUCTION

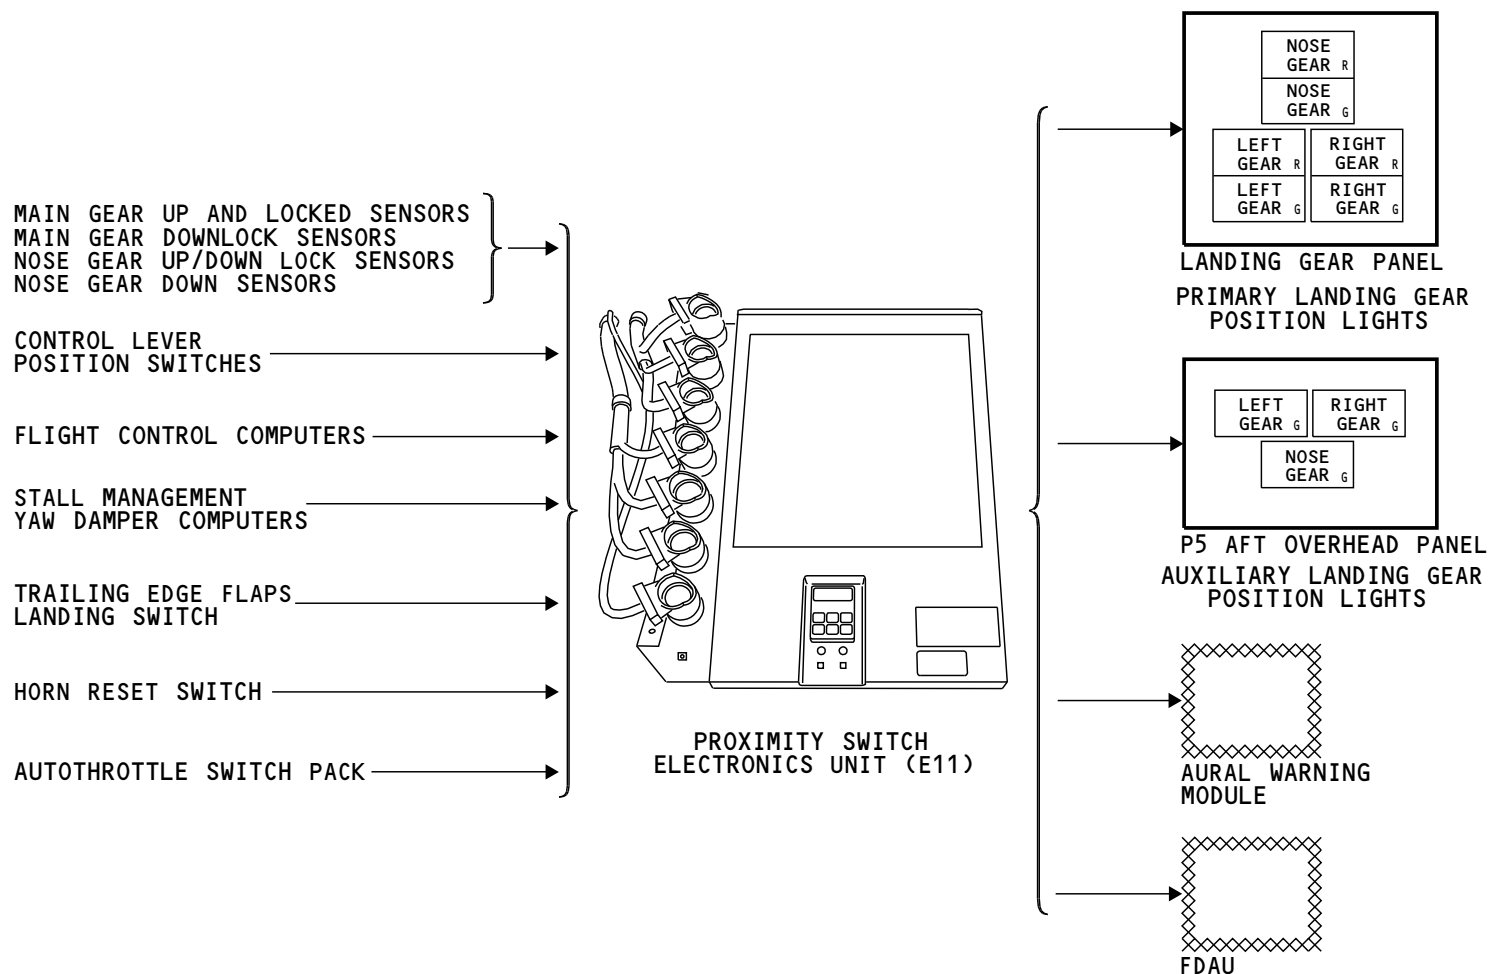

M85066 S0004628052\_V1

## LG POSITION INDICATING AND WARNING SYSTEM - INTRODUCTION

# 32-61-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LG POSITION INDICATING AND WARNING SYSTEM - POSITION LIGHTS, LEVER POSITION SWITCHES****Purpose**

The position lights show the pilots the condition of the landing gear.

The control lever position switches provides a signal to the position indicating and warning system when the landing gear lever moves to the down position.

**Location**

The primary position lights are on the landing gear panel on the P2 center instrument panel, above the landing gear lever.

The auxiliary position lights are on the P5 aft overhead panel.

The control lever position switches are on the landing gear panel on the P2 center instrument panel in the flight compartment.

**Functional Description**

The green primary and auxiliary position lights come on when the landing gear moves to the down and locked position.

The red primary position lights come on when the position of the control lever is not the same as the position of the landing gear. The red lights also come on for the visual gear not down warning.

There is a switch actuation cam on the forward end of the control lever. The cam moves the control lever position switches to the closed position when the landing gear lever moves to the down (DN) position.

The control lever switches are in the open position when the landing gear lever is in the UP and OFF positions.

One control lever down position switch sends a landing gear control lever down position signal to the PSEU.

The other landing gear control lever down position switch provides a ground for the no smoking sign relay.

See the passenger compartment passenger signs system for more information about the no smoking sign relay (SECTION 33-25).


**32-61-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## LG POSITION INDICATING AND WARNING SYSTEM - POSITION LIGHTS, LEVER POSITION SWITCHES

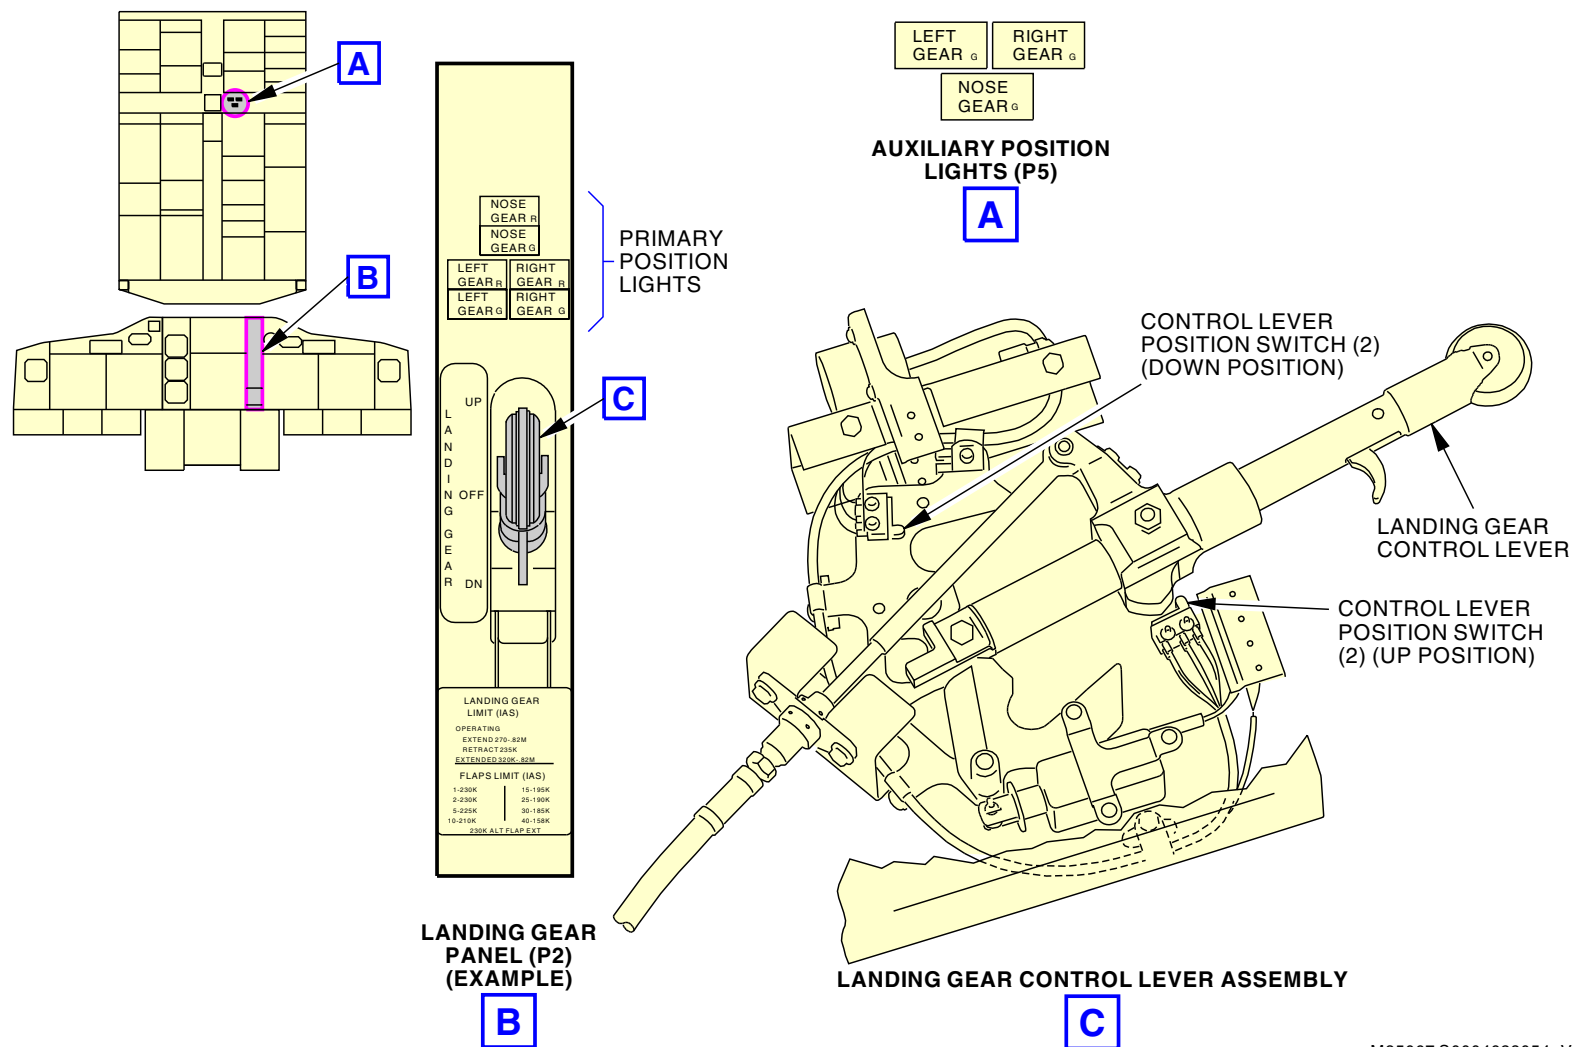

M85067 S0004628054\_V3

## LG POSITION INDICATING AND WARNING SYSTEM - POSITION LIGHTS, LEVER POSITION SWITCHES

32-61-00

**LG POSITION INDICATING AND WARNING SYSTEM - MAIN GEAR UP AND LOCKED SENSOR****Purpose**

There are two main gear up and locked sensors on each main landing gear uplock mechanism. They send main gear up and locked information to the landing gear position indicating and warning system.

**Location**

The sensors are on the forward and aft sides of the MLG uplock mechanism.

The targets are also on the uplock mechanism and move with the uplock hook.

The sensor identification placards, above the sensor on the uplock mechanism frame assembly, show the sensor number. These are the MLG up and locked sensor numbers:

| Sensor Number | MLG   | Location |
|---------------|-------|----------|
| S0072         | Left  | Forward  |
| S1016         | Left  | Aft      |
| S0074         | Right | Forward  |
| S1017         | Right | Aft      |


**Functional Description**

The targets are near the sensors when the uplock mechanism moves to the uplock position. This sends signals to the position indicating system in the proximity switch electronics unit (PSEU) when the main landing gear is up and locked.

The sensor wire connections are in wire splices near the uplock mechanism.

|         |              |
|---------|--------------|
| SIA ALL | EFFECTIVITY  |
|         | D633A101-SIA |

## LG POSITION INDICATING AND WARNING SYSTEM - MAIN GEAR UP AND LOCKED SENSOR

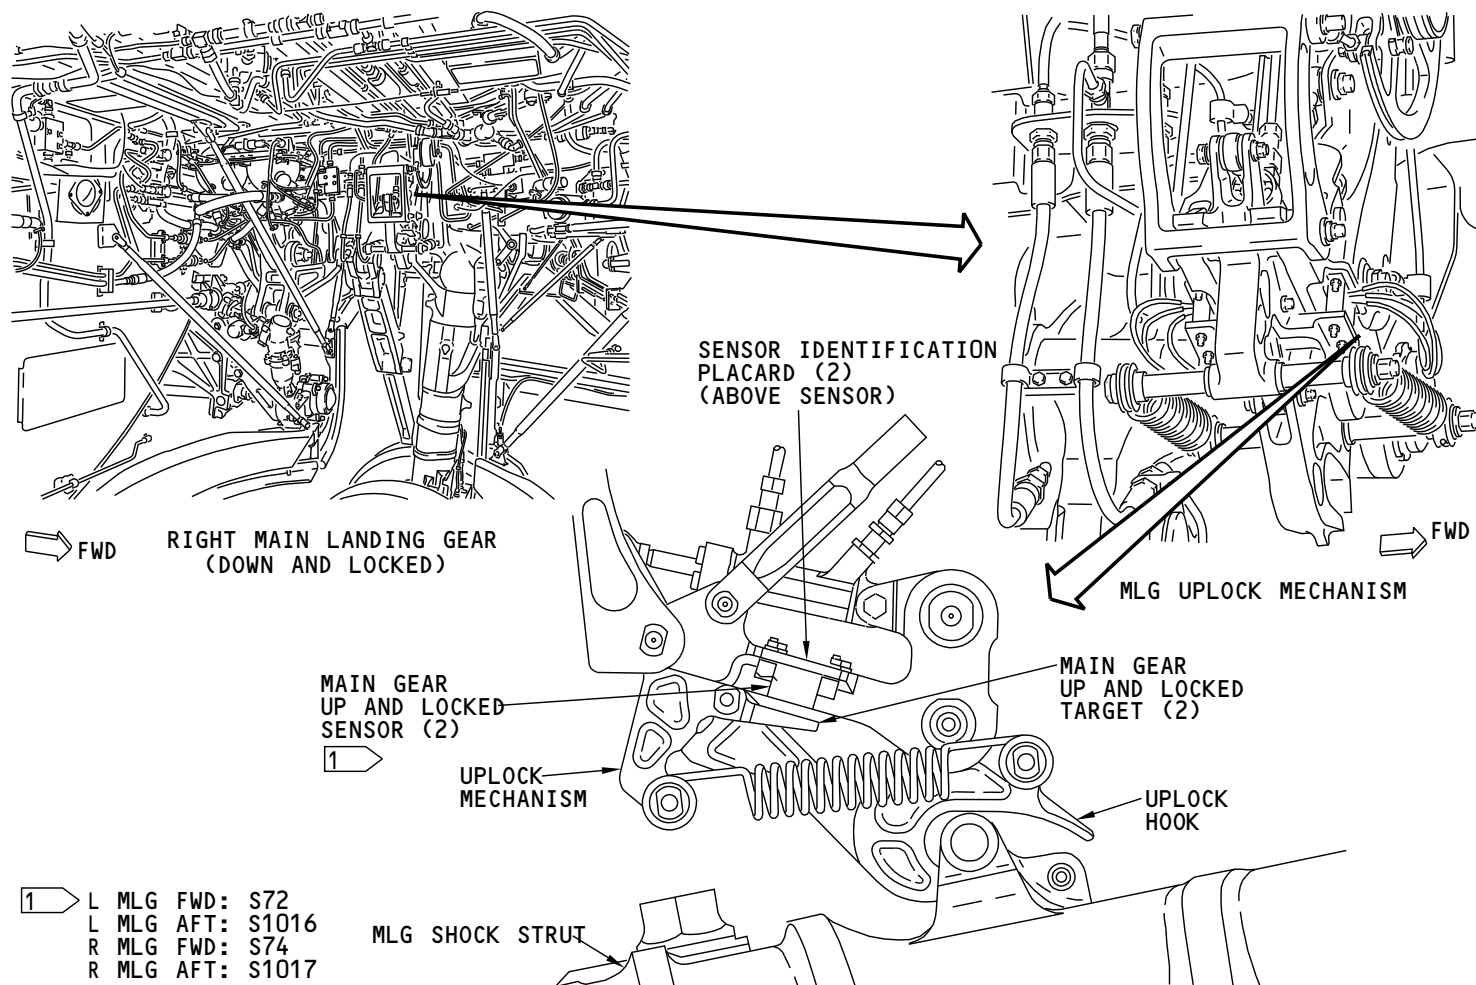

M85068 S0004628056\_V1

## LG POSITION INDICATING AND WARNING SYSTEM - MAIN GEAR UP AND LOCKED SENSOR

32-61-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LG POSITION INDICATING AND WARNING SYSTEM - MAIN GEAR DOWNLOCK SENSOR****Purpose**

There are two main gear downlock sensors on the downlock mechanism. The sensors supply main landing gear downlock position to the landing gear position indicating and warning system.

**Location**

There is one main gear downlock sensor on each side of the upper link of the downlock mechanism.

There is one target on each side of the lower link of the downlock mechanism.

The sensor identification placards on the downlock mechanism upper link show the sensor number. These are the main landing gear downlock sensor numbers:


| Sensor Number | MLG   | Location |
|---------------|-------|----------|
| S0071         | Left  | Forward  |
| S0073         | Right | Forward  |
| S0301         | Right | Aft      |
| S0302         | Left  | Aft      |

**Functional Description**

The targets move near the sensors when the downlock mechanism moves to the down and locked position. This sends signals to the landing gear position indicating and warning system in the PSEU when the main landing gear is down and locked.

The sensor wire connections are at two electrical connectors, forward and aft of the reaction link near the downlock mechanism upper link.

## LG POSITION INDICATING AND WARNING SYSTEM - MAIN GEAR DOWNLOCK SENSOR

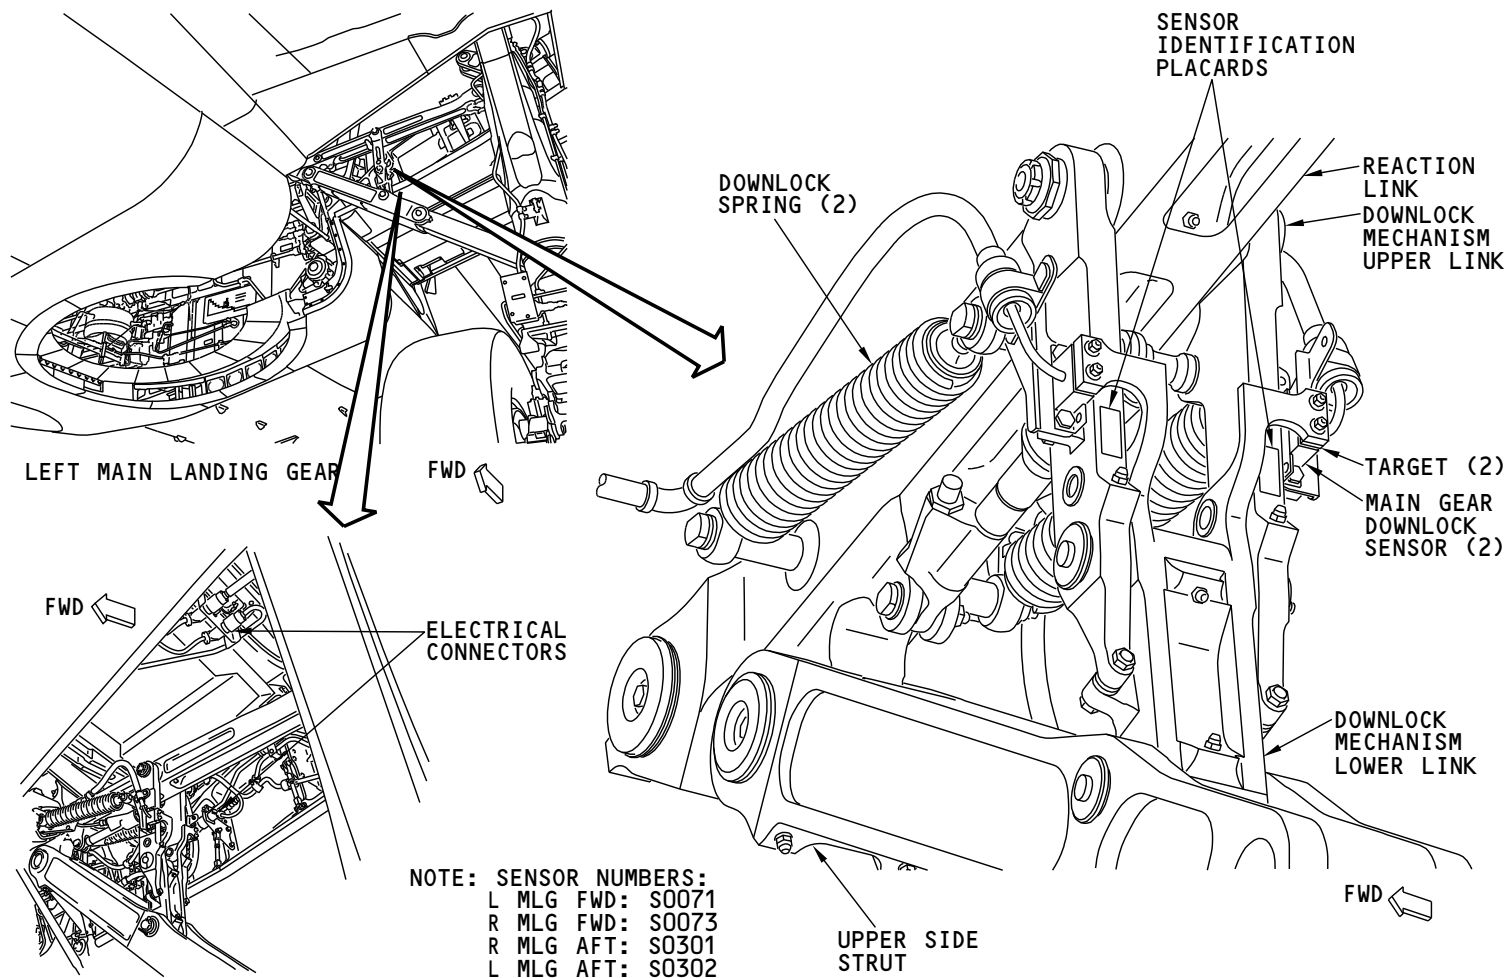

M85069 S0004628058\_V1

## LG POSITION INDICATING AND WARNING SYSTEM - MAIN GEAR DOWNLOCK SENSOR

32-61-00

SIA ALL EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LG POSITION INDICATING AND WARNING SYSTEM - NOSE GEAR UP/DOWN LOCK SENSOR****Purpose**

There are two nose gear up/down lock sensors on the lock link of the nose landing gear. They supply lock position to the landing gear position indicating and warning system.

**Location**

Two sensors are on the top of the aft lock link.

Two targets are on the top of the forward lock link.

The sensor identification placards, above the sensor on the lock mechanism frame assembly, show the sensor number. These are the NLG up/down lock sensor numbers:


| Sensor Number | Location |
|---------------|----------|
| S0846         | Left     |
| S0854         | Right    |

Two junctions boxes, one on each side wall aft in the nose landing gear wheel well, contain the wire connections for each of the lock sensors.

**Functional Description**

The targets move near the sensors when the lock link moves to the locked position. The lock link moves to the locked position when the nose landing gear is down and locked, and up and locked. This sends signals to the position indicating system in the PSEU when the nose landing gear is locked.

LG POSITION INDICATING AND WARNING SYSTEM - NOSE GEAR UP/DOWN LOCK SENSOR

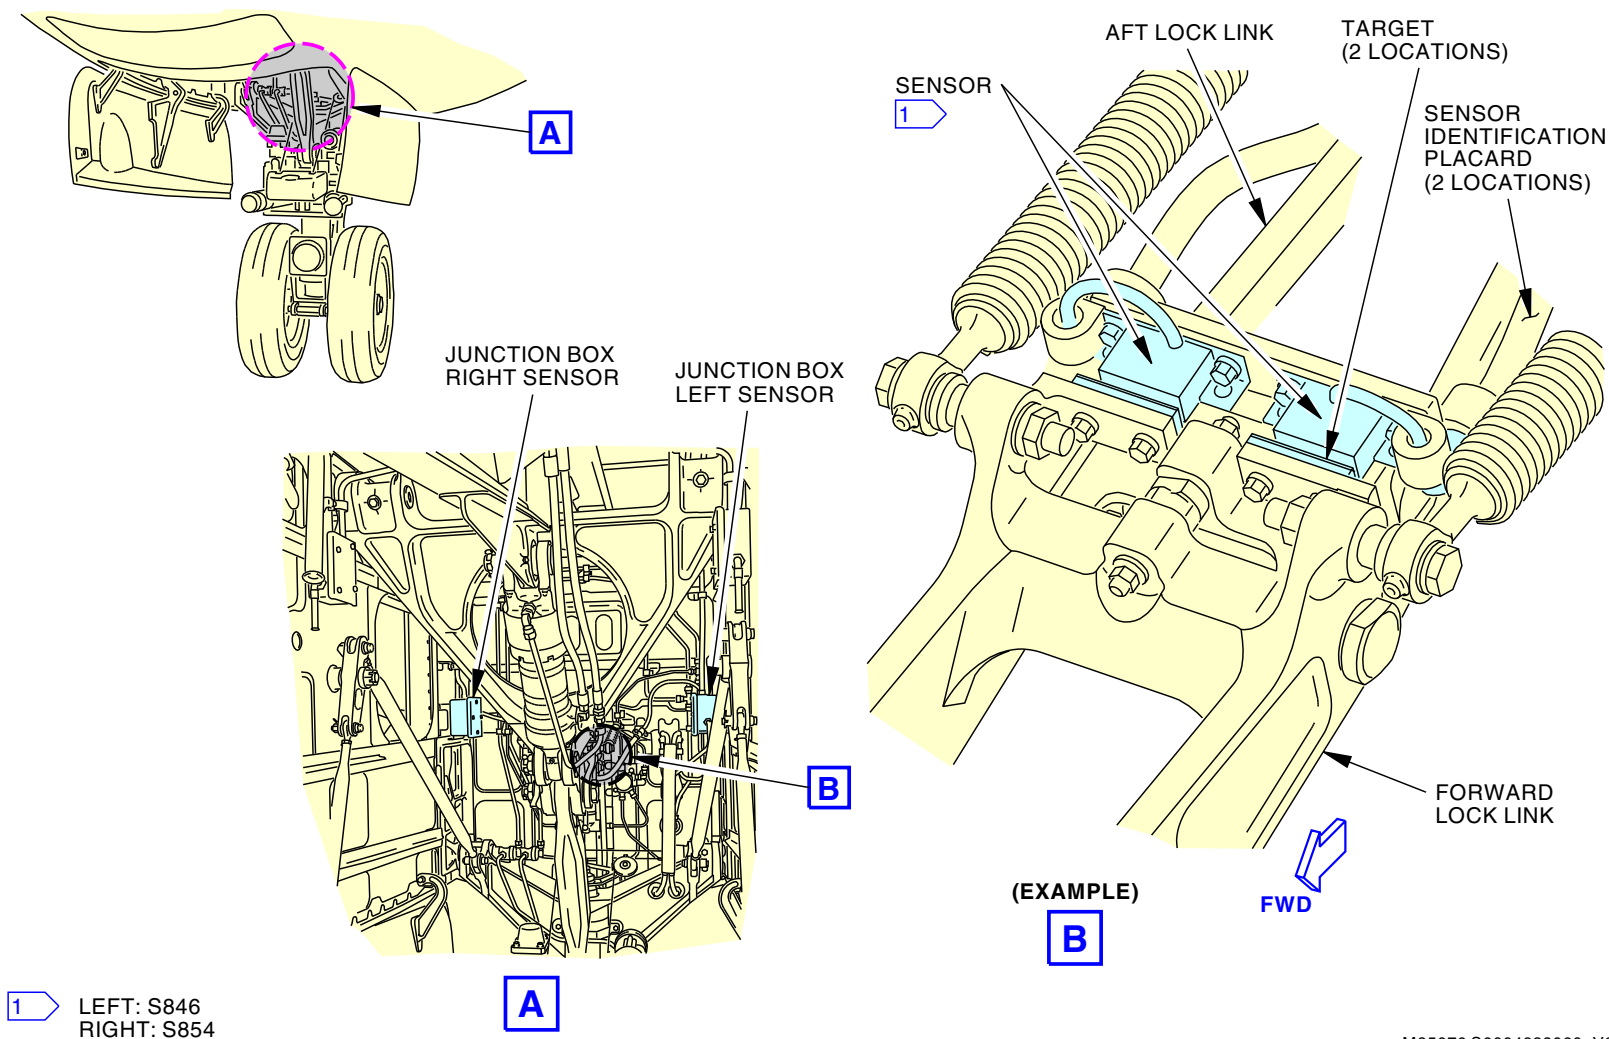

M85070 S0004628060\_V2

LG POSITION INDICATING AND WARNING SYSTEM - NOSE GEAR UP/DOWN LOCK SENSOR

**LG POSITION INDICATING AND WARNING SYSTEM - NOSE GEAR DOWN SENSOR****Purpose**

There are two nose gear down sensors on the ceiling of the nose landing gear wheel well. They supply nose landing gear down position to the landing gear position indicating and warning system.

**Location**

Two down sensors are on the ceiling of the nose landing gear wheel well.

There is one target on each side of the top of the upper drag brace.

The sensor identification placards, on the forward side of the sensor brackets, show the sensor number. These are the NLG down sensor numbers:

| Sensor Number | Location |
|---------------|----------|
| S0845         | Left     |
| S0853         | Right    |


Two junction boxes, one for each sensor on the side wall in the nose landing gear wheel well, contain the sensor wire connections.

**Functional Description**

The targets move near the sensors when the drag brace moves to the down position. This sends signals to the position indicating system in the PSEU when the nose landing gear is in the down position.

|         |              |
|---------|--------------|
| SIA ALL | EFFECTIVITY  |
|         | D633A101-SIA |

LG POSITION INDICATING AND WARNING SYSTEM - NOSE GEAR DOWN SENSOR

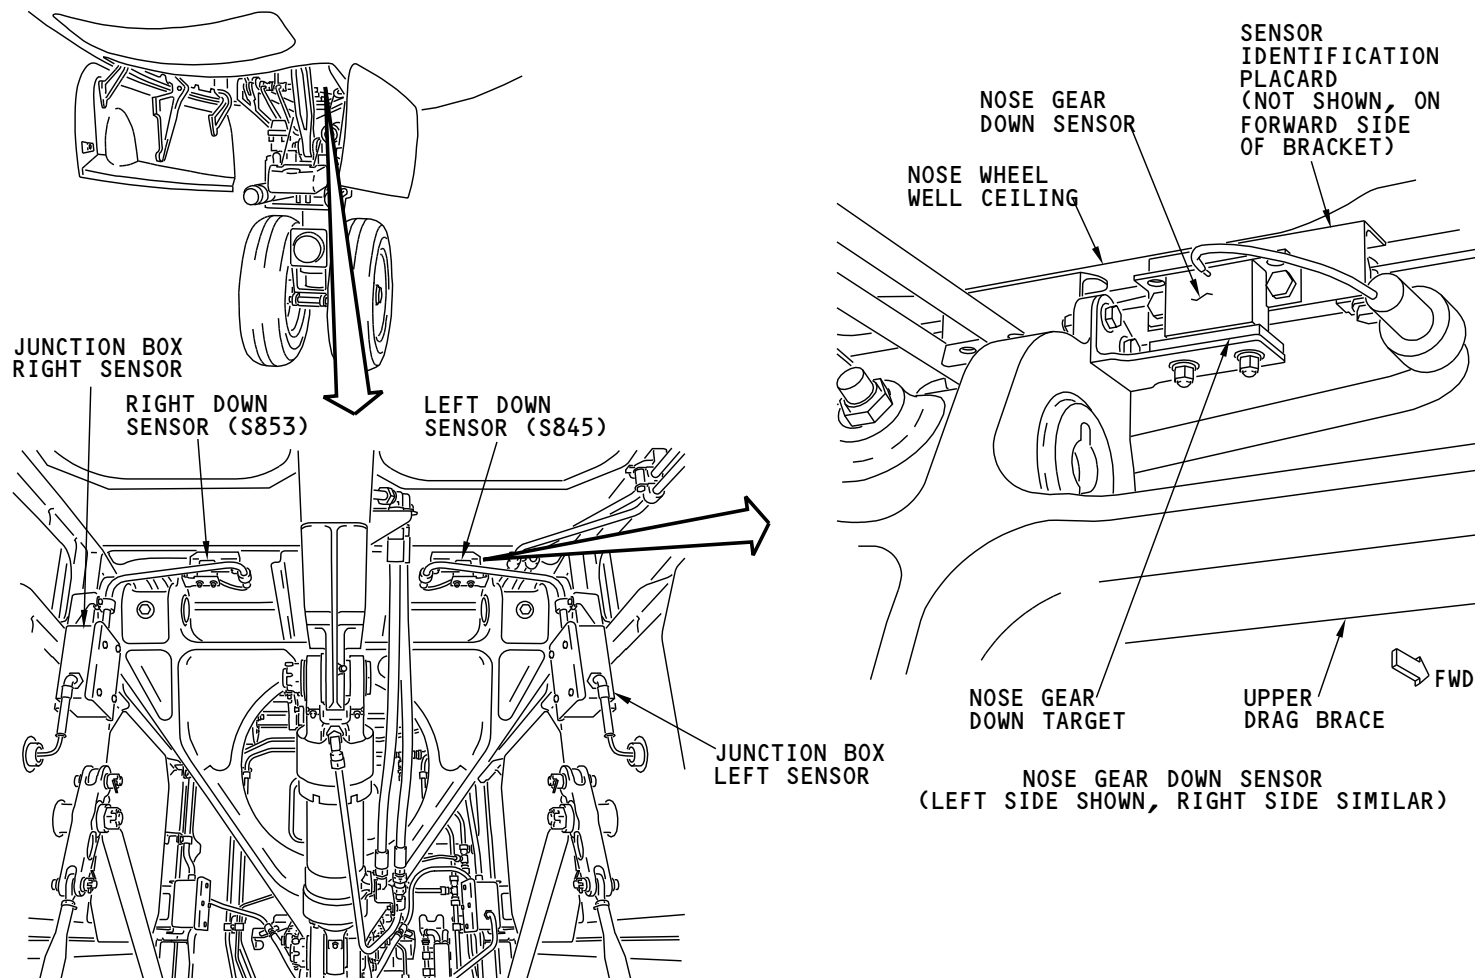

M85071 S0004628062\_V1

LG POSITION INDICATING AND WARNING SYSTEM - NOSE GEAR DOWN SENSOR

32-61-00-006

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-61-00



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-61-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LG POSITION INDICATING AND WARNING SYSTEM - FUNCTIONAL DESCRIPTION - MLG INDICATION****general**

The landing gear position indicating and warning system operates lights in the flight compartment to show indications for these MLG conditions:

- Down and locked
- Lever/gear position disagree
- Gear not down warning.

**Inputs**

The landing gear position indicating and warning system gets inputs from eight sensors on the main landing gear. Four sensors are for the down and locked indication and four sensors are for the up and locked indication.

The control lever position switch supplies lever position data.

The autothrottle switch packs supply thrust lever position for the gear not down warning.

Both flight control computers supply a ground when the airplane altitude is less than 800 feet.

Inputs from the system 1 sensors go to system 1 in the PSEU and inputs from system 2 sensors go to system 2 in the PSEU. Both systems in the PSEU share information through a common bus.

**Down And Locked Indication**

The landing gear position green lights come on when targets move near the downlock sensors. System 1 operates the primary position green light. System 2 operates the auxiliary position green light.

Only system 1 sends MLG landing gear down and locked signals to the flight data acquisition unit (FDAU).

See the Flight Data Recorder System (FDRS) section for more information about the FDAU. (SECTION 31-31)

Only system 1 sends left MLG landing gear down and locked signals to the flight control computer (FCC) A.

See the Digital Flight Control System (DFCS) section for more information about the FCC. (SECTION 22-11)

Only system 1 sends left MLG landing gear down and locked signals to the stall management yaw damper (SMYD) 1.

See the Stall Warning System section for more information about the SMYD. (SECTION 27-32)

Only system 2 sends right MLG landing gear down and locked signals to the flight control computer (FCC) B.

See the Digital Flight Control System (DFCS) section for more information about the FCC. (SECTION 22-11)

Only system 2 sends right MLG landing gear down and locked signals to the stall management yaw damper (SMYD) 2.

See the Stall Warning System section for more information about the SMYD. (SECTION 27-32)

**Disagree And Warning Indications**

Two red landing gear position lights, one for each MLG, come on for one of these conditions:

- Control lever/landing gear position disagree: lever not down and gear not up and locked (gear retraction)
- Control lever/landing gear position disagree: lever down and gear not down and locked (gear extension)
- Gear not down warning.

The red light comes on for the gear not down warning when the landing gear is not down and locked and either of these conditions is true:

- Control lever down
- Left or right thrust lever is less than 44 degree position if the altitude is less than 800 feet.

System 1 and system 2 operate the red position lights.

**32-61-00**

**SIA ALL** EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details




## LG POSITION INDICATING AND WARNING SYSTEM - FUNCTIONAL DESCRIPTION - MLG INDICATION

Only system 1 sends landing gear down and lock or landing gear disagree and warning signals to the flight data acquisition unit (FDAU).

See the Flight Data Recorder System (FDRS) section for more information about the FDAU. (SECTION 31-31)

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

## LG POSITION INDICATING AND WARNING SYSTEM - FUNCTIONAL DESCRIPTION - MLG INDICATION

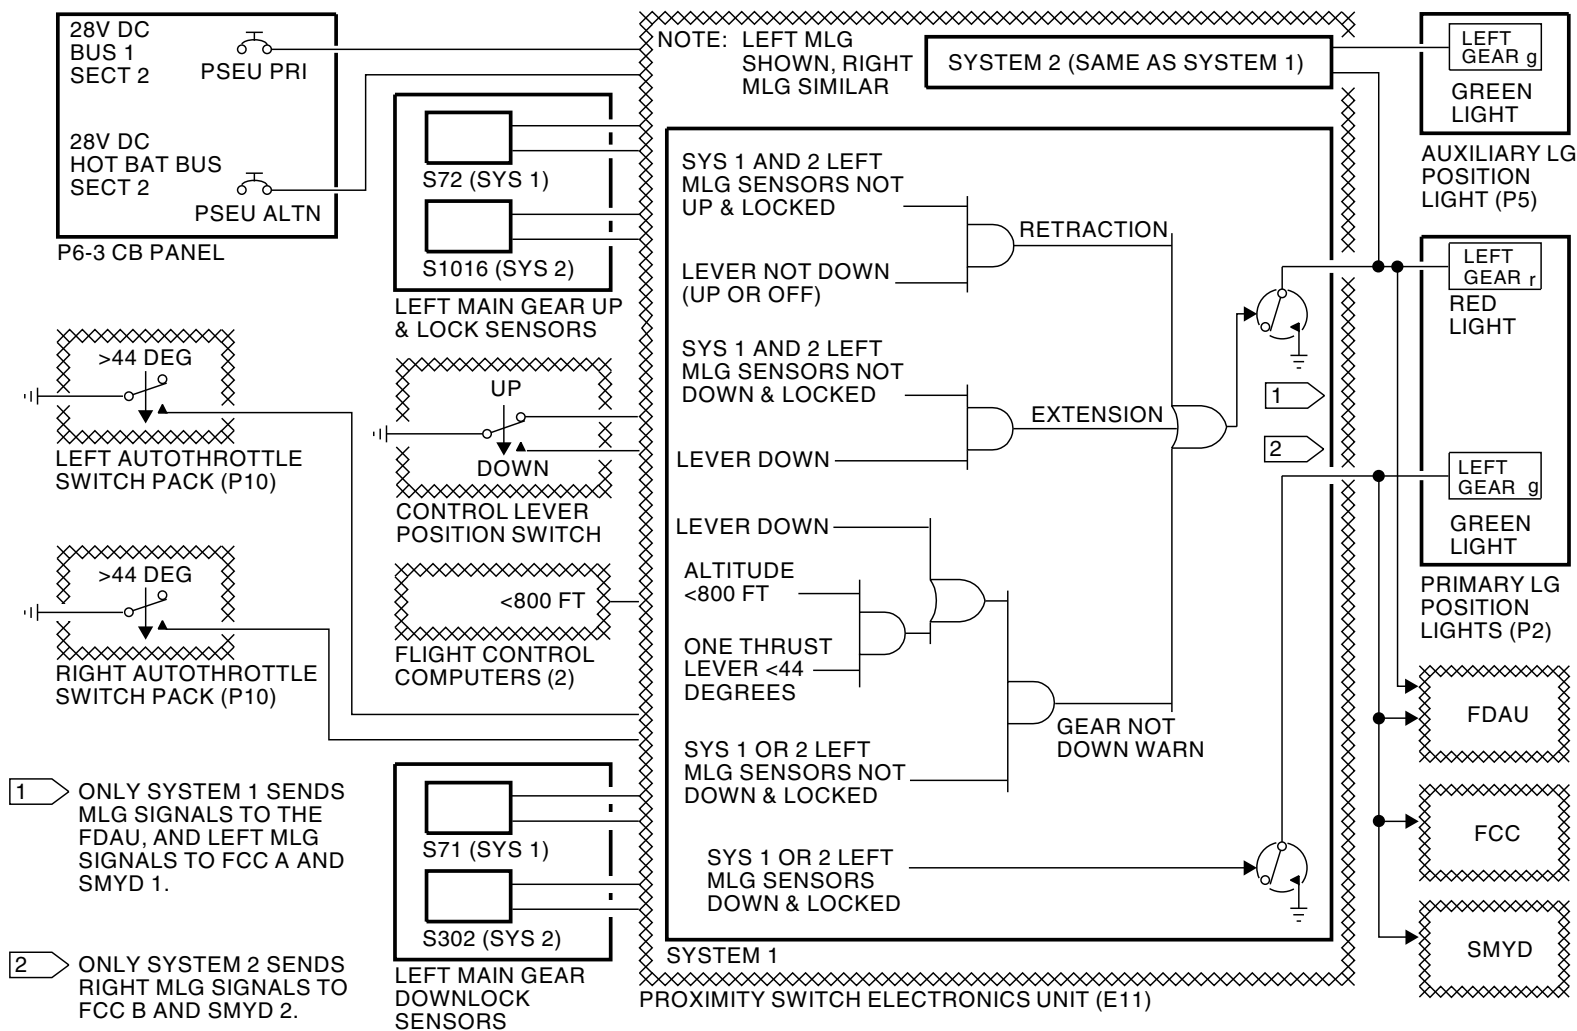

M85073 S0004628065\_V4

## LG POSITION INDICATING AND WARNING SYSTEM - FUNCTIONAL DESCRIPTION - MLG INDICATION



## LG POSITION INDICATING AND WARNING SYSTEM - FUNCTIONAL DESCRIPTION - NLG INDICATION

**General**

The landing gear position indicating and warning system operates lights in the flight compartment to show indications for these NLG conditions:

- Down and locked
- Lever/gear position disagree
- Gear not down warning.

**Inputs**

The landing gear position indicating and warning system gets inputs from four sensors on the nose landing gear. Two sensors are for the down indication and two sensors are for the locked indication.

The control lever position switch supplies lever position data.

The autothrottle switch packs supply thrust lever position for the gear not down warning.

Both flight control computers supply a ground when the airplane altitude is less than 800 feet.

Inputs from the system 1 sensors go to system 1 in the PSEU. Inputs from system 2 sensors go to system 2 in the PSEU. Both systems in the PSEU share information through the same bus.

**Down And Locked Indication**

The landing gear position green lights come on when targets move near the down sensors and near the lock sensors. System 1 operates the primary position green light. System 2 operates the auxiliary position green light.

Only system 1 sends NLG landing gear down and locked signals to the flight data acquisition unit (FDAU).

See the Flight Data Recorder System (FDRS) section for more information about the FDAU. (SECTION 31-31)

**Disagree And Warning Indications**

A red landing gear position light comes on for these conditions:

- Control lever/landing gear position disagree - lever not down and gear not up and locked (gear retraction)
- Control lever/landing gear position disagree - lever down and gear not down and locked (gear extension)
- Gear not down warning.

The red light comes on for the gear not down warning when the nose landing gear is not down and locked and either of these conditions is true:

- Control lever down
- Left or right thrust lever less than 44 degree position if the altitude is less than 800 feet.


System 1 and system 2 operate the red position light.

Only system 1 sends NLG landing gear disagree and warning signals to the flight data acquisition unit (FDAU).

See the Flight Data Recorder System (FDRS) section for more information about the FDAU. (SECTION 31-31)

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## LG POSITION INDICATING AND WARNING SYSTEM - FUNCTIONAL DESCRIPTION - NLG INDICATION

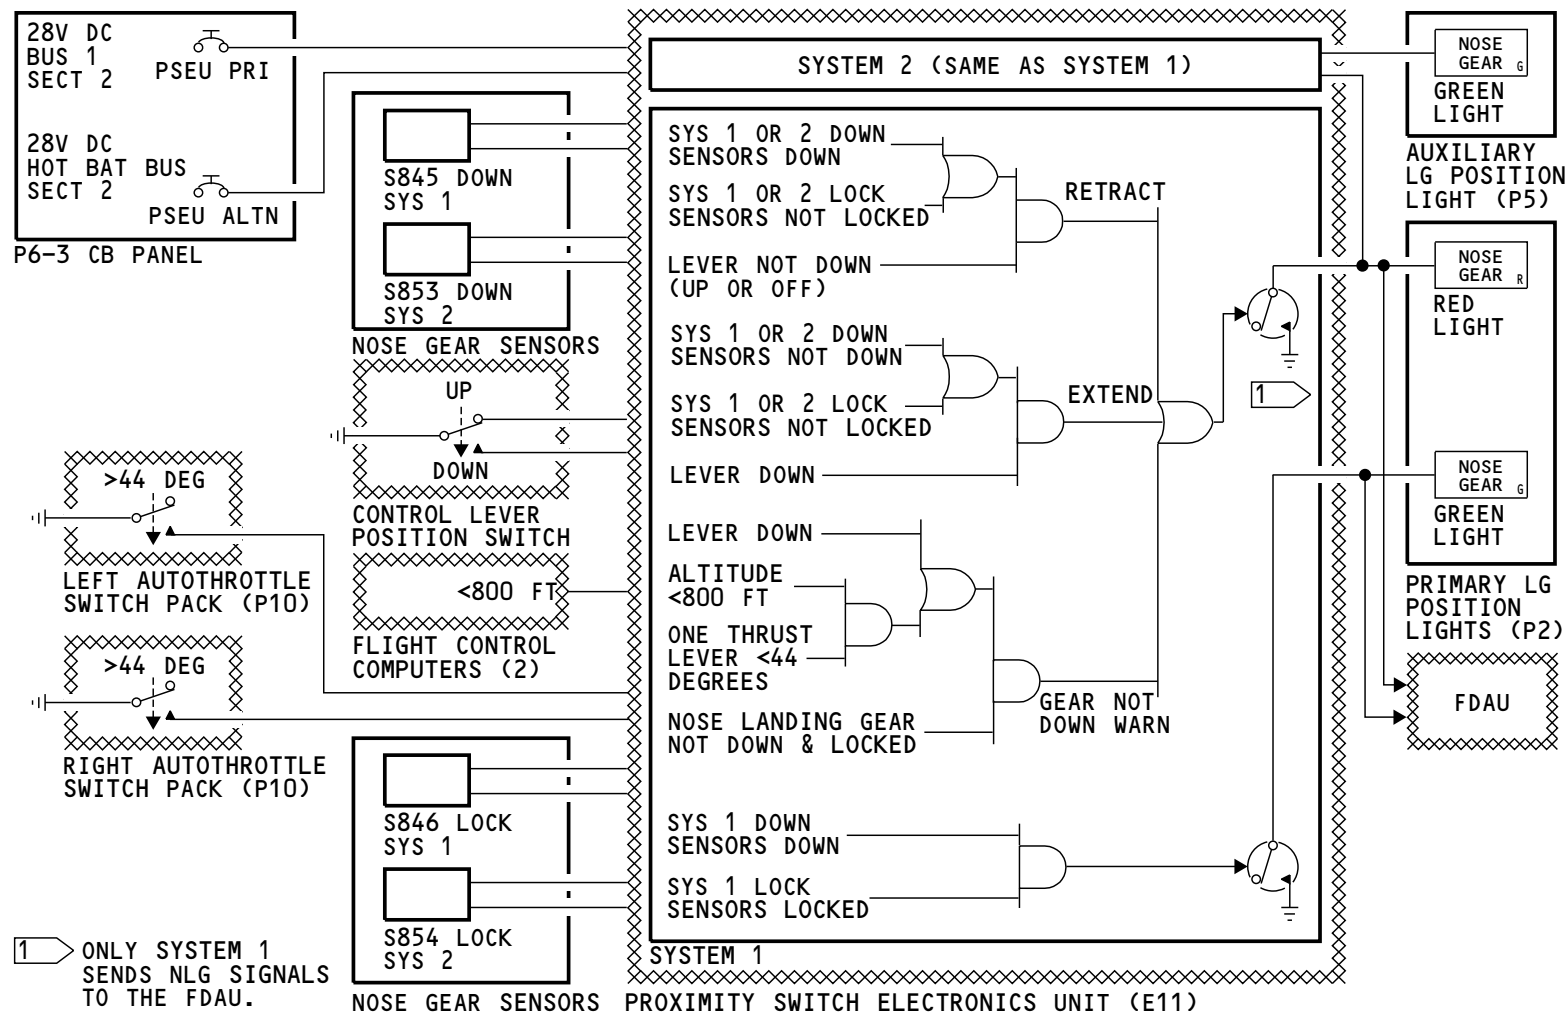

M85075 S0004628068\_V1

## LG POSITION INDICATING AND WARNING SYSTEM - FUNCTIONAL DESCRIPTION - NLG INDICATION

32-61-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LG POSITION INDICATING AND WARNING SYSTEM - AURAL WARNING - GENERAL DESCRIPTION****General**

The aural warning module gives the continuous horn sound for a landing warning.

There are four sets of conditions which cause the landing warning.

In the first set of conditions, the horn sounds when these conditions are true:

- Gear is not down and locked
- Flap position is from 0 to 10 units
- Thrust levers are set for landing
- Radio altitude is between 200 and 800 feet.

For the first set of conditions, push the horn cutout switch near the flap lever to stop the horn.

In the second set of conditions, the horn sounds when these conditions are true:

- Gear is not down and locked
- Flap position is from 0 to 10 units
- Thrust levers are set for landing
- Radio altitude is less than 200 feet.

For the second set of conditions, the pilot can not stop the horn.

In the third set of conditions, the horn sounds when these conditions are true:

- Gear is not down and locked
- Flap position is from 15 to 25 units
- Thrust levers are set for landing.


For this set of conditions, the pilot can not stop the horn.

In the fourth set of conditions, the horn sounds when the gear is not down and locked and the flap position is more than 25 units. The pilot can not stop the horn.

When the airplane is in the fourth set of conditions, the system inhibits the landing warning horn during a go-around. The system inhibits the warning for 12 seconds after the pilot puts the gear lever in the up position.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

LG POSITION INDICATING AND WARNING SYSTEM - AURAL WARNING - GENERAL DESCRIPTION

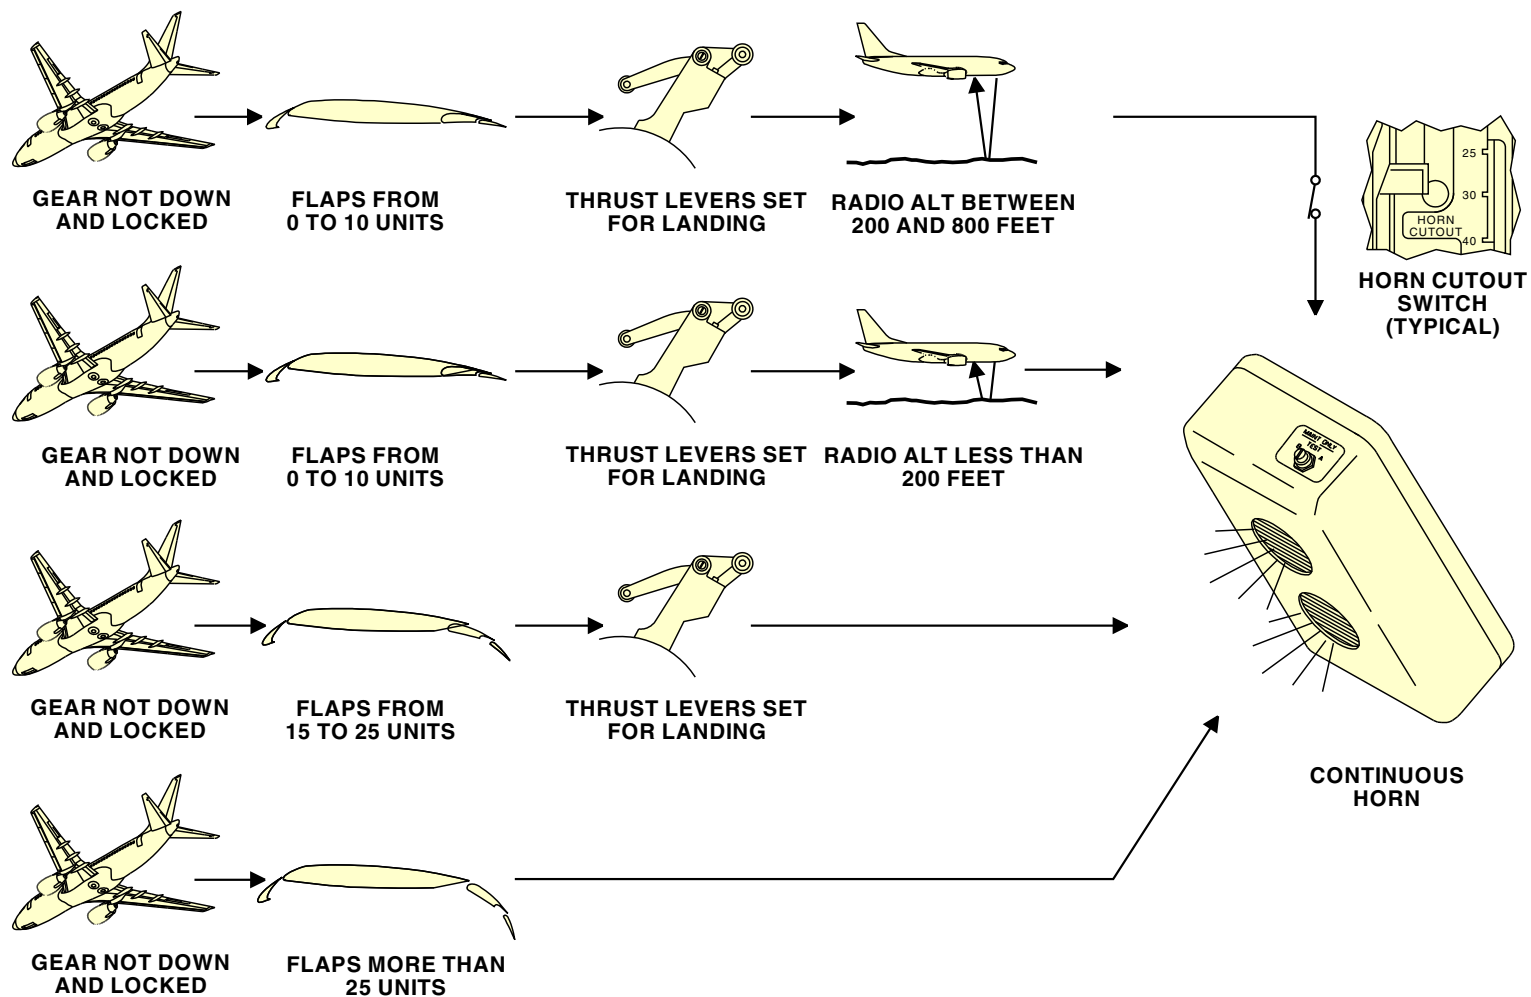

M85078 S0004628070\_V2

LG POSITION INDICATING AND WARNING SYSTEM - AURAL WARNING - GENERAL DESCRIPTION

32-61-00-011

| EFFECTIVITY |
|-------------|
| SIA ALL     |

32-61-00

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-61-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LG POSITION INDICATING AND WARNING SYSTEM - AURAL WARNING - FUNCTIONAL DESCRIPTION****General**

The landing gear position indicating and warning system uses the aural warning system to give a landing gear not down aural warning to the pilots.

**Inputs**

The landing gear position sensors send landing gear down and lock position data to the PSEU.

The landing gear control lever position switch sends a down position signal to the PSEU.

Both stall management yaw dampers (SMYDs) supply signals when the trailing edge flaps are less than 1 unit or more than 25 units. This signal gives the trailing edge flaps takeoff position to the PSEU.

The trailing edge flap landing warning switch on the trailing edge flap control unit supplies a signal when the trailing edge flaps are more than 10 units. This signal gives the trailing edge flaps landing position to the PSEU.

Both flight control computers (FCCs) supply signals when the airplane altitude is less than 200 feet and less than 800 feet.

The engine running relays send left and right engine running signals to the PSEU.

The autothrottle switch packs supply signals when the thrust levers are at the idle position.

The horn reset switch lets you stop the aural warning during some of the conditions that cause a landing gear not down aural warning.

**Aural Warning**

The PSEU sends a landing gear not down aural warning signal to the aural warning module. This causes the steady horn to sound.

The aural warning has two types of warnings, one that you can not stop by the horn reset switch and one that you can stop by the horn reset switch.

The aural warning does not operate for 20 seconds if the landing gear control lever is in the down position.

The aural warning operation is different for each of these trailing edge (TE) flap conditions:

- 0 through 10 units
- 15 through 25 units
- More than 25 units.

**TE Flap Position 0 Through 10 Units, Condition 1**

This type of aural warning operates when one or more landing gear is not in the down and locked position, the landing gear control lever is not down, and all of these conditions are true:

- TE Flap landing warning switch A & B <10 units
- One or both thrust levers at idle or one or both engines not running
- Altitude between 800 and 200 feet.

The horn can be stopped with the horn reset switch for the above conditions.

**TE Flap Position 0 Through 10 Units, Condition 2**

This type of aural warning operates when one or more landing gear is not in the down and locked position, the landing gear control lever is not down, and all of these conditions are true:

- TE Flap landing warning switch A & B <10 units
- One or both thrust levers at idle or one or both engines not running
- Altitude less than 200 feet.

The horn can not be stopped with the horn reset switch when the trailing edge flaps are in the 0 through 10 unit position, and the airplane altitude is less than 200 feet.

**32-61-00**

EFFECTIVITY

SIA ALL

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LG POSITION INDICATING AND WARNING SYSTEM - AURAL WARNING - FUNCTIONAL DESCRIPTION****TE Flap Position 15 Through 25 Units**

This type of aural warning operates when one or more landing gear is not in the down and locked position, the landing gear control lever is not down, and all of these conditions are true:

- TE Flaps landing warning switch A and B >10 units
- One or both SMYDs TE Flaps 15 through 25 units
- One or both thrust levers at idle or one or both engines not running.

The horn can not be stopped with the horn reset switch when the trailing edge flaps are in the 15 through 25 unit position.

**TE Flap Position More Than 25 Units**

This type of aural warning operates when one or more landing gear is not in the down and locked position and all of these conditions are true:


- TE Flaps landing warning switch A and B >10 units
- Both SMYDs TE Flaps > 25 units.

Also, one of these two conditions must be true:

- Landing gear control lever is in the UP position for more than 12 seconds
- Landing gear control lever is in the UP position for less than 12 seconds and one or both thrust levers at idle or one or both engines not running.

The horn can not be stopped with the horn reset switch when the trailing edge flaps are more than 25 units.

## LG POSITION INDICATING AND WARNING SYSTEM - AURAL WARNING - FUNCTIONAL DESCRIPTION

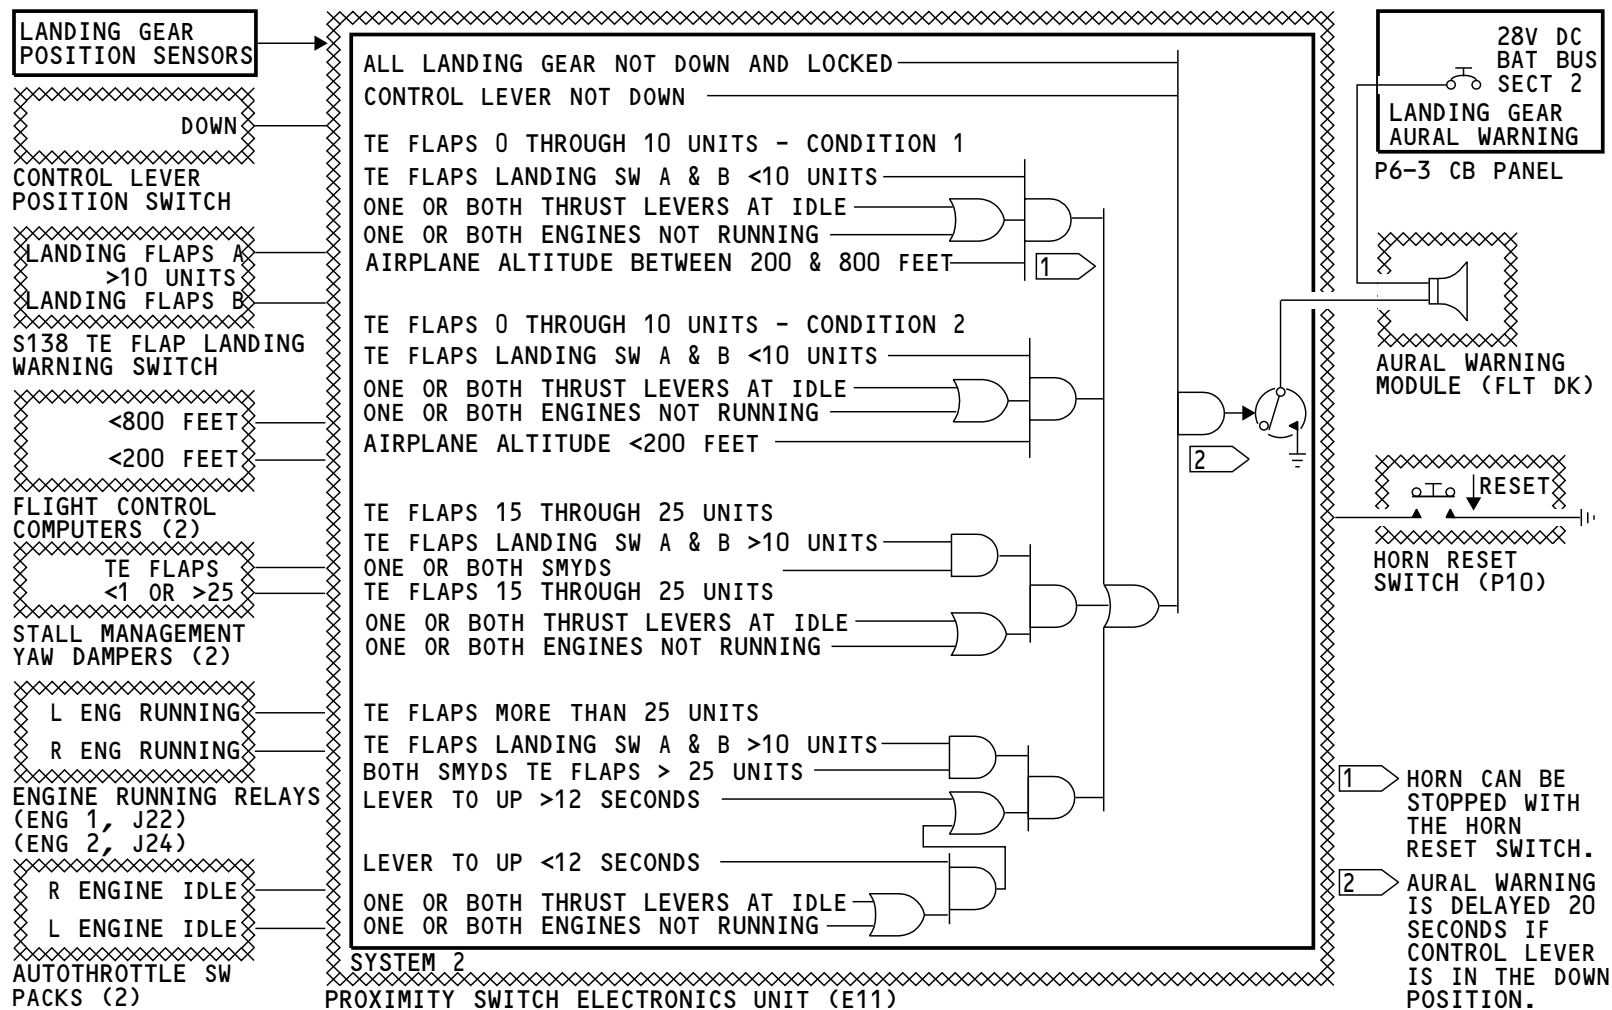

M85077 S0004628073\_V1

## LG POSITION INDICATING AND WARNING SYSTEM - AURAL WARNING - FUNCTIONAL DESCRIPTION

32-61-00

SIA ALL

EFFECTIVITY

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details

**LG POSITION INDICATING AND WARNING SYSTEM - ENGINE THROTTLE SWITCHES****Purpose**

The engine throttle switches supply data to the proximity switch electronics unit (PSEU) for the landing gear position indicating and warning function. The PSEU uses this data to enable or disable landing gear warning, takeoff warning, and horn cutout.

**Location**

The engine throttle switches are on the autothrottle switchpacks below the control stand. To get access, go through access panels in the overhead of the nose landing gear wheel well.

**Physical Description**

The engine throttle switches operate when the thrust levers move to more than the idle position, more than 44 degrees of thrust resolver angle (TRA) movement.

**Functional Description**


This table gives you information about the landing gear warning and takeoff warning switches.

| Name                            | Switch | TRA Position                                                                                                       |
|---------------------------------|--------|--------------------------------------------------------------------------------------------------------------------|
| Landing Gear Warning            | S1     | RET < 44 landing approach logic enabled                                                                            |
| Aural Warning - Takeoff Warning | S8     | ADV > 53 takeoff warning enabled, landing approach logic enabled, horn cutout enabled, operates tail skid (option) |
| Landing Gear Warning            | S9     | ADV > 64 landing approach logic enabled, horn cutout disabled                                                      |


**Training Information Point**

You can remove the switches as the switchpack assembly.



## LG POSITION INDICATING AND WARNING SYSTEM - ENGINE THROTTLE SWITCHES

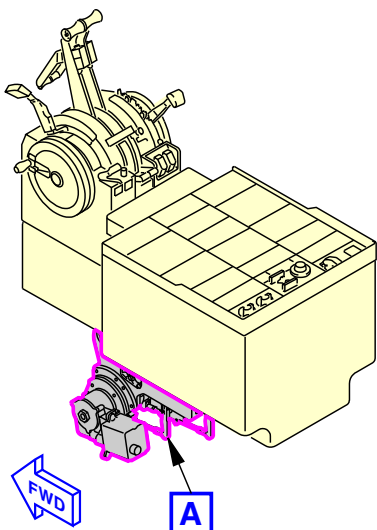

CONTROL STAND

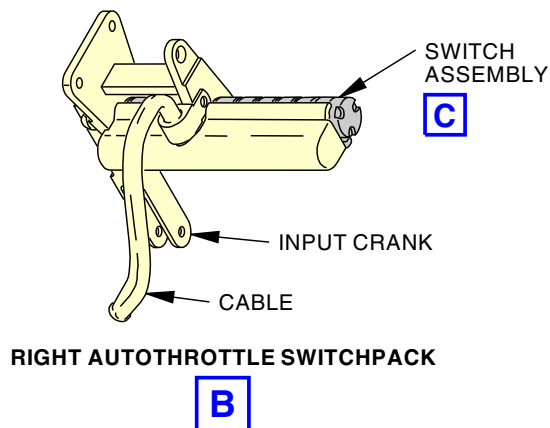

RIGHT AUTOTHROTTLE SWITCHPACK

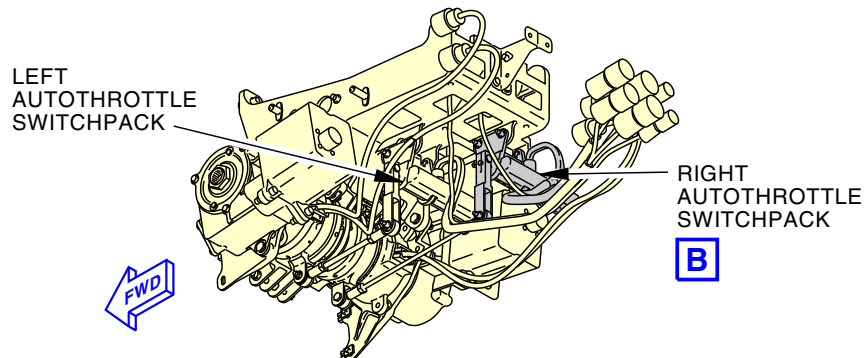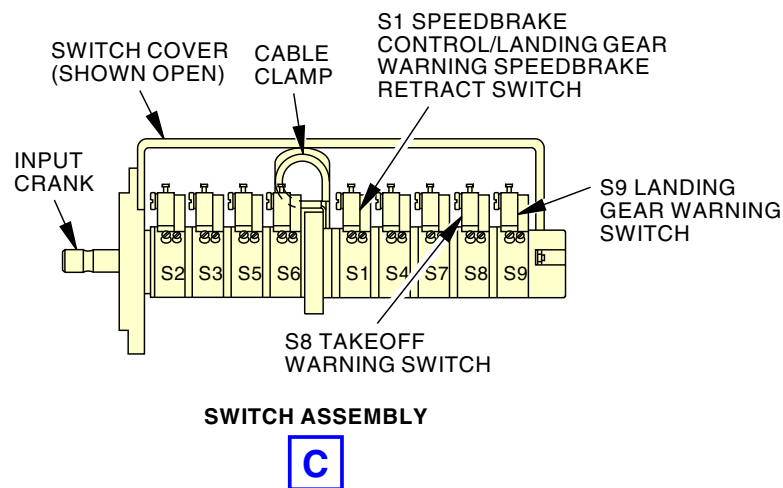
VIEW FROM NOSE LANDING GEAR WHEEL WELL  
(VIEW IN THE FORWARD DIRECTION)


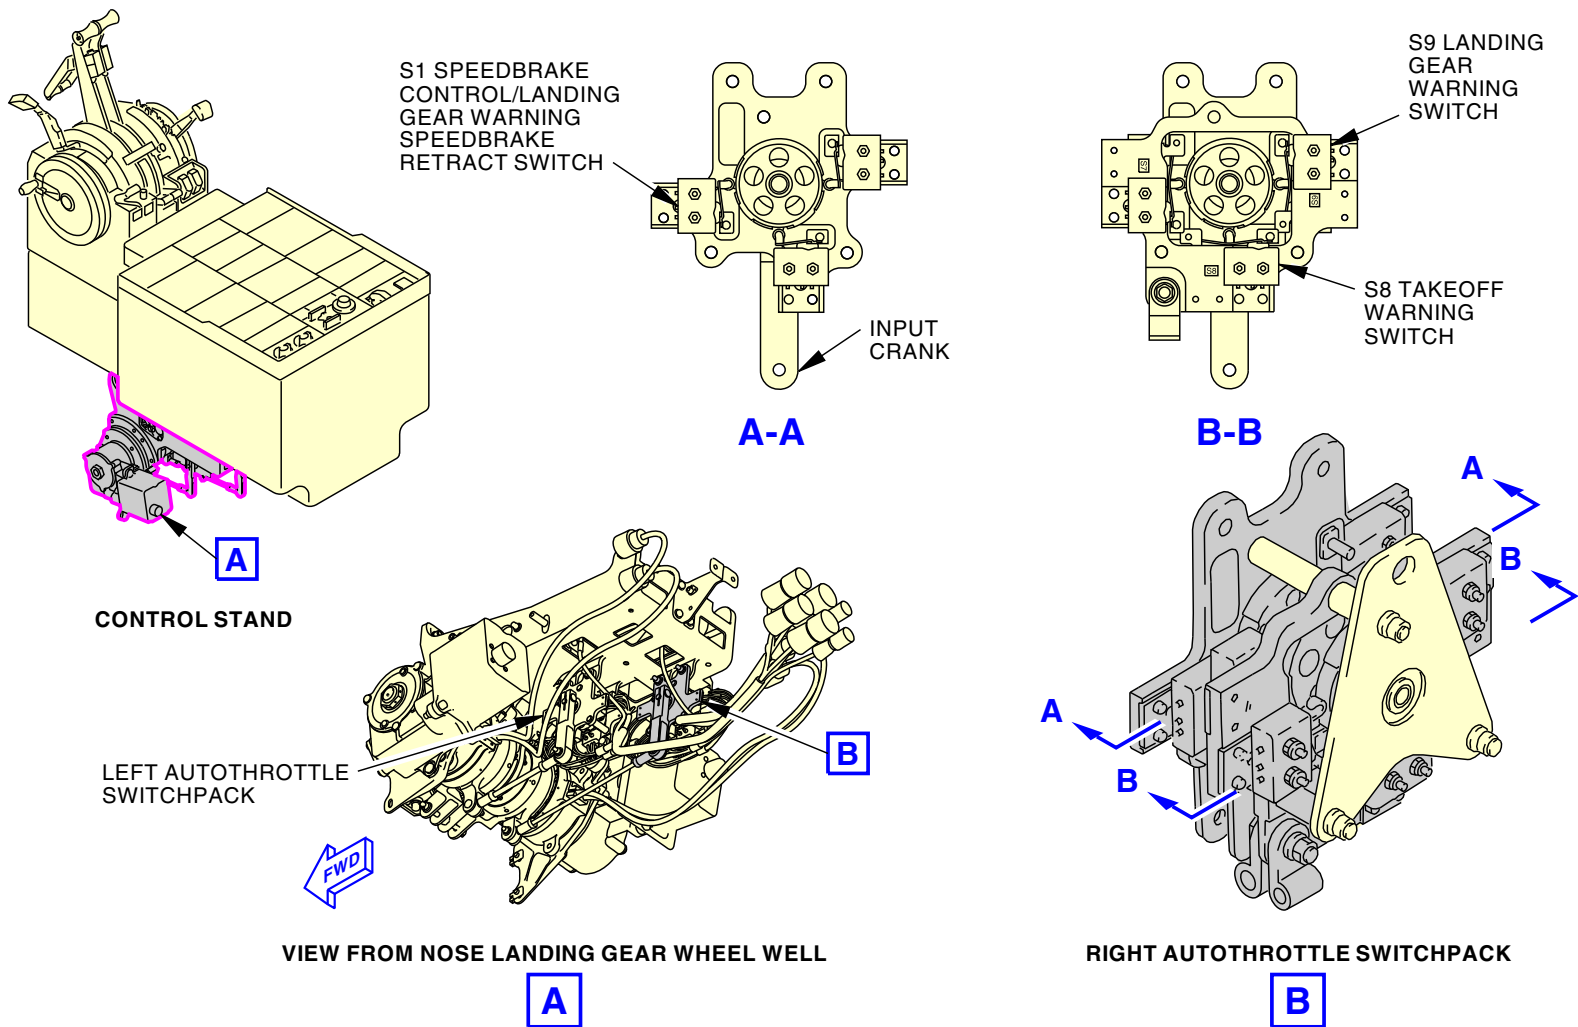
SWITCH ASSEMBLY

2105465 S0000447996\_V2

## LG POSITION INDICATING AND WARNING SYSTEM - ENGINE THROTTLE SWITCHES

32-61-00

LG POSITION INDICATING AND WARNING SYSTEM - ENGINE THROTTLE SWITCHES



2893088 S0000688937\_V2

LG POSITION INDICATING AND WARNING SYSTEM - ENGINE THROTTLE SWITCHES



LG POSITION INDICATING AND WARNING SYSTEM - ENGINE THROTTLE SWITCHES

THIS PAGE IS INTENTIONALLY LEFT BLANK

**32-71-00**

D633A101-SIA

ECCN 9E991 BOEING PROPRIETARY - See title page for details



## TAIL SKID - GENERAL DESCRIPTION

### Purpose

The tail skid protects the stabilizer bulkhead and fuselage structure when the main landing gear shock struts are extended and the airplane rotates during takeoff.

### General Description

The tail skid is on the bottom exterior surface of the airplane below the horizontal stabilizer. The tail skid has a wear shoe. The wear shoe absorbs the tail strike when the shoe rubs on the runway. A warning placard on the aft surface of the skirt fairing shows when you should replace the tail skid.

The forward fairing supplies an aerodynamic cover around the tail skid skirt fairing. The forward fairing attaches to the bottom skin of the airplane. The aft fairing continues the aerodynamic cover aft of the skirt fairing. The aft fairing attaches to the APU access door. A drain on the aft fairing drains moisture from the inside the fairing.

### Training Information Point


During ground maintenance, if the airplane center of gravity exceeds the aft limit, the airplane will rest on the tail fuselage structure and compressed landing gear struts. Damage to the fuselage may occur.

**32-71-00**

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

D633A101-SIA

### TAIL SKID - GENERAL DESCRIPTION

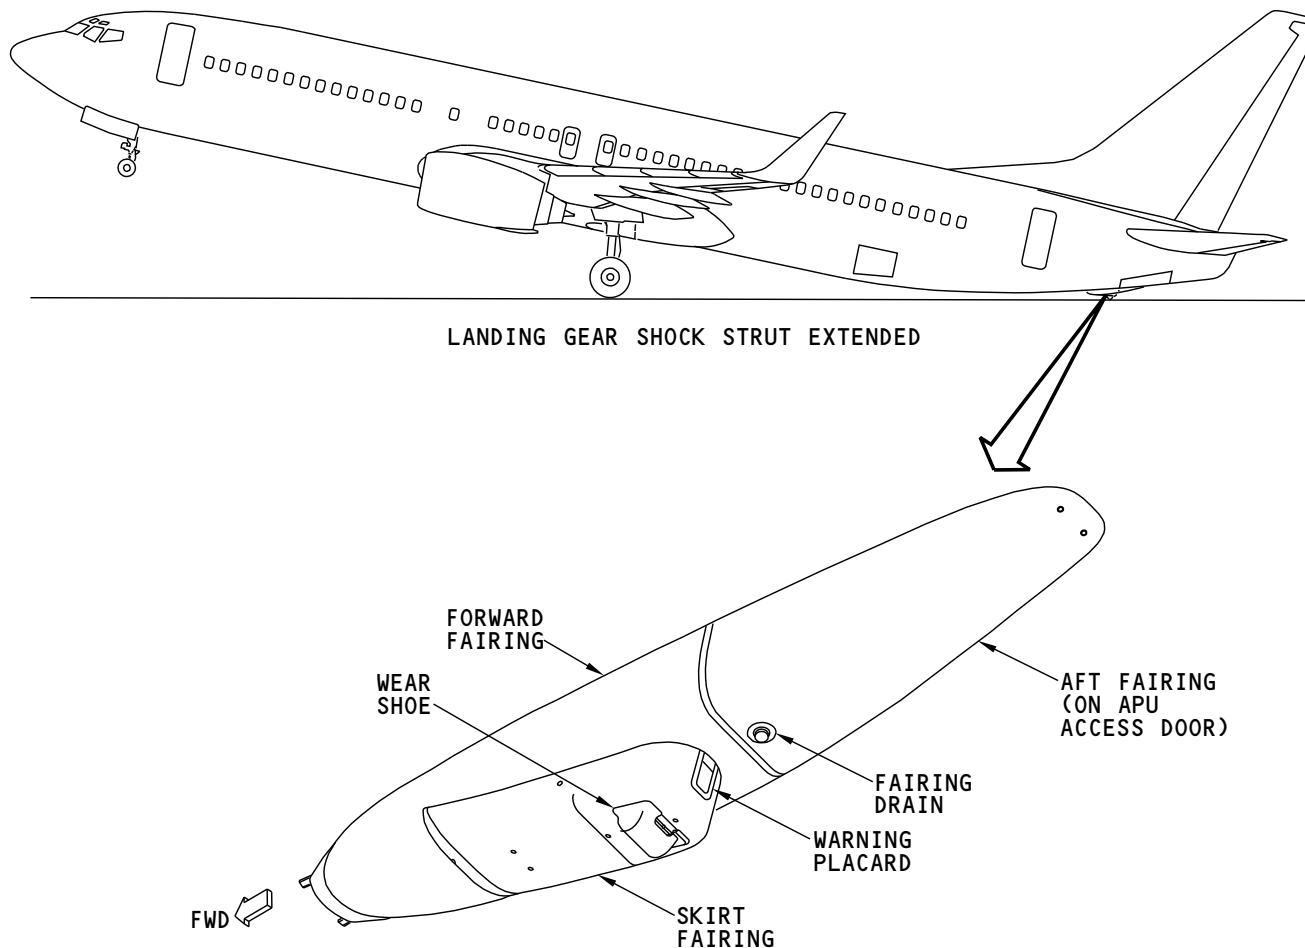

M85079 S0004628078\_V1

### TAIL SKID - GENERAL DESCRIPTION

**32-71-00**

32-71-00-001

| SIA ALL | EFFECTIVITY  |
|---------|--------------|
|         | D633A101-SIA |

ECCN 9E991 BOEING PROPRIETARY - See title page for details

## TAIL SKID - FUNCTIONAL DESCRIPTION

### Components

The tail skid has these components:

- Upper rod
- Fuse link
- Pivot linkage link
- Frangible cartridge
- Lower rod
- Wear shoe
- Skirt fairing
- Drag link
- Lanyard.

The wear shoe and skirt fairing are on the outside lower surface of the tail of the airplane. All other tail skid components are in the lower area of the stabilizer compartment.

### Functional Description

When a tail strike occurs that has a small force, the wear shoe rubs on the runway to absorb the force of the tail strike. Four wear dimples on the lower surface of the shoe, two forward and two aft, show when you must replace the wear shoe. You replace the wear shoe when the material of the shoe wears to the level of the wear dimples. If the wear shoe hits an object while it rubs on the runway, the lower part of the wear shoe shears off. The lower part of the wear shoe shears at the shear channel. This prevents damage to the tail skid components.

When a tail strike occurs that has a large force, the frangible cartridge crushes to absorb the force of the tail strike. The wear shoe attaches to a drag link which pivots on airplane structure. The warning placard on the aft surface of the skirt fairing shows how much the cartridge has been crushed. The lower part of the placard is red, the upper part is green. Usually you can see both parts of the placard. If you can not see the green part of the placard, the cartridge has been crushed to its limit. You must now replace the cartridge. The lanyard holds the drag link when you replace the cartridge.

If the tail strike has very large force, the force shears the fuse pin. The fuse pin prevents damage to the airplane structure. The fuse pin attaches the fuse link to the pivot linkage link. As the tail skid drag link rotates up with the force, the pivot link rotates up on its pivot on airplane structure.


Follow this caution when doing maintenance on the tail skid assembly.



DO NOT LET THE TAIL SKID ASSEMBLY MOVE FORWARD.  
THIS CAN CAUSE DAMAGE TO THE FAIRING.

| EFFECTIVITY |  |
|-------------|--|
| SIA ALL     |  |

## TAIL SKID - FUNCTIONAL DESCRIPTION

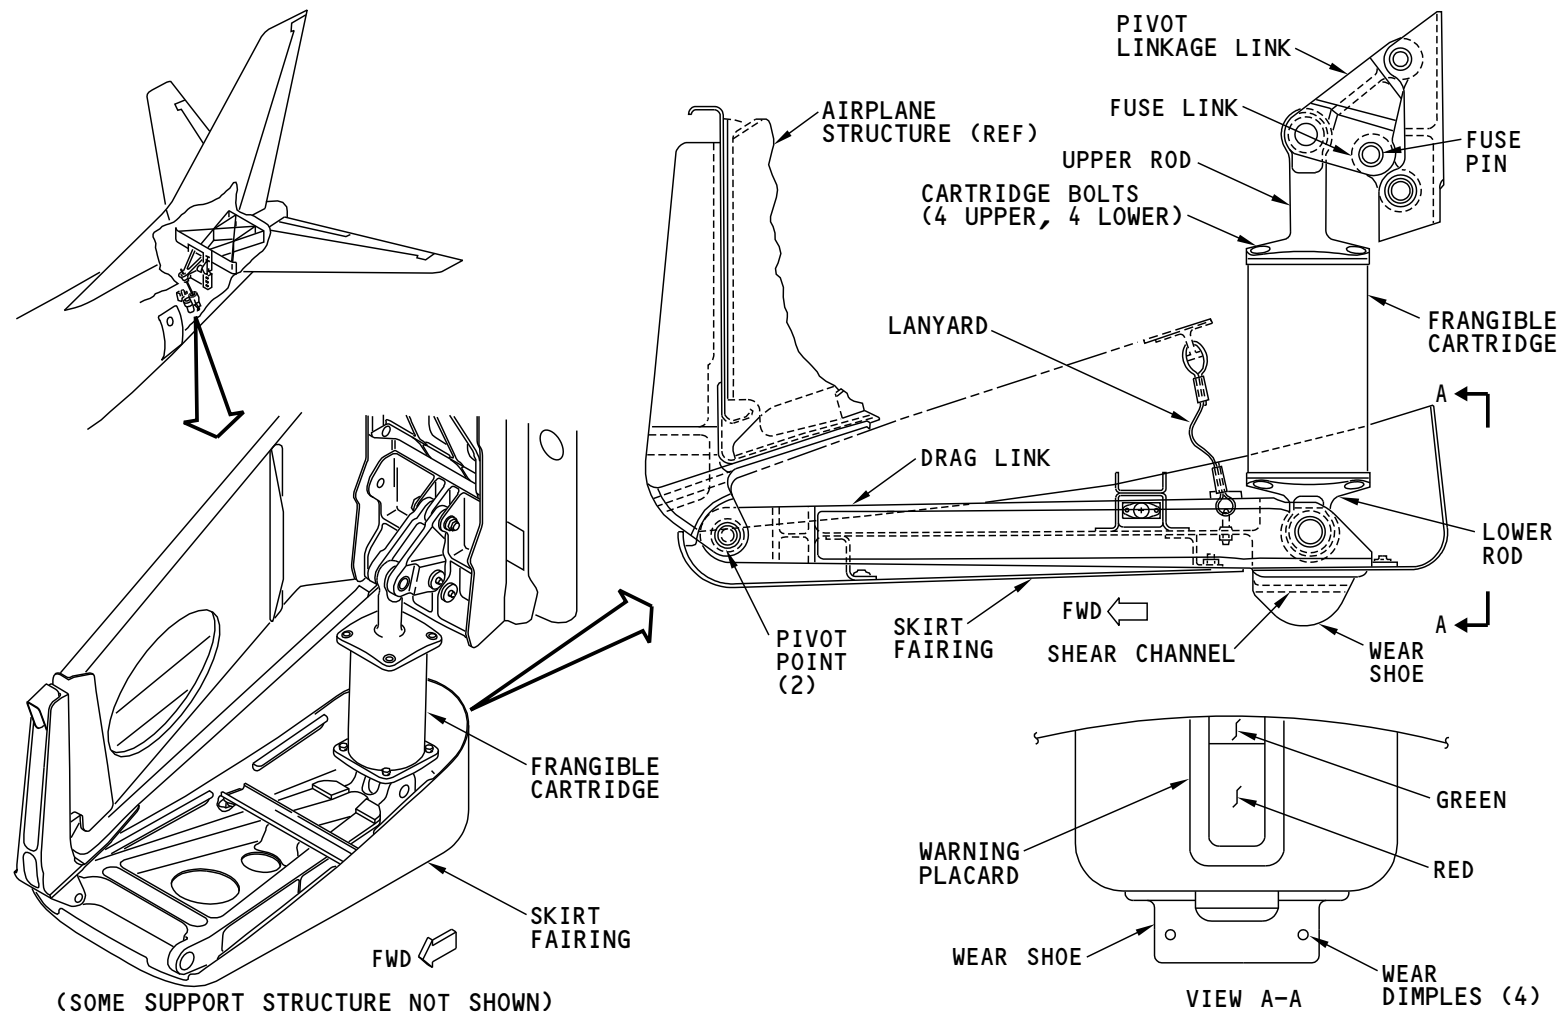

M85081 S0004628080\_V1

## TAIL SKID - FUNCTIONAL DESCRIPTION

32-71-00

